CHAPTER 10

AVR INTERRUPT PROGRAMMING IN ASSEMBLY AND C

OBJECTIVES

Upon completion of this chapter, you will be able to:

- >> Contrast and compare interrupts versus polling
- >> Explain the purpose of the ISR (interrupt service routine)
- >> List all the major interrupts of the AVR
- >> Explain the purpose of the interrupt vector table
- >> Enable or disable AVR interrupts
- >> Program the AVR timers using interrupts
- >> Describe the external hardware interrupts of the AVR
- >> Define the interrupt priority of the AVR
- >> Program AVR interrupts in C

In this chapter we explore the concept of the interrupt and interrupt programming. In Section 10.1, the basics of AVR interrupts are discussed. In Section 10.2, interrupts belonging to timers are discussed. External hardware interrupts are discussed in Section 10.3. In Section 10.4, we cover interrupt priority. In Section 10.5, we provide AVR interrupt programming examples in C.

SECTION 10.1: AVR INTERRUPTS

In this section, we first examine the difference between polling and interrupt and then describe the various interrupts of the AVR.

Interrupts vs. polling

A single microcontroller can serve several devices. There are two methods by which devices receive service from the microcontroller: interrupts or polling. In the *interrupt* method, whenever any device needs the microcontroller's service, the device notifies it by sending an interrupt signal. Upon receiving an interrupt signal, the microcontroller stops whatever it is doing and serves the device. The program associated with the interrupt is called the interrupt service routine (ISR) or interrupt handler. In polling, the microcontroller continuously monitors the status of a given device; when the status condition is met, it performs the service. After that, it moves on to monitor the next device until each one is serviced. Although polling can monitor the status of several devices and serve each of them as certain conditions are met, it is not an efficient use of the microcontroller. The advantage of interrupts is that the microcontroller can serve many devices (not all at the same time, of course); each device can get the attention of the microcontroller based on the priority assigned to it. The polling method cannot assign priority because it checks all devices in a round-robin fashion. More importantly, in the interrupt method the microcontroller can also ignore (mask) a device request for service. This also is not possible with the polling method. The most important reason that the interrupt method is preferable is that the polling method wastes much of the microcontroller's time by polling devices that do not need service. So interrupts are used to avoid tying down the microcontroller. For example, in discussing timers in Chapter 9 we used the bit test instruction "SBRS R20, TOV0" and waited until the timer rolled over, and while we were waiting we could not do anything else. That is a waste of microcontroller time that could have been used to perform some useful tasks. In the case of the timer, if we use the interrupt method, the microcontroller can go about doing other tasks, and when the TOV0 flag is raised, the timer will interrupt the microcontroller in whatever it is doing.

Interrupt service routine

For every interrupt, there must be an interrupt service routine (ISR), or interrupt handler. When an interrupt is invoked, the microcontroller runs the interrupt service routine. Generally, in most microprocessors, for every interrupt there is a fixed location in memory that holds the address of its ISR. The group of memory locations set aside to hold the addresses of ISRs is called the *interrupt vector table*, as shown in Table 10-1.

Steps in executing an interrupt

Upon activation of an interrupt, the microcontroller goes through the following steps:

- 1. It finishes the instruction it is currently executing and saves the address of the next instruction (program counter) on the stack.
- 2. It jumps to a fixed location in memory called the *interrupt vector table*. The interrupt vector table directs the microcontroller to the address of the interrupt service routine (ISR).
- 3. The microcontroller starts to execute the interrupt service subroutine until it reaches the last instruction of the subroutine, which is RETI (return from interrupt).
- 4. Upon executing the RETI instruction, the microcontroller returns to the place where it was interrupted. First, it gets the program counter (PC) address from the stack by popping the top bytes of the stack into the PC. Then it starts to execute from that address.

Notice from Step 4 the critical role of the stack. For this reason, we must be careful in manipulating the stack contents in the ISR. Specifically, in the ISR, just as in any CALL subroutine, the number of pushes and pops must be equal.

Interrupt	ROM Location (Hex)	
Reset	0000	
External Interrupt request 0	0002	
External Interrupt request 1	0004	
External Interrupt request 2	0006	
Time/Counter2 Compare Match	0008	
Time/Counter2 Overflow	000A	
Time/Counter1 Capture Event	000C	
Time/Counter1 Compare Match A	000E	
Time/Counter1 Compare Match B	0010	
Time/Counter1 Overflow	0012	
Time/Counter0 Compare Match	0014	
Time/Counter0 Overflow	0016	
SPI Transfer complete	0018	
USART, Receive complete	001A	
USART, Data Register Empty	001C	
USART, Transmit Complete	001E	
ADC Conversion complete	0020	
EEPROM ready	0022	
Analog Comparator	0024	
Two-wire Serial Interface (I2C)	0026	
Store Program Memory Ready	0028	

Sources of interrupts in the AVR

There are many sources of interrupts in the AVR, depending on which peripheral is incorporated into the chip. The following are some of the most widely used sources of interrupts in the AVR:

- 1. There are at least two interrupts set aside for each of the timers, one for over-flow and another for compare match. See Section 10.2.
- 2. Three interrupts are set aside for external hardware interrupts. Pins PD2 (PORTD.2), PD3 (PORTD.3), and PB2 (PORTB.2) are for the external hardware interrupts INT0, INT1, and INT2, respectively. See Section 10.3.
- 3. Serial communication's USART has three interrupts, one for receive and two interrupts for transmit. See Chapter 11.
- 4. The SPI interrupts. See Chapter 17.
- 5. The ADC (analog-to-digital converter). See Chapter 13.

The AVR has many more interrupts than the list shows. We will cover them throughout the book as we study the peripherals of the AVR. Notice in Table 10-1 that a limited number of bytes is set aside for interrupts. For example, a total of 2 words (4 bytes), from locations 0016 to 0018, are set aside for Timer0 overflow interrupt. Normally, the service routine for an interrupt is too long to fit into the memory space allocated. For that reason, a JMP instruction is placed in the vector table to point to the address of the ISR. In upcoming sections of this chapter, we will see many examples of interrupt programming that clarify these concepts.

From Table 10-1, also notice that only 2 words (4 bytes) of ROM space are assigned to the reset pin. They are ROM address locations 0-1. For this reason, in our program we put the JMP as the first instruction and redirect the processor away from the interrupt vector table, as shown in Figure 10-1. In the next section we will see how this works in the context of some examples.

```
ORG 0 ;wake-up ROM reset location

JMP MAIN ;bypass interrupt vector table

;---- the wake-up program

ORG $100

MAIN: ;enable interrupt flags
....
```

Figure 10-1. Redirecting the AVR from the Interrupt Vector Table at Power-up

Enabling and disabling an interrupt

Upon reset, all interrupts are disabled (masked), meaning that none will be responded to by the microcontroller if they are activated. The interrupts must be enabled (unmasked) by software in order for the microcontroller to respond to them. The D7 bit of the SREG (Status Register) register is responsible for enabling and disabling the interrupts globally. Figure 10-2 shows the SREG register. The I bit makes the job of disabling all the interrupts easy. With a single instruction "CLI" (Clear Interrupt), we can make I = 0 during the operation of a critical task.

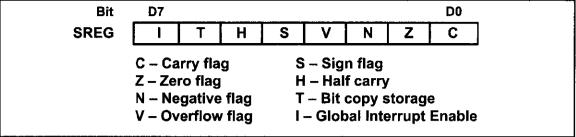


Figure 10-2. Bits of Status Register (SREG)

Steps in enabling an interrupt

To enable any one of the interrupts, we take the following steps:

- 1. Bit D7 (I) of the SREG register must be set to HIGH to allow the interrupts to happen. This is done with the "SEI" (Set Interrupt) instruction.
- 2. If I = 1, each interrupt is enabled by setting to HIGH the interrupt enable (IE) flag bit for that interrupt. There are some I/O registers holding the interrupt enable bits. Figure 10-3 shows that the TIMSK register has interrupt enable bits for Timer0, Timer1, and Timer2. As we study each of peripherals throughout the book we will examine the registers holding the interrupt enable bits. It must be noted that if I = 0, no interrupt will be responded to, even if the corresponding interrupt enable bit is high. To understand this important point look at Example 10-1.

Example 10-1

Show the instructions to (a) enable (unmask) the Timer0 overflow interrupt and Timer2 compare match interrupt, and (b) disable (mask) the Timer0 overflow interrupt, then (c) show how to disable (mask) all the interrupts with a single instruction.

Solution:

(c)

```
(a) LDI R20,(1<<TOIE0)|(1<<OCIE2); TOIE0 = 1, OCIE2 = 1
OUT TIMSK,R20; enable Timer0 overflow and Timer2 compare match
SEI; allow interrupts to come in
```

```
(b) IN R20,TIMSK ;R20 = TIMSK
ANDI R20,0xFF^(1<<TOIE0) ;TOIE0 = 0
OUT TIMSK,R20 ;mask (disable) Timer0 interrupt
```

We can perform the above actions with the following instructions, as well:

```
IN R20,TIMSK ;R20 = TIMSK
CBR R20,1<<TOIE0 ;TOIE0 = 0
OUT TIMSK,R20 ;mask (disable) Timer0 interrupt
.
CLI ;mask all interrupts globally</pre>
```

Notice that in part (a) we can use "LDI, 0x81" in place of the following instruction: "LDI R20, (1<<TOIE0) + (1<<OCIE2)"

Review Questions

- 1. Of the interrupt and polling methods, which one avoids tying down the micro-controller?
- 2. Give the name of the interrupts in the TIMSK register.
- 3. Upon power-on reset of the ATmega32, what memory area is assigned to the interrupt vector table? Can the programmer change the memory space assigned to the table?
- 4. What is the content of D7 (I) of the SREG register upon reset, and what does it mean?
- 5. Show the instructions needed to enable the Timer1 compare A match interrupt.
- 6. What address in the interrupt vector table is assigned to the Timer1 overflow and INT0 interrupts?

	D7							D0
	OCIE2	TOIE2	TICIE1	OCIE1A	OCIE1B	TOIE1	OCIE0	TOIE0
TOI	IE0	Timer0 overflow interrupt enable = 0 Disables Timer0 overflow interrupt						
OCI	IEO	 = 1 Enables Timer0 overflow interrupt Timer0 output compare match interrupt enable = 0 Disables Timer0 compare match interrupt = 1 Enables Timer0 compare match interrupt 						
TOI	E1	Timer 1 = 0 Disa	overflow i ibles Time	interrupt e er1 overflo	nable w interrup	ot -		
OCI	ΙΕ1Β	= 1 Enables Timer1 overflow interrupt Timer1 output compare B match interrupt enable = 0 Disables Timer1 compare B match interrupt						
OCI	IE1A	= 1 Enables Timer1 compare B match interrupt Timer1 output compare A match interrupt enable = 0 Disables Timer1 compare A match interrupt						
TIC	TE1	= 1 Enables Timer1 compare A match interrupt Timer1 input capture interrupt enable = 0 Disables Timer1 input capture interrupt						
TOI	E2	= 1 Enables Timer1 input capture interrupt Timer2 overflow interrupt enable = 0 Disables Timer2 overflow interrupt						
OCI	IE2	 = 1 Enables Timer2 overflow interrupt Timer2 output compare match interrupt enable = 0 Disables Timer2 compare match interrupt = 1 Enables Timer2 compare match interrupt 						
These bits, along with the I bit, must be set high for an interrupt to be responded to. Upon activation of the interrupt, the I bit is cleared by the AVR itself to make sure another interrupt cannot interrupt the microcontroller while it is servicing the current one. At the end of the ISR, the RETI instruction will make I = 1 to allow another interrupt to come in.								

Figure 10-3. TIMSK (Timer Interrupt Mask) Register

SECTION 10.2: PROGRAMMING TIMER INTERRUPTS

In Chapter 9 we discussed how to use Timers 0, 1, and 2 with the polling method. In this section we use interrupts to program the AVR timers. Please review Chapter 9 before you study this section.

Rollover timer flag and interrupt

In Chapter 9 we stated that the timer overflow flag is raised when the timer rolls over. In that chapter, we also showed how to monitor the timer flag with the instruction "SBRS R20, TOV0". In polling TOV0, we have to wait until TOV0 is raised. The problem with this method is that the microcontroller is tied down waiting for TOV0 to be raised, and cannot do anything else. Using interrupts avoids tying down the controller. If the timer interrupt in the interrupt register is enabled, TOV0 is raised whenever the timer rolls over and the microcontroller jumps to the interrupt vector table to service the ISR. In this way, the microcontroller can do other things until it is notified that the timer has rolled over. To use an interrupt in place of polling, first we must enable the interrupt because all the interrupts are masked upon reset. The TOIEx bit enables the interrupt for a given timer. TOIEx bits are held by the TIMSK register as shown in Table 10-2. See Figure 10-4 and Program 10-1.

Table 10-2: Timer Interrupt Flag Bits and Associated Registers

Interrup	t Overflow	Register	Enable Bit	Register	
	Flag Bit				
Timer0	TOV0	TIFR	TOIE0	TIMSK	
Timer1	TOV1	TIFR	TOIE1	TIMSK	
Timer2	TOV2	TIFR	TOIE2	TIMSK	

Notice the following points about Program 10-1:

- 1. We must avoid using the memory space allocated to the interrupt vector table. Therefore, we place all the initialization codes in memory starting at an address such as \$100. The JMP instruction is the first instruction that the AVR executes when it is awakened at address 0000 upon reset. The JMP instruction at address 0000 redirects the controller away from the interrupt vector table.
- 2. In the MAIN program, we enable (unmask) the Timer0 interrupt with the following instructions:

```
LDI R16,1<<TOV0
OUT TIMSK,R16 ;enable Timer0 overflow interrupt
SEI ;set I (enable interrupts globally)
```

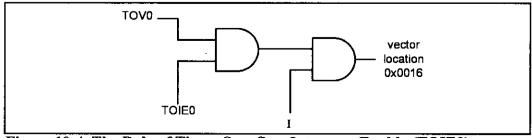


Figure 10-4. The Role of Timer Overflow Interrupt Enable (TOIE0)

- 3. In the MAIN program, we initialize the Timer0 register and then enter into an infinite loop to keep the CPU busy. The loop could be replaced with a real-world application being executed by the CPU. In this case, the loop gets data from PORTC and sends it to PORTD. While the PORTC data is brought in and issued to PORTD continuously, the TOIE0 flag is raised as soon as Timer0 rolls over, and the microcontroller gets out of the loop and goes to \$0016 to execute the ISR associated with Timer0. At this point, the AVR clears the I bit (D7 of SREG) to indicate that it is currently serving an interrupt and cannot be interrupted again; in other words, no interrupt inside the interrupt. In Section 10.6, we show how to allow an interrupt inside an interrupt.
- 4. The ISR for Timer0 is located starting at memory location \$200 because it is too large to fit into address space \$16-\$18, the address allocated to the Timer0 overflow interrupt in the interrupt vector table.
- 5. RETI must be the last instruction of the ISR. Upon execution of the RETI instruction, the AVR automatically enables the I bit (D7 of the SREG register) to indicate that it can accept new interrupts.
- 6. In the ISR for Timer0, notice that there is no need for clearing the TOV0 flag since the AVR clears the TOV0 flag internally upon jumping to the interrupt vector table.

Program 10-1: For this program, we assume that PORTC is connected to 8 switches and PORTD to 8 LEDs. This program uses Timer0 to generate a square wave on pin PORTB.5, while at the same time data is being transferred from PORTC to PORTD.

```
;Program 10-1
.INCLUDE "M32DEF.INC"
.ORG 0x0
                  ;location for reset
      JMP
            MAIN
                  ;location for TimerO overflow (see Table 10.1)
.ORG 0x16
      JMP
            TO OV ISR
                               ; jump to ISR for Timer0
;-main program for initialization and keeping CPU busy
.ORG
     0x100
MAIN: LDI
            R20, HIGH (RAMEND)
      OUT
            SPH, R20
            R20, LOW (RAMEND)
      LDI
      OUT
            SPL,R20
                               ;initialize stack
            DDRB,5
      SBI
                               ;PB5 as an output
            R20, (1<<TOIE0)
      LDI
            TIMSK, R20
      OUT
                        ;enable TimerO overflow interrupt
                        ;set I (enable interrupts globally)
      SEI
            R20,-32
                        ; timer value for 4 \mus
      LDI
      OUT
            TCNTO, R20
                        ;load Timer0 with -32
            R20,0x01
      LDI
      OUT
            TCCR0,R20
                        ; Normal, internal clock, no prescaler
            R20,0x00
      LDI
            DDRC,R20
      TUO
                        ; make PORTC input
            R20,0xFF
      LDI
      OUT
            DDRD,R20
                        ; make PORTD output
           ---- Infinite loop
HERE: IN
            R20, PINC
                        ; read from PORTC
            PORTD, R20
                        ; give it to PORTD
      OUT
                        ; keeping CPU busy waiting for interrupt
      JMP
            HERE
```

```
-----ISR for Timer0 (it is executed every 4 µs)
.ORG 0x200
T0_OV ISR:
     ΤN
          R16, PORTB ; read PORTB
           R17,0x20
                      ;00100000 for toggling PB5
     LDI
          R16,R17
     EOR
     OUT PORTB, R16 ; toggle PB5
           R16,-32
                      ;timer value for 4 µs
     LDI
           TCNTO,R16
     OUT
                      ;load TimerO with -32 (for next round)
     RETI
                      ;return from interrupt
```

See Example 10-2 to understand the difference between RET and RETI.

Example 10-2

What is the difference between the RET and RETI instructions? Explain why we cannot use RET instead of RETI as the last instruction of an ISR.

Solution:

Both perform the same actions of popping off the top bytes of the stack into the program counter, and making the AVR return to where it left off. However, RETI also performs the additional task of setting the I flag, indicating that the servicing of the interrupt is over and the AVR now can accept a new interrupt. If you use RET instead of RETI as the last instruction of the interrupt service routine, you simply block any new interrupt after the first interrupt, because the I would indicate that the interrupt is still being serviced.

See Program 10-2. Program 10-2 uses Timer0 and Timer1 interrupts simultaneously, to generate square waves on pins PB1 and PB7 respectively, while data is being transferred from PORTC to PORTD.

```
;Program 10-2
.INCLUDE "M32DEF.INC"
.ORG 0x0
                        ;location for reset
           MAIN
                        ; bypass interrupt vector table
      JMP
.ORG 0x12
                        ;ISR location for Timer1 overflow
      JMP T1 OV ISR ;go to an address with more space
.ORG 0x16
                        ;ISR location for TimerO overflow
      JMP
           TO OV ISR
                        ;go to an address with more space
; ---- main program for initialization and keeping CPU busy
.ORG 0x100
MAIN: LDI
           R20, HIGH (RAMEND)
     OUT
            SPH,R20
     LDI
           R20, LOW (RAMEND)
           SPL,R20
     OUT
                              ; initialize stack point
      SBI
           DDRB, 1
                              ;PB1 as an output
      SBI
           DDRB, 7
                              ;PB7 as an output
           R20, (1<<TOIE0) | (1<<TOIE1)
      LDI
     OUT
           TIMSK, R20
                              ;enable Timer0 overflow interrupt
      SEI
                             ; set I (enable interrupts globally)
     LDI
           R20,-160
                              ;value for 20 µs
     OUT
           TCNTO, R20
                              ;load Timer0 with -160
     LDI
           R20,0x01
     OUT
           TCCR0,R20
                              ; Normal mode, int clk, no prescaler
           R20, HIGH (-640)
                            ;the high byte
      LDI
     OUT
           TCNT1H,R20 ;load Timer1 high byte
```

```
R20.LOW(-640) ; the low byte
     LDI
     TUO
           TCNT1L, R20
                      ;load Timer1 low byte
     LDI
           R20,0x00
           TCCR1A, R20
                      :Normal mode
     TUO
     LDI
           R20,0x01
     OUT
           TCCR1B, R20
                       ;internal clk, no prescaler
     LDI
           R20,0x00
     OUT
           DDRC,R20
                       ;make PORTC input
     LDI
           R20,0xFF
           DDRD,R20
     OUT
                       ;make PORTD output
;----- Infinite loop
HERE: IN
           R20, PINC ; read from PORTC
     OUT
           PORTD, R20 ; and give it to PORTD
     JMP
           HERE
                       ; keeping CPU busy waiting for interrupt
;----ISR for Timer0 (It comes here after elapse of 20 us time)
.ORG 0x200
TO OV ISR:
     LDI
           R16,-160
                       ;value for 20 µs
           TCNT0,R16
     TUO
                       ;load Timer0 with -160 (for next round)
     ΙN
           R16, PORTB
                       ;read PORTB
           R17,0x02
                       ;00000010 for toggling PB1
     LDI
           R16,R17
     EOR
           PORTB, R16
     OUT
                      ;toggle PB1
     RETI
                       ;return from interrupt
;----ISR for Timerl (It comes here after elapse of 80 µs time)
.ORG
     0x300
T1 OV ISR:
     LDI
           R18, HIGH (-640)
     OUT
           TCNT1H,R18 ; load Timer1 high byte
     LDI
           R18, LOW (-640)
           TCNT1L,R18 ; load Timerl low byte (for next round)
     OUT
     ΙN
           R18, PORTB ; read PORTB
     LDI
           R19,0x80
                       ;10000000 for toggling PB7
     EOR
           R18, R19
     OUT
           PORTB, R18
                       ;toggle PB7
     RETI
                       ;return from interrupt
```

Notice that the addresses \$0100, \$0200, and \$0300 that we used in Program 10-2 are all arbitrary and can be changed to any addresses we want. The only addresses that we cannot change are the reset location of 0000, the Timer0 overflow address of \$0016, and the Timer1 overflow address of \$0012 in the interrupt vector table because they were fixed at the time of the ATmega32 design.

Program 10-3 has two interrupts: (1) PORTA counts up every time Timer1 overflows. It overflows once per second. (2) A pulse is fed into Timer0, where Timer0 is used as counter and counts up. Whenever the counter reaches 200, it will toggle the pin PORTB.6.

```
;Program 10-3
.INCLUDE "M32DEF.INC"
.ORG
     0 \times 0
                        ;location for reset
      JMP
                        ; bypass interrupt vector table
            MAIN
                        ;ISR location for Timer1 overflow
.ORG
     0x12
            T1 OV ISR
      JMP
                        ;go to an address with more space
.ORG
      0x16
                         ;ISR location for TimerO overflow
            TO OV ISR
                         ;go to an address with more space
      JMP
```

```
; --- main program for initialization and keeping CPU busy
.ORG 0x40
MAIN: LDI
         R20, HIGH (RAMEND)
     OUT SPH, R20
     LDI R20, LOW (RAMEND)
     OUT SPL, R20
                       ;initialize SP
     LDI
           R18,0
                       ;R18 = 0
     OUT
           PORTA, R18; PORTA = 0
     LDI R20,0
     OUT DDRC, R20
                      ; PORTC as input
     LDI R20,0xFF
           DDRA,R20 ;PORTA as output DDRD,R20 ;PORTD as output
     OUT DDRA, R20
     OUT
     SBI
         DDRB,6
                       ;PB6 as an output
           PORTB, 0
     SBI
                       ;activate pull-up of PB0
     LDI
           R20,0x06
           TCCR0,R20 ;Normal, T0 pin falling edge, no scale
     OUT
     LDI R16,-200
     OUT
           TCNTO,R16 ;load TimerO with -200
     LDI
           R19, HIGH (-31250) ; timer value for 1 second
     OUT
           TCNT1H,R19 ;load Timer1 high byte
     LDI
           R19,LOW(-31250)
     OUT
           TCNT1L,R19 ;load Timer1 low byte
     LDI R20,0
     OUT
           TCCR1A, R20 ; Timer1 Normal mode
     LDI R20,0\times04
     OUT TCCR1B, R20 ;int clk, prescale 1:256
     LDI
           R20, (1<<TOIE0) | (1<<TOIE1)
     OUT
           TIMSK, R20
                       ;enable Timer0 & Timer1 overflow ints
     SEI
                       ;set I (enable interrupts globally)
;---- Infinite loop
HERE: IN R20,PINC ; read from PORTC
OUT PORTD,R20 ; and send it to PORTD
     JMP
           HERE ; waiting for interrupt
;-----ISR for Timer0 to toggle after 200 clocks
.ORG 0x200
TO OV ISR:
     IN
           R16, PORTB ; read PORTB
     LDI R17,0x40 ;0100 0000 for toggling PB7
     EOR R16, R17
     OUT
           PORTB,R16 ;toggle PB6
     LDI
           R16,-200 ; setup for next round
           TCNTO,R16
                       ;load Timer0 with -200 for next round
     OUT
     RETI
                       ;return from interrupt
;-----ISR for Timer1 (It comes here after elapse of 1s time)
.ORG 0x300
T1 OV ISR:
     INC
                       ;increment upon overflow
           R18
     OUT
           PORTA, R18
                     display it on PORTA;
     LDI R19, HIGH (-31250)
           TCNT1H,R19 ;load Timer1 high byte
     OUT
     LDI
           R19,LOW(-31250)
     OUT TCNT1L,R19 ;load Timer1 low byte (for next round)
     RETI
                       ;return from interrupt
```

Compare match timer flag and interrupt

Sometimes a task should be done periodically, as in the previous examples. The programs can be written using the CTC mode and compare match (OCF) flag. To do so, we load the OCR register with the proper value and initialize the timer to the CTC mode. When the content of TCNT matches with OCR, the OCF flag is set, which causes the compare match interrupt to occur.

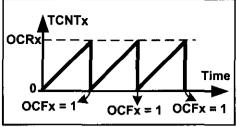


Figure 10-5. CTC Mode

Example 10-3

Using Timer0, write a program that toggles pin PORTB.5 every 40 μ s, while at the same time transferring data from PORTC to PORTD. Assume XTAL = 1 MHz.

```
1/1 MHz = 1 \mus and 40 \mus/1 \mus = 40. That means we must have OCR0 = 40 - 1 = 39
```

```
.INCLUDE "M32DEF.INC"
.ORG
            ;location for reset
      0x0
      JMP
            MAIN
.ORG
      0x14
            ;ISR location for TimerO compare match
      JMP
            TO CM ISR
; main program for initialization and keeping CPU busy
      0x100
.ORG
MAIN: LDI
            R20, HIGH (RAMEND)
            SPH,R20
      OUT
      LDI
            R20, LOW (RAMEND)
      OUT
            SPL,R20
                         ;set up stack
            DDRB,5
      SBI
                         ;PB5 as an output
      LDI
            R20, (1<<OCIE0)
      OUT
            TIMSK, R20
                         ;enable Timer0 compare match interrupt
      SEI
                         ;set I (enable interrupts globally)
      LDI
            R20,39
                         ;load Timer0 with 39
      OUT
            OCRO,R20
            R20,0x09
      LDI
                         ;start TimerO, CTC mode, int clk, no prescaler
      OUT
            TCCR0,R20
      LDI
            R20,0x00
      TUO
            DDRC,R20
                         ; make PORTC input
            R20,0xFF
      LDI
      OUT
            DDRD, R20
                         ; make PORTD output
            ----- Infinite loop
            R20, PINC
HERE: IN
                         ;read from PORTC
            PORTD, R20
                         ; and send it to PORTD
      OUT
                         ; keeping CPU busy waiting for interrupt
      JMP
            HERE
            -----ISR for Timer0 (it is executed every 40 μs)
TO CM ISR:
            R16, PORTB
                         ; read PORTB
      ΙN
      LDI
            R17,0x20
                         ;00100000 for toggling PB5
      EOR
            R16, R17
      OUT
            PORTB, R16
                         ;toggle PB5
      RETI
                         ; return from interrupt
```

Because the timer is in the CTC mode, the timer will be loaded with zero as well. So, the compare match interrupt occurs periodically. See Figure 10-5 and Examples 10-3 and 10-4. Notice that the AVR chip clears the OCF flag upon jumping to the interrupt vector table.

Example 10-4

Using Timer1, write a program that toggles pin PORTB.5 every second, while at the same time transferring data from PORTC to PORTD. Assume XTAL = 8 MHz.

Solution:

For prescaler = 1024 we have T_{Clock} = (1 / 8 MHz) × 1024 = 128 μ s and 1 s/128 μ s = 7812. That means we must have OCR1A = 7811 = 0x1E83

```
.INCLUDE "M32DEF.INC"
.ORG 0x0
           ;location for reset
      JMP
           MAIN
            ;location for Timer1 compare match
.ORG 0x14
      JMP
           T1_CM_ISR
;-----main program for initialization and keeping CPU busy
MAIN: LDI
           R20, HIGH (RAMEND)
     OUT
           SPH,R20
     LDI
           R20, LOW (RAMEND)
     OUT
           SPL,R20
                       ;set up stack
           DDRB,5
      SBI
                       ;PB5 as an output
     LDI
           R20, (1<<OCIE1A)
                       ;enable Timer1 compare match interrupt
     OUT
           TIMSK, R20
      SEI
                        ;set I (enable interrupts globally)
     LDI
           R20,0x00
     OUT
           TCCR1A, R20
      LDI
           R20.0xD
                             ;prescaler 1:1024, CTC mode
     OUT
           TCCR1B, R20
      LDI
           R20, HIGH (7811)
                             ;the high byte
     OUT OCR1AH, R20
                             ; Temp = 0x1E (high byte of 7811)
     LDI R20, LOW (7811)
                             ;the low byte
     OUT
           OCRIAL, R20
                             ; OCR1A = 7811
      LDI
           R20,0x00
                             ;make PORTC input
     OUT
           DDRC,R20
     LDI
           R20,0xFF
     OUT
           DDRD, R20
                             ;make PORTD output
;----- Infinite loop
HERE: IN
           R20, PINC
                       ;read from PORTC
           PORTD, R20
                        ; PORTD = R20
     OUT
                        ; keeping CPU busy waiting for interrupt
      JMP
           HERE
;---ISR for Timer1 (It comes here after elapse of 1 second time)
T1 CM ISR:
      IN
           R16, PORTB
                        ;00100000 for toggling PB5
      LDI
           R17,0x20
           R16,R17
     EOR
     OUT
           PORTB, R16
                       ;toggle PB5
      RETI
                        ;return from interrupt
```

Review Questions

- 1. True or false. There is a single interrupt in the interrupt vector table assigned to both Timer0 and Timer1.
- 2. What address in the interrupt vector table is assigned to Timer0 overflow?
- 3. Which register does TOIE1 belong to? Show how it is enabled.
- 4. Assume that Timer0 is programmed in Normal mode, TCNT0 = 0xF1, and the TOIE0 bit is enabled. Explain how the interrupt for the timer works.
- 5. True or false. The last two instructions of the ISR for Timer0 are:

```
OUT TIFR, 1<<TOV0 ;clear TOV0 flag RETI
```

- 6. Assume that Timer0 is programmed in CTC mode, OCR0 = 0x21, and the compare match interrupt is enabled. Explain how the interrupt for the timer works.
- 7. In the previous problem, assume XTAL = 8 MHz, and the timer is in no prescaler mode. How often is the ISR executed?

SECTION 10.3: PROGRAMMING EXTERNAL HARDWARE INTERRUPTS

The number of external hardware interrupt interrupts varies in different AVRs. The ATmega32 has three external hardware interrupts: pins PD2 (PORTD.2), PD3 (PORTD.3), and PB2 (PORTB.2), designated as INT0, INT1, and INT2, respectively. Upon activation of these pins, the AVR is interrupted in whatever it is doing and jumps to the vector table to perform the interrupt service routine. In this section we study these three external hardware interrupts of the AVR with some examples in Assembly language.

External interrupts INT0, INT1, and INT2

There are three external hardware interrupts in the ATmega32: INT0, INT1, and INT2. They are located on pins PD2, PD3, and PB2, respectively. As we saw in Table 10-1, the interrupt vector table locations \$2, \$4, and \$6 are set aside for INT0, INT1, and INT2, respectively. The hardware interrupts must be enabled before they can take effect. This is done using the INTx bit located in the GICR register. See Figure 10-6. For example, the following instructions enable INT0:

```
LDI R20,0x40
OUT GICR,R20
```

The INT0 is a low-level-triggered interrupt by default, which means, when a low signal is applied to pin PD2 (PORTD.2), the controller will be interrupted and jump to location \$0002 in the vector table to service the ISR.

Study Example 10-5 to gain insight into external hardware interrupts. In this program, the microcontroller is looping continuously in the HERE loop. Whenever the switch on INTO (pin PD2) is activated, the microcontroller gets out of the loop and jumps to vector location \$0002. The ISR for INTO toggles the PC0. If, by the time it executes the RETI instruction, the INTO pin is still low, the microcontroller initiates the interrupt again. Therefore, if we want the ISR to be executed once, the

INTO pin must be brought back to high before RETI is executed, or we should make the interrupt edge-triggered, as discussed next.


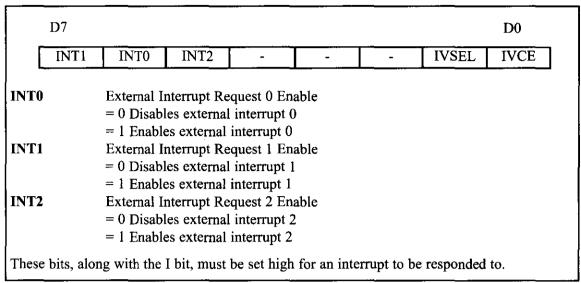


Figure 10-6. GICR (General Interrupt Control Register) Register

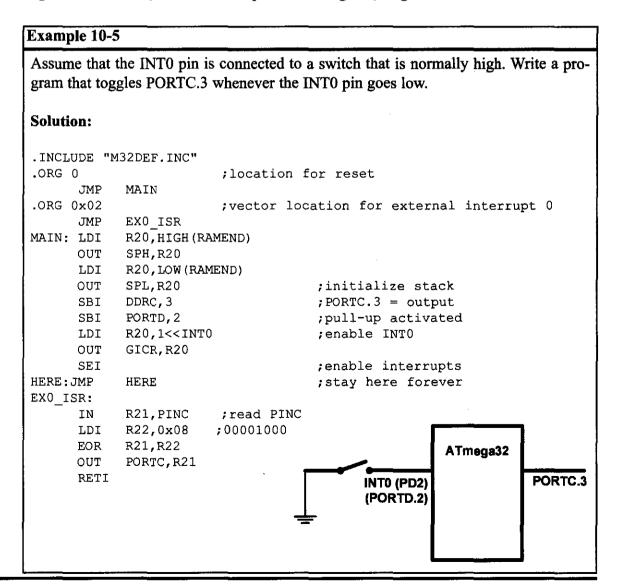

D7							D0
SE	SM2	SM1	SM0	ISC11	ISC10	ISC01	ISC00

ISC01, ISC00 (Interrupt Sense Control bits) These bits define the level or edge on the external INT0 pin that activates the interrupt, as shown in the following table:

ISC01	ISC00	d Explain	Description Military
0	0		The low level of INT0 generates an interrupt request.
0	1	工工	Any logical change on INT0 generates an interrupt request.
1	0	7	The falling edge of INT0 generates an interrupt request.
1	1	工工	The rising edge of INT0 generates an interrupt request.

ISC11, ISC10 These bits define the level or edge that activates the INT1 pin.

ISC11	ISC10	Register	Description
0	0		The low level of INT1 generates an interrupt request.
0	1	工工	Any logical change on INT1 generates an interrupt request.
1	0	7	The falling edge of INT1 generates an interrupt request.
1	1	工工	The rising edge of INT1 generates an interrupt request.

Figure 10-7. MCUCR (MCU Control Register) Register

Edge-triggered vs. level-triggered interrupts

There are two types of activation for the external hardware interrupts: (1) level triggered, and (2) edge triggered. INT2 is only edge triggered, while INT0 and INT1 can be level or edge triggered.

As stated before, upon reset INT0 and INT1 are low-level-triggered interrupts. The bits of the MCUCR register indicate the trigger options of INT0 and INT1, as shown in Figure 10-7.

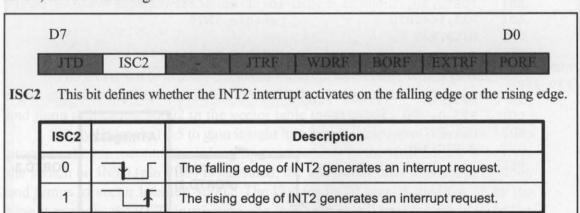


Figure 10-8. MCUCSR (MCU Control and Status Register) Register

The ISC2 bit of the MCUCSR register defines whether INT2 activates in the falling edge or the rising edge (see Figure 10-8). Upon reset ISC2 is 0, meaning that the external hardware interrupt of INT2 is falling edge triggered. See Examples 10-6 and 10-7.

Example 10-6

Show the instructions to (a) make INT0 falling edge triggered, (b) make INT1 triggered on any change, and (c) make INT2 rising edge triggered.

Solution:

```
R20,0x02
     LDI
(a)
           MCUCR, R20
     OUT
(b)
     LDI
           R20,1<<ISC10
                             ;R20 = 0x04
     OUT
           MCUCR, R20
           R20.1<<ISC2
(c)
     LDI
                              ;R20 = 0x40
     OUT
           MCUCSR, R20
```

Example 10-7

Rewrite Example 10-5, so that whenever INT0 goes low, it toggles PORTC.3 only once.

```
.INCLUDE "M32DEF.INC"
                              ;location for reset
.ORG 0
      JMP
            MAIN
.ORG 0x02
                              ;location for external interrupt 0
      JMP
            EX0 ISR
            R20, HIGH (RAMEND)
MAIN: LDI
      OUT
            SPH,R20
      LDI
            R20, LOW (RAMEND)
            SPL,R20
     OUT
                              ;initialize stack
      LDI
            R20,0x2
                              ;make INTO falling edge triggered
      OUT
            MCUCR,R20
      SBI
            DDRC, 3
                              ;PORTC.3 = output
            PORTD, 2
      SBI
                              ;pull-up activated
            R20,1<<INT0
      LDI
                              ;enable INTO
      OUT
            GICR, R20
      SEI
                              ;enable interrupts
HERE: JMP
            HERE
EX0 ISR:
      IN
            R21, PORTC
            R22,0x08
                             ;00001000 for toggling PC3
      LDI
            R21,R22
      EOR
     OUT
            PORTC, R21
      RETI
```

In Example 10-7, notice that the only difference between it and the program in Example 10-5 is in the following instructions:

```
LDI R20,0x2 ; make INTO falling edge triggered OUT MCUCR,R20
```

which makes INT0 an edge-triggered interrupt. When the falling edge of the signal is applied to pin INT0, PORTC.3 will toggle. To toggle the LED again, another high-to-low pulse must be applied to INT0. This is the opposite of Example 10-5. In Example 10-5, due to the level-triggered nature of the interrupt, as long as INT0 is kept at a low level, PORTC.3 toggles. But in this example, to turn on PORTC.3 again, the INT0 pulse must be brought back high and then low to create a falling edge to activate the interrupt.

Sampling the edge-triggered and level-triggered interrupts

Examine Figure 10-9. The edge interrupt (the falling edge, the rising edge, or the change level) is latched by the AVR and is held by the INTFx bits of the GIFR register. This means that when an external interrupt is in an edge-triggered mode (falling edge, rising edge, or change level), upon triggering an interrupt request, the related INTFx flag becomes set. If the interrupt is active (the INTx bit is set and the I-bit in SREG is one), the AVR will jump to the corresponding interrupt vector location and the INTFx flag will be cleared automatically, otherwise,

Bit	D7						D0	
	INTF1 INTF0	INTF2	-	-	-	•	-	

Figure 10-9. GIFR (General Interrupt Flag Register) Register

the flag remains set. The flag can be cleared by writing a one to it. For example, the INTF1 flag can be cleared using the following instructions:

```
LDI R20, (1<<INTF1) ; R20 = 0x80
OUT GIFR, R20 ; clear the INTF1 flag
```

Notice that in edge-triggered interrupts (falling edge, rising edge, and change level interrupts), the pulse must last at least 1 instruction cycle to ensure that the transition is seen by the microcontroller. This means that pulses shorter than 1 machine cycle are not guaranteed to generate an interrupt.

When an external interrupt is in level-triggered mode, the interrupt is not latched, meaning that the INTFx flag remains unchanged when an interrupt occurs, and the state of the pin is read directly. As a result, when an interrupt is in level-triggered mode, the pin must be held low for a minimum time of 5 machine cycles to be recognized.

Review Questions

1. True or false. Upon reset, the external hardware interrupts INT0-INT2 are edge triggered.

- 2. For ATmega32, what pins are assigned to INT0-INT2?
- 3. Show how to enable the INT1 interrupt.
- 4. Assume that the external hardware interrupt INT0 is enabled, and is set to the low-edge trigger. Explain how this interrupt works when it is activated.
- 5. True or false. Upon reset, the INT2 interrupt is falling edge triggered.
- 6. Assume that INT0 is falling edge triggered. How do we make sure that a single interrupt is not recognized as multiple interrupts?
- 7. Using polling and INT0, write a program that upon falling edges toggles PORTC.3. Compare it with Example 10-7; which program is better?

SECTION 10.4: INTERRUPT PRIORITY IN THE AVR

The next topic that we must deal with is what happens when two interrupts are activated at the same time. Which of these two interrupts is responded to first?

Interrupt priority

If two interrupts are activated at the same time, the interrupt with the higher priority is served first. The priority of each interrupt is related to the address of that interrupt in the interrupt vector. The interrupt that has a lower address, has a higher priority. See Table 10-1. For example, the address of external interrupt 0 is 2, while the address of external interrupt 2 is 6; thus, external interrupt 0 has a higher priority, and if both of these interrupts are activated at the same time, external interrupt 0 is served first.

Interrupt inside an interrupt

What happens if the AVR is executing an ISR belonging to an interrupt and another interrupt is activated? When the AVR begins to execute an ISR, it disables the I bit of the SREG register, causing all the interrupts to be disabled, and no other interrupt occurs while serving the interrupt. When the RETI instruction is executed, the AVR enables the I bit, causing the other interrupts to be served. If you want another interrupt (with any priority) to be served while the current interrupt is being served you can set the I bit using the SEI instruction. But do it with care. For example, in a low-level-triggered external interrupt, enabling the I bit while the pin is still active will cause the ISR to be reentered infinitely, causing the stack to overflow with unpredictable consequences.

Context saving in task switching

In multitasking systems, such as multitasking real-time operating systems (RTOS), the CPU serves one task (job or process) at a time and then moves to the next one. In simple systems, the tasks can be organized as the interrupt service routine. For example, in Example 10-3, the program does two different tasks:

- (1) copying the contents of PORTC to PORTD,
- (2) toggling PORTC.2 every 5 μs

While writing a program for a multitasking system, we should manage the resources carefully so that the tasks do not conflict with each other. For example, consider a system that should perform the following tasks: (1) increasing the con-

tents of PORTC continuously, and (2) increasing the content of PORTD once every 5 µs. Read the following program. Does it work?

```
;Program 10-4
.INCLUDE "M32DEF.INC"
.ORG 0x0 ;location for reset
     JMP
           MAIN
.ORG 0x14 ;location for Timer0 compare match
     JMP
           TO CM ISR
;-main program for initialization and keeping CPU busy
.ORG 0x100
MAIN: LDI R20, HIGH (RAMEND)
           SPH,R20
     OUT
     LDI R20, LOW (RAMEND)
     OUT SPL,R20 ; set up stack
                      ;PB5 as an output
     SBI DDRB,5
     LDI R20, (1<<OCIE0)
     OUT TIMSK, R20 ; enable TimerO compare match interrupt
                       ; set I (enable interrupts globally)
     SEI
     LDI R20,160
     OUT OCRO, R20 ;load TimerO with 160
     LDI
           R20.0 \times 09
     OUT TCCR0,R20
                       :CTC mode, int clk, no prescaler
     LDI R20,0xFF
     OUT DDRC,R20 ;make PORTC output
OUT DDRD,R20 ;make PORTD output
           R20. 0
     LDI
HERE: OUT PORTC, R20
                      ; PORTC = R20
     INC R20
     JMP
           HERE
                 ; keeping CPU busy waiting for interrupt
;-----ISR for Timer0
TO CM ISR:
     ΙN
          R20, PIND
     INC
           R20
     OUT
           PORTD, R20; PORTD = R20
     RETI
                       ;return from interrupt
```

The tasks do not work properly, since they have resource conflict and they interfere with each other. R20 is used and changed by both tasks, which causes the program not to work properly. For example, consider the following scenario: The content of R20 increases in the main program, at first becoming 0, then 1, and so on. When the timer interrupt occurs, R20 is 95, and PORTC is 95 as well. In the ISR, the R20 is loaded with the content of PORTD, which is 0. So, when it goes back to the main program, the content of R20 is 1 and PORTC will be loaded by 2. But if the program worked properly, PORTC would be loaded with 96.

We can solve such problems in the following two ways:

(1) Using different registers for different tasks. In the program discussed above, if we use different registers in the main program and in the ISR, the program will work properly.

```
.ORG 0x14
                      ;location for TimerO compare match
           TO CM ISR
     JMP
;-----main program for initialization and keeping CPU busy
.ORG 0x100
MAIN: LDI R20, HIGH (RAMEND)
     OUT
          SPH.R20
     LDI R20, LOW (RAMEND)
         SPL,R20 ;set up stack
     OUT
     SBI DDRB,5 ;PB5 as an output
           R20, (1<<OCIE0)
     LDI
     OUT
          TIMSK, R20 ; enable TimerO compare match interrupt
     SEI
                      ; set I (enable interrupts globally)
     LDI
          R20,160
     OUT OCRO, R20
                     ;load Timer0 with 160
          R20.0x09
     LDI
     OUT
          TCCR0,R20 ;start timer,CTC mode,int clk,no prescaler
     LDI R20,0xFF
     OUT DDRC,R20 ;make PORTC output OUT DDRD,R20 ;make PORTD output
          R20, 0
     LDI
          PORTC, R20; PORTC = R20
HERE: OUT
     INC
          R20
     JMP
          HERE
                  ; keeping CPU busy waiting for int.
TO CM ISR:
     IN
          R21, PIND
     INC
          R21
     OUT
          PORTD, R21 ; toggle PB5
     RETI
                      ;return from interrupt
```

(2) Context saving. In big programs we might not have enough registers to use separate registers for different tasks. In these cases, we can save the contents of registers on the stack before execution of each task, and reload the registers at the end of the task. This saving of the CPU contents before switching to a new task is called *context saving* (or *context switching*). See the following program:

```
;Program 10-6
.INCLUDE "M32DEF.INC"
.ORG 0x0 ;location for reset
     JMP
           MAIN
.ORG 0x14 ;location for Timer0 compare match
     JMP
           TO CM ISR
;main program for initialization and keeping CPU busy
.ORG
    0x100
MAIN: LDI
         R20, HIGH (RAMEND)
     OUT
           SPH, R20
     LDI R20, LOW (RAMEND)
     OUT SPL, R20 ; set up stack
           DDRB,5
     SBI
                      ;PB5 as an output
           R20, (1<<OCIEO)
     LDI
     OUT
           TIMSK,R20
                      ;enable TimerO compare match interrupt
     SEI
                      ; set I (enable interrupts globally)
     LDI R20,160
           OCRO, R20 ; load TimerO with 160
     OUT
     LDI
           R20,0x09
```

```
OUT
           TCCR0,R20
                     ;CTC mode, int clk, no prescaler
     LDI
           R20,0xFF
           DDRC,R20 ; make PORTC output
     OUT
           DDRD,R20
     OUT
                      ;make PORTD output
           R20, 0
     LDI
HERE: OUT PORTC, R20
                     ; PORTC = R20
           R20
     TNC
                      ; keeping CPU busy waiting for interrupt
     JMP
           HERE
;-----ISR for Timer0
TO CM ISR:
     PUSH R20
                     ;save R20 on stack
     IN
           R20, PIND
           R20
     INC
     OUT
           PORTD, R20
                     ;toggle PB5
          R20
     POP
                      ;restore value for R20
     RETI
                      ;return from interrupt
```

Notice that using the stack as a place to save the CPU's contents is tedious, time consuming, and slow. So, we might want to use the first solution, whenever we have enough registers.

Saving flags of the SREG register

The flags of SREG are important especially when there are conditional jumps in our program. We should save the SREG register if the flags are changed in a task. See Figure 10-10.

Interrupt latency

The time from the moment an interrupt is activated to the moment the CPU starts to execute the task is called the *interrupt latency*. This latency is 4 machine cycle times. During this time the PC register is pushed on the stack and the I bit of the SREG register clears, causing all the interrupts to be disabled. The duration of an interrupt latency can be affected by the type of instruction that the CPU is executing when the interrupt comes in, since the CPU finishes the execution of the current instruction before it serves the interrupt. It takes slightly longer in cases where the instruction being executed lasts for two (or more) machine cycles (e.g., MUL) compared to the instructions that last for only one instruction cycle (e.g., ADD). See the AVR datasheet for the timing.

```
Sample_ISR:

PUSH R20
IN R20,SREG
PUSH R20
...
POP R20
OUT SREG,R20
POP R20
RETI
```

Figure 10-10. Saving the SREG Register

Review Questions

- 1. True or false. In ATmega32, if the Timer1 and Timer0 interrupts are activated at the same time, the Timer0 interrupt is served first.
- 2. What happens if two interrupts are activated at the same time?
- 3. What happens if an interrupt is activated while the CPU is serving another interrupt?
- 4. What is context saving?

SECTION 10.5: INTERRUPT PROGRAMMING IN C

So far all the programs in this chapter have been written in Assembly. In this section we show how to program the AVR's interrupts in WinAVR C language.

In C language there is no instruction to manage the interrupts. So, in WinAVR the following have been added to manage the interrupts:

- 1. Interrupt include file: We should include the interrupt header file if we want to use interrupts in our program. Use the following instruction:
 #include <avr\interrupt.h>
- 2. cli() and sei(): In Assembly, the CLI and SEI instructions clear and set the I bit of the SREG register, respectively. In WinAVR, the cli() and sei() macros do the same tasks.

Table 10-3: Interrupt Vector Name for the ATmega32/ATmega16 in WinAVR

Interrupt	Vector Name in WinAVR
External Interrupt request 0	INT0_vect
External Interrupt request 1	INT1_vect
External Interrupt request 2	INT2_vect
Time/Counter2 Compare Match	TIMER2_COMP_vect
Time/Counter2 Overflow	TIMER2_OVF_vect
Time/Counter1 Capture Event	TIMER1_CAPT_vect
Time/Counter1 Compare Match A	TIMER1_COMPA_vect
Time/Counter1 Compare Match B	TIMER1_COMPB_vect
Time/Counter1 Overflow	TIMER1_OVF_vect
Time/Counter0 Compare Match	TIMER0_COMP_vect
Time/Counter0 Overflow	TIMER0_OVF_vect
SPI Transfer complete	SPI_STC_vect
USART, Receive complete	USART0_RX_vect
USART, Data Register Empty	USART0_UDRE_vect
USART, Transmit Complete	USART0_TX_vect
ADC Conversion complete	ADC_vect
EEPROM ready	EE_RDY_vect
Analog Comparator	ANALOG_COMP_vect
Two-wire Serial Interface	TWI_vect
Store Program Memory Ready	SPM_RDY_vect

3. **Defining ISR:** To write an ISR (interrupt service routine) for an interrupt we use the following structure:

```
ISR(interrupt vector name)
{
     //our program
}
```

For the *interrupt vector name* we must use the ISR names in Table 10-3. For example, the following ISR serves the Timer0 compare match interrupt:

```
ISR (TIMERO_COMP_vect)
{
}
```

See Example 10-8.

Example 10-8 (C version of Program 10-1)

Using Timer0 generate a square wave on pin PORTB.5, while at the same time transferring data from PORTC to PORTD.

```
#include "avr/io.h"
#include "avr/interrupt.h"
int main ()
     DDRB \mid = 0x20;
                             //DDRB.5 = output
     TCNT0 = -32;
                             //timer value for 4 \mus
                             //Normal mode, int clk, no prescaler
     TCCR0 = 0x01;
     TIMSK = (1<<TOIE0);  //enable Timer0 overflow interrupt</pre>
     sei ();
                             //enable interrupts
     DDRC = 0x00;
                             //make PORTC input
                             //make PORTD output
     DDRD = 0xFF;
     while (1)
                             //wait here
           PORTD = PINC;
                            //ISR for Timer0 overflow
ISR (TIMERO OVF vect)
     TCNT0 = -32;
                             //toggle PORTB.5
     PORTB ^= 0x20;
```

Context saving

The C compiler automatically adds instructions to the beginning of the ISRs, which save the contents of all of the general purpose registers and the SREG register on the stack. Some instructions are also added to the end of the ISRs to reload the registers. See Examples 10-9 through 10-13.

Example 10-9 (C version of Program 10-2)

Using Timer0 and Timer1 interrupts, generate square waves on pins PB1 and PB7 respectively, while transferring data from PORTC to PORTD.

```
#include "avr/io.h"
#include "avr/interrupt.h"
int main ( )
                          //make DDRB.1 and DDRB.7 output
      DDRB \mid = 0x82;
      DDRC = 0x00;
                              //make PORTC input
      DDRD = 0xFF;
                              //make PORTD output
      TCNT0 = -160:
      TCCR0 = 0x01;
                              //Normal mode, int clk, no prescaler
      TCNT1H = (-640) >> 8; //the high byte
TCNT1L = (-640); //the low byte
      TCNT1L = (-640);
      TCCR1A = 0x00;
      TCCR1B = 0x01;
      TIMSK = (1 << TOIE0) | (1 << TOIE1); //enable Timers 0 and 1 int.
                                      //enable interrupts
      sei ();
                               //wait here
      while (1)
            PORTD = PINC;
}
                              //ISR for Timer0 overflow
ISR (TIMERO OVF vect)
      TCNT0 = -160;
                              //TCNT0 = -160 (reload for next round)
      PORTB ^= 0x02;
                               //toggle PORTB.1
}
                              //ISR for Timer0 overflow
ISR (TIMER1 OVF_vect)
      TCNT1H = (-640) >> 8;
      TCNT1L = (-640);
                              //TCNT1 = -640 (reload for next round)
      PORTB ^= 0x80;
                              //toggle PORTB.7
}
Note: We can use "TCNT1 = -640;" in place of the following instructions:
      TCNT1H = (-640) >> 8;
      TCNT1L = (-640);
```

Example 10-10 (C version of Program 10-3)

Using Timer0 and Timer1 interrupts, write a program in which:

- (a) PORTA counts up everytime Timer1 overflows. It overflows once per second.
- (b) A pulse is fed into Timer0 where Timer0 is used as counter and counts up. Whenever the counter reaches 200, it will toggle the pin PORTB.6.

```
#include "avr/io.h"
#include "avr/interrupt.h"
int main ()
     //load Timer0 with -200
//Normal mode, falling edge, no prescaler
      TCNT0 = -200;
      TCCR0 = 0x06;
      TCNT1H = (-31250) >> 8; //the high byte
      TCNT1L = (-31250) &0xFF; //overflow after 31250 clocks
      TCCR1A = 0x00; //Normal mode

TCCR1B = 0x04; //internal clock, prescaler 1:256
      TIMSK = (1 << TOIE0) | (1 << TOIE1); //enable Timers 0 & 1 int.
      sei ();
                                     //enable interrupts
      DDRC = 0 \times 00; //make PORTC input
      DDRD = 0xFF;
                             //make PORTD output
      while (1)
                             //wait here
            PORTD = PINC;
}
                             //ISR for TimerO overflow
ISR (TIMERO_OVF vect)
      TCNT0 = -200;
PORTB ^{-} 0x40;
                             //TCNT0 = -200
                             //toggle PORTB.6
}
ISR (TIMER1 OVF vect)
                             //ISR for Timer1 overflow
      TCNT1H = (-31250) >> 8; //the high byte
      TCNT1L = (-31250) &0xFF; //overflow after 31250 clocks
      PORTA ++:
                             //increment PORTA
}
```

Example 10-11 (C version of Example 10-4)

Using Timer1, write a program that toggles pin PORTB.5 every second, while at the same time transferring data from PORTC to PORTD. Assume XTAL = 8 MHz.

```
#include "avr/io.h"
#include "avr/interrupt.h"
int main ()
     DDRB |= 0x20; //make DDRB.5 output
     OCR0 = 40;
     TCCR0 = 0x09;
                            //CTC mode, internal clk, no prescaler
     TIMSK = (1<<OCIE0); //enable Timer0 compare match int.</pre>
     sei ();
                            //enable interrupts
     DDRC = 0 \times 00;
                            //make PORTC input
     DDRD = 0xFF;
                            //make PORTD output
     while (1)
                            //wait here
           PORTD = PINC;
ISR (TIMERO COMP vect)
                            //ISR for TimerO compare match
     PORTB ^= 0x20; //toggle PORTB.5
}
```

Example 10-12 (C version of Example 10-5)

Assume that the INT0 pin is connected to a switch that is normally high. Write a program that toggles PORTC.3, whenever INT0 pin goes low. Use the external interrupt in level-triggered mode.

Solution:

Example 10-13 (C version of Example Example 10-7)

Rewrite Example 10-12 so that whenever INT0 goes low, it toggles PORTC.3 only once.

SUMMARY

An interrupt is an external or internal event that interrupts the microcontroller to inform it that a device needs its service. Every interrupt has a program associated with it called the ISR, or interrupt service routine. The AVR has many sources of interrupts, depending on the family member. Some of the most widely used interrupts are for the timers, external hardware interrupts, and serial communication. When an interrupt is activated, the IF (interrupt flag) bit is raised.

The AVR can be programmed to enable (unmask) or disable (mask) an interrupt, which is done with the help of the I (global interrupt enable) and IE (interrupt enable) bits. This chapter also showed how to program AVR interrupts in both Assembly and C languages.

PROBLEMS

SECTION 10.1: AVR INTERRUPTS

- 1. Which technique, interrupt or polling, avoids tying down the microcontroller?
- 2. List some of the interrupt sources in the AVR.
- 3. In the ATmega32 what memory area is assigned to the interrupt vector table?
- 4. True or false. The AVR programmer cannot change the memory address location assigned to the interrupt vector table.
- 5. What memory address is assigned to the Timer0 overflow interrupt in the interrupt vector table?
- 6. What memory address is assigned to the Timer1 overflow interrupt in the interrupt vector table?
- 7. Do we have a memory address assigned to the Time0 compare match interrupt in the interrupt vector table?
- 8. Do we have a memory address assigned to the external INT0 interrupt in the interrupt vector table?
- 9. To which register does the I bit belong?
- 10. Why do we put a JMP instruction at address 0?
- 11. What is the state of the I bit upon power-on reset, and what does it mean?
- 12. Show the instruction to enable the Timer0 compare match interrupt.
- 13. Show the instruction to enable the Timer1 overflow interrupt.
- 14. The TOIE0 bit belongs to register_____.
- 15. True or false. The TIMSK register is not a bit-addressable register.
- 16. With a single instruction, show how to disable all the interrupts.
- 17. Show how to disable the INT0 interrupt.
- 18. True or false. Upon reset, all interrupts are enabled by the AVR.
- 19. In the AVR, how many bytes of program memory are assigned to the reset?

SECTION 10.2: PROGRAMMING TIMER INTERRUPTS

20. True or false. For each of Timer0 and Timer1, there is a unique address in the interrupt vector table.

- 21. What address in the interrupt vector table is assigned to Timer2 overflow?
- 22. Show how to enable the Timer2 overflow interrupt.
- 23. Which bit of TIMSK belongs to the Timer0 overflow interrupt? Show how it is enabled.
- 24. Assume that Timer0 is programmed in Normal mode, TCNT0 = \$E0, and the TOIE0 bit is enabled. Explain how the interrupt for the timer works.
- 25. True or false. The last three instructions of the ISR for Timer0 are:

```
LDI R20,0x01
OUT TIFR,R20 ;clear TOV0 flag
RETI
```

- 26. Assume that Timer1 is programmed for CTC mode, TCNT1H = \$01, TCNT1L = \$00, OCR1AH = \$01, OCR1AL = \$F5, and the OCIE1A bit is enabled. Explain how the interrupt is activated.
- 27. Assume that Timer1 is programmed for Normal mode, TCNT1H = \$FF, TCNT1L = \$E8, and the TOIE1 bit is enabled. Explain how the interrupt is activated.
- 28. Write a program using the Timer1 interrupt to create a square wave of 1 Hz on pin PB7 while sending data from PORTC to PORTD. Assume XTAL = 8 MHz.
- 29. Write a program using the Timer0 interrupt to create a square wave of 3 kHz on pin PB7 while sending data from PORTC to PORTD. Assume XTAL = 1 MHz.

SECTION 10.3: PROGRAMMING EXTERNAL HARDWARE INTERRUPTS

- 30. True or false. An address location is assigned to each of the external hardware interrupts INT0, INT1, and INT2.
- 31. What address in the interrupt vector table is assigned to INT0, INT1 and INT2? How about the pins?
- 32. To which register does the INT0 bit belong? Show how it is enabled.
- 33. To which register does the INT1 bit belong? Show how it is enabled.
- 34. Show how to enable all three external hardware interrupts.
- 35. Assume that the INT0 bit for external hardware interrupt is enabled and is negative edge-triggered. When is the interrupt activated? How does this interrupt work when it is activated.
- 36. True or false. Upon reset, all the external hardware interrupts are negative edge triggered.
- 37. The INTF0 bit belongs to the _____ register.
- 38. The INTF1 bit belongs to the ___ register.
- 39. Explain the role of INTF0 and INT0 in the execution of external interrupt 0.
- 40. Explain the role of I in the execution of external interrupts.
- 41. True or false. Upon power-on reset, all of INT0-INT2 are positive edge triggered.
- 42. Explain the difference between low-level and falling edge-triggered interrupts.
- 43. Show how to make the external INT0 negative edge triggered.
- 44. True or false. INT0-INT2 must be configured as an input pin for a hardware interrupt to come in.
- 45. Assume that the INT0 pin is connected to a switch. Write a program in which, whenever it goes low, the content of PORTC increases by one.
- 46. Assume that the INT0 and INT1 are connected to two switches named S1 and

S2. Write a program in which, whenever S1 goes low, the content of PORTC increases by one; and when S2 goes low, the content of PORTC decreases by one. When the value of PORTC is bigger than 100, PD7 is high; otherwise, it is low.

SECTION 10.4: INTERRUPT PRIORITY IN THE AVR

- 47. Explain what happens if both INT1F and INT2F are activated at the same time.
- 48. Assume that the Timer1 and Timer0 overflow interrupts are both enabled. Explain what happens if both TOV1 and TOV0 are activated at the same time.
- 49. Explain what happens if an interrupt is activated while the AVR is serving an interrupt.
- 50. True or false. In the AVR, an interrupt inside an interrupt is not allowed.

ANSWERS TO REVIEW QUESTIONS

SECTION 10.1: AVR INTERRUPTS

- 1. Interrupt
- 2. Timer0 overflow, Timer0 compare match, Timer1 overflow, Timer1 compare B match, Timer1 compare A match, Timer1 input capture, Timer2 overflow, Timer2 output compare match
- 3. Address locations 0x00 to 0x28. No. It is set when the processor is designed.
- 4. I = 0 means that all interrupts are masked, and as a result no interrupts will be responded to by the AVR.
- 5. Assuming I = 1, we need: LDI R16, (1<<0CIE1A) OUT TIMSK, R16
- 6. \$12 for Timer1 overflow interrupt and 0x02 for INT0.

SECTION 10.2: PROGRAMMING TIMER INTERRUPTS

- 1. False. For each of the interrupts there is a separate address.
- 2. 0x16
- 3. TIMSK
 LDI R16, (1<<TOIE0)
 OUT TIMSK, R16</pre>
- 4. After Timer0 is started, the timer will count up from \$F1 to \$FF on its own while the AVR is executing other tasks. Upon rolling over from \$FF to 00, the TOV0 flag is raised, which will interrupt the AVR in whatever it is doing and force it to jump to memory location \$0016 to execute the ISR belonging to this interrupt.
- 5. False. There is no need to clear the TOV0 flag since the AVR clears the TOV0 flag internally upon jumping to the interrupt vector table.
- 6. The timer counts from 0 to 21. Then TCNT0 is loaded with 0 and the OCF0 flag is set. If Timer0 compare match interrupt is enabled, the ISR of the compare match interrupt is executed on each compare match.
- 7. $1/8 \text{ MHz} = 125 \text{ ns} \rightarrow 125 \text{ ns} \times (21 + 1) = 2.75 \text{ }\mu\text{s}$

SECTION 10.3: PROGRAMMING EXTERNAL HARDWARE INTERRUPTS

- 1. False. Only INT2 is in edge-triggered mode.
- 2. Bits PD2 (PORTD.2), PD3 (PORTD.3), and PB2 (PORTB.2) are assigned to INT0, INT1, and INT2, respectively.

- LDI R20, (1<<INT1) OUT GICR, R20
- 4. Upon application of a high-to-low pulse to pin PD2, the INTF0 flag will be set; as a result, the AVR is interrupted in whatever it is doing, clears the INTF0 flag, and jumps to ROM location 0x02 to execute the ISR.
- True
- 6. When the CPU jumps to the interrupt vector to execute the ISR, it clears the flag that has caused the interrupt (the INTFO flag in this case). The INTFO flag will be set only if a new high-to-low pulse is applied to the pin.

```
7. .INCLUDE "M32DEF.INC"
      LDI
            R16,0x2
      OUT
            MCJCR, R16
                           ;make INTO falling edge triggered
  L1: IN
            R20, GIFR
      SBRS
            R20, INTFO ; skip next instruct. if the INTFO bit of GIFR is set
      RJMP
            L1
                           ; go to L1
      IN
            R21, PORTC
                           ;R21 = PORTC
      LDI
            R22,0x08
                           ;R21 = R21 xor 0x08 (toggle bit 3)
      EOR
            R21,R22
            PORTC, R21
     OUT
                           ; PORTC = R21
            R20,1<<INTFO
     LDI
     OUT
            GIFR, R20
                           ;clear INTFO flag
      RJMP
            L1
```

SECTION 10.4: INTERRUPT PRIORITY IN THE AVR

- 1. False. As shown in Table 10-1, the address of the Timer0 overflow interrupt is \$16, while the address of Timer1 overflow is \$12. Thus, the Timer1 overflow has a higher priority.
- 2. The interrupt whose vector is first in the interrupt vector is served first.
- 3. The flag of the interrupt will be set, but since I is 0, the new interrupt will not be served. The last instruction of the old interrupt is RETI, which causes the I flag to be set and the new interrupt to be served.
- 4. Context saving is the saving of the CPU contents before switching to a new task.