Electronic Devices

Final Term Lecture - 04

Reference book:

Electronic Devices and Circuit Theory (Chapter-6)

Robert L. Boylestad and L. Nashelsky, (11th Edition)



P-CHANNEL JFET CHARACTERISTICS

- As V_{GS} increases more positively:
 - The depletion zone increases
 - I_D decreases (I_D < I_{DSS})
 - Eventually I_D = 0A
- Also note that at high levels of V_{DS} the JFET reaches a breakdown situation. I_D increases uncontrollably if V_{DS} > V_{DSmax}.

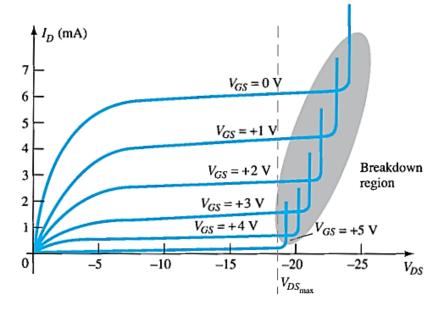


FIG. 6.13

p-Channel JFET characteristics with $I_{DSS} = 6$ mA and $V_P = +6$ V.

JFET SYMBOLS

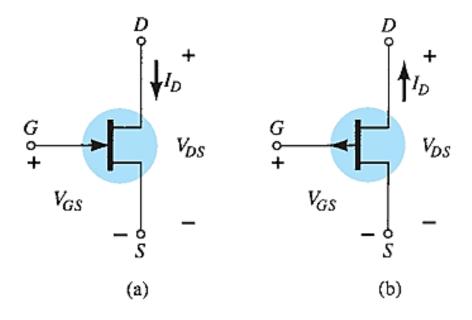


FIG. 6.14


JFET symbols: (a) n-channel; (b) p-channel.





SUMMARY TILL NOW

- The maximum current is defined as I_{DSS} and occurs when $V_{GS} = 0$ V and $V_{DS} \ge |V_p|$, as shown in Fig. 6.15a .
- For gate-to-source voltages V_{GS} is less than (more negative than) the pinch-off level, the drain current is 0 A ($I_D = 0$ A), as in Fig. 6.15b.
- For all levels of V_{GS} between 0 V and the pinch-off level, the current I_D will range between I_{DSS} and 0 A, respectively, as in Fig. 6.15c.
- A similar list can be developed for p-channel JFETs.

SUMMARY TILL NOW

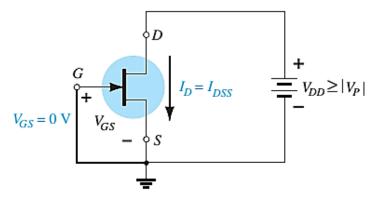

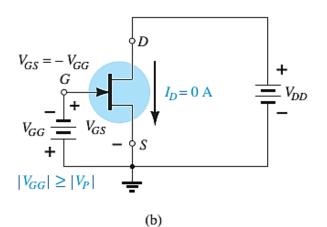

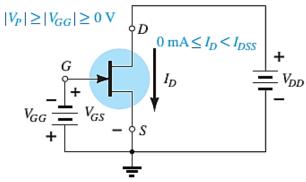


(c)

FIG. 6.15

(a) $V_{GS} = 0$ V, $I_D = I_{DSS}$; (b) cutoff ($I_D = 0$ A) V_{GS} less than the pinch-off level; (c) I_D is between 0 A and I_{DSS} for $V_{GS} \le 0$ V and greater than the pinch-off level.

JFET TRANSFER CHARACTERISTICS

- The transfer characteristic of input-to-output is not as straight forward in a JFET as it
 was in a BJT.
- In a BJT, β indicated the relationship between I_B (input) and I_C (output).
- In a JFET, the relationship of V_{GS} (input) and I_D (output) is a little more complicated (Shockley's equation):

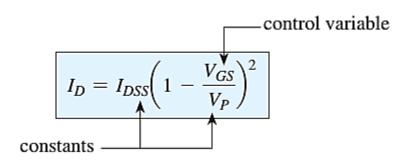



TRANSFER CURVE

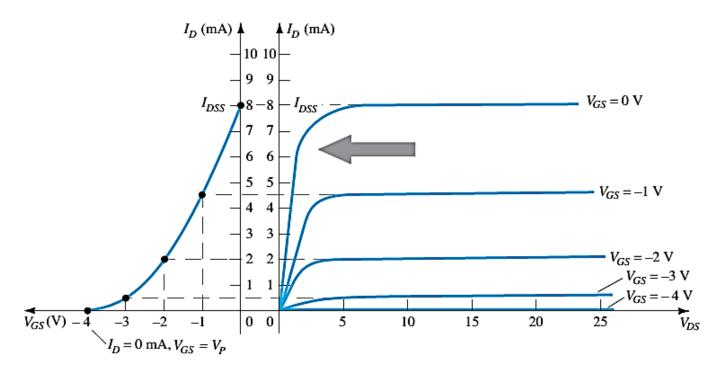


FIG. 6.17

Obtaining the transfer curve from the drain characteristics.

PLOTTING THE TRANSFER CURVE

• Using I_{DSS} and V_p (V_{GS(off)}) values found in a specification sheet, the Transfer Curve can be plotted using these 3 steps:

• Step 1:
$$I_D = I_{DSS} (1 - \frac{V_{GS}}{V_P})^2$$

$$I_{\rm D}\!=\!I_{\rm DSS} / V_{\rm GS}\!=\!0V$$
 Solving for V $_{\rm GS}$ = 0V:

• Step 2:
$$I_D = I_{DSS} (1 - \frac{V_{GS}}{V_P})^2$$

Solving for
$$V_{GS} = V_p = V_p = V_{GS(off)} V_{GS} = V_p$$

• Step 3:

Solving for
$$V_{GS}$$
 = 0V to $V_p I_D = I_{DSS} (1 - \frac{V_{GS}}{V_P})^2$



SHORTHAND METHOD

V _{GS}	l _D
0	I _{DSS}
0.3V _P	I _{DSS} /2
0.5V _P	I _{DSS} /4
V _P	0mA

When
$$VGS = 0 V$$
, $ID = IDSS$

When
$$VGS = VP$$
, $ID = 0$ mA



EXAMPLE

EXAMPLE 6.1 Sketch the transfer curve defined by $I_{DSS} = 12 \text{ mA}$ and $V_P = -6 \text{ V}$.

Solution: Two plot points are defined by

and

$$I_{DSS} = 12 \text{ mA}$$
 and $V_{GS} = 0 \text{ V}$
 $I_D = 0 \text{ mA}$ and $V_{GS} = V_P$

At $V_{GS} = V_P/2 = -6 \text{ V}/2 = -3 \text{ V}$ the drain current is determined by $I_D = I_{DSS}/4 = 12 \text{ mA}/4 = 3 \text{ mA}$. At $I_D = I_{DSS}/2 = 12 \text{ mA}/2 = 6 \text{ mA}$ the gate-to-source voltage is determined by $V_{GS} \cong 0.3V_P = 0.3(-6 \text{ V}) = -1.8 \text{ V}$. All four plot points are well defined on Fig. 6.18 with the complete transfer curve.

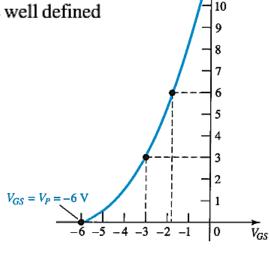


FIG. 6.18

Transfer curve for Example 6.1.

EXAMPLE

EXAMPLE 6.2 Sketch the transfer curve for a *p*-channel device with $I_{DSS} = 4$ mA and $V_P = 3$ V.

Solution: At $V_{GS} = V_P/2 = 3 \text{ V}/2 = 1.5 \text{ V}$, $I_D = I_{DSS}/4 = 4 \text{ mA}/4 = 1 \text{ mA}$. At $I_D = I_{DSS}/2 = 4 \text{ mA}/2 = 2 \text{ mA}$, $V_{GS} = 0.3V_P = 0.3(3 \text{ V}) = 0.9 \text{ V}$. Both plot points appear in Fig. 6.19 along with the points defined by I_{DSS} and V_P .

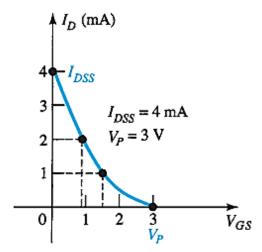



FIG. 6.19

Transfer curve for the p-channel device of Example 6.2.




MOSFETs

- MOSFETs have characteristics similar to JFETs and additional characteristics that make them very useful.
- There are 2 types:
 - Depletion-Type MOSFET
 - Enhancement-Type MOSFET

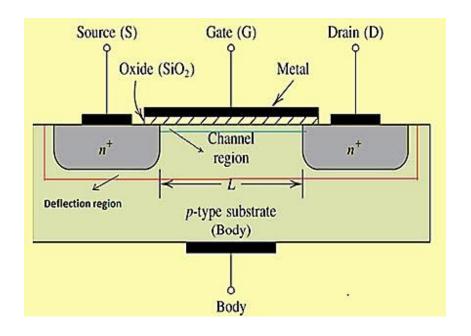

ENHANCEMENT-TYPE MOSFET CONSTRUCTION

- The Drain (D) and Source (S) connect to the to n-doped regions.
- The Gate (G) connects to the p-doped substrate via a thin insulating layer of SiO2.
- There is no channel. The n-doped material lies on a pdoped substrate that may have an additional terminal connection called SS.
- In summary, therefore, the construction of an enhancement-type MOSFET is quite similar to that of the depletion-type MOSFET, except for the absence of a channel between the drain and source terminals.

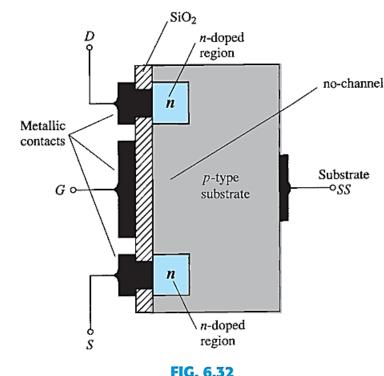

n-Channel enhancement-type MOSFET.

CONTINUED...

- As V_{GS} increases in magnitude, the concentration of electrons near the SiO2 surface increases until eventually the induced n-type region can support a measurable flow between drain and source.
- The level of V_{GS} that results in the significant increase in drain current is called the threshold voltage and is given the symbol V_T.
- Since the channel is nonexistent with V_{GS}=0 V and "enhanced" by the application of a positive gate-tosource voltage, this type of MOSFET is called an enhancement-type MOSFET.

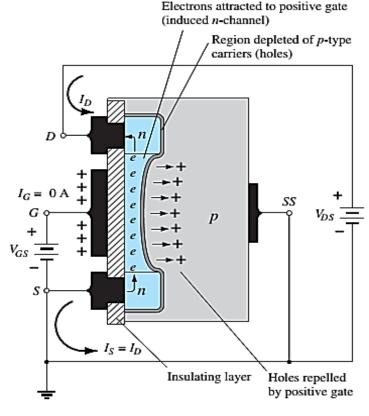


FIG. 6.33

Channel formation in the n-channel enhancement-type

MOSFET.

CONTINUED...

- As V_{GS} is increased beyond the threshold level, the density of free carriers in the induced channel will increase, resulting in an increased level of drain current.
- However, if we hold V_{GS} constant and increase the level of V_{DS}, the drain current will eventually reach a
 saturation level The levelling off of I_D is due to a pinching-off process depicted by the narrower channel
 at the drain end of the induced channel.
- By applying KVL we get $V_{DG} = V_{DS} V_{GS}$
- If V_{GS} is held fixed at some value such as 8 V and V_{DS} is increased from 2 to 5V, the voltage will drop from -6 to -3 V. This reduction in gate-to-drain voltage will in turn reduce the attractive forces for free carriers (electrons) in this region of the induced channel, causing a reduction in the effective channel width.
- Eventually, the channel will be reduced to the point of pinch-off and a saturation condition will be established.

CONTINUED...

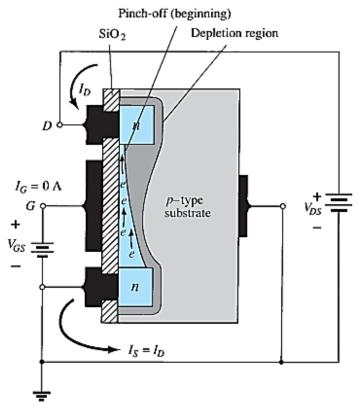


FIG. 6.34

Change in channel and depletion region with increasing level of V_{DS} for a fixed value of V_{GS} .



BASIC OPERATION

- The Enhancement-type MOSFET only operates in the enhancement mode.
- \blacksquare V_{GS} is always positive.
- \blacksquare As V_{GS} increases, I_D increases.
- But if V_{GS} is kept constant and V_{DS} is increased, then I_D saturates (I_{DSS}).
- The saturation level, V_{DSsat} is reached.

$$V_{Dsat} = V_{GS} - V_T$$

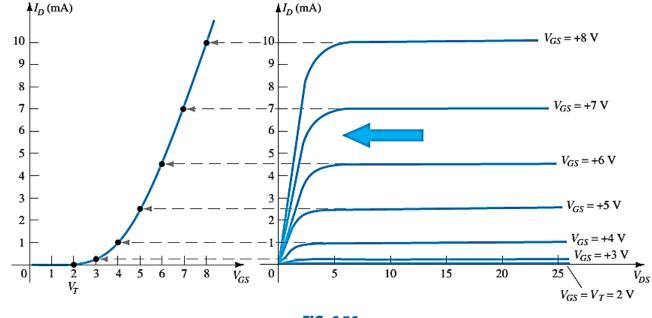


FIG. 6.36

Sketching the transfer characteristics for an n-channel enhancement-type MOSFET from the drain characteristics.

End of Lecture-4