


	REVISION		
symbol	description	initial/date	
*	CHANGED DWG. FORMAT	BMW/8-7-97	

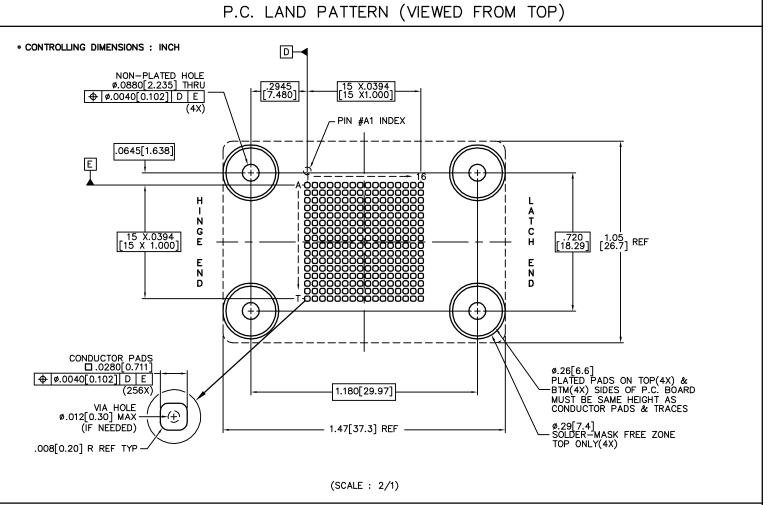

## NOTE:

- 1. SOCKET MOUNTING HOLES & CONDUCTOR PADS SIZES AND LOCATIONS ARE EXTREMELY IMPORTANT RECOMMEND LIC #170SQ 256 BDGA, P.C. BOARD INSPECTION GAGE FOR ALIGNMENT CHECK ON THE BARE P.C. BOARD BEFORE MOUNTING SOCKET.
- 2. CONSULT L.I.C. FOR PROPER THICKNESS OF BACK-UP PLATE FOR DIFFERENT THICKNESSES OF P.C. BOARD OTHER THAN WHAT IS SHOWN ON Pg. 1 OF 2.
- 3. APPLY 35-40 (ozf-in) ON SOCKET MOUNTING NUT(4X), SEE Pg. 1 OF 2.

