


REV	DESCRIPTION	DATE	BY
P1	Making sketch for the prototype build plan	2026-09-30	AC

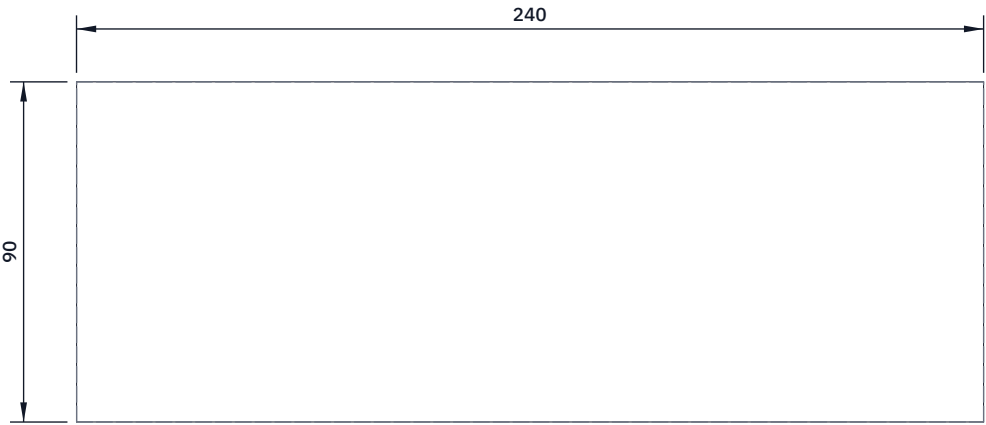


TOP VIEW
Scale 1:2; looking down (along -Z)



FRONT VIEW
Scale 1:2; looking at the front (along +Y)



RIGHT VIEW
Scale 1:2; looking at the right side (along -X)

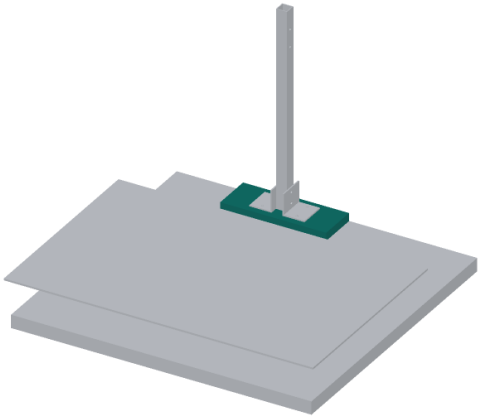

WHERE IT GOES
This part in colour, its neighbours in grey

HOW TO MAKE IT AND HOW IT FITS

Cut one piece 240 long x 90 deep from 18 mm plywood; sand the edges.

Mark a centre line across it, 120 mm from each end, on the top face and down the front edge: it lines up with the mat's centre mark.

The post stands on the centre line, 45 mm back from the front edge.

Four pilot holes 3 mm, 12 mm deep, for the foot angle screws:

39 mm each side of the centre line, 25 and 65 mm back from the front edge.

Better: drill them through the foot angles when fitting (step 2).

Paint the front edge the mat's grey so it disappears if it shows at all.

Fit: back edge flush with the back edge of the bench, held by two G-clamps 20 mm in from each end. The front edge is where the mat stops.

Check: flat, square corners, centre line marked on top and front.

WASTEWISE-ML				github.com/BoujeeEnjinia1701/WasteWise-ml			
WasteWise-ml base board: making sketch							
DRAWING NO. WML - DWG - 101			REV P1		SHEET 1 of 1		SIZE ANSI B
SCALE 1:2	UNITS mm	PROJECTION 		DATE 2026-09-30		DRAWN Amish Chadha	
MATERIAL / NOTES Plywood 18 mm, exterior or birch grade							
Licensed MIT · Design Molecule Lab · designmolecule.com				Generated from cad/src; do not edit by hand			