

Installation of OWS Spider and CAC Module

HT24 Lock



Regulatory Information

Federal Communications Commission (FCC) Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Regulatory Information

NFC TYPES		MODULATION	FREQUENCY
TYPE A	UPLINK	ASK 100%	13.56 MHz
	DOWNLINK	LOAD MODULATION(ASK)	13.56 Mhz + 848 kHz subcarrier
TYPE B	UPLINK	ASK 10%	13.56 MHz
	DOWNLINK	LOAD MODULATION(BPSK)	13.56 Mhz + 848 kHz subcarrier
TYPE F	UPLINK	ASK 10%	13.56 MHz
	DOWNLINK	LOAD MODULATION(ASK)	13.56 MHz



Items Needed


- T-10 Screw driver
- Phillips Screwdriver
- Flat head screwdriver
- Complete CAC All-In-One Kit
- Complete HT Spider Kit
- HT CAC Mounting Plate




Tools and Parts Required

- T-10 (Torx) Screwdriver
- HT Spider
- HT Harness
- CAC AIO Module
- HT CAC Wedge



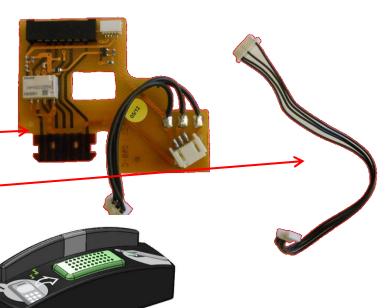




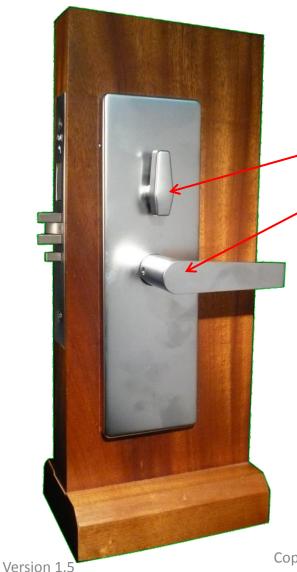

Starting with the Inside trim remove the thumb-turn and handle

Copyright 2014 – Not for distribution without express permission from OpenWays



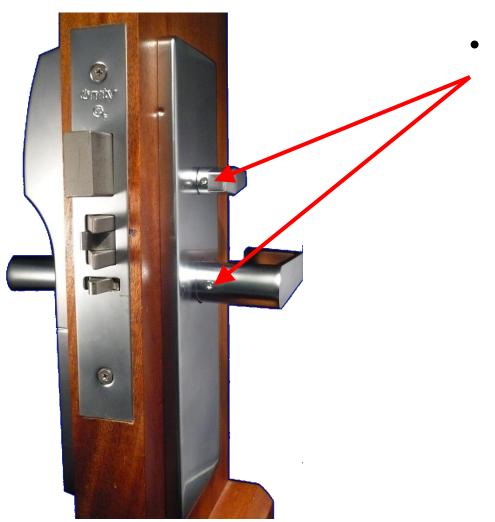

Using a T-10 screwdriver and turning the thumb turn to project the dead-bolt remove the screws



 Before removing the thumb-turn return it to the original position (dead-bolt retracted into lock case)






- With a flat head screw driver use the notch at the bottom to pry the escutcheon off the inside trim.
- Be careful not to scratch the escutcheon or the door.








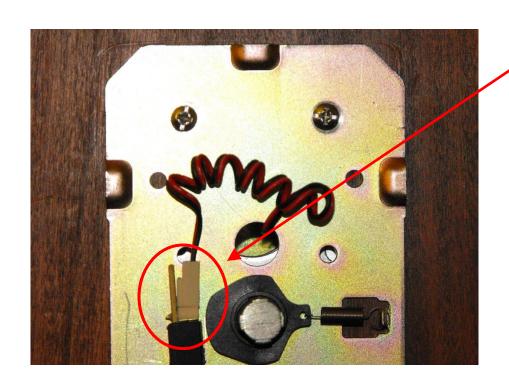

Unplug the privacy wire



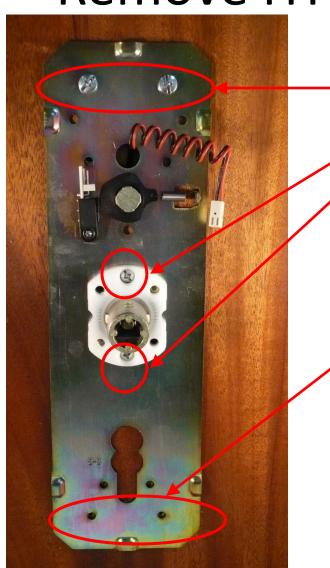

Remove the 4 screws

Be careful, as these screws are removed the outside trim will be free come off the door

Also, if there are no screws holding this plate on the door, it will fall off

 If these screws are present there is no need to remove them



 Pull the Outside trim off the door








 Remove the six screws holding on the back plate of the lock



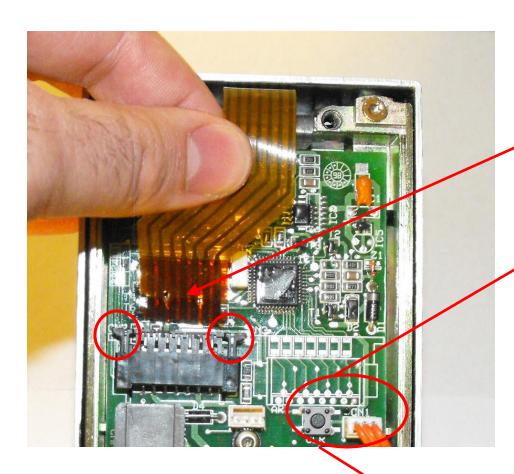


- Lift clips (if present) on both sides of the plug
- Unplug Reader cable
- Unplug the Power cable






Connect Harness

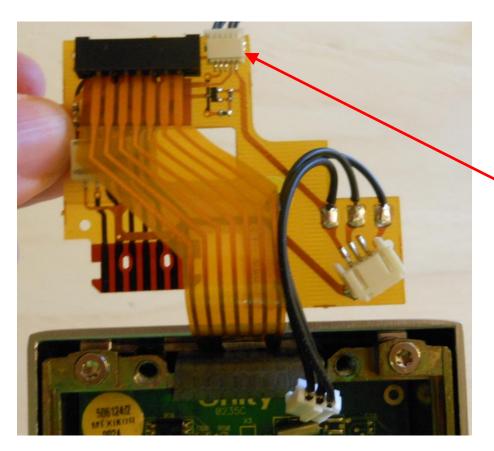






Spider reader port

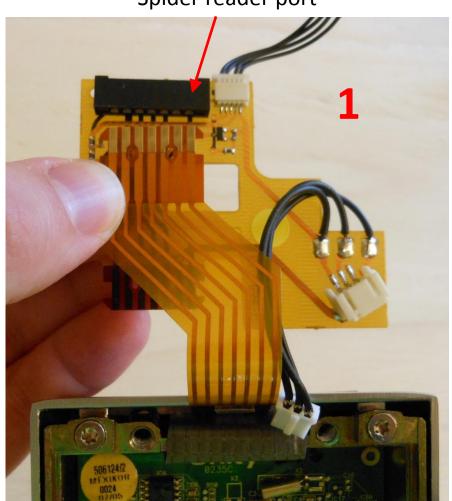

 Flip the HT Reader cable up and insert it into the spider reader port

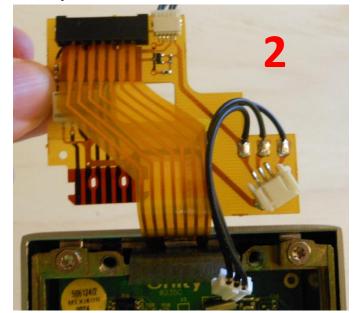


Copyright 2014 – Not for distribution without express permission from OpenWays





 Flip the spider down until the it is lays over the HT24 Main PCB as shown



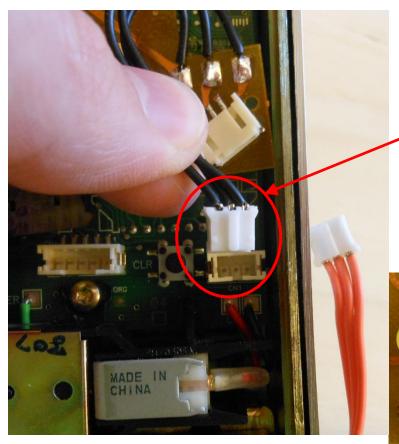

Plug the Spider power cable into the HT24 main PCB power port

Plug the HT24 power cable into the Spider power port






opyright 2014 — Not To distribution without express permission from OpenWays



Re-Assemble Lock

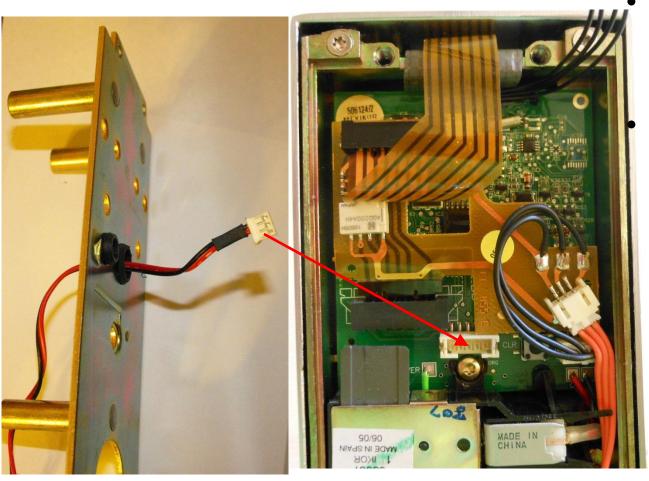


Plug the privacy wire back into lock PCB

The plug has 3 pins, the port on the PCB may have 5 pins. It this is the case insert the plug in the center. Leaving 1 pin on each side

Copyright 2014 – Not for distribution without express permission from OpenWays



Re-Assemble Lock

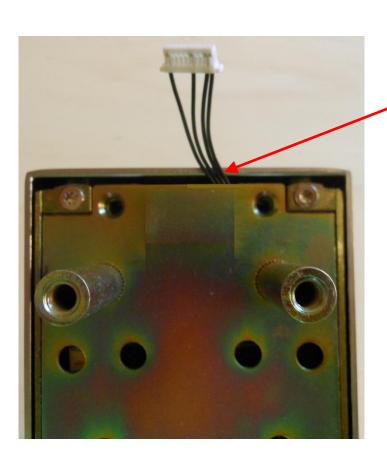

- Make sure CAC wires have not overlapped
- Place the back plate on the lock pulling the excess privacy wire through the grommet
- Leave about 2 inches (5 centimeters) of the harness outside the lock



Re-Assemble Lock




Replace 6 T-10 screws








 Install CAC mounting plate on the back of the lock

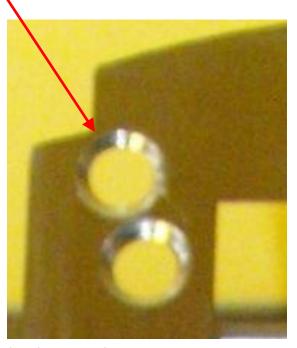

express permission from OpenWays




Plug the cable into the port on the CAC board

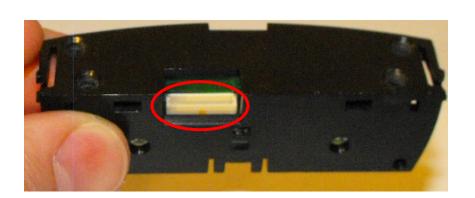





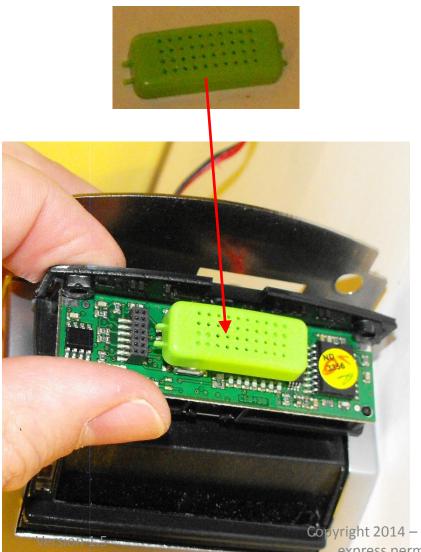

- Install the button
- The angle should slope down toward the front of the lock






The back should be flush




25



 Install the HT wedge on the bottom of the CAC housing

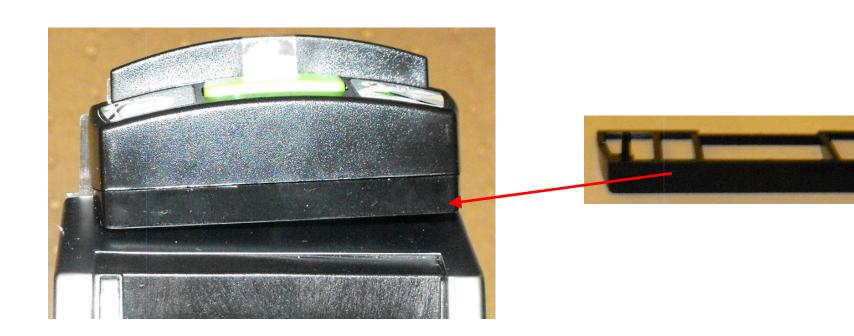



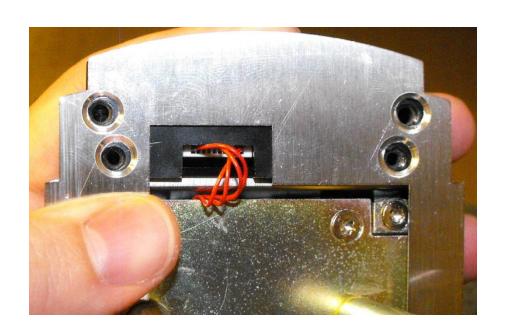


 Line up holes between the plate and the CAC housing and install 4 phillips screws provided with CAC







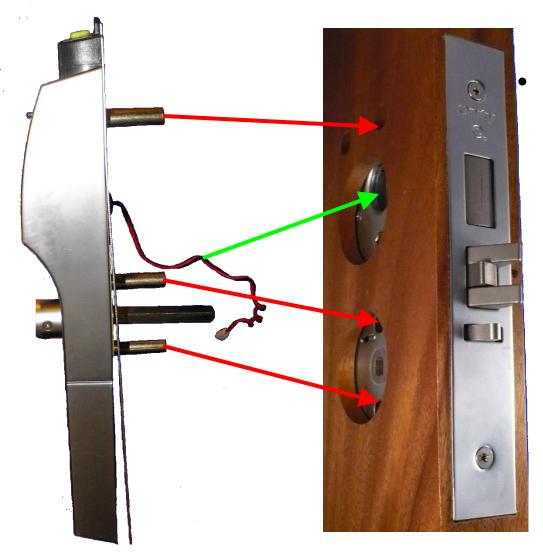


Mount the lock back on the door lining up the posts and running the privacy wire through the hole as shown






 Feed the privacy wire through the door

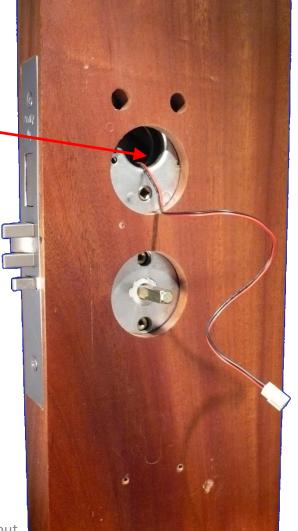

Copyright 2014 – Not for distribution without express permission from OpenWays



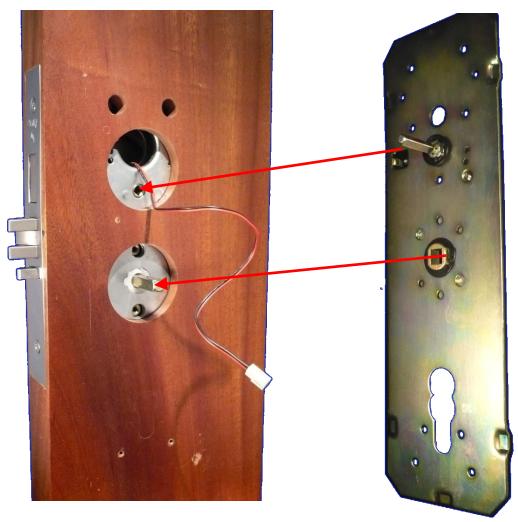

 If the inside trim plate is not still on the door, replace it now

Copyright 2014 – Not for distribution without express permission from OpenWays





 Do not stuff the privacy wire in the door

Copyright 2014 – Not for distribution without express permission from OpenWays



With the dead-bolt retracted the spring should be compressed



Copyright 2014 – Not for distribution without express permission from OpenWays



Distance from these points of / the back-plate to the edge of the door should be identical.








Coil the privacy wire



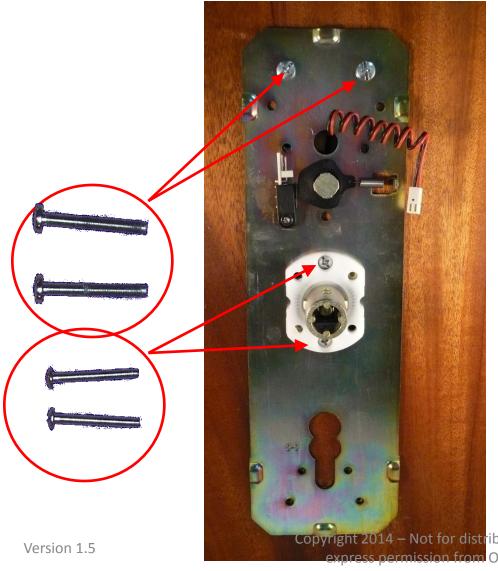

- Install the screws as shown
- Beware, if all four screws are not the same size the larger two should be at the top





The escutcheon snaps on. Use the palm of your hand or a rubber mallet at the corners to





Inside Handle Outside Handle (Short return) (Long return)








- Place inside handle and thumb-turn on appropriate shafts
- Turn thumb-turn clockwise





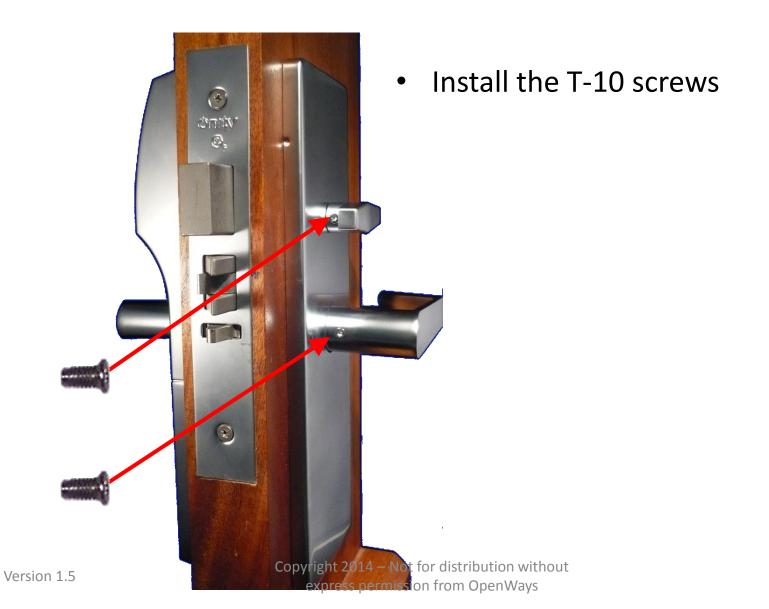



Installation Complete







Programming

- The lock must be updated with the portable programmer
- The CAC must be initialized
 - Follow the instructions in the OWS manual provided by OpenWays