

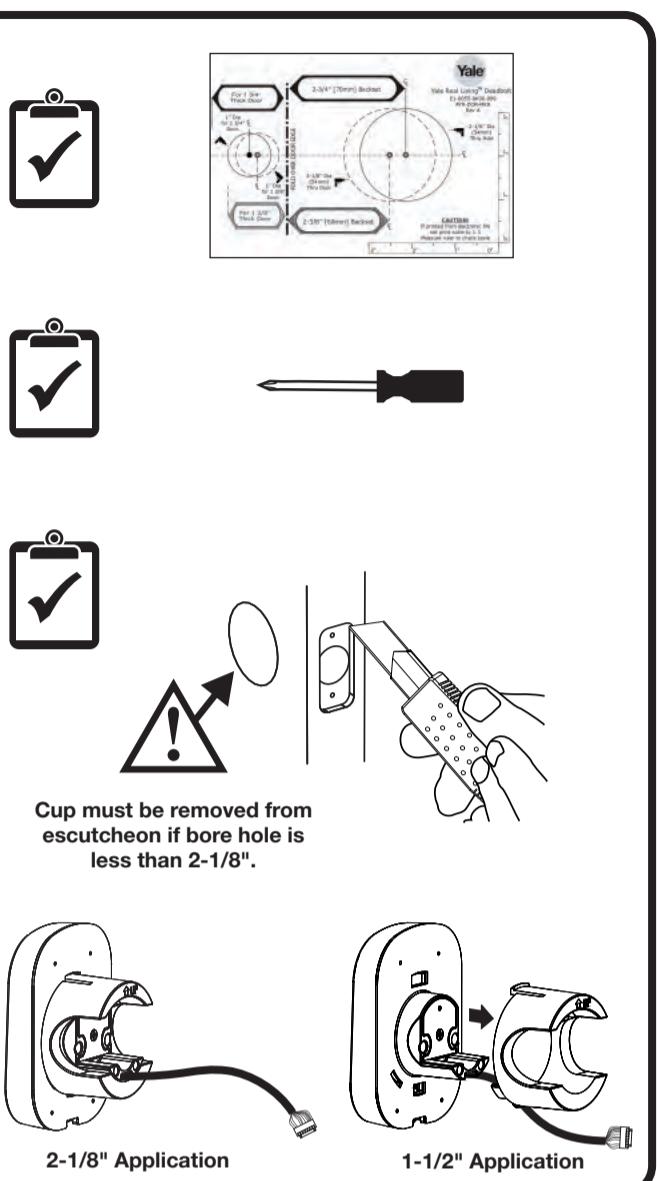





### Preparing Door and Touchscreen Escutcheon

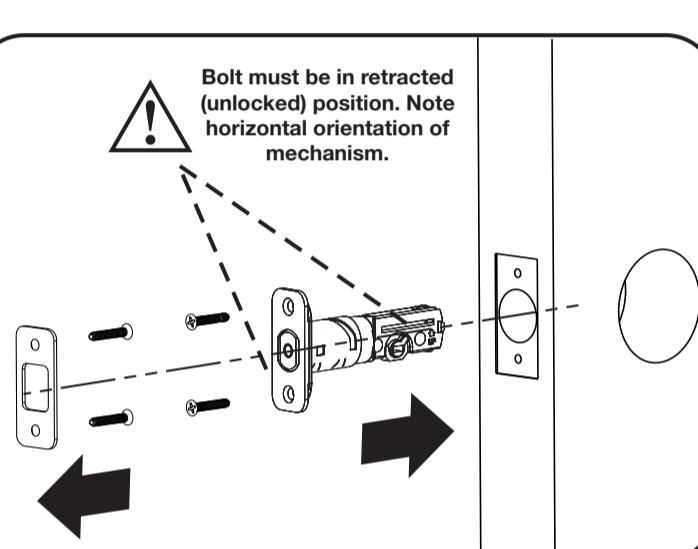



### 1 Installing Latch & Strike Plate

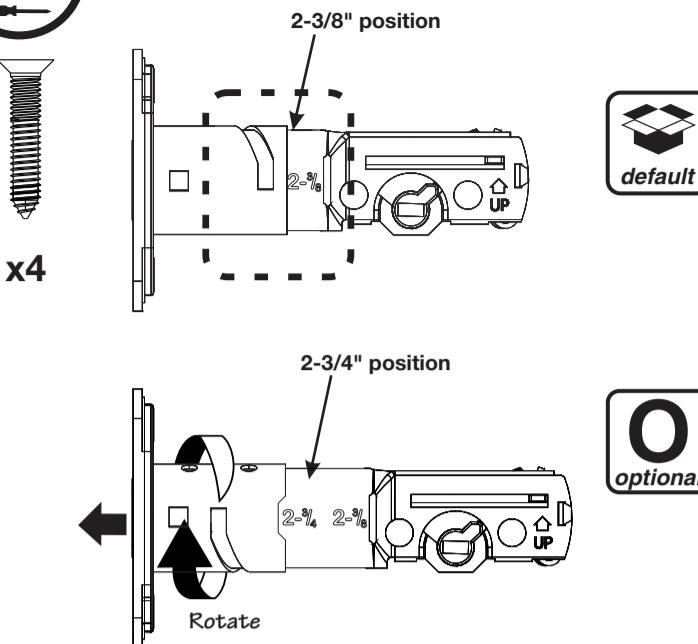



### 2 Installing Touchscreen Escutcheon

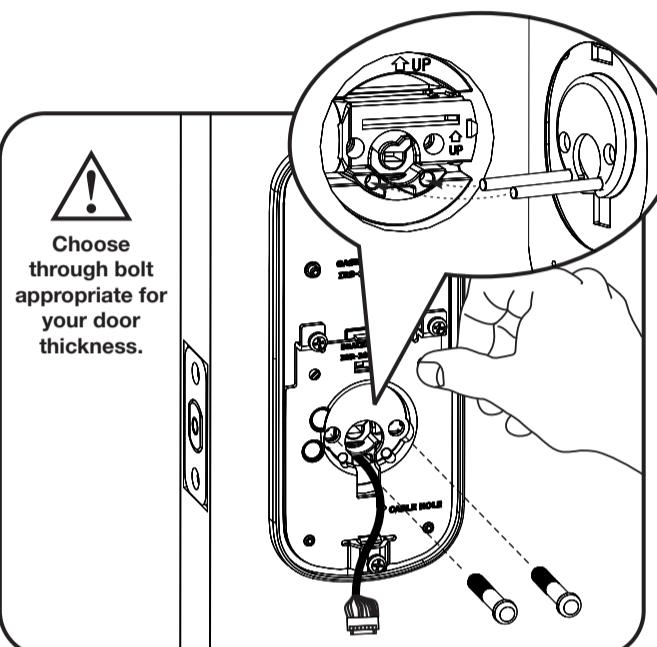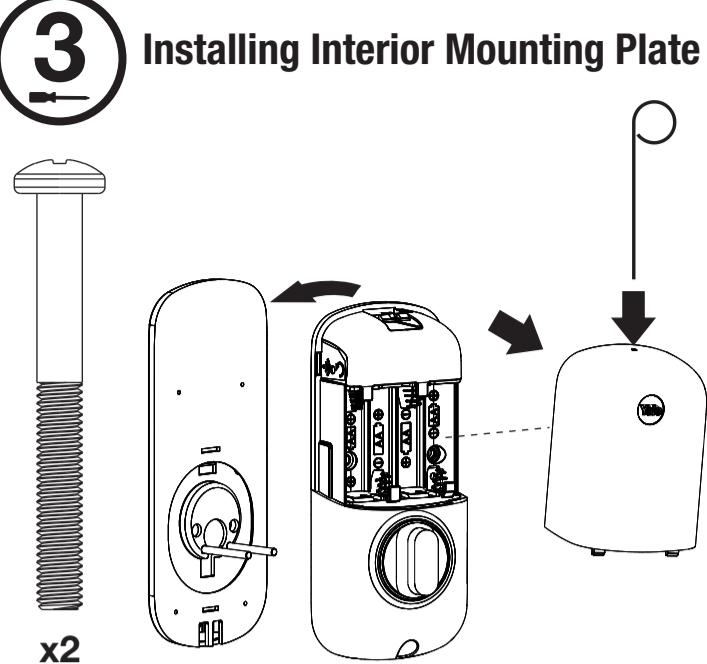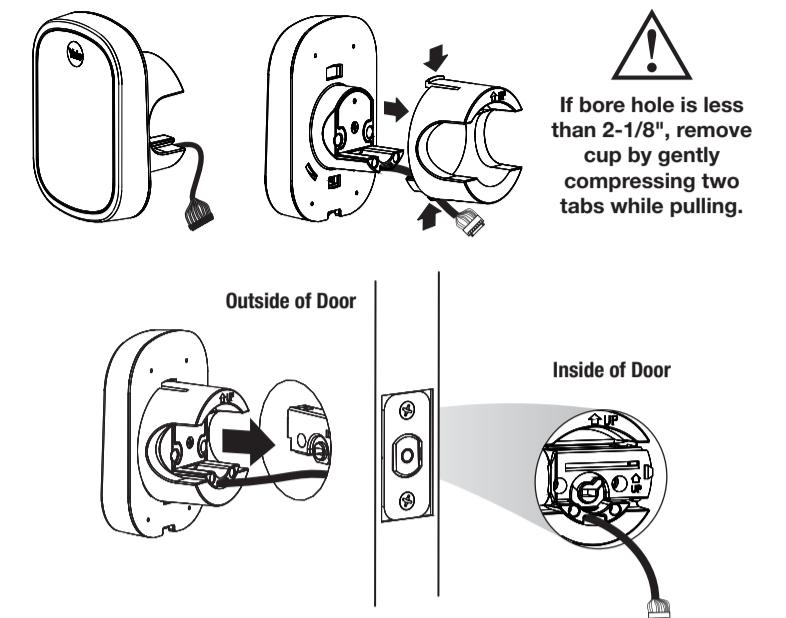



### 4 Attaching the Cable Assembly

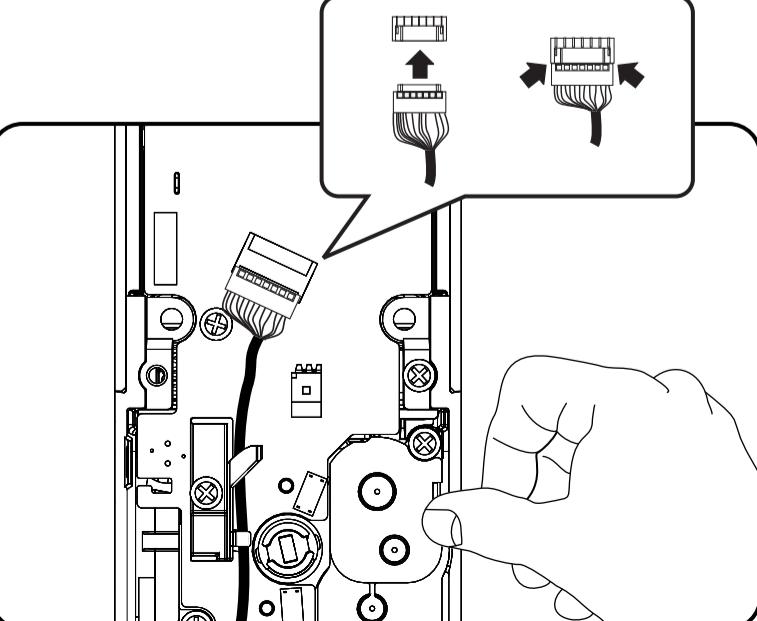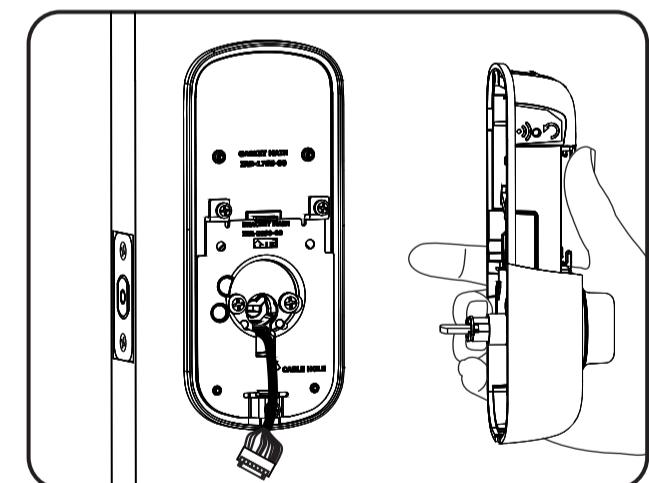



### 5 Installing Interior Escutcheon

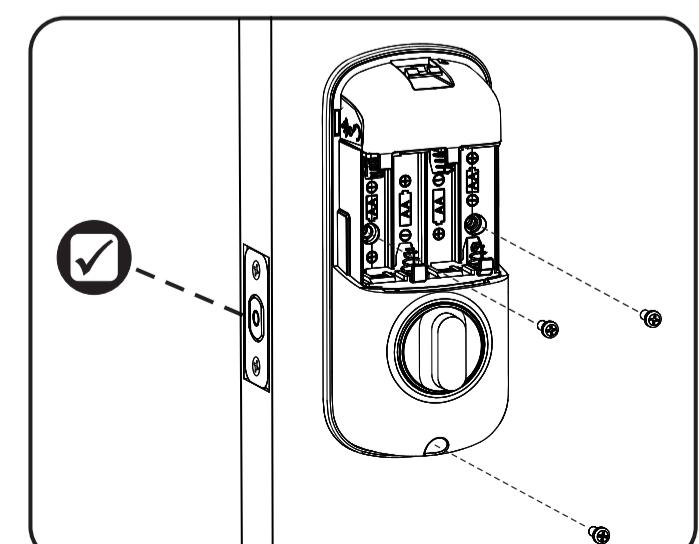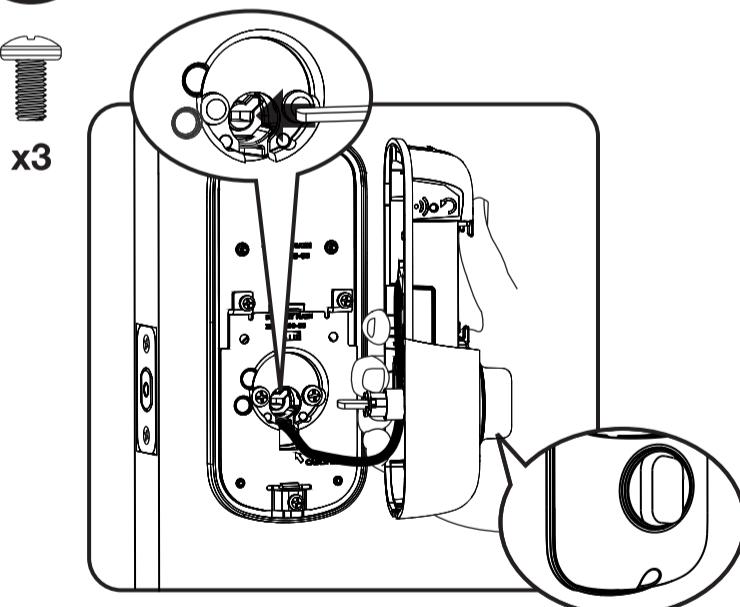


### 6 Testing Operation

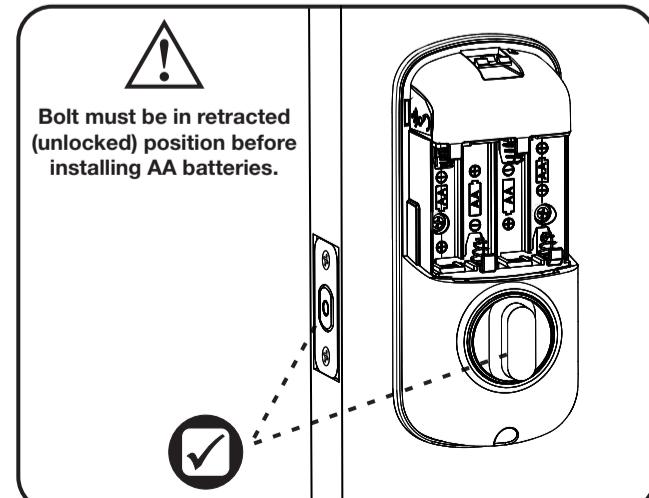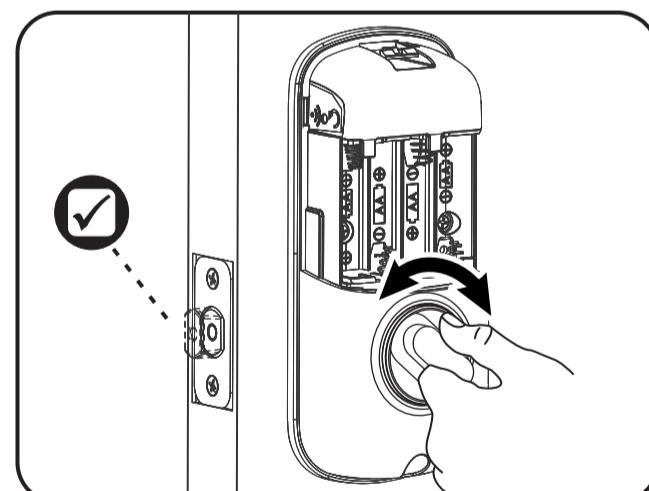

### Handing the Lock

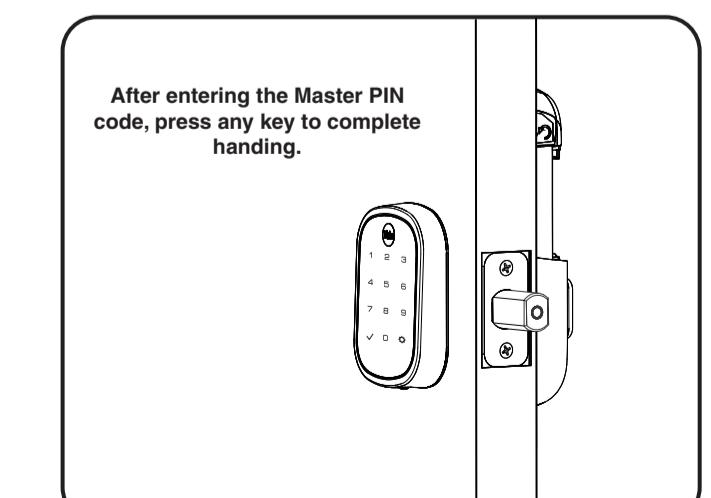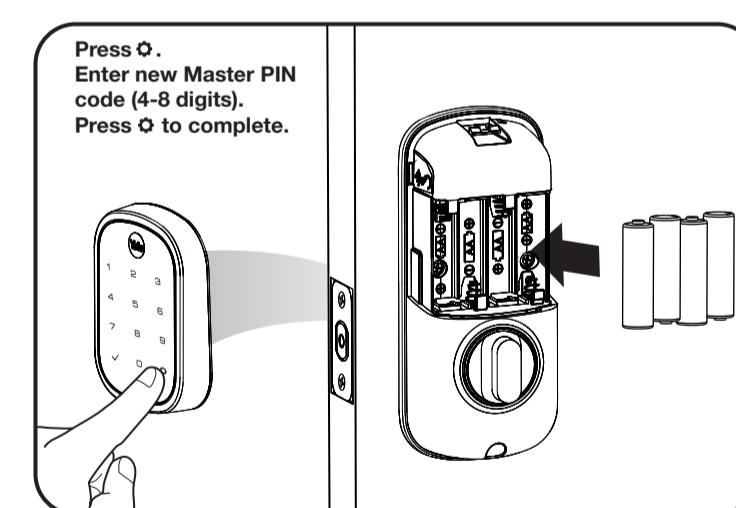

### 6 Installing Cover

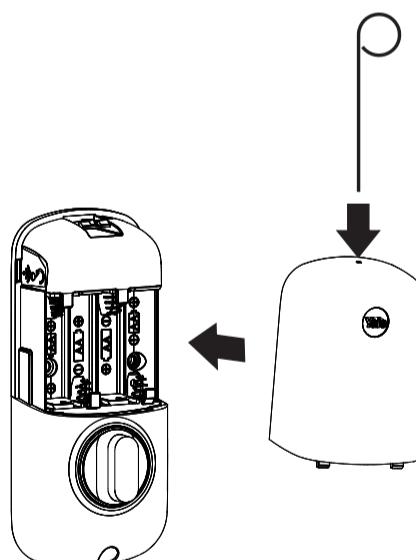

Congratulations, you've installed the Yale Real Living® YRD 156 Key Free Touchscreen Deadbolt with Z-Wave Plus!  
Turn sheet over for Programming Instructions to customize your product.

DRAFT