Technical Description

The brief circuit description is listed as below:

- 1) U1 acts as MCU (PX0479).
- 2) U3 acts as 2.4GHz RF transceiver module (BK2425).
- 3) U2 acts as Voltage Regulator (ME6209A-3.3V).
- 4) X1 is 16MHz crystal oscillator providing clock for U3.

Antenna Type: Internal antenna

Antenna Gain: 0dBi


Nominal rated field strength: 61.8dBµV/m at 3m

Maximum allowed field strength of production tolerance: +/- 3dB



Low Power High Performance 2.4 GHz GFSK Transceiver Features Pin Assignments

- 2400-2483.5 MHz ISM band operation
- Support 250Kbps, 1Mbps and 2 Mbps air data rate
- Programmable output power
- Low power consumption
- Tolerate +/- 60ppm 16 MHz crystal
- Variable payload length from 1 to 32bytes
- Automatic packet processing
- 6 data pipes for 1:6 star networks
- 1.9V to 3.6V power supply
- 4-pin SPI interface with maximum 8 MHz clock rate
- 20-pin 4x4mm QFN package

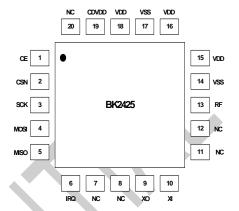

Applications

- Wireless PC peripherals
- Wireless gamepads
- Wireless audio
- Remote controls
- Home automation
- Toys

Block Diagram

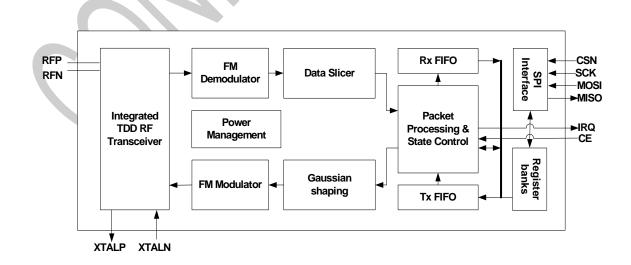




Table of Contents

1		al Description	
2		viations	
3		formation	
4		Control	
		e Control Diagram	
		er Down Mode	
		dby-I Mode	
	4.4 Star	dby-II Mode	7
	4.5 TX	Mode	7
	4.6 RX	Mode	8
5	Packet	Processing	8
	5.1 Pacl	ket Format	8
	5.1.1	Preamble	9
	5.1.2	Address	9
	5.1.3	Packet Control	9
	5.1.4	Payload	10
	5.1.5	CRC	10
	5.2 Pacl	ket Handling	10
6	Data a	nd Control Interface	11
		RX FIFO	
		rrupt	
	6.3 SPI	Interface	12
	6.3.1	SPI Command	12
	6.3.2		13
7	Registe	er Map	15
	7.1 Reg	ister Bank 0	15
	7.2 Reg	ister Bank 1	21
8		cal Specifications	
9		l Application Schematic	
10		ge and Die Bonding Information	
		ackage Information	
		Die Bonding Information	
		CB Bonding diagram	
11		Information	
12		t Information	
13	Update	e History	30



1 General Description

BK2425 is a GFSK transceiver operating in the world wide ISM frequency band at 2400-2483.5 MHz. Burst mode transmission and up to 2Mbps air data rate make them suitable for applications requiring ultra low power consumption. The embedded packet processing engines enable their full operation with a very simple MCU as a radio system. Auto re-transmission and auto acknowledge give reliable link without any MCU interference.

BK2425 operates in TDD mode, either as a transmitter or as a receiver.

The RF channel frequency determines the center of the channel used by BK2425. The frequency is set by the RF_CH register in register bank 0 according to the following formula: F0= 2400 + RF CH (MHz). The

resolution of the RF channel frequency is 1MHz.

A transmitter and a receiver must be programmed with the same RF channel frequency to be able to communicate with each other.

The output power of BK2425 is set by the RF_PWR bits in the RF_SETUP register.

Demodulation is done with embedded data slicer and bit recovery logic. The air data rate can be programmed to 250Kbps, 1Mbps or 2Mbps by RF_DR_HIGH and RF_DR_LOW register. A transmitter and a receiver must be programmed with the same setting.

In the following chapters, all registers are in register bank 0 except with explicit claim.

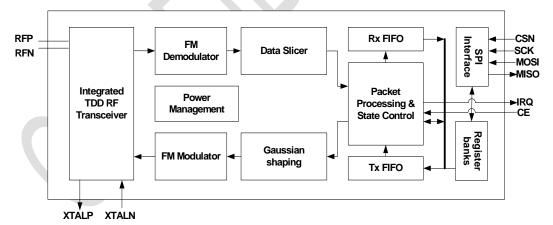


Figure 1 BK2425 Chip Block Diagram



2 Abbreviations

ACK Acknowledgement

ARC Auto Retransmission Count ARD Auto Retransmission Delay

CD Carrier Detection CE Chip Enable

CRC Cyclic Redundancy Check

CSN Chip Select Not

DPL Dynamic Payload Length

FIFO First-In-First-Out

GFSK Gaussian Frequency Shift Keying

GHz Gigahertz

LNA Low Noise Amplifier IRQ Interrupt Request

ISM Industrial-Scientific-Medical

LSB Least Significant Bit
MAX_RT Maximum Retransmit
Mbps Megabit per second
MCU Microcontroller Unit

MHz Megahertz

MISO Master In Slave Out
MOSI Master Out Slave In
MSB Most Significant Bit
PA Power Amplifier
PID Packet Identity Bits

PLD Payload
PRX Primary RX
PTX Primary TX
PWD_DWN Power Down
PWD_UP Power Up

RF_CH Radio Frequency Channel

RSSI Received Signal Strength Indicator

RX Receive

RX_DR Receive Data Ready

SCK SPI Clock

SPI Serial Peripheral Interface
TDD Time Division Duplex

TX Transmit

TX_DS Transmit Data Sent

XTAL Crystal



3 Pin Information

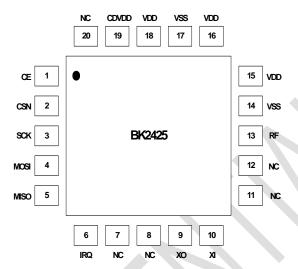


Figure 2 BK2425 pin assignments (top view) for the QFN20 package

PIN	Name	Pin Function	Description
1	CE	Digital Input	Chip Enable Activates RX or TX mode
2	CSN	Digital Input	SPI Chip Select, Active low
3	SCK	Digital Input	SPI Clock
4	MOSI	Digital Input	SPI Slave Data Input
5	MISO	Digital Output	SPI Slave Data Output with tri-state option
6	IRQ	Digital Output	Maskable interrupt pin, Active low
7	NC		No Connection
8	NC		No Connection
9	XO	Analog Output	Crystal oscillator, node P (inverter output)
10	XI	Analog Input	Crystal oscillator, node N (inverter input)
11	NC		No Connection
12	NC		No Connection
13	RFN	RF port	RF output (PA) /Input (LNA), port N.
14	VSS	Ground	Ground (0 V)
15	VDD	Power	Power Supply (1.9 V to 3.6 V DC)
16	VDD		Power Supply (1.9 V to 3.6 V DC)
17	VSS	Ground	Ground (0 V)
18	VDD	Power	Power Supply (1.9 V to 3.6 V DC)
19	CDVDD	Analog Output	Digital regulator output decoupling capacitor
20	NC		No Connection

Table 1 BK2425 QFN20 pin functions



4 State Control

4.1 State Control Diagram

- Pin signal: VDD, CE
- SPI register: PWR_UP, PRIM_RX, EN_AA, NO_ACK, ARC, ARD
- System information: Time out, ACK received, ARD elapsed, ARC_CNT, TX FIFO empty, ACK packet transmitted, Packet received

BK2425 has built-in state machines that control the state transition between different modes.

When auto acknowledge feature is disabled, state transition will be fully controlled by MCU.

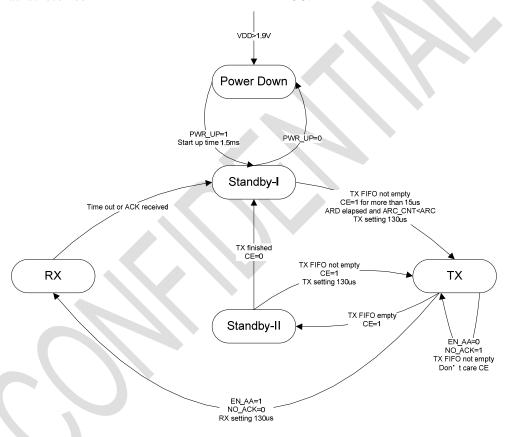


Figure 3 PTX (PRIM_RX=0) state control diagram



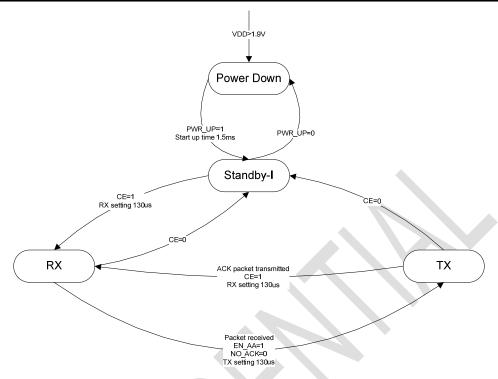


Figure 4 PRX (PRIM_RX=1) state control diagram

4.2 Power Down Mode

In power down mode BK2425 is in sleep mode with minimal current consumption. SPI interface is still active in this mode, and all register values are available by SPI. Power down mode is entered by setting the PWR_UP bit in the CONFIG register to low.

4.3 Standby-I Mode

By setting the PWR_UP bit in the CONFIG register to 1 and de-asserting CE to 0, the device enters standby-I mode. Standby-I mode is used to minimize average current consumption while maintaining short start-up time. In this mode, part of the crystal oscillator is active. This is also the mode which the BK2425 returns to from TX or RX mode when CE is set low.

4.4 Standby-II Mode

In standby-II mode more clock buffers are active than in standby-I mode and much more current is used. Standby-II occurs when CE is held high on a PTX device with empty TX FIFO. If a new packet is uploaded to the TX FIFO in this mode, the device will automatically enter TX mode and the packet is transmitted.

4.5 TX Mode

■ PTX device (PRIM_RX=0)

The TX mode is an active mode where the PTX device transmits a packet. To enter this mode from power down mode, the PTX device must have the PWR_UP bit set high, PRIM_RX bit set low, a payload in the TX FIFO, and a high pulse on the CE for more than $10\mu s$.



The PTX device stays in TX mode until it finishes transmitting the current packet. If CE = 0 it returns to standby-I mode. If CE = 1, the next action is determined by the status of the TX FIFO. If the TX FIFO is not empty the PTX device remains in TX mode, transmitting the next packet. If the TX FIFO is empty the PTX device goes into standby-II mode. It is important to never stay in TX mode for more than 4ms at one time.

If the auto retransmit is enabled (EN_AA=1) and auto acknowledge is required (NO_ACK=0), the PTX device will enter TX mode from standby-I mode when ARD elapsed and number of retried is less than ARC.

■ PRX device (PRIM_RX=1)

The PRX device will enter TX mode from RX mode only when EN_AA=1 and NO_ACK=0 in received packet to transmit acknowledge packet with pending payload in TX FIFO.

4.6 RX Mode

■ PRX device (PRIM_RX=1)

The RX mode is an active mode where the BK2425 radio is configured to be a receiver. To enter this mode from standby-I mode, the PRX device must have the PWR_UP bit set

high, PRIM_RX bit set high and the CE pin set high. Or PRX device can enter this mode from TX mode after transmitting an acknowledge packet when EN_AA=1 and NO_ACK=0 in received packet.

In this mode the receiver demodulates the signals from the RF channel, constantly presenting the demodulated data to the packet processing engine. The packet processing engine continuously searches for a valid packet. If a valid packet is found (by a matching address and a valid CRC) the payload of the packet is presented in a vacant slot in the RX FIFO. If the RX FIFO is full, the received packet is discarded.

The PRX device remains in RX mode until the MCU configures it to standby-I mode or power down mode.

In RX mode a carrier detection (CD) signal is available. The CD is set to high when a RF signal is detected inside the receiving frequency channel. The internal CD signal is filtered before presented to CD register. The RF signal must be present for at least 128 μ s before the CD is set high.

■ PTX device (PRIM_RX=0)

The PTX device will enter RX mode from TX mode only when EN_AA=1 and NO_ACK=0 to receive acknowledge packet.

5 Packet Processing

5.1 Packet Format

The packet format has a preamble, address, packet control, payload and CRC field.

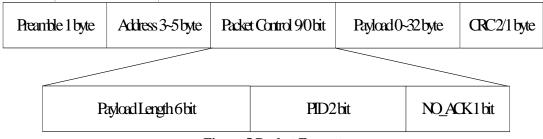


Figure 5 Packet Format



5.1.1 Preamble

The preamble is a bit sequence used to detect 0 and 1 levels in the receiver. The preamble is one byte long and is either 01010101 or 10101010. If the first bit in the address is 1 the preamble is automatically set to 10101010 and if the first bit is 0 the preamble is automatically set to 01010101. This is done to ensure there are enough transitions in the preamble to stabilize the receiver.

5.1.2 Address

This is the address for the receiver. An address ensures that the packet is detected by the target receiver. The address field can be configured to be 3, 4, or 5 bytes long by the AW register.

The PRX device can open up to six data pipes to support up to six PTX devices with unique addresses. All six PTX device addresses are searched simultaneously. In PRX side, the data pipes are enabled with the bits in the EN_RXADDR register. By default only data pipe 0 and 1 are enabled.

Each data pipe address is configured in the RX_ADDR_PX registers.

Each pipe can have up to 5 bytes configurable address. Data pipe 0 has a unique 5 byte address. Data pipes 1-5 share the 4 most significant address bytes. The LSB byte must be unique for all 6 pipes.

To ensure that the ACK packet from the PRX is transmitted to the correct PTX, the PRX takes the data pipe address where it received the packet and uses it as the TX address when transmitting the ACK packet.

On the PRX, the RX_ADDR_Pn, defined as the pipe address, must be unique. On the PTX the TX_ADDR must be the same as the RX_ADDR_P0 on the PTX, and as the pipe address for the designated pipe on the PRX.

No other data pipe can receive data until a complete packet is received by a data pipe that has detected its address. When multiple PTX devices are transmitting to a PRX, the ARD can be used to skew the auto retransmission so that they only block each other once.

5.1.3 Packet Control

When Dynamic Payload Length function is enabled, the packet control field contains a 6 bit payload length field, a 2 bit PID (Packet Identity) field and, a 1 bit NO_ACK flag.

Payload length

The payload length field is only used if the Dynamic Payload Length function is enabled.

■ PID

The 2 bit PID field is used to detect whether the received packet is new or retransmitted. PID prevents the PRX device from presenting the same payload more than once to the MCU. The PID field is incremented at the TX side for each new packet received through the SPI. The PID and CRC fields are used by the PRX device to determine whether a packet is old or new. When several data packets are lost on the link, the PID fields may become equal to the last received PID. If a packet has the same PID as the previous packet, BK2425 compares the CRC sums from both packets. If the CRC sums are also equal, the last received packet is considered a copy of the previously received packet and discarded.

■ NO_ACK

The NO_ACK flag is only used when the auto acknowledgement feature is used. Setting the flag high, tells the receiver that the packet is not to be auto acknowledged.

The PTX can set the NO_ACK flag bit in the Packet Control Field with the command: W_TX_PAYLOAD_NOACK. However, the function must first be enabled in the FEATURE register by setting the



EN_DYN_ACK bit. When you use this option, the PTX goes directly to standby-I mode after transmitting the packet and the PRX does not transmit an ACK packet when it receives the packet.

5.1.4 Payload

The payload is the user defined content of the packet. It can be 0 to 32 bytes wide, and it is transmitted on-air as it is uploaded (unmodified) to the device.

The BK2425 provides two alternatives for handling payload lengths, static and dynamic payload length. The static payload length of each of six data pipes can be individually set.

The default alternative is static payload length. With static payload length all packets between a transmitter and a receiver have the same length. Static payload length is set by the RX_PW_Px registers. The payload length on the transmitter side is set by the number of bytes clocked into the TX_FIFO and must equal the value in the RX_PW_Px register on the receiver side. Each pipe has its own payload length.

Dynamic Payload Length (DPL) is an alternative to static payload length. DPL enables the transmitter to send packets with variable payload length to the receiver. This means for a system with different payload lengths it is not necessary to scale the packet length to the longest payload.

With DPL feature the BK2425 can decode the payload length of the received packet automatically instead of using the RX_PW_Px registers. The MCU can read the length of the received payload by using the command: R_RX_PL_WID.

In order to enable DPL the EN_DPL bit in the FEATURE register must be set. In RX mode the DYNPD register has to be set. A PTX that transmits to a PRX with DPL enabled must have the DPL_P0 bit in DYNPD set.

5.1.5 CRC

The CRC is the error detection mechanism in the packet. The number of bytes in the CRC is set by the CRCO bit in the CONFIG register. It may be either 1 or 2 bytes and is calculated over the address, Packet Control Field, and Payload.

The polynomial for 1 byte CRC is $X^8 + X^2 + X + 1$. Initial value is 0xFF. The polynomial for 2 byte CRC is $X^{16} + X^{12} + X^5 + 1$. Initial value is 0xFFFF.

No packet is accepted by receiver side if the CRC fails.

5.2 Packet Handling

BK2425 uses burst mode for payload transmission and receive.

The transmitter fetches payload from TX FIFO, automatically assembles it into packet and transmits the packet in a very short burst period with 1Mbps or 2Mbps air data rate.

After transmission, if the PTX packet has the NO_ACK flag set, BK2425 sets TX_DS and gives an active low interrupt IRQ to MCU. If the PTX is ACK packet, the PTX needs receive ACK from the PRX and then asserts the TX_DS IRQ.

The receiver automatically validates and disassembles received packet, if there is a valid packet within the new payload, it will write the payload into RX FIFO, set RX_DR and give an active low interrupt IRQ to MCU.

When acknowledge is enabled auto (EN AA=1),the PTX device automatically wait for acknowledge packet after transmission, and re-transmit original packet with the delay of ARD until an acknowledge packet is received or the number of re-transmission exceeds a threshold ARC. If the later one happens, BK2425 will set MAX_RT and give an active low interrupt



IRQ to MCU. Two packet loss counters (ARC_CNT and PLOS_CNT) are incremented each time a packet is lost. The ARC_CNT counts the number of retransmissions for the current transaction. The PLOS_CNT counts the total number of retransmissions since the last channel change. ARC_CNT is reset by initiating a new transaction. PLOS_CNT is reset by writing to the RF_CH register. It is possible to use the information in the OBSERVE_TX register to make an overall assessment of the channel quality.

The PTX device will retransmit if its RX FIFO is full but received ACK frame has payload.

As an alternative for PTX device to auto retransmit it is possible to manually set the BK2425 to retransmit a packet a number of times. This is done by the REUSE_TX_PL command.

When auto acknowledge is enabled, the PRX device will automatically check the NO_ACK field in received packet, and if NO_ACK=0, it will automatically send an acknowledge packet to PTX device. If EN_ACK_PAY is set, and the acknowledge packet can also include pending payload in TX FIFO.

6 Data and Control Interface

6.1 TX/RX FIFO

The data FIFOs are used to store payload that is to be transmitted (TX FIFO) or payload that is received and ready to be clocked out (RX FIFO). The FIFO is accessible in both PTX mode and PRX mode.

There are three levels 32 bytes FIFO for both TX and RX, supporting both acknowledge mode or no acknowledge mode with up to six pipes.

- TX three levels, 32 byte FIFO
- RX three levels, 32 byte FIFO

Both FIFOs have a controller and are

accessible through the SPI by using dedicated SPI commands. A TX FIFO in PRX can store payload for ACK packets to three different PTX devices. If the TX FIFO contains more than one payload to a pipe, payloads are handled using the first in first out principle. The TX FIFO in a PRX is blocked if all pending payloads are addressed to pipes where the link to the PTX is lost. In this case, the MCU can flush the TX FIFO by using the FLUSH_TX command.

The RX FIFO in PRX may contain payload from up to three different PTX devices.

A TX FIFO in PTX can have up to three payloads stored.

The TX FIFO can be written to by three commands, W_TX_PAYLOAD and W_TX_PAYLOAD_NO_ACK in PTX mode and W_ACK_PAYLOAD in PRX mode. All three commands give access to the TX_PLD register.

The RX FIFO can be read by the command R_RX_PAYLOAD in both PTX and PRX mode. This command gives access to the RX_PLD register.

The payload in TX FIFO in a PTX is NOT removed if the MAX_RT IRQ is asserted.

In the FIFO_STATUS register it is possible to read if the TX and RX FIFO are full or empty. The TX_REUSE bit is also available in the FIFO_STATUS register. TX_REUSE is set by the SPI command REUSE_TX_PL, and is reset by the SPI command: W_TX_PAYLOAD or FLUSH TX.

6.2 Interrupt

In BK2425 there is an active low interrupt (IRQ) pin, which is activated when TX_DS IRQ, RX_DR IRQ or MAX_RT IRQ are set high by the state machine in the STATUS register. The IRQ pin resets when MCU writes '1' to the IRQ source bit in the STATUS register. The IRQ mask in the CONFIG



register is used to select the IRQ sources that are allowed to assert the IRQ pin. By setting one of the MASK bits high, the corresponding IRQ source is disabled. By default all IRQ sources are enabled.

The 3 bit pipe information in the STATUS register is updated during the IRQ pin high to low transition. If the STATUS register is read during an IRQ pin high to low transition, the pipe information is unreliable.

6.3 SPI Interface

6.3.1 SPI Command

The SPI commands are shown in Table 3. Every new command must be started by a high

to low transition on CSN.

In parallel to the SPI command word applied on the MOSI pin, the STATUS register is shifted serially out on the MISO pin.

The serial shifting SPI commands is in the following format:

- <Command word: MSB bit to LSB bit (one byte)>
- Oata bytes: LSB byte to MSB byte, MSB bit in each byte first> for all registers at bank 0 and register 9 to register 14 at bank 1
- <Data bytes: MSB byte to LSB byte, MSB bit in each byte first> for register 0 to register 8 at bank 1

Command name	Command word (binary)	# Data bytes	Operation		
R_REGISTER	000A AAAA	1 to 5 LSB byte first	Read command and status registers. AAAAA = 5 bit Register Map Address		
W_REGISTER	001A AAAA	1 to 5 LSB byte first	Write command and status registers. AAAAA = 5 bit Register Map Address Executable in power down or standby modes only.		
R_RX_PAYLOAD	0110 0001	1 to 32 LSB byte first	Read RX-payload: 1 – 32 bytes. A read operation always starts at byte 0. Payload is deleted from FIFO after it is read. Used in RX mode.		
W_TX_PAYLOAD	1010 0000	1 to 32 LSB byte first	Write TX-payload: 1 – 32 bytes. A write operation always starts at byte 0 used in TX payload.		
FLUSH_TX	1110 0001	0	Flush TX FIFO, used in TX mode		
FLUSH_RX	1110 0010	0	Flush RX FIFO, used in RX mode Should not be executed during transmission of acknowledge, that is, acknowledge package will not be completed.		
REUSE_TX_PL	REUSE_TX_PL 1110 0011 0		Used for a PTX device Reuse last transmitted payload. Packets are repeatedly retransmitted as long as CE is high. TX payload reuse is active until W_TX_PAYLOAD or FLUSH TX is executed. TX payload reuse must not be activated or deactivated during package transmission		



ACTIVATE	0101 0000	1	This write command followed by data 0x73 activates the following features: • R_RX_PL_WID • W_ACK_PAYLOAD • W_TX_PAYLOAD_NOACK A new ACTIVATE command with the same data deactivates them again. This is executable in power down or stand by modes only. The R_RX_PL_WID, W_ACK_PAYLOAD, and W_TX_PAYLOAD_NOACK features registers are initially in a deactivated state; a write has no effect, a read only results in zeros on MISO. To activate these registers, use the ACTIVATE command followed by data 0x73. Then they can be accessed as any other register. Use the same command and data to deactivate the registers again. This write command followed by data 0x53 toggles the register bank, and the current register bank number can be read out from REG7 [7]
R_RX_PL_WID	0110 0000		Read RX-payload width for the top R_RX_PAYLOAD in the RX FIFO.
W_ACK_PAYLOAD	1010 1PPP	1 to 32 LSB byte first	Used in RX mode. Write Payload to be transmitted together with ACK packet on PIPE PPP. (PPP valid in the range from 000 to 101). Maximum three ACK packet payloads can be pending. Payloads with same PPP are handled using first in - first out principle. Write payload: 1– 32 bytes. A write operation always starts at byte 0.
W_TX_PAYLOAD_NO ACK	1011 0000	1 to 32 LSB byte first	Used in TX mode. Disables AUTOACK on this specific packet.
NOP	1111 1111	0	No Operation. Might be used to read the STATUS register

Table 2 SPI command

6.3.2 SPI Timing

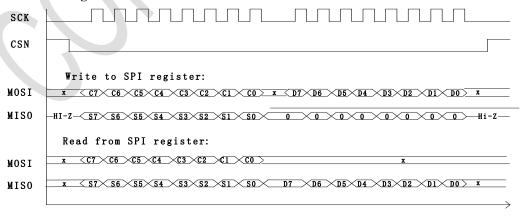


Figure 6 SPI timing



Cn: SPI command bit Sn: STATUS register bit

Dn: Data Bit (LSB byte to MSB byte, MSB bit in each byte first)

Note: The SPI timing is for bank 0 and register 9 to 14 at bank 1. For register 0 to 8 at bank 1, the byte order is inversed that the MSB byte is R/W before LSB byte.

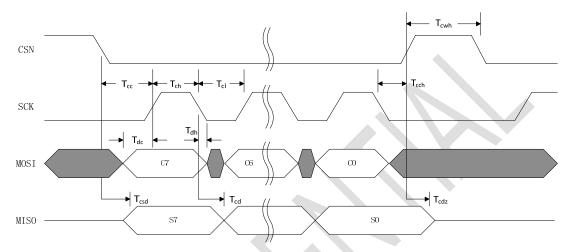


Figure 7 SPI NOP timing diagram

Symbol	Parameters	Min	Max	Units
Tdc	Data to SCK Setup	10		ns
Tdh	SCK to Data Hold	20		ns
Tcsd	CSN to Data Valid		38	ns
Tcd	SCK to Data Valid		55	ns
Tcl	SCK Low Time	40		ns
Tch	SCK High Time	40		ns
Fsck	SCK Frequency	0	8	MHz
Tr,Tf	SCK Rise and Fall		100	ns
Tcc	CSN to SCK Setup	2		ns
Tcch	SCK to CSN Hold	2		ns
Tewh	CSN Inactive time	50		ns
Tcdz	CSN to Output High Z		38	ns

Table 3 SPI timing parameter



7 Register Map

There are two register banks, which can be toggled by SPI command "ACTIVATE" followed with 0x53 byte, and bank status can be read from Bank0_REG7 [7].

7.1 Register Bank 0

Address (Hex)	Mnemonic	Bit	Reset Value	Туре	Description
00	CONFIG				Configuration Register
	Reserved	7	0	R/W	Only '0' allowed
	MASK_RX_DR	6	0	R/W	Mask interrupt caused by RX_DR 1: Interrupt not reflected on the IRQ pin 0: Reflect RX_DR as active low interrupt on the IRQ pin
	MASK_TX_DS	5	0	R/W	Mask interrupt caused by TX_DS 1: Interrupt not reflected on the IRQ pin 0: Reflect TX_DS as active low interrupt on the IRQ pin
	MASK_MAX_RT	4	0	R/W	Mask interrupt caused by MAX_RT 1: Interrupt not reflected on the IRQ pin 0: Reflect MAX_RT as active low interrupt on the IRQ pin
	EN_CRC	3	1	R/W	Enable CRC. Forced high if one of the bits in the EN_AA is high
	CRCO	2	0	R/W	CRC encoding scheme '0' - 1 byte '1' - 2 bytes
	PWR_UP	1	0	R/W	1: POWER UP, 0:POWER DOWN
	PRIM_RX	0	0	R/W	RX/TX control, 1: PRX, 0: PTX
01	EN_AA				Enable 'Auto Acknowledgment' Function
	Reserved	7:6	00	R/W	Only '00' allowed
	ENAA_P5	5	1	R/W	Enable auto acknowledgement data pipe 5
	ENAA_P4	4	1	R/W	Enable auto acknowledgement data pipe 4
	ENAA_P3	3	1	R/W	Enable auto acknowledgement data pipe 3
	ENAA_P2	2	1	R/W	Enable auto acknowledgement data pipe 2
	ENAA_P1	1	1	R/W	Enable auto acknowledgement data pipe 1
	ENAA_P0	0	1	R/W	Enable auto acknowledgement data pipe 0
02	EN_RXADDR				Enabled RX Addresses
	Reserved	7:6	00	R/W	Only '00' allowed
	ERX_P5	5	0	R/W	Enable data pipe 5.
	ERX_P4	4	0	R/W	Enable data pipe 4.
	ERX_P3	3	0	R/W	Enable data pipe 3.
	ERX_P2	2	0	R/W	Enable data pipe 2.
	ERX_P1	1	1	R/W	Enable data pipe 1.
	ERX_P0	0	1	R/W	Enable data pipe 0.



0.2	COUNTY ANY	ı	1	1	C. C. II. WILL
03	SETUP_AW				Setup of Address Widths
					(common for all data pipes) Only '000000' allowed
	Reserved	7:2	000000	R/W	Only 000000 anowed
	A XX /	1.0	1.1	D /III	RX/TX Address field width
	AW	1:0	11	R/W	'00' - Illegal
					'01' - 3 bytes
					'10' - 4 bytes
					'11' - 5 bytes
					LSB bytes are used if address width is
					below 5 bytes
04	SETUP_RETR				Setup of Automatic Retransmission
04	ARD	7:4	0000	R/W	Auto Retransmission Delay
	AKD	7:4	0000	R/W	'0000' – Wait 250 us
					'0001' – Wait 500 us
					'0010' – Wait 350 us
					'1111' – Wait 4000 us
					(Delay defined from end of transmission to
					start of next transmission)
					Auto Retransmission Count
	ARC	3:0	0011	R/W	'0000' –Re-Transmit disabled
	TIKE	3.0	0011	10 11	'0001' – Up to 1 Re-Transmission on fail
					of AA
					'1111' – Up to 15 Re-Transmission on fail
					of AA
					, in the second
05	RF_CH				RF Channel
	Reserved	7	0	R/W	Only '0' allowed
	RF_CH	6:0	0000010	R/W	Sets the frequency channel
06	RF_SETUP	7.6	0	D AV	RF Setup Register
	Reserved	7:6	0	R/W	Only '00' allowed
	RF_DR_LOW	5	0	R/W	Set Air Data Rate. See RF_DR_HIGH for encoding.
	PLL_LOCK	4	0	R/W	Force PLL lock signal. Only used in test
					Set Air Data Rate.
	DE DD MICH	2	1	D/W	Encoding: RF_DR_LOW, RF_DR_HIGH:
1	RF_DR_HIGH	3	1	R/W	'00' – 1Mbps
		-			'01' – 2Mbps (default)
					'10' – 250Kbps
					'11' – 2Mbps
	RF_PWR[1:0]	2:1			Set RF output power in TX mode
	KI'_I WK[1.0]	۷.1	11	R/W	RF_PWR[1:0]
	TALL HOUSE		_	D ///	Setup LNA gain
	LNA_HCURR	0	1	R/W	0:Low gain(20dB down)
					1:High gain
-					Status Register (In parallel to the SPI
07	CTATIC				
07	STATUS				command word applied on the MOSI pin,
					the STATUS register is shifted serially out
-					on the MISO pin)
					Register bank selection states. Switch
	RBANK	7	0	R	register bank is done by SPI command
					"ACTIVATE" followed by 0x53 0: Register bank 0
	ĺ	Ì	Î.	1	U. Kegistei ualik U



	1	1	1		I a base a set
					1: Register bank 1
	RX_DR	6	0	R/W	Data Ready RX FIFO interrupt
					Asserted when new data arrives RX FIFO
		<u> </u>		~ ~~	Write 1 to clear bit.
	TX_DS	5	0	R/W	Data Sent TX FIFO interrupt
					Asserted when packet transmitted on TX.
					If AUTO_ACK is activated, this bit is set
					high only when ACK is received.
					Write 1 to clear bit.
					Maximum number of TX retransmits
	MAX_RT	4	0	R/W	interrupt
					Write 1 to clear bit. If MAX_RT is
					asserted it must be cleared to enable
					further communication.
	RX_P_NO	3:1	111	R	Data pipe number for the payload
					available for reading from RX_FIFO
					000-101: Data Pipe Number
					110: Not used
					111: RX FIFO Empty
	TX_FULL	0	0	R	TX FIFO full flag.
	1	~			1: TX FIFO full
					0: Available locations in TX FIFO
					5.11. unuole locultons in 171111 O
08	OBSERVE TX				Transmit observe register
08	ODSERVE_IA				
	PLOS_CNT	7:4	0000	R	Count lost packets. The counter is
					overflow protected to 15, and discontinues
					at max until reset. The counter is reset by
					writing to RF_CH.
		- 4		A 4	
					Count retransmitted packets. The counter
	ARC_CNT	3:0	0000	R	is reset when transmission of a new packet
					starts.
09	CD				
	Reserved	7:1	000000	R	
	CD	0	0	R	Carrier Detect
	DV ADDE DO	20.0	0 55555	D 411	Receive address data pipe 0. 5 Bytes
0A	RX_ADDR_P0	39:0	0xE7E7E	R/W	maximum length. (LSB byte is written
			7E7E7		first. Write the number of bytes defined by
'					SETUP_AW)
					Receive address data pipe 1. 5 Bytes
0B	RX_ADDR_P1	39:0	0xC2C2C	R/W	maximum length. (LSB byte is written
			2C2C2		first. Write the number of bytes defined by
				1	SETUP_AW)
0C	RX_ADDR_P2	7:0	0xC3	R/W	Receive address data pipe 2. Only LSB
					MSB bytes is equal to
					RX_ADDR_P1[39:8]
0D	RX ADDR P3	7:0	0xC4	R/W	Receive address data pipe 3. Only LSB
OD .	KV_VDDK_L2	7.0	0.7.04	10, 44	MSB bytes is equal to
				<u> </u>	RX_ADDR_P1[39:8]
OE	DV ADDD D4	7.0	0	D /W/	Receive address data pipe 4. Only LSB.
0E	RX_ADDR_P4	7:0	0xC5	R/W	MSB bytes is equal to
		1			RX_ADDR_P1[39:8]
	1			1	Receive address data pipe 5. Only LSB.
0F	RX_ADDR_P5	7:0	0xC6	R/W	MSB bytes is equal to
		'	UNCO	10 "	RX_ADDR_P1[39:8]
10	+	39:0	0xE7E7E	R/W	Transmit address. Used for a PTX device
	TITE A D D D	コフ・U	UAL/E/E	IX/ VV	Transmit address. Used for a FTA device
10	TX_ADDR		7E7E7		only.



1	1		T		(LSB byte is written first)
					Set RX_ADDR_P0 equal to this address to
					handle automatic acknowledge if this is a
					PTX device
11	RX_PW_P0				
	Reserved	7:6	00	R/W	Only '00' allowed
					Number of bytes in RX payload in data
					pipe 0 (1 to 32 bytes).
	RX_PW_P0	5:0	000000	R/W	0: not used 1 = 1 byte
					1 – 1 byte
					32 = 32 bytes
12	RX_PW_P1				
	Reserved	7:6	00	R/W	Only '00' allowed
					Number of bytes in RX payload in data
	RX_PW_P1	5:0			pipe 1 (1 to 32 bytes).
			000000	R/W	0: not used
					1 = 1 byte
					32 = 32 bytes
12	DV DW DA				
13	RX_PW_P2 Reserved	7:6	00	R/W	Only '00' allowed
	Reserveu	7.0	00	IV/ W	Number of bytes in RX payload in data
	RX_PW_P2			R/W	pipe 2 (1 to 32 bytes).
	101_11 2	5:0	000000	10).	0: not used
					1 = 1 byte
					32 = 32 bytes
1.4	RX_PW_P3				
14	RX_PW_P3 Reserved	7:6	00	R/W	Only '00' allowed
	Reserveu	7.0	00	IV/ VV	Number of bytes in RX payload in data
		5:0	000000		pipe 3 (1 to 32 bytes).
	DV DV D3			D AV	0: not used
	RX_PW_P3			R/W	1 = 1 byte

					32 = 32 bytes
15	DV DW D4	_	-	1	
15	RX_PW_P4 Reserved	7:6	00	R/W	Only '00' allowed
	Reserved	7.0	00	IN/ VV	Number of bytes in RX payload in data
			1		pipe 4 (1 to 32 bytes).
				l	0: not used
	RX_PW_P4	5:0	000000	R/W	1 = 1 byte
					32 = 32 bytes
16	RX_PW_P5				
10	RA_FW_F3 Reserved	7:6	00	R/W	Only '00' allowed
		7.5	30	120	Number of bytes in RX payload in data
	RX_PW_P5		000000		pipe 5 (1 to 32 bytes).
		5:0		D/W	0: not used
				R/W	1 = 1 byte
					32 = 32 bytes
	Ĭ	i	1	1	



17	FIFO_STATUS	1	1		FIFO Status Register
17	Reserved	7	0	R/W	Only '0' allowed
	Reserved	,	0	10/11	Reuse last transmitted data packet if set
	TX_REUSE	6	0	R	high. The packet is repeatedly retransmitted as long as CE is high. TX_REUSE is set by the SPI command REUSE_TX_PL, and is reset by the SPI command W_TX_PAYLOAD or FLUSH TX
	TX_FULL	5	0	R	TX FIFO full flag 1: TX FIFO full; 0: Available locations in TX FIFO
	TX_EMPTY	4	1	R	TX FIFO empty flag. 1: TX FIFO empty 0: Data in TX FIFO
	Reserved	3:2	00	R/W	Only '00' allowed
	RX_FULL	1	0	R	RX FIFO full flag 1: RX FIFO full 0: Available locations in RX FIFO
	RX_EMPTY	0	1	R	RX FIFO empty flag 1: RX FIFO empty 0: Data in RX FIFO
N/A	ACK_PLD	255:0	X	W	Written by separate SPI command ACK packet payload to data pipe number PPP given in SPI command Used in RX mode only Maximum three ACK packet payloads can be pending. Payloads with same PPP are handled first in first out.
N/A	TX_PLD	255:0	X	w	Written by separate SPI command TX data pay-load register 1 - 32 bytes. This register is implemented as a FIFO with three levels. Used in TX mode only
N/A	RX_PLD	255:0	X	R	Read by separate SPI command RX data payload register. 1 - 32 bytes. This register is implemented as a FIFO with three levels. All RX channels share the same FIFO.
1C	DYNPD				Enable dynamic payload length
	Reserved	7:6	0	R/W	Only '00' allowed
	DPL_P5	5	0	R/W	Enable dynamic payload length data pipe 5. (Requires EN_DPL and ENAA_P5)
	DPL_P4	4	0	R/W	Enable dynamic payload length data pipe 4. (Requires EN_DPL and ENAA_P4)
	DPL_P3	3	0	R/W	Enable dynamic payload length data pipe 3. (Requires EN_DPL and ENAA_P3)
	DPL_P2	2	0	R/W	Enable dynamic payload length data pipe 2. (Requires EN_DPL and ENAA_P2)
	DPL_P1	1	0	R/W	Enable dynamic payload length data pipe 1. (Requires EN_DPL and ENAA_P1)
	DPL_P0	0	0	R/W	Enable dynamic payload length data pipe 0.



					(Requires EN_DPL and ENAA_P0)
1D	FEATURE			R/W	Feature Register
	Reserved	7:3	0	R/W	Only '00000' allowed
	EN_DPL	2	0	R/W	Enables Dynamic Payload Length
	EN_ACK_PAY	1	0	R/W	Enables Payload with ACK
	EN DYN ACK	0	0	R/W	Enables the W_TX_PAYLOAD_NOACK
	EN_DIN_ACK	U	0	IX/ VV	command

Note: Don't write reserved registers and registers at other addresses in register bank 0

Table 4 Register Bank 0



7.2 Register Bank 1

Address (Hex)	Mnemonic	Bit	Reset Value	Туре	Description
00		31:0	0	W	Must write with 0x404B01E2
01		31:0	0	W	Must write with 0xC04B0000
02		31:0	0	W	Must write with 0xD0FC8C02
			0x		
03		31:0	03001200	W	Must write with 0x99003921
					Must write with
					1Msps: 0xF996821B
					2Msps: 0xF99682DB
					250ksps: 0xF9968ADB
04		31:0	0	W	For single carrier mode:0xF9968221
0-1		31.0	0	**	Must write with
				4	1Msps: 0x24060FA6(Disable RSSI)
					2Msps: 0x 24060FB6(Disable RSSI)
05		21.0	0	337	250ksps: 0x24060FB6(Disable RSSI)
05		31:0	0	W	RSSI measurement:
					0:Enable
	RSSI_EN	18	0	w	1:Disable
06	K991_EN	31:0	0	W	Reserved
07		31:0	0	W	Reserved
07		31.0	0	VV	Register bank selection states. Switch
					register bank is done by SPI command
					"ACTIVATE" followed by 0x53
					0: Register bank 0
	RBANK	7		R	1: Register bank 1
				7	BEKEN Chip ID:
08	Chip ID	31:0	0	R	0x00000063(BK2425)
09			0		Reserved
0A			0		Reserved
0B			0		Reserved
					Please initialize with 0x05731200
0C		31:0	0	W	For 120us mode:0x00731200
		26:24	101		PLL Settling time:
		>			101:130us
					000:120us
		9	1	_	Compatible mode:
					0:Static compatible
					1:Dynamic compatible
0D	NEW_FEATURE	31:0	0		Please initialize with 0x0080B436
0E	RAMP	87:0	NA	W	Ramp curve
					Please write with
	I	l			0x FFFFFEF7CF208104082041

Table 5 Register Bank 1



8 Electrical Specifications

Name	Parameter (Condition)	Min	Typical	Max	Unit	Comment
1 (62222	Operating Condition		- J P 1002	112011	U	00111110110
VDD	Voltage	1.9	3.0	3.6	V	
TEMP	Temperature	-40	+27	+85	°C	
121/11	Digital input Pin					
VIH	High level	0.7VDD		VDD+0.7	V	
VIL	Low level	VSS		0.3VDD	V	
	Digital output Pin	1	1		1	
VOH	High level (IOH=-0.25mA)	VDD- 0.3		VDD	V	
VOL	Low level(IOL=0.25mA)	0		0.3	V	
	Normal condition					
IVDD	Power Down current		3		uA	
IVDD	Standby-I current		50		uA	
IVDD	Standby-II current		300		uA	
	Normal RF condition					
FOP	Operating frequency	2400		2527	MHz	
FXTAL	Crystal frequency		16		MHz	
RFSK	Air data rate	250		2000	Kbps	
	Transmitter					
PRF	Output power		4		dBm	
PBW	Modulation 20 dB bandwidth(2Mbps)		TBD		MHz	
PBW	Modulation 20 dB bandwidth (1Mbps)		TBD		MHz	
PBW	Modulation 20 dB bandwidth (250Kbps)		TBD		KHz	
IVDD	Current at -25 dBm output power		9.8		mA	
IVDD	Current at -18 dBm output power		10.2		mA	
IVDD	Current at -12 dBm output power		10.8		mA	
IVDD	Current at -7 dBm output power		11.6		mA	
IVDD	Current at -1 dBm output power		13.4		mA	
IVDD	Current at 4 dBm output power		18		mA	
	Receiver	II.			1	
IVDD	Current (2Mbps)		16.5		mA	
IVDD	Current (1Mbps)		16		mA	
IVDD	Current (250Kbps)		16		mA	
Max Input	1 E-3 BER		10		dBm	
RXSENS	1 E-3 BER sensitivity (2Mbps)		-88		dBm	
RXSENS	1 E-3 BER sensitivity (1Mbps)		-91		dBm	
RXSENS	1 E-3 BER sensitivity (250Kbps)		-96		dBm	

Table 6 Electrical Specifications



9 Typical Application Schematic

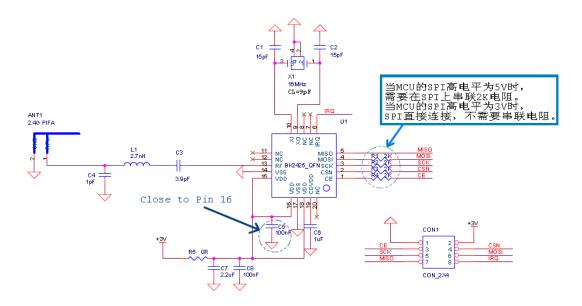


Figure 8 BK2425 QFN20 typical application schematic



10 Package and Die Bonding Information

10.1 Package Information

QFN20 4x4 package and SSOP20 are available for BK2425, Detail information of the package follows:

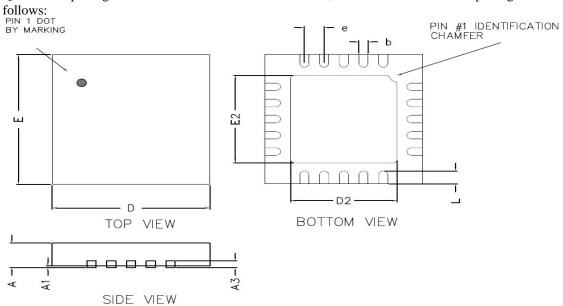


Figure 11 QFN20 4x4 package diagram

Parameter	Min	Тур	Max	Unit
Α	0.70	0.75	0.80	mm
A1	0.00	-	0.05	mm
A3		0.20 REF		
D	3.95	4.00	4.05	mm
E	3.95	4.00	4.05	mm
b	0.18	0.23	0.30	mm
L	0.30	0.40	0.50	mm
D2	2.55	2.70	2.80	mm
E2	2.55	2.70	2.80	mm
е	0.50 REF m			mm

Table 7 QFN20 4x4 Package dimensions

Package marking					
	BK2425				
QYYWWXX					
Q	Y	Y	W	W	XX
QFN	Year number		Week 1	number	Internal Code

Table 8 QFN20 Package marking



10.2 Die Bonding Information

BK2425 also provides the naked dice for bonding. The PAD diagram and PAD coordinates are as below:

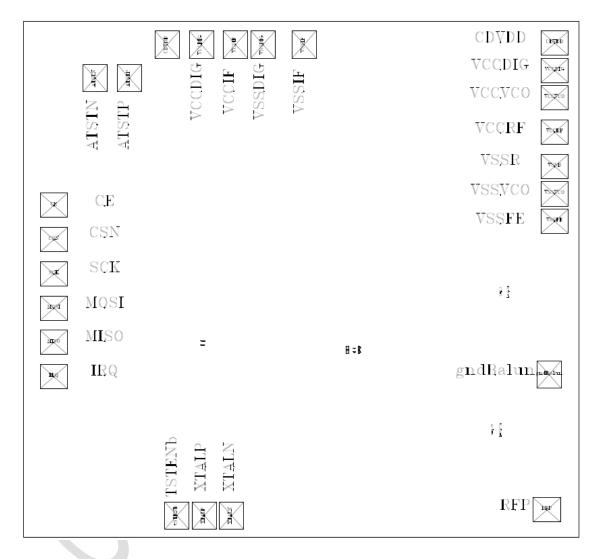


Figure 12 Bonding diagram



Package Number	Pad Number	Pad Name	X-Coordinate	Y-Coordinate
			(um)	(um)
1	1	CE	1280.5250	441.9330
2	2	CSN	1280.5250	526.9330
3	3	SCK	1280.5250	611.9330
4	4	MOSI	1280.5250	696.9330
5	5	MISO	1280.5250	781.9330
6	6	IRQ	1280.5250	866.9330
	7	TSTENb	975.0140	1211.7770
9	8	XTALP	907.0140	1211.7770
10	9	XTALN	839.0140	1211.7770
13	10	RFP	56.5250	1197.5610
14	11	gndBalun	51.0890	861.4960
	12	VSSFE	36.9750	481.3040
	13	VSSVCO	36.9750	413.3040
	14	VSSR	36.9750	345.3040
15	15	VCCRF	36.9750	260.3000
16	16	VCCVCO	36.9750	175.3040
	17	VCCDIG	36.9750	107.3040
	18	CDVDD	36.9750	39.3040
17	19	VSSIF	659.1070	42.9250
	20	VSSDIG	761.1070	42.9250
18	21	VCCIF	829.1070	42.9250
	22	VCCDIG	914.1110	42.9250
19	23	CDVDD	999.1070	42.9250
	24	ATSTP	1092.9640	125.9150
	25	ATSTN	1177.9640	125.9150

Table 9 QFN20 Chip pad coordinates

Note: (x,y) is the center of the PAD.

Pad Openings: 68umX60.35um.

Red: No connection.

PAD17 and PAD22 are connected on chip. PAD18 and PAD23 are connected on chip.

Die size: 1343umX1275um



10.3 PCB Bonding diagram

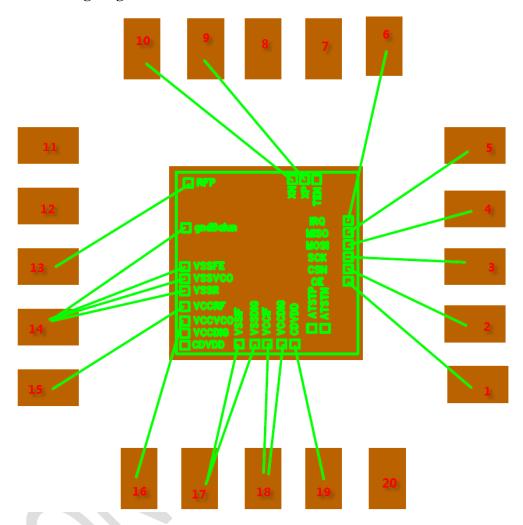


Figure 13 PCB Bonding diagram



11 Order Information

Part number	Package	Packing	MPQ (ea)
BK2425QB	QFN	Tape Reel	3K
BK2425WD	Die	Wafer	

Table 10 BK2425 order information

Remark:

MPQ: Minimum Package Quantity



12 Contact Information

Beken Corporation Technical Support Center

Shanghai office

Suite 3A, 1278 Keyuan Road, Zhangjiang High-Tech Park,

Pudong New District, Shanghai, P.R. China Phone: 86-21-51086811, 60871276

Fax: 86-21-60871277

Postal Code: 201203

Email: info@bekencorp.com
Website: www.bekencorp.com

Shenzhen office

Room 718, Shenzhen High-Tech Industrial Estate,

Nanshan, Shenzhen, P.R. China Phone: 86-755-2655 1063

Postal Code: 518057



13 Update History

Version	date	Author	Description
1.0	2013-12-20	RK	Initial version
1.1	2013-01-29	RK	Updated Electrical parameters and bank1 Registers value.
1.2	2013-01-29	RK	Updated Application schematic.
1.3	2014-06-04	RK	Added QFN20 bonding and die size information.