## **DET02 Wireless Timer Installation and Operation Instructions**

The Timers are to be surface mounted onto a wall. Multiple Timers may be installed in a ventilation system. To increase the range of a wireless Timer, a RX02 Repeater should be used.

## **Pairing:**

- 1. Turn on the main wall control by pressing the ON/OFF button **b** and remove the battery from Timer.
- 2. **DETO2 with DX Series Controls:** Press the left and right buttons simultaneously on the main wall control ( and RESET buttons). The screen will go blank and the wireless symbol » will appear flashing on the bottom right of the display. This indicates that the main control is now in pairing mode. (Figure D)
- 3. **DETO2 with BC Series Controls:** Press the left and right buttons simultaneously on the main wall control (♠ and either ♠ or ♣ buttons, depending on the main control). The bottom row of 3 LED's will begin flashing. This indicates that the main control is now in pairing mode. (Figure E)
- 4. Keep the Timer within 16" of the main wall control when pairing.
- 5. Install the battery in the DET02 Timer. All four lights on the Timer will immediately flash 5 times, then only the red battery light will remain on for approximately 12 seconds after which the "40" light flashes the rev code. 20, 40, 60 lights will flash until paired or will stop if not paired within 12 seconds. If pairing was not successful you now must return to step 1 to restart the pairing process.
- 6. Press the **b** button on the main wall control to exit pairing mode when Timers have been successfully paired.

To pair additional DET02 Timers with the same wall control, or if pairing was not successful, repeat steps 1-6.

When paired, the DET02 Timers can be moved and installed elsewhere. Estimated range of the Timer is 40' with no obstructions. A RX02 Repeater may be installed to increase the range of the Timers.

Test if pairing was successful by pressing the Select Button and listen for the HRV / ERV to initiate HIGH fan speed Ventilation.

## **Un-pairing:**


- 1. Remove the battery from the back of the DET02 Timer
- 2. Press and hold the Select Button on the front of the Timer
- 3. While holding the Select Button, reinsert the battery in the Timer. Continue holding the select button until the LED under "40" begins flashing. The DET02 Timer will now be unpaired with the main wall control.


#### **Installation:**


- 1. Separate the face plate from the back plate by firmly pulling apart (Figure A).
- 2. For mounting the control without a Decora plate, break off top and bottom tabs and refer to Figure C for mounting.




This wireless Timer must be matched to the main wall control of the HRV / ERV. This process is called "Pairing". Multiple Timers can be paired to a single wall control.

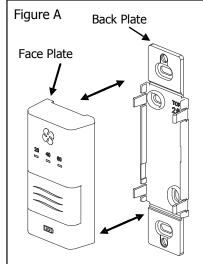


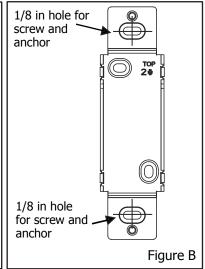

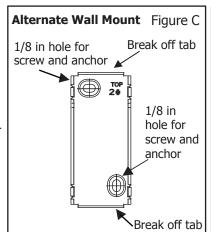

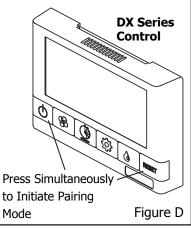



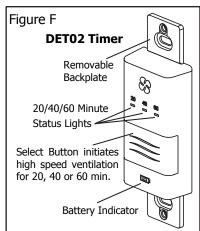

- 3. Place the back plate of the control in the desired location on the wall and pencil mark the top and bottom screw holes (Figure B or C). Drill two 1/8" holes.
- 4. Attach the back plate to the wall using the 2 supplied screws and anchors.
- 5. Attach the face plate to the back plate (Figure A).

## Minuterie sans fil DET02 - Installation et fonctionnement

Les minuteries doivent être installées en surface sur un mur. On peut installer plus d'une minuterie dans un système de ventilation. On peut aussi accroître la portée d'une minuterie sans fil au moyen d'un répéteur RX02.

### **Pairing:**

- 1. Mettez la commande murale principale en marche en appuyant sur le bouton de marche/arrêt 🖒 et retirez la pile de la minuterie.
- 2. **DETO2 et commandes DX:** appuyez simultanément sur les boutons gauche et droit de la commande principale (boutons 🖰 et RESET). L'écran se vide et le symbole sans fil 💜 apparaît en clignotant dans la partie inférieure droite de l'écran. Cela indique que la commande principale se trouve alors en mode de pairage (figure D).
- 3. **DET02 et commandes BC:** appuyez simultanément sur les boutons gauche et droit de la commande principale ( et soit ou selon la commande principale). La rangée inférieure des 3 témoins DEL commence à clignoter. Cela indique que la commande principale se trouve alors en mode de pairage (figure E).
- 4. Lors du pairage, gardez la minuterie dans un rayon de 16 po de la commande principale.
- 5. Replacez la pile dans la minuterie DET02. Les 4 témoins lumineux clignoteront immédiatement 5 fois, puis le témoin rouge de la pile restera seul allumé pendant environ 12 secondes, après quoi le témoin 40 clignote selon un code interne. Les témoins 20, 40 et 60 clignotent jusqu'au pairage ou arrêteront de clignoter si non apparié dans les 12 secondes. Si le pairage n'est pas réussi, il faut recommencer le processus à partir de l'étape 1.
- 6. Une fois que les minuteries ont été appariées avec succès, appuyez sur le bouton 0 de la commande principale pour quitter le mode de pairage.

Pour apparier des minuteries DET02 supplémentaires avec la même commande murale, ou si le pairage a échoué, répétez les étapes  $1\ {\rm a}\ 6.$ 

Une fois appariées, les minuteries DET02 peuvent être déplacées et branchées ailleurs. La portée de la minuterie est évaluée à 40 pi sans obstacles ; on peut installer un répéteur RX02 pour augmenter la portée des minuteries.

Vérifiez si le pairage a réussi en appuyant sur le bouton SELECT et en écoutant si le VRC / VRE passe en haute vitesse de ventilation.

## **Annulation du pairage**


- 1. Retirez la pile à l'arrière de la minuterie DET02.
- 2. Appuyez sur le bouton Select sur le devant de la minuterie.
- Tout en maintenant le bouton Select enfoncé, replacez la pile dans la minuterie. Continuez à maintenir le bouton Select jusqu'à ce que le témoin sous 40 commence à clignoter. Le pairage de la minuterie DET02 avec la commande principale est maintenant supprimé.


#### **Installation:**


- 1. Retirez la plaque avant de la plaque arrière en tirant fermement pour les séparer (figure A).
- 2. Pour une installation sans plaque Decora, cassez les languettes supérieure et inférieure et reportez-vous à la figure C pour le montage.
- 3. Placez la plaque arrière de la commande à l'endroit désigné sur le mur et marquez au crayon les trous des 2 vis (figure B ou C). Percez 2 trous de 1/8 po.
- 4. Fixez la plaque arrière au mur en utilisant les vis et chevilles fournies.
- 5. Replacez la plaque avant sur la plaque arrière (figure A).


# **ATTENTION**


Cette minuterie sans fil doit être appariée à la commande murale principale du VRC / VRE. Ce processus s'appelle le "pairage". On peut apparier plus d'une minuterie à une commande murale unique.

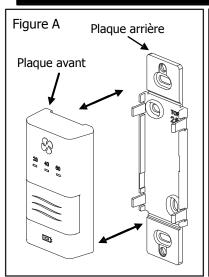


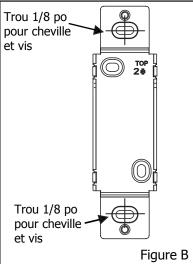

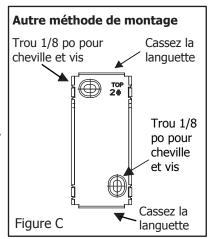

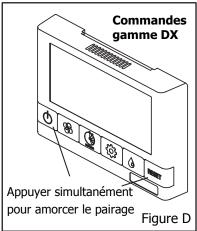

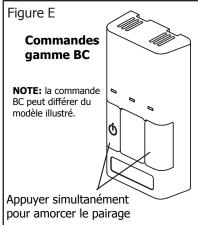

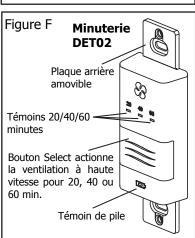

Caution: Changes or modifications not expressly approved Airia Brands Inc. could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Recorient or relocate the receiving antenna.

  Increase the separation between the equipment and receiver.

  Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two

- (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- il l'appareil ne doit pas produire de brouillage;

  2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.