Quick Start Guide For Android Tablet TR10RS1

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

The highest SAR value for the device as reported to the FCC is 0.02 W/kg when placed next to the body.

CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Package contents

Carefully unpack your box and take out the items listed below. If any of the items are missing or damaged, please contact your dealer immediately:


- One tablet One AC adapter
 - One USB cable

- One stylus
 One magnifying lens
 This guide

Tablet layout



No.	Name	No.	Name
1	Light sensor	4	Touchscreen
2	Front facing camera	5	Stylus slot
3	Microphone	6	I/O cabinet (See page 5 for details)

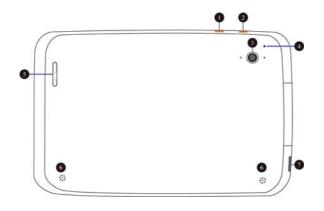


No.	Name	No.	Name
1	Power button	5	Volume up/down
2	Back button	6	Speaker
3	Rear facing camera	7	SIM card slot
4	Microphone		



No.	Name	No.	Name
1	Headphone	4	Micro USB DC IN / Micro USB port
2	Micro SD card slot	5	SIM card slot
3	Micro HDMI port		

Charging your tablet

If your tablet is just being unpacked from the box, you need to charge the tablet first. It will take around 4 to 5 hours to be fully charged.

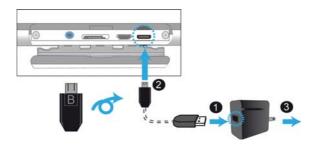

- 1. Plug the USB head of the cable into the adapter.
- Plug the micro-USB head of the cable with the side marked with "B" or an icon facing down - into the micro-USB port on your tablet.
- 3. Plug the adapter into a wall-socket.

Powering ON/OFF your tablet

To power on your tablet

Press and hold the power button down until the screen turn on




To power off your tablet

To turn off your tablet, follow these steps:

- 1. Press and hold the Power Lock button.
- The Power-off menu appears as shown below. Touch
 Power off.




3. Touch OK to power down your tablet.

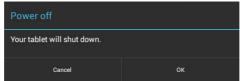

Inserting a storage card

Your tablet supports micro-SD cards with maximum storage space up to 32G. You can insert the micro SD card and pull it out without powering down the tablet. To do so, follow the steps below.

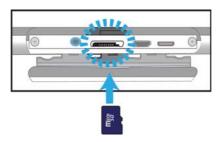

Install your Micro SD Card


- 1. Hold your tablet with front side up.
- 2. Insert your micro SD card in the direction as shown.

Remove your Micro SD Card

- Push and release the micro SD card. This will unlock the card.
- 2. Pull out the micro SD card.

Installing your magnifying lens

With a few steps, you can turn your tablet into a microscope.

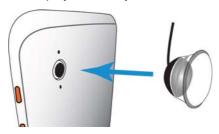

- Gently press the magnifying lens over the rear-facing camera. Make sure the bottom of the lens is fitted into the outer rim of the camera.
- 2. Activate any camera app in your tablet.
- Gently press the lens on the object or tissue you want to observe.

Specifications

	 Intel® Atom™ Z3735F
Processor	 Quad core
FIOCESSOI	• 1.33 GHz
	1 MB L2 Cache
Momony	● DDR3L- 1333
Memory	 Default 1 GB/2 GB
Storago	● eMMC v4.512
Storage	• 8/16/32 GB
Wineless.	 WLAN, Bluetooth and FM
Wireless	
	• 10.1-inch 1280 x 800 TFT
Touchscreen	 Multi-touch and Capacitive pen
	support
Cameras	• Front: 0.3M (option: 1.26M)
Cameras	Rear: 2M (option: 5M)
	• 3Cell , 1S3P
Battery	Li-polymer
	• 6300 mAh
	• TCL:

Input/Output	 1 x micro-USB 2.0 port (Type AB) 1 x Mic/head phone jack combo 1 x micro-HDMI 1 x micro-SD card slot (32G max) 1 x micro-SIM card slot 1 x MIC
Speaker & Mic	Build-in Speaker x 2Internal MIC x 1
AC-Adapter	 DC Output: 5V/2A/10 Watt Input Voltage: 100 ~ 240VAC Input Frequency: 47 ~ 63Hz CHICONY:
Dimension (mm)	• 274.8 (W) x 176.6 (H) x 12.7 (D)
Weight	● <mark>660 g</mark> (w/o adapter)