

MC92N0 QUICK START GUIDE

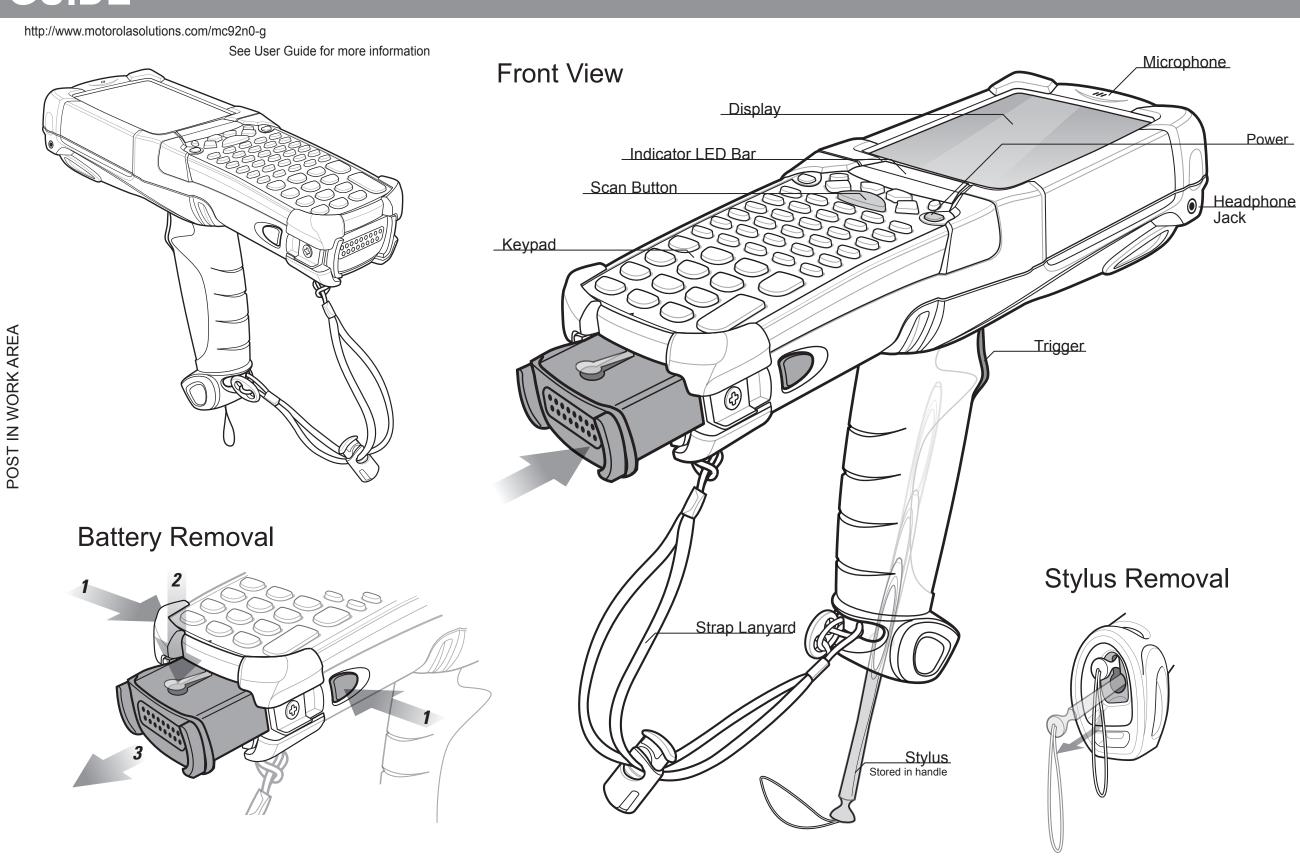


BATTERY INSERTION




SNAP-ON ACCESSORY INSTALLATION

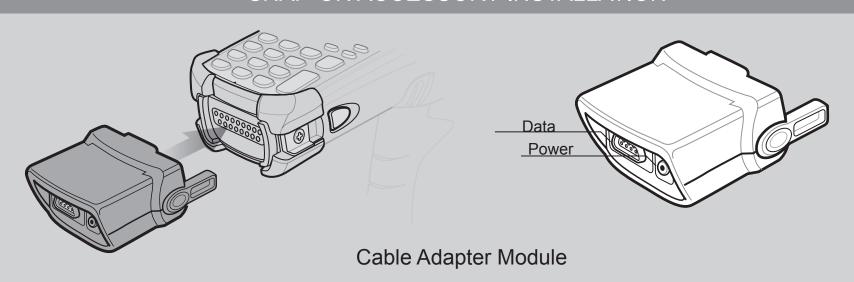



CHARGING INSTRUCTIONS

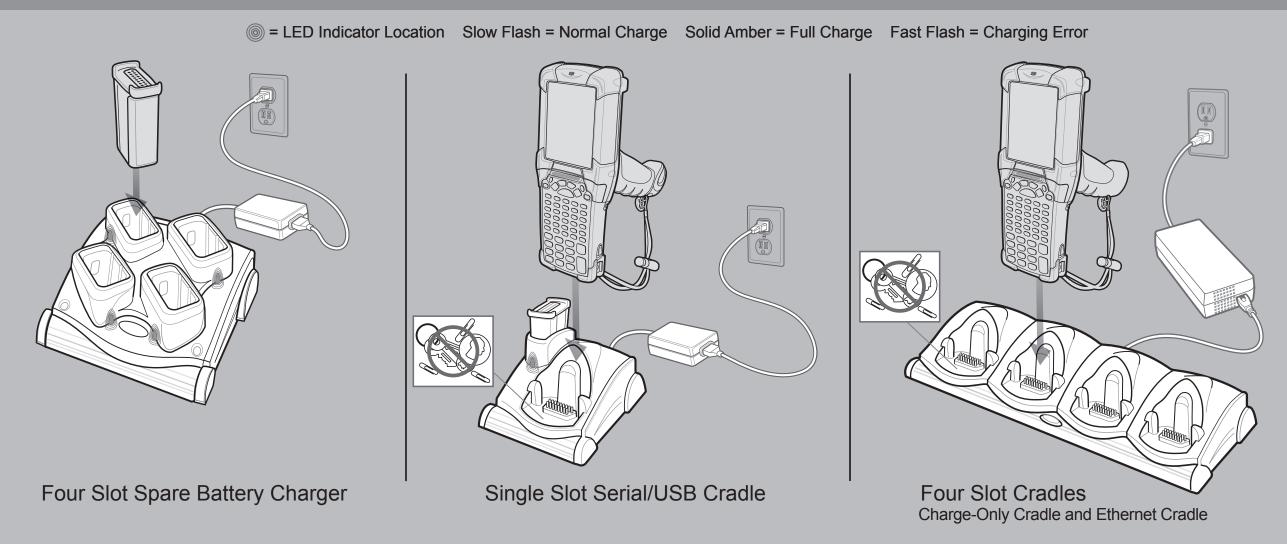

OPTIMUM IMAGING AND SCANNING POSITIONS

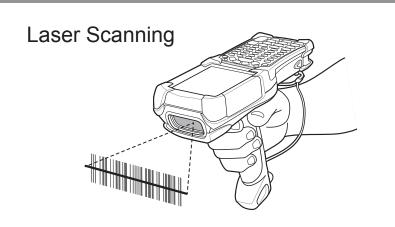

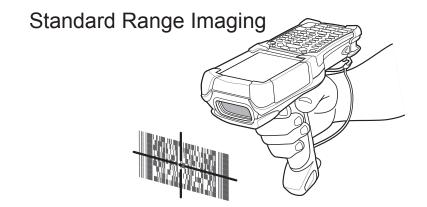

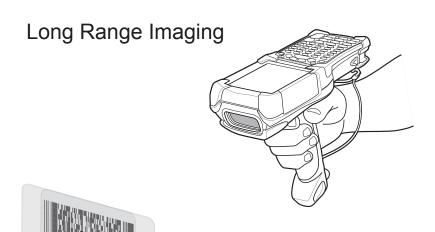



























OPTIMUM UPRIGHT BODY POSTURE

AVOID EXTREME WRIST ANGLES




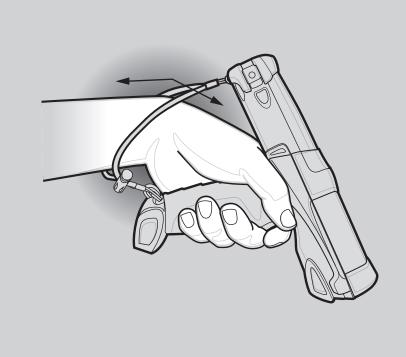




ALTERNATE LEFT AND RIGHT HANDS
TAKING BREAKS AND TASK ROTATION RECOMMENDED

OPTIMUM BODY POSTURE

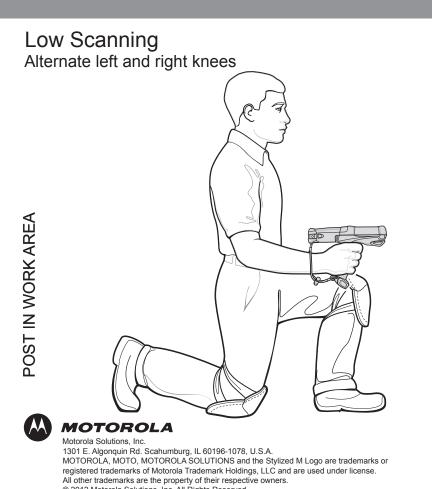



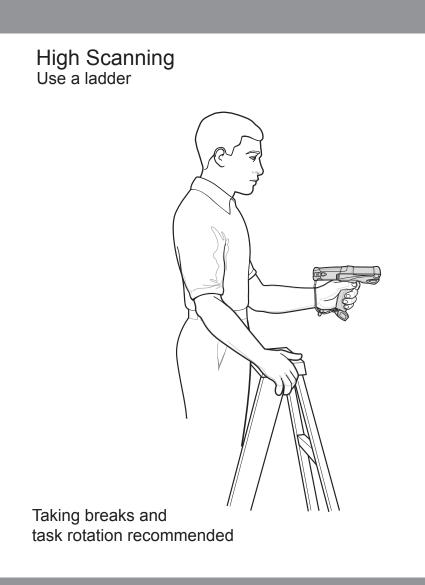

© 2012 Motorola Solutions, Inc. All Rights Reserved.

72-161751-01 Rev A – July 2012