

Remove the Rear Cabinet

Remove the Top Cabinet









Remove FPC/SUS plates from Top Cabinet




AN-1034 PCB is visible



After removing AN-1034, WiFi Antenna (FPC-2023) is visible








WiFi Antenna (FPC-2023) is folded inside the dial like this




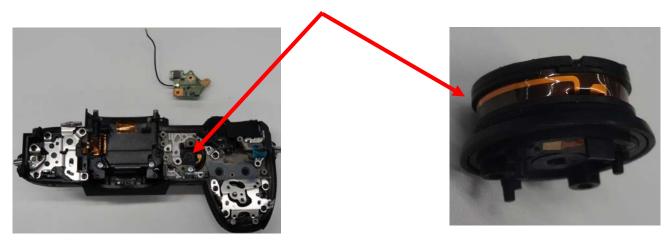



WiFi Antenna (FPC-2023) in normal shape (not folded)



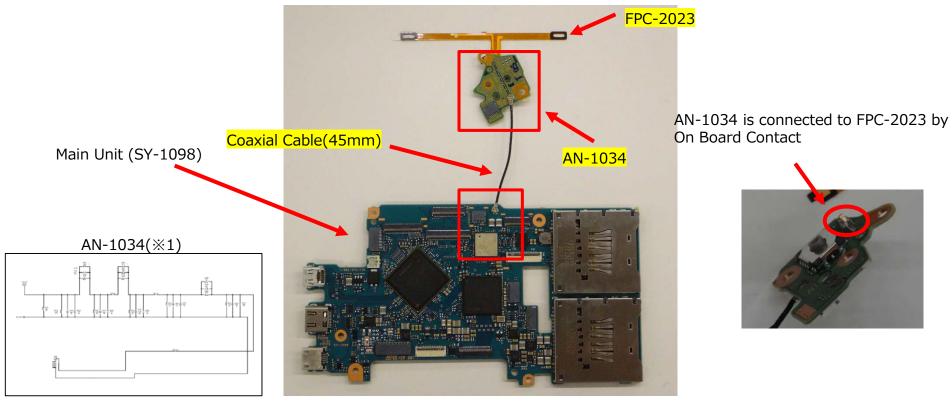

(※1)AN-1034 board is used for RF antenna matching adjustment.
It is not used for controlling antenna characteristics.
(※2)For details on inside of the red square, please see the next page.

## SONY

## SY-1098 - A side

