

# EM12-G Hardware Design

## **LTE-A Module Series**

Rev. EM12\_Hardware\_Design\_

Date: 2018-09-28

Status: Preliminary



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

### **Quectel Wireless Solutions Co., Ltd.**

7<sup>th</sup> Floor, Hongye Building, No.1801 Hongmei Road, Xuhui District, Shanghai 200233, China

Tel: +86 21 5108 6236 Email: info@quectel.com

## Or our local office. For more information, please visit:

http://quectel.com/support/sales.htm

### For technical support, or to report documentation errors, please visit:

http://quectel.com/support/technical.htm

Or email to: support@quectel.com

#### **GENERAL NOTES**

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

#### **COPYRIGHT**

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL WIRELESS SOLUTIONS CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2018. All rights reserved.



## **About the Document**

## History

Revision	Date	Author	Description
Draft	2018-09-28	Oscar LIU/ Reed Wang	Initial



## **Contents**

Ab	out the Document	2			
Со	ntents	3			
Tal	ble Index	5			
	gure Index				
1	Introduction				
•	1.1. Safety Information				
	•				
2	Product Concept				
	2.2. Key Features				
	2.3. Functional Diagram				
	2.4. Evaluation Board				
3	Application Interfaces				
	3.1. Pin Assignment				
	3.2. Pin Description				
	3.3. Power Supply				
	3.3.1. Decrease Voltage Drop				
	3.3.2. Reference Design for Power Supply				
	3.4. Turn on and off Scenarios				
	3.4.1. Turn on the Module				
	3.4.1.1. Turn on the Module Through GPIO Controlled FULL_CARD_POWER_OFF#				
	3.4.1.2. Turn on the Module Automatically				
	3.4.2. Turn off the Module				
	3.4.2.1. Turn off the Module Through FULL_CARD_POWER_OFF#				
	3.4.2.2. Turn off the Module via AT Command				
	3.5. Reset the Module				
	3.6. (U)SIM Interfaces				
	3.7. USB Interface				
	PCM and I2C Interfaces  3.10. Control and Indicator Signals				
	3.10.1. W_DISABLE1# Signal				
	3.10.2. WWAN_LED# Signal				
	3.10.3. WAKE_ON_WAN# Signal				
	3.10.4. DPR Signal				
	3.11. Tunable Antenna Control Interface*				
	3.12. Configuration Pins				
4	GNSS Receiver				
	4.1. General Description	42			



5	Ante	enna Intertaces	43
	5.1.	Main/Rx-diversity Antenna Interfaces	43
	į	5.1.1. Operating Frequency	44
	5.2.	GNSS Antenna Interface	45
	5.3.	Antenna Installation	46
	į	5.3.1. Antenna Requirements	46
	į	5.3.2. Recommended RF Connector for Antenna Installation	46
6	Elect	etrical, Reliability and Radio Characteristics	50
	6.1.	Absolute Maximum Ratings	50
	6.2.	Power Supply Requirements	50
	6.3.	I/O Requirements	51
	6.4.	Operation and Storage Temperatures	51
	6.5.	Current Consumption(TBD)	52
	6.6.	RF Output Power	52
	6.7.	RF Receiving Sensitivity	52
	6.8.	ESD Characteristics	54
	6.9.	Thermal Dissipation	54
7	Mech	hanical Dimensions and Packaging	56
	7.1.	Mechanical Dimensions of the Module	56
	7.2.	Standard Dimensions of M.2 PCI Express	57
	7.3.	Design Effect Drawings of the Module	58
	7.4.	M.2 Connector	58
	7.5.	Barcode Rule	58
	7.6.	Packaging	59
Q	Anna	andiy Peferences	61

1



## **Table Index**

TABLE 1: FREQUENCY BANDS AND GNSS TYPE OF EM12 MODULE	11
TABLE 2: KEY FEATURES OF EM12	13
TABLE 3: DEFINITION OF I/O PARAMETERS	18
TABLE 4: PIN DESCRIPTION	18
TABLE 5: DEFINITION OF VCC AND GND PINS	22
TABLE 6: DEFINITION OF FULL_CARD_POWER_OFF# PIN	24
TABLE 7: RESET# PIN DEFINITION	27
TABLE 8: PIN DEFINITION OF (U)SIM INTERFACES	29
TABLE 9: PIN DEFINITION OF USB INTERFACE	32
TABLE 10: PIN DEFINITION OF PCM AND I2C INTERFACES	35
TABLE 11: LIST OF CONTROL AND INDICATOR SIGNALS	37
TABLE 12: RF FUNCTION STATUS	37
TABLE 13: NETWORK STATUS INDICATIONS OF WWAN_LED# SIGNAL	38
TABLE 14: STATE OF THE WAKE_ON_WAN# SIGNAL	38
TABLE 15: FUNCTION OF THE DPR SIGNAL	39
TABLE 16: PIN DEFINITION OF TUNABLE ANTENNA CONTROL INTERFACE*	40
TABLE 17: PIN DEFINITION OF CONFIGURATION PINS	40
TABLE 18: LIST OF CONFIGURATION PINS	41
TABLE 19: EM12 OPERATING FREQUENCIES	44
TABLE 20: GNSS FREQUENCY	45
TABLE 21: ANTENNA REQUIREMENTS	46
TABLE 22: MAJOR SPECIFICATIONS OF THE RF CONNECTOR	47
TABLE 23: ABSOLUTE MAXIMUM RATINGS	50
TABLE 24: POWER SUPPLY REQUIREMENTS	50
TABLE 25: I/O REQUIREMENTS	51
TABLE 26: OPERATION AND STORAGE TEMPERATURES	51
TABLE 27: RF OUTPUT POWER	52
TABLE 28: EM12 CONDUCTED RF RECEIVING SENSITIVITY	52
TABLE 29: ELECTROSTATIC DISCHARGE CHARACTERISTICS (TEMPERATURE: 25°C, HUMIDI	ΓY: 40%)
	54
TABLE 30: RELATED DOCUMENTS	61
TARLE 31: TERMS AND ABBREVIATIONS	61



## Figure Index

FIGURE 1: FUNCTIONAL DIAGRAM	15
FIGURE 2: PIN ASSIGNMENT	17
FIGURE 3: POWER SUPPLY LIMITS DURING RADIO TRANSMISSION	23
FIGURE 4: REFERENCE CIRCUIT OF VCC	23
FIGURE 5: REFERENCE DESIGN OF POWER SUPPLY	24
FIGURE 6: TURN ON THE MODULE THROUGH GPIO CONTROLLED FULL_CARD_POWER_OFF#	25
FIGURE 7: TURN ON THE MODULE AUTOMATICALLY	25
FIGURE 8: TIMING OF TURNING ON MODULE	26
FIGURE 9: TIMING OF TURNING OFF THE MODULE THROUGH FULL_CARD_POWER_OFF#	26
FIGURE 10: REFERENCE CIRCUIT OF RESET# BY USING DRIVING CIRCUIT	27
FIGURE 11: REFERENCE CIRCUIT OF RESET# BY USING BUTTON	28
FIGURE 12: TIMING OF RESETTING MODULE	28
FIGURE 13: REFERENCE CIRCUIT OF NORMALLY SHORT-CIRCUITED (U)SIM CARD CONNECTOR	30
FIGURE 14: REFERENCE CIRCUIT OF NORMALLY OPEN (U)SIM CARD CONNECTOR	30
FIGURE 15: REFERENCE CIRCUIT OF A 6-PIN (U)SIM CARD CONNECTOR	31
FIGURE 16: REFERENCE CIRCUIT OF USB 2.0 & 3.0 INTERFACE	33
FIGURE 17: PRIMARY MODE TIMING	35
FIGURE 18: AUXILIARY MODE TIMING	35
FIGURE 19: REFERENCE CIRCUIT OF PCM APPLICATION WITH AUDIO CODEC	36
FIGURE 20: WWAN_LED# SIGNAL REFERENCE CIRCUIT DIAGRAM	38
FIGURE 21: WAKE_ON_WAN# BEHAVIOR	39
FIGURE 22: WAKE_ON_WAN# SIGNAL REFERENCE CIRCUIT DESIGN	39
FIGURE 23: ANTENNA INTERFACES ON THE MODULE	43
FIGURE 24: EM12 RF CONNECTOR DIMENSIONS (UNIT: MM)	47
FIGURE 25: SPECIFICATIONS OF MATING PLUGS USING Ø0.81MM COAXIAL CABLES	48
FIGURE 26: CONNECTION BETWEEN RF CONNECTOR AND MATING PLUG USING Ø0.81MM COAX	JAL
CABLE	48
FIGURE 27: CONNECTION BETWEEN RF CONNECTOR AND MATING PLUG USING Ø1.13MM COAX	JAL
CABLE	49
FIGURE 28: THERMAL DISSIPATION AREA ON BOTTOM SIDE OF MODULE (TOP VIEW)	55
FIGURE 29: MECHANICAL DIMENSIONS OF EM12 (UNIT: MM)	56
FIGURE 30: STANDARD DIMENSIONS OF M.2 TYPE 3042-S3 (UNIT: MM)	57
FIGURE 31: M.2 NOMENCLATURE	57
FIGURE 32: TOP VIEW OF THE MODULE	58
FIGURE 33: TRAY SIZE	59
FIGURE 34: TRAY PACKAGING PROCEDURE	60



## 1 Introduction

This document defines EM12 module and describes its air interface and hardware interfaces which are connected with customers' applications.

This document can help customers to quickly understand the interface specifications, electrical and mechanical details, as well as other related information of EM12 module. To facilitate its application in different fields, reference design is also provided for customers' reference. Associated with application note and user guide, customers can use the module to design and set up mobile applications easily.

减少電磁波影響,請妥適使用.



The device could be used with a separation distance of 20cm to the human body.

Hereby, [Quectel Wireless Solutions Co., Ltd.] declares that the radio equipment type [EM12-G] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: http://www.quectel.com

## **FCC Regulations:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is



encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **RF Exposure Information**

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

### **ISED Notice**

This device complies with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en

This device complies with the Canadian ICES-003 Class B specifications. CAN ICES-3(B)/ NMB-3(B)

## **ISED Radiation Exposure Statement**

This device complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the ISED radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la CNR-102 définies pour un environnement non contrôlé. Afin d'éviter la possibilité de dépasser les limites d'exposition aux



fréquences radio de la CNR-102, la proximité humaine à l'antenne ne doit pas être inférieure à 20 cm (8 pouces) pendant le fonctionnement normal.

#### **IMPORTANT NOTE:**

This module is intended for OEM integrator. The OEM integrator is still responsible for the FCC compliance requirement of the end product, which integrates this module. 20cm minimum distance has to be able to be maintained between the antenna and the users for the host this module is integrated into. Under such configuration, the FCC radiation exposure limits set forth for an population/uncontrolled environment can be satisfied.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

### **USERS MANUAL OF THE END PRODUCT:**

In the users manual of the end product, the end user has to be informed to keep at least 20cm separation with the antenna while this end product is installed and operated. The end user has to be informed that the FCC radio-frequency exposure guidelines for an uncontrolled environment can be satisfied. The end user has to also be informed that any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment. If the size of the end product is smaller than 8x10cm, then additional FCC part 15.19 statement is required to be available in the users manual: This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### LABEL OF THE END PRODUCT:

The final end product must be labeled in a visible area with the following "Contains Transmitter Module FCC ID: XMR201901EM12G". If the size of the end product is larger than 8x10cm, then the following FCC part 15.19 statement has to also be available on the label: This device complies with Part 15 of FCC rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Innovation, Science and Economic Development Canada certification label of a module shall be clearly visible at all times when installed in the host device; otherwise, the host device must be labeled to display the Innovation, Science and Economic Development Canada certification number for the module, preceded by the words "Contains transmitter module IC: 10224A-201901EM12G"



## 1.1. Safety Information

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating EM12-G module. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel, and incorporate these guidelines into all manuals supplied with the product. If not so, Quectel assumes no liability for customers' failure to comply with these precautions.



Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. Please comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. If the device offers an Airplane Mode, then it should be enabled prior to boarding an aircraft. Please consult the airline staff for more restrictions on the use of wireless devices on boarding the aircraft.



Wireless devices may cause interference on sensitive medical equipment, so please be aware of the restrictions on the use of wireless devices when in hospitals, clinics or other healthcare facilities.



Cellular terminals or mobiles operating over radio signals and cellular network cannot be guaranteed to connect in all possible conditions (for example, with unpaid bills or with an invalid (U)SIM card). When emergent help is needed in such conditions, please remember using emergency call. In order to make or receive a call, the cellular terminal or mobile must be switched on in a service area with adequate cellular signal strength.



The cellular terminal or mobile contains a transmitter and receiver. When it is ON, it receives and transmits radio frequency signals. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders, etc.



# **2** Product Concept

## 2.1. General Description

EM12-G is a LTE/UMTS/HSPA+ wireless communication module with receive diversity. It provides data connectivity on LTE-FDD, LTE-TDD, DC-HSDPA, HSPA+, HSDPA, HSUPA and WCDMA networks with standard PCI Express M.2 interface.

EM12-G supports embedded operating systems such as Windows CE, Linux and Android, and also provides GNSS1) and voice functionality2) to meet customers' specific application demands.

The following table shows the frequency bands and GNSS type of EM12-G module.

Table 1: Frequency Bands and GNSS Type of EM12-G Module

Mode	EM12-G		
LTE-FDD	B1/B2/B3/B4/B5/B7/B8/B9/B12/B13/B14/B17/B18/B19/B20/B21 <sup>3</sup> )/B25/B26/		
(with Rx-diversity)	B28/B29/B30/B32/B66;		
LTE-TDD (with Rx-diversity)	B38/39/B40/B41		
	B1+3,5,18,19,20,26;		
	B2+2,4,5,12,13,17,29,30,66;		
	B3+3,5,7,8,19,20,28;		
	B4+4(CA_4C only),5,12,13,17,29,30;		
	B5+7,25,30,66;		
	B7+7,20,28;		
	B12+25,30;		
DL 2×CA	B13+66;		
	B19+21 <sup>3)</sup> ;		
	B20+B32;		
	B25+25,26,41		
	B29+30;		
	B38+38;		
	B39+39 (CA_39C only);		
	B39+39; B39+41		



	B40+40 (CA_40C only);
	B41+41;
	B66+66 (CA_66C only);12,29,30,5;
	B2+B14;B14+B30;B14+B66;
	(Note: B29, B32 is only for secondary component carrier)
	DL inter-band 3CA:
	1+3+7, 1+3+19, 1+3+20, 1+3+5, 1+3+8, 1+3+28,1+7+20,1+3+5,
	2+4+5, 2+4+13, 2+5+30, 2+12+30, 2+29+30,
	3+7+20, 3+7+28, 3+7+8,
	4+5+30, 4+12+30, 4+29+30 ,
	5+66+2, 13+66+2,
	66+12+30,66+29+30,66+5+30;
	B2+B14+B66;
	DL 2 intra-band plus inter-band 3CA:
DL 3×CA	2+2+5, 2+2+13,
	3+3+7, 3+7+7, 3+3+20 , 3+3+28,3+3+1,
	4+4+5, 4+4+13,
	7+7+28,
	5+66+66, 13+66+66, 66+66+2,
	B39+B39+B41; B39+B41+B41;
	B14+B66+B66
	B25+B25+B26, B25+B41+B41
	DL 3 intra-band 3CA:
	40+40+40, 41+41+41, 66+66+66
UL CA	B3C;B7C;B38C;B40C;B41C;
WCDMA (with Rx-diversity)	B1/B2/B3/B4/B5/B8/B9/B19
GNSS 1)	GPS, GLONASS, BeiDou, Galileo

## **NOTES**

- 1. 1) GNSS function is optional.
- 2. <sup>2)</sup> EM12-G contains **Telematics** version and **Data-only** version. **Telematics** version supports voice and data functions, while **Data-only** version only supports data function.
- 3. <sup>3)</sup>B21 band follow up will be developed

## EM12-G can be applied in the following fields:

- Rugged Tablet PC and Laptop Computer
- Remote Monitor System
- Vehicle System



- Wireless POS System
- Smart Metering System
- Wireless Router and Switch
- Other Wireless Terminal Devices

## 2.2. Key Features

The following table describes the detailed features of EM12-G.

Table 2: Key Features of EM12-G

Feature	Details		
Function Interface	PCI Express M.2 Interface		
Power Supply	Supply voltage: 3.135V~4.4V  Typical supply voltage: 3.7V		
Transmitting Power	Class 3 (23dBm±2dB) for LTE-FDD bands Class 3 (23dBm±2dB) for LTE-TDD bands Class 3 (24dBm+1/-3dB) for WCDMA		
LTE Features	Support up to LTE Cat 12 Support 1.4MHz to 20MHz RF bandwidth Support MIMO in DL direction  FDD: Max 600Mbps (DL)/150Mbps (UL)  TDD: Max 408Mbps (DL)/90Mbps (UL)		
UMTS Features	Support 3GPP R8 DC-HSDPA, HSPA+, HSDPA, HSUPA and WCDMA Support QPSK, 16-QAM and 64-QAM modulation  DC-HSDPA: Max 42Mbps (DL)  HSUPA: Max 5.76Mbps (UL)  WCDMA: Max 384Kbps (DL)/Max 384Kbps (UL)		
Internet Protocol Features	Support PPP/QMI/NTP*/TCP*/UDP*/FTP*/HTTP*/PING*/HTTPS*/SMTP* /MMS*/FTPS*/SMTPS*/SSL* protocols Support the protocols PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol) usually used for PPP connections		
SMS	Text and PDU mode Point to point MO and MT SMS cell broadcast SMS storage: ME by default		
(U)SIM Interfaces	Support (U)SIM card: 1.8V, 3.0V Include USIM1 and USIM2 interfaces Support Dual SIM Single Standby*		



Audio Feature	Support one digital audio interface: PCM interface WCDMA: AMR/AMR-WB LTE: AMR/AMR-WB Support echo cancellation and noise suppression
PCM Interface	Used for audio function with external codec Support 16-bit linear data format Support long frame synchronization and short frame synchronization Support master and slave modes, but must be the master in long frame synchronization
USB Interface	Compliant with USB 3.0 and 2.0 specifications, with maximum transmission rates up to 5Gbps on USB 3.0 and 480Mbps on USB 2.0.  Used for AT command communication, data transmission, firmware upgrade, software debugging, GNSS NMEA sentence output and voice over USB*  Support USB serial drivers for: Windows 7/8/8.1/10, Windows CE 5.0/6.0/7.0*, Linux 2.6/3.x/4.1~4.14, Android 4.x/5.x/6.x/7.x
PCIE Interface*	Support PCIE interface, under development
Antenna Interface	Include main antenna, diversity antenna and GNSS antenna interfaces
Rx-diversity	Support LTE/WCDMA Rx-diversity
GNSS Features	Gen 9HT Lite of Qualcomm Protocol: NMEA 0183
AT Commands	Compliant with 3GPP TS 27.007, 27.005 and Quectel enhanced AT commands
Physical Characteristics	Size: (42.0±0.15)mm × (30.0±0.15)mm × (2.3±0.1)mm Weight: TBD
Temperature Range	Operation temperature range: -30°C~ +70°C <sup>1)</sup> Extended temperature range: -40°C~ +85°C <sup>2)</sup> Storage temperature range: -40°C ~ +90°C
Firmware Upgrade	USB 2.0 interface and DFOTA*
RoHS	All hardware components are fully compliant with EU RoHS directive

## NOTES

- 1. 1) Within operation temperature range, the module is 3GPP compliant.
- 2. <sup>2)</sup> Within extended temperature range, the module remains the ability to establish and maintain a voice, SMS, data transmission, emergency call, etc. There is no unrecoverable malfunction. There are also no effects on radio spectrum and no harm to radio network. Only one or more parameters like P<sub>out</sub> might reduce in their value and exceed the specified tolerances. When the temperature returns to normal operating temperature levels, the module will meet 3GPP specifications again.
- 3. "\*" means under development.



## 2.3. Functional Diagram

The following figure shows a block diagram of EM12-G.

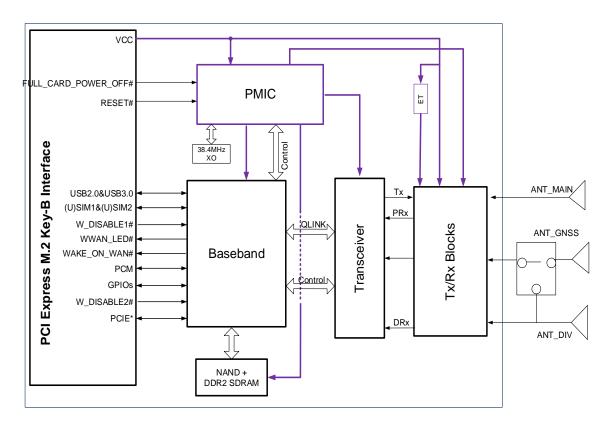


Figure 1: Functional Diagram

## 2.4. Evaluation Board

In order to help customers develop applications conveniently with EM12-G, Quectel supplies the evaluation board (M.2 EVB), USB to RS-232 converter cable, USB type-C cable, earphone, antenna and other peripherals to control or test the module. For more details, please refer to **document [1]**.



# **3** Application Interfaces

The physical connections and signal levels of EM12-G comply with PCI Express M.2 specifications. This chapter mainly describes the definition and application of the following interfaces/signals/pins of EM12-G:

- Power supply
- (U)SIM interfaces
- USB interface
- PCIE interface\*
- PCM and I2C interfaces
- Control and indicator signals
- Tunable antenna control interface\*
- Configuration pins

NOTE

"\*" means under development.



## 3.1. Pin Assignment

The following figure shows the pin assignment of EM12-G. The top side contains EM12-G module and antenna connectors.

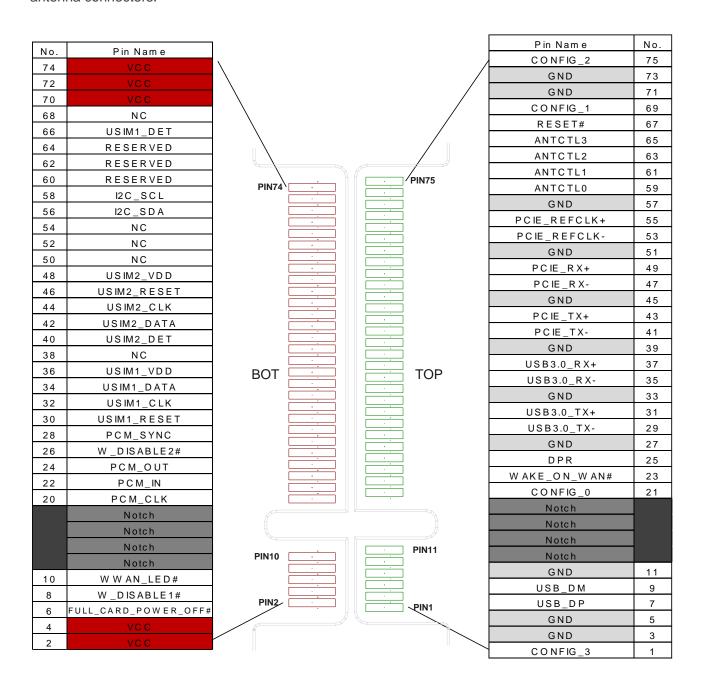


Figure 2: Pin Assignment



## 3.2. Pin Description

The following tables show the pin definition and description of EM12-G on the 75-pin application.

**Table 3: Definition of I/O Parameters** 

Туре	Description
IO	Bidirectional
DI	Digital input
DO	Digital output
OD	Open drain
PI	Power input
PO	Power output

**Table 4: Pin Description** 

Pin No.	M.2 Socket 2 WWAN Module Pinout	EM12-G Pin Name	I/O	Description	Comment
1	CONFIG_3	CONFIG_3		Not connected internally. EM12-G is configured as WWAN-USB 3.0.	
2	3.3V	VCC	ΡI	Power supply	Vmin=3.135V Vnorm=3.7V Vmax=4.4V
3	GND	GND		Ground	
4	3.3V	VCC	PI	Power supply	Vmin=3.135V Vnorm=3.7V Vmax=4.4V
5	GND	GND		Ground	
6	FULL_CARD_ POWER_OFF#	FULL_CARD_ POWER_OFF#	DI	A signal to control power-on/-off of the module. When it is at low level, the module powers off. When it is at high level, the module powers on.	Pulled down internally



7	USB_D+	USB_DP	Ю	USB 2.0 differential data bus (+)	
8	W_DISABLE1#	W_DISABLE1#	DI	Airplane mode control. Active low.	1.8V/3.3V power domain
9	USB_D-	USB_DM	Ю	USB 2.0 differential data bus (-)	
10	GPIO_9	WWAN_LED#	OD	It is an open collector and active low signal. It allows the module to provide RF status indication via LED devices provided by the system.	3.3V power domain
11	GND	GND		Ground	
12	Key	Notch		Notch	
13	Key	Notch		Notch	
14	Key	Notch		Notch	
15	Key	Notch		Notch	
16	Key	Notch		Notch	
17	Key	Notch		Notch	
18	Key	Notch		Notch	
19	Key	Notch		Notch	
20	GPIO_5 (AUDIO_0)	PCM_CLK	Ю	PCM data bit clock. In master mode, it is an output signal. In slave mode, it is an input signal. If unused, keep it open.	1.8V power domain
21	CONFIG_0	CONFIG_0		Connected to GND internally. EM12-G is configured as WWAN-USB 3.0.	
22	GPIO_6 (AUDIO_1)	PCM_IN	DI	PCM data input	1.8V power domain
23	GPIO_11 (WOWWAN#)	WAKE_ON_ WAN#	OD	A signal to wake up the host. It is an open collector and active low signal.	1.8V power domain
24	GPIO_7 (AUDIO_2)	PCM_OUT	DO	PCM data output	1.8V power domain
25	DPR	DPR	DI	Dynamic power reduction. High level by default.	1.8V power domain
26	GPIO_10 (W_DISABLE2#)	W_DISABLE2#*	DI	GNSS enable control. Active low.	1.8V/3.3V power domain
27	GND	GND		Ground	, : : : : : : : : : : : : : : : : : : :
28	GPIO_8	PCM_SYNC	Ю	PCM data frame synchronization	1.8V power



	(AUDIO_3)			signal	domain
29	USB3.0-TX-	USB3.0_TX-	DO	USB 3.0 transmit data (-)	
30	UIM-RESET	USIM1_RESET	DO	(U)SIM1 card reset	1.8V/3.0V power domain
31	USB3.0-TX+	USB3.0_TX+	DO	USB 3.0 transmit data (+)	
32	UIM-CLK	USIM1_CLK	DO	(U)SIM1 card clock	1.8V/3.0V power domain
33	GND	GND		Ground	
34	UIM-DATA	USIM1_DATA	Ю	(U)SIM1 card data	Pulled up to USIM2_VDD internally
35	USB3.0-RX-	USB3.0_RX-	DI	USB 3.0 receive data (-)	
36	UIM-PWR	USIM1_VDD	РО	Power supply for (U)SIM1 card	1.8V/3.0V power domain
37	USB3.0-RX+	USB3.0_RX+	DI	USB 3.0 receive data (+)	
38	N/C	NC		NC	
39	GND	GND		Ground	
40	GPIO_0 (SIM_DET2)	USIM2_DET	DI	(U)SIM2 card insertion detection	Pulled up internally
41	PETn0	PCIE_TX-	DO	PCIE transmit data (-)	
42	GPIO_1 (SIM_DAT2)	USIM2_DATA	Ю	(U)SIM2 card data	Pulled up to USIM2_VDD internally
43	PETp0	PCIE_TX+	DO	PCIE transmit data (+)	
44	GPIO_2 (SIM_CLK2)	USIM2_CLK	DO	(U)SIM2 card clock	1.8V/3.0V power domain
45	GND	GND		Ground	
46	GPIO_3 (SIM_RST2)	USIM2_RESET	DO	(U)SIM2 card reset	1.8V/3.0V power domair
47	PERn0	PCIE_RX-	DI	PCIE receive data (-)	
48	GPIO_4 (SIM_PWR2)	USIM2_VDD	РО	Power supply for (U)SIM2 card	1.8V/3.0V power domain
49	PERp0	PCIE_RX+	DI	PCIE receive data (+)	
50	PRRST#	PCIE_RST_N	DI	PCIE reset. Active low.	3.3V power domain



52         CLKREU#         N         IO         Active low.         doma           53         REFCLKn         PCIE_REFCLK-         AI         PCIE reference clock(-)           54         PEWAKE#         PCIE_WAKE_N         IO         PCIE wake on host. Active low.         3.3V grade doma           55         REFCLKP         PCIE_REFCLK+         AI         PCIE reference clock(+)         Identify active low.           56         N/C         I2C_DATA         IO         I2C serial data. Used for external codec.           57         GND         GND         Ground           58         N/C         I2C_CLK         DO         I2C serial clock. Used for external codec.           59         ANTCTL0         ANTCTL0*         DO         Tunable antenna control.         1.8V grade           60         COEX3         RESERVED         Reserved           61         ANTCTL1         ANTCTL2*         DO         Tunable antenna control.         1.8V grade           62         COEX2         RESERVED         Reserved           64         COEX1         RESERVED         Reserved           65         ANTCTL3         ANTCTL3*         DO         Tunable antenna control.         1.8V grade           66	
SZ CLKREG# N Active low. doma  53 REFCLKn PCIE_REFCLK- Al PCIE reference clock(-)  54 PEWAKE# PCIE_WAKE_N IO PCIE wake on host. Active low. doma  55 REFCLKP PCIE_REFCLK+ Al PCIE reference clock(+)  56 N/C I2C_DATA IO I2C serial data. Used for external codec.  57 GND GND Ground  58 N/C I2C_CLK DO I2C serial clock. Used for external codec.  59 ANTCTL0 ANTCTL0* DO Tunable antenna control. doma  60 COEX3 RESERVED Reserved  61 ANTCTL1 ANTCTL1* DO Tunable antenna control. doma  62 COEX2 RESERVED Reserved  63 ANTCTL2 ANTCTL2* DO Tunable antenna control. doma  64 COEX1 RESERVED Reserved  65 ANTCTL3 ANTCTL3* DO Tunable antenna control. doma  66 SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection internation.  67 RESET# RESET# DI System reset. Active low.  68 SUSCLK (32kHz) NC NC  Connected to GND internally. EM12-G is configured as WWAN-USB 3.0. Vmine-  CONFIG_1 CONFIG_1  Vmine-  Vmine	
54         PEWAKE#         PCIE_WAKE_N         IO         PCIE wake on host. Active low.         3.3V doma           55         REFCLKP         PCIE_REFCLK+         AI         PCIE reference clock(+)         PCIE reference clock(+)           56         N/C         I2C_DATA         IO         I2C serial data. Used for external codec.         PCIE reference clock(+)           57         GND         GND         Ground         PCIE reference clock(+)           58         N/C         I2C_DATA         IO         I2C serial data. Used for external codec.           58         N/C         I2C_CLK         DO         I2C serial clock. Used for external codec.           59         ANTCTL0         ANTCTL0*         DO         Tunable antenna control.         1.8V gona           60         COEX3         RESERVED         Reserved         1.8V gona           61         ANTCTL1         ANTCTL2*         DO         Tunable antenna control.         1.8V gona           63         ANTCTL3         ANTCTL3*         DO         Tunable antenna control.         1.8V gona           64         COEX1         RESERVED         Reserved         Pulled intermalistration detection         Pulled intermalistration detection           65         ANTCTL3         ANTCTL3*	power ain
54 PEWAKE# PCIE_WAKE_N IO Active low. domain	
56 N/C I2C_DATA IO I2C serial data. Used for external codec.  57 GND GND Ground  58 N/C I2C_CLK DO I2C serial clock. Used for external codec.  59 ANTCTLO ANTCTLO* DO Tunable antenna control.  60 COEX3 RESERVED Reserved  61 ANTCTL1 ANTCTL1* DO Tunable antenna control.  62 COEX2 RESERVED Reserved  63 ANTCTL2 ANTCTL2* DO Tunable antenna control.  64 COEX1 RESERVED Reserved  65 ANTCTL3 ANTCTL3* DO Tunable antenna control.  66 SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection internal control.  67 RESET# RESET# DI System reset. Active low.  68 SUSCLK (32kHz) NC NC  Connected to GND internally. EM12-G is configured as WWAN-USB 3.0.	power ain
See N/C   I2C_DATA   IO   Used for external codec.	
58       N/C       I2C_CLK       DO       I2C serial clock. Used for external codec.         59       ANTCTL0       ANTCTL0*       DO       Tunable antenna control.       1.8V g doma         60       COEX3       RESERVED       Reserved         61       ANTCTL1       ANTCTL1*       DO       Tunable antenna control.       1.8V g doma         62       COEX2       RESERVED       Reserved         63       ANTCTL2       ANTCTL2*       DO       Tunable antenna control.       1.8V g doma         64       COEX1       RESERVED       Reserved         65       ANTCTL3       ANTCTL3*       DO       Tunable antenna control.       1.8V g doma         66       SIM_DETECT       USIM1_DET       DI       (U)SIM1 card insertion detection       Pulled internal         67       RESET#       DI       System reset. Active low.         68       SUSCLK (32kHz)       NC       NC         CONFIG_1       CONFIG_1       EM12-G is configured as WWAN-USB 3.0.         Vmins	
N/C   I2C_CLK   DO   Used for external codec.  59 ANTCTL0   ANTCTL0*   DO   Tunable antenna control.   1.8V   doma   60 COEX3   RESERVED   Reserved   61 ANTCTL1   ANTCTL1*   DO   Tunable antenna control.   1.8V   doma   62 COEX2   RESERVED   Reserved   63 ANTCTL2   ANTCTL2*   DO   Tunable antenna control.   1.8V   doma   64 COEX1   RESERVED   Reserved   65 ANTCTL3   ANTCTL3*   DO   Tunable antenna control.   1.8V   doma   66 SIM_DETECT   USIM1_DET   DI   (U)SIM1 card insertion detection   Pulled internal   67 RESET#   RESET#   DI   System reset. Active low.   68 SUSCLK (32kHz)   NC   NC   Connected to GND internally.   69 CONFIG_1   CONFIG_1   EM12-G is configured as   WWAN-USB 3.0.    Vminstructure   Vision   Vision   Vision   68 SUSCLK (32kHz)   Vision   V	
ANTCTLO ANTCTLO DO Tunable antenna control.  Reserved  Reserved  ANTCTL1 ANTCTL1* DO Tunable antenna control.  ANTCTL1* DO Tunable antenna control.  Reserved  ANTCTL2 ANTCTL2* DO Tunable antenna control.  ANTCTL2 ANTCTL2* DO Tunable antenna control.  ANTCTL3* DO Tunable antenna control.  SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection internation.  RESET# RESET# DI System reset. Active low.  COnnected to GND internally.  EM12-G is configured as WWAN-USB 3.0.	
61 ANTCTL1 ANTCTL1* DO Tunable antenna control.  62 COEX2 RESERVED Reserved  63 ANTCTL2 ANTCTL2* DO Tunable antenna control.  64 COEX1 RESERVED Reserved  65 ANTCTL3 ANTCTL3* DO Tunable antenna control.  66 SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection Pulled internal control.  67 RESET# RESET# DI System reset. Active low.  68 SUSCLK (32kHz) NC NC  Connected to GND internally.  EM12-G is configured as WWAN-USB 3.0.	power ain
61 ANTCTL1 ANTCTL1* DO Tunable antenna control.  62 COEX2 RESERVED Reserved  63 ANTCTL2 ANTCTL2* DO Tunable antenna control.  64 COEX1 RESERVED Reserved  65 ANTCTL3 ANTCTL3* DO Tunable antenna control.  66 SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection internation of the control o	
ANTCTL2* DO Tunable antenna control.  64 COEX1 RESERVED Reserved  65 ANTCTL3* DO Tunable antenna control.  66 SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection internation internation.  67 RESET# RESET# DI System reset. Active low.  68 SUSCLK (32kHz) NC NC  Connected to GND internally.  EM12-G is configured as WWAN-USB 3.0.	power ain
ANTCTL2 ANTCTL2 DO Tunable antenna control.  RESERVED Reserved  ANTCTL3* DO Tunable antenna control.  ANTCTL3* DO Tunable antenna control.  SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection internation.  RESET# RESET# DI System reset. Active low.  NC NC  Connected to GND internally. EM12-G is configured as WWAN-USB 3.0.	
ANTCTL3* DO Tunable antenna control.  1.8V graph domain do	power ain
65 ANTCTL3 ANTCTL3 DO Tunable antenna control.  66 SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection Pulled intern  67 RESET# RESET# DI System reset. Active low.  68 SUSCLK (32kHz) NC NC  Connected to GND internally.  69 CONFIG_1 EM12-G is configured as WWAN-USB 3.0.	
66 SIM_DETECT USIM1_DET DI (U)SIM1 card insertion detection intern  67 RESET# RESET# DI System reset. Active low.  68 SUSCLK (32kHz) NC NC  Connected to GND internally.  69 CONFIG_1 EM12-G is configured as WWAN-USB 3.0.	power ain
68 SUSCLK (32kHz) NC NC  Connected to GND internally.  EM12-G is configured as WWAN-USB 3.0.	•
Connected to GND internally.  69 CONFIG_1 CONFIG_1 EM12-G is configured as  WWAN-USB 3.0.	
69 CONFIG_1 CONFIG_1 EM12-G is configured as WWAN-USB 3.0.	
11,7	=3.135V n=3.7V <=4.4V
71 GND GND Ground	
72 3.3V VCC PI Power supply Vnorm	=3.135V m=3.7V <=4.4V



73	GND	GND		Ground	
74	3.3V	VCC	PI	Power supply	Vmin=3.135V Vnorm=3.7V Vmax=4.4V
75	CONFIG_2	CONFIG_2		Not connected internally. EM12-G is configured as WWAN-USB 3.0.	

## **NOTES**

- 1. Keep all NC, reserved and unused pins unconnected.
- 2. "\*" means under development.

## 3.3. Power Supply


The following table shows pin definition of VCC pins and ground pins.

Table 5: Definition of VCC and GND Pins

Pin No.	Pin Name	I/O	Power Domain	Description
2, 4, 70, 72, 74	VCC	PI	3.135V~4.4V	3.7V typical DC supply
3, 5, 11, 27, 33, 39, 45, 51, 57, 71, 73	GND			Ground

## 3.3.1. Decrease Voltage Drop

The power supply range of the module is from 3.135V to 4.4V. Please make sure that the input voltage will never drop below 3.135V, otherwise the module will be powered off automatically. The following figure shows the maximum voltage drop during radio transmission in 3G and 4G networks.





#### Figure 3: Power Supply Limits during Radio Transmission

To decrease voltage drop, a bypass capacitor of about  $220\mu\text{F}$  with low ESR (ESR=0.7 $\Omega$ ) should be used, and a multi-layer ceramic chip capacitor (MLCC) array should also be reserved due to its ultra-low ESR. It is recommended to use three ceramic capacitors (100nF, 33pF, 10pF) for composing the MLCC array, and place these capacitors close to VCC pins. The main power supply from an external application has to be a single voltage source. The width of VCC trace should be no less than 2mm. In principle, the longer the VCC trace is, the wider it will be.

In addition, in order to get a stable power source, it is recommended to use a zener diode with reverse zener voltage of 5.1V and dissipation power more than 0.5W. The following figure shows a reference circuit of VCC.

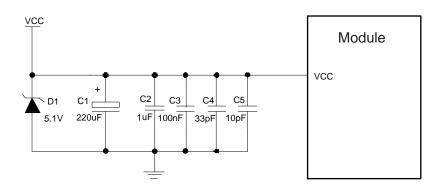


Figure 4: Reference Circuit of VCC

### 3.3.2. Reference Design for Power Supply

Power design for the module is very important, as the performance of the module largely depends on the power source. The power supply is capable of providing sufficient current up to 2A at least. If the voltage drop between the input and output is not too high, it is suggested that an LDO should be used to supply power for the module. If there is a big voltage difference between the input source and the desired output (VCC), a buck converter is preferred to be used as the power supply.

The following figure shows a reference design for +5V input power source. The typical output of the power supply is about 3.7V and the maximum load current is 3A.



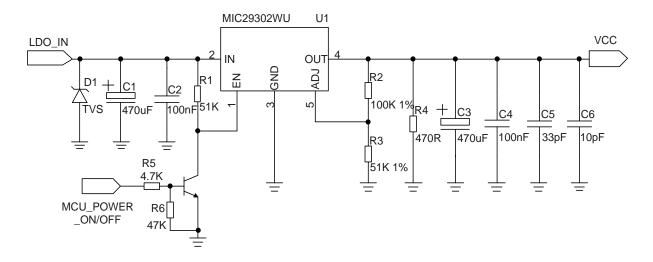


Figure 5: Reference Design of Power Supply

**NOTE** 

In order to avoid damages to the internal flash, please do not switch off the power supply directly when the module is working. It is suggested that the power supply can be cut off after pulling down FULL\_CARD\_POWER\_OFF# for about 100ms.

## 3.4. Turn on and off Scenarios

### 3.4.1. Turn on the Module

Driving the FULL\_CARD\_POWER\_OFF# pin to a high level will power on the module. The following table shows the definition of FULL\_CARD\_POWER\_OFF#.

Table 6: Definition of FULL\_CARD\_POWER\_OFF# Pin

Pin Name	Pin No.	Description	DC Characteristics	Comment
FULL_CARD _POWER_ OFF#	6	A signal to control power-on/-off of the module. When it is at low level, the module powers off. When it is at high level, the module powers on.	V <sub>IH</sub> min=0.7V	Pulled down internally.



## 3.4.1.1. Turn on the Module Through GPIO Controlled FULL\_CARD\_POWER\_OFF#

It is recommended to use a GPIO from host to control FULL\_CARD\_POWER\_OFF#. A simple reference circuit is illustrated in the following figure.

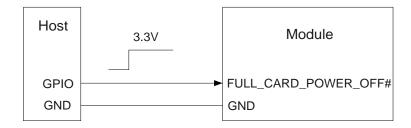


Figure 6: Turn on the Module Through GPIO Controlled FULL\_CARD\_POWER\_OFF#

#### 3.4.1.2. Turn on the Module Automatically

If FULL\_CARD\_POWER\_OFF# is pulled up to 3.3V with a  $5k\Omega\sim10k\Omega$  resistor, the module will be powered on automatically when the power supply for VCC is applied, and will be powered off when the power supply is removed.

A reference circuit is shown in the following figure.

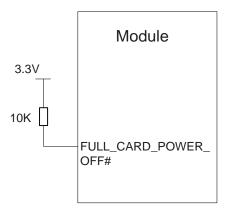


Figure 7: Turn on the Module Automatically



The turn on scenario is illustrated in the following figure.

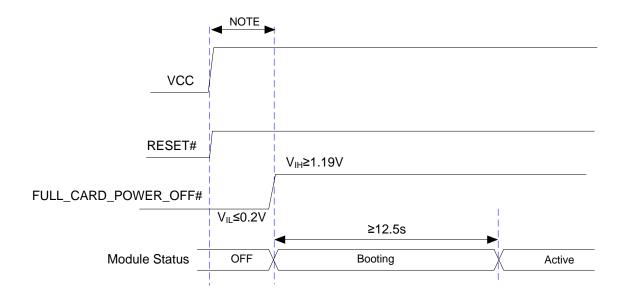


Figure 8: Timing of Turning on Module

NOTE

Please make sure that VCC is stable before pulling down FUL\_CARD\_POWER\_OFF# pin. The time between them is no less than 30ms.

#### 3.4.2. Turn off the Module

### 3.4.2.1. Turn off the Module Through FULL\_CARD\_POWER\_OFF#

Driving the FULL\_CARD\_POWER\_OFF# pin to low will turn off the module.

The power-down scenario is illustrated in the following figure.

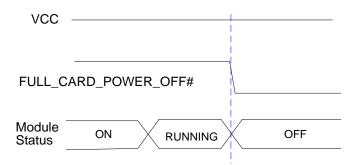


Figure 9: Timing of Turning off the Module Through FULL\_CARD\_POWER\_OFF#



#### 3.4.2.2. Turn off the Module via AT Command

The module can also be turned off by **AT+QPOWD** command. For more details about the command, please refer to *document* [2].

## 3.5. Reset the Module

The RESET# pin is used to reset the module. The module can be reset by driving RESET# to a low level voltage for 250ms~600ms.

**Table 7: RESET# Pin Definition** 

Pin Name	Pin No.	Description	DC Characteristics	Comment
			V <sub>IH</sub> max=2.1V	
RESET#	67	Reset the module	V <sub>IH</sub> min=1.3V	
			V <sub>IL</sub> max=0.5V	

An open collector/collector driver or button can be used to control the RESET# pin.

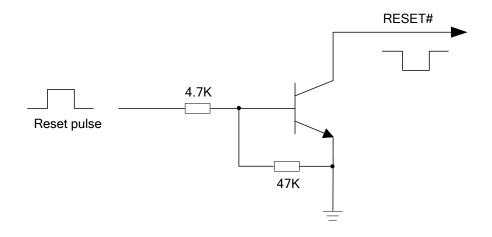


Figure 10: Reference Circuit of RESET# by Using Driving Circuit



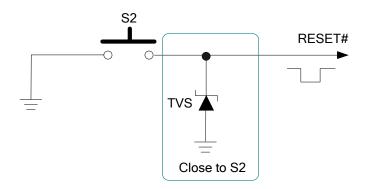


Figure 11: Reference Circuit of RESET# by Using Button

The reset scenario is illustrated in the following figure.

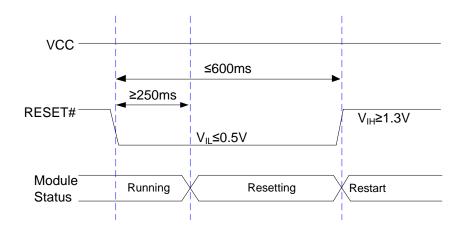


Figure 12: Timing of Resetting Module

NOTE

Please ensure that there is no large capacitance on RESET# pin.

## 3.6. (U)SIM Interfaces

The (U)SIM interface circuitry meets ETSI and IMT-2000 requirements. Both 1.8V and 3.0V (U)SIM cards are supported, and Dual SIM Single Standby\* function is supported.



Table 8: Pin Definition of (U)SIM Interfaces

Pin Name	Pin No.	I/O	Description	Comment
USIM1_VDD	36	РО	Power supply for (U)SIM1 card	Either 1.8V or 3.0V is supported by the module automatically.
USIM1_DATA	34	Ю	Data signal of (U)SIM1 card	
USIM1_CLK	32	DO	Clock signal of (U)SIM1 card	
USIM1_RESET	30	DO	Reset signal of (U)SIM1 card	
USIM1_DET	66	DI	(U)SIM1 card insertion detection. Active high.	Pulled up internally. When (U)SIM1 card is present, it is at high level. When (U)SIM1 card is absent, it is at low level.
USIM2_VDD	48	РО	Power supply for (U)SIM2 card	Either 1.8V or 3.0V is supported by the module automatically.
USIM2_DATA	42	Ю	Data signal of (U)SIM2 card	
USIM2_CLK	44	DO	Clock signal of (U)SIM2 card	
USIM2_RESET	46	DO	Reset signal of (U)SIM2 card	
USIM2_DET	40	DI	(U)SIM2 card insertion detection. Active high.	Pulled up internally. When (U)SIM2 card is present, it is at high level. When (U)SIM2 card is absent, it is at low level.

EM12-G supports (U)SIM card hot-plug via the USIM\_DET pin, which is a level trigger pin. The USIM\_DET is normally short-circuited to ground when (U)SIM card is not inserted. When the (U)SIM card is inserted, the USIM\_DET will change from low to high level. The rising edge will indicate insertion of the (U)SIM card. When the (U)SIM card is removed, the USIM\_DET will change from high to low level. This falling edge will indicate the absence of the (U)SIM card.

The following figure shows a reference design of (U)SIM interface with normally short-circuited (U)SIM card connector.



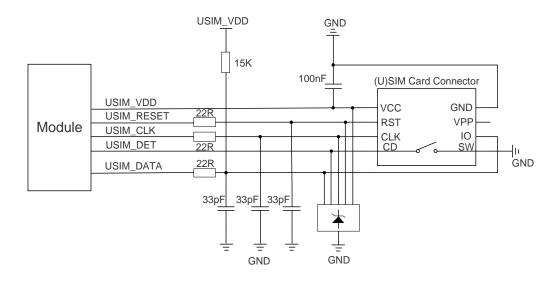


Figure 13: Reference Circuit of Normally Short-Circuited (U)SIM Card Connector

### Normally Short-Circuited (U)SIM Card Connector:

- When the (U)SIM is absent, CD is short-circuited to SW and USIM\_DET is at low level.
- When the (U)SIM is inserted, CD is open to SW and USIM\_DET is at high level.

The following figure shows a reference design of (U)SIM interface with normally open (U)SIM card connector.

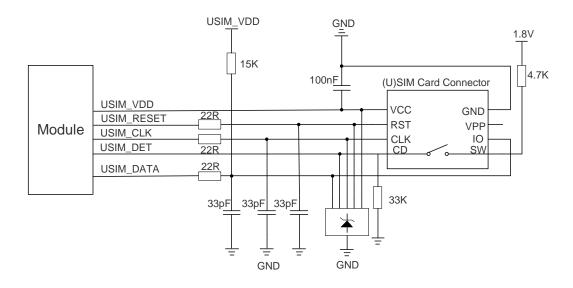


Figure 14: Reference Circuit of Normally Open (U)SIM Card Connector

### Normally Open (U)SIM Card Connector:

- When the (U)SIM is absent, CD is open to SW and USIM\_DET is at low level.
- When the (U)SIM is inserted, CD is short-circuited to SW and USIM\_DET is at high level.



If (U)SIM card detection function is not needed, please keep USIM\_DET unconnected. A reference circuit for (U)SIM card interface with a 6-pin (U)SIM card connector is illustrated in the following figure.

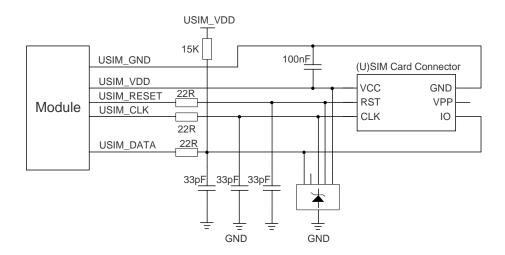


Figure 15: Reference Circuit of a 6-Pin (U)SIM Card Connector

In order to enhance the reliability and availability of the (U)SIM card in customers' applications, please follow the criteria below in (U)SIM circuit design:

- Keep placement of (U)SIM card connector as close as possible to the module. Keep the trace length as less than 200mm as possible.
- Keep (U)SIM card signals away from RF and VCC traces.
- Assure the ground between the module and the (U)SIM card connector short and wide. Keep the trace width of ground and USIM\_VDD no less than 0.5mm to maintain the same electric potential.
- To avoid cross-talk between USIM\_DATA and USIM\_CLK, keep them away from each other and shield them with surrounded ground.
- In order to offer good ESD protection, it is recommended to add a TVS diode array with parasitic capacitance not exceeding 10pF. The 22Ω resistors should be added in series between the module and the (U)SIM card connector so as to suppress EMI spurious transmission and enhance ESD protection. The 33pF capacitors are used to filter out RF interference. Please note that the (U)SIM peripheral circuit should be close to the (U)SIM card connector.
- The pull-up resistor on USIM\_DATA line can improve anti-jamming capability when long layout trace and sensitive occasion are applied, and should be placed close to the (U)SIM card connector.

NOTE

"\*" means under development.



### 3.7. USB Interface

EM12-G provides one integrated Universal Serial Bus (USB) interface which complies with the USB 3.0/2.0 specifications and supports super speed (5Gbps) on USB 3.0, high speed (480 Mbps) and full speed (12 Mbps) modes on USB 2.0. The USB interface is used for AT command communication, data transmission, GNSS NMEA output, software debugging, firmware upgrade and voice over USB\*.

The following table shows the pin definition of USB interface.

**Table 9: Pin Definition of USB Interface** 

Pin No.	Pin Name	I/O	Description	Comment	
7	USB_DP	Ю	USB 2.0 differential data bus (+)	Require differential impedance	
9	USB_DM	Ю	USB 2.0 differential data bus (-)	of $90\Omega$	
29	USB3.0_TX-	DO	USB 3.0 transmit data (-)	Require differential impedance	
31	USB3.0_TX+	DO	USB 3.0 transmit data (+)	of 90Ω	
35	USB3.0_RX-	DI	USB 3.0 receive data (-)	Require differential impedance	
37	USB3.0_RX+	DI	USB 3.0 receive data (+)	of 90Ω	

For more details about the USB 2.0 & 3.0 specifications, please visit <a href="http://www.usb.org/home">http://www.usb.org/home</a>.

The USB interface is recommended to be reserved for firmware upgrade in customers' designs. The following figure shows a reference circuit of USB 2.0 & USB 3.0 interface.



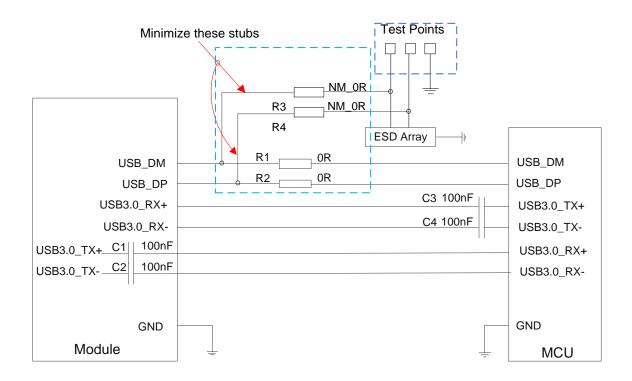


Figure 16: Reference Circuit of USB 2.0 & 3.0 Interface

In order to ensure the integrity of USB 2.0 & 3.0 data line signal, R1/R2/R3/R4 components must be placed close to the module, capacitors C1 and C2 have been placed inside the module, capacitors C3 and C4 must be placed close to the MCU, and these components should be placed close to each other.

In order to ensure the USB interface design corresponding with USB 2.0 & 3.0 specifications, please comply with the following principles:

- It is important to route the USB 2.0 & 3.0 signal traces as differential pairs with total grounding.
  - 1) For USB 2.0 routing traces, the trace impedance of the differential pair should be  $90\Omega$ , and the trace length difference between the differential pair should be less than 2mm.
  - 2) For USB 3.0 routing traces, the trace impedance of Tx and Rx differential pairs should be  $90\Omega$ , and the trace length difference between Tx and Rx differential pairs should be less than 0.7mm.
- Do not route signal traces under crystals, oscillators, magnetic devices or RF signal traces. It is important to route the USB 2.0 & 3.0 differential traces in inner-layer with ground shielding on not only upper and lower layers but also right and left sides.
- If USB connector is used, please keep the ESD protection components as close as possible to the USB connector. Pay attention to the influence of junction capacitance of ESD protection components on USB 2.0 & 3.0 data lines. The capacitance value of ESD protection components should be less than 2.0pF for USB 2.0, and less than 0.4pF for USB 3.0.
- If possible, reserve a OR resistor on USB\_DP and USB\_DM lines, respectively.



**NOTE** 

"\*" means under development.

#### 3.8. PCIE Interface

Under development

### 3.9. PCM and I2C Interfaces

EM12-G supports audio communication via Pulse Code Modulation (PCM) digital interface and I2C interface.

The PCM interface supports the following modes:


- Primary mode (short frame synchronization, works as both master and slave)
- Auxiliary mode (long frame synchronization, works as master only)

In primary mode, the data is sampled on the falling edge of the PCM\_CLK and transmitted on the rising edge. The PCM\_SYNC falling edge represents the MSB. In this mode, the PCM interface supports 256kHz, 512kHz, 1024kHz or 2048kHz PCM\_CLK at 8kHz PCM\_SYNC, and also supports 4096kHz PCM\_CLK at 16kHz PCM\_SYNC.


In auxiliary mode, the data is sampled on the falling edge of the PCM\_CLK and transmitted on the rising edge. The PCM\_SYNC rising edge represents the MSB. In this mode, PCM interface operates with a 256kHz PCM\_CLK and an 8kHz, 50% duty cycle PCM\_SYNC only.

EM12-G supports 16-bit linear data format. The following figures show the primary mode's timing relationship with 8kHz PCM\_SYNC and 2048kHz PCM\_CLK, as well as the auxiliary mode's timing relationship with 8kHz PCM\_SYNC and 256kHz PCM\_CLK.



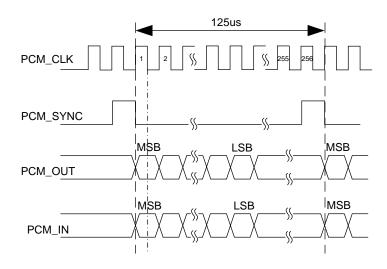

**Figure 17: Primary Mode Timing** 

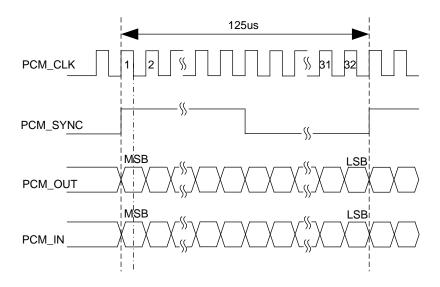

**Figure 18: Auxiliary Mode Timing** 

The following table shows the pin definition of PCM and I2C interfaces which can be applied on audio codec design.

Table 10: Pin Definition of PCM and I2C Interfaces

Pin Name	Pin No.	I/O	Description	Comment
PCM_IN	22	DI	PCM data input	1.8V power domain.
PCM_OUT	24	DO	PCM data output	1.8V power domain.



PCM_SYNC	28	Ю	PCM data frame synchronization signal	1.8V power domain.
PCM_CLK	20	Ю	PCM data bit clock	1.8V power domain. In master mode, it is an output signal. In slave mode, it is an input signal. If unused, keep it open.
I2C_SCL	58	DO	I2C serial clock	Used for external codec.
I2C_SDA	56	Ю	I2C serial data	<ul><li>Require an external pull-up to 1.8V.</li></ul>

The clock and mode can be configured by AT command, and the default configuration is master mode using short frame synchronization format with 2048kHz PCM\_CLK and 8kHz PCM\_SYNC. Please refer to **document [2]** for details about **AT+QDAI** command.

The following figure shows a reference design of PCM interface with an external codec IC.

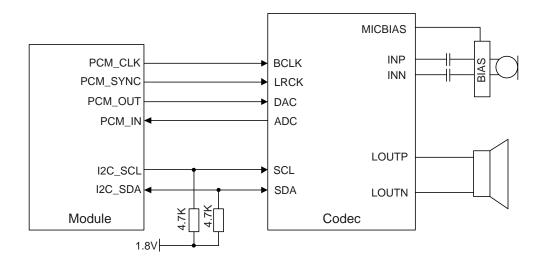


Figure 19: Reference Circuit of PCM Application with Audio Codec

#### **NOTES**

- 1. It is recommended to reserve an RC (R=22 $\Omega$ , C=22pF) circuit on the PCM lines, especially for PCM\_CLK.
- 2. EM12-G works as a master device pertaining to I2C interface.

# 3.10. Control and Indicator Signals

The following table shows the pin definition of control and indicator signals.



**Table 11: List of Control and Indicator Signals** 

NOTE	Pin Name	I/O	Power Domain	Description
10	WWAN_LED#	OD	3.3V	It is an open collector and active low signal. It is used to indicate the RF status of the module.
23	WAKE_ON_WAN#	OD	1.8V	A signal to wake up the host. It is an open collector and active low signal.
8	W_DISABLE1#	DI	1.8V/3.3V	Airplane mode control. Active low.
26	W_DISABLE2#*	DI	1.8V/3.3V	GNSS enable control. Active low.
25	DPR	DI	1.8V	Dynamic power reduction. High level by default.

"\*" means under development.

#### 3.10.1. W\_DISABLE1# Signal

EM12-G provides a W\_DISABLE1# signal to disable or enable airplane mode through hardware operation. The W\_DISABLE1# pin is pulled up by default. Driving it to low level will let the module enter into airplane mode.

In airplane mode, the RF function will be disabled. The RF function can also be enabled or disabled through software AT commands. The following table shows the RF function status of the module.

**Table 12: RF Function Status** 

W_DISABLE1# Level	AT Commands	RF Function Status
High Level	AT+CFUN=1	Enabled
High Level	AT+CFUN=0 AT+CFUN=4	Disabled
Low Level	AT+CFUN=0 AT+CFUN=1 AT+CFUN=4	Disabled



#### 3.10.2. WWAN\_LED# Signal

The WWAN\_LED# signal is used to indicate the RF status of the module, and its typical current consumption is up to 40mA.

In order to reduce the current consumption of the LED, a resistor must be placed in series with the LED, as illustrated in the figure below. The LED is ON when the WWAN\_LED# signal is at a low voltage level.




Figure 20: WWAN\_LED# Signal Reference Circuit Diagram

The following table shows the RF status indicated by WWAN\_LED# signal.

Table 13: Network Status Indications of WWAN\_LED# Signal

WWAN_LED# Level	Description
Low Level (LED ON)	RF function is turned on
High Level (LED OFF)	<ul> <li>RF function is turned off if any of the following circumstances occurs:</li> <li>The (U)SIM card is not powered</li> <li>W_DISABLE1# signal is at low level (airplane mode enabled).</li> <li>AT+CFUN=4 (RF function disabled)</li> </ul>

#### 3.10.3. WAKE\_ON\_WAN# Signal

The WAKE\_ON\_WAN# signal is an open collector signal, which requires a pull-up resistor on the host. When a URC returns, a 1s low level pulse signal will be outputted to wake up the host. The module operation status indicated by WAKE\_ON\_WAN# is shown as below.

Table 14: State of the WAKE\_ON\_WAN# Signal

WAKE_ON_WAN# State	Module Operation Status
Output a 1s low level pulse signal	Call/SMS/Data is incoming (to wake up the host)
Always at high level	Idle/Sleep



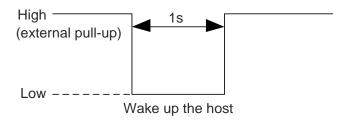


Figure 21: WAKE\_ON\_WAN# Behavior

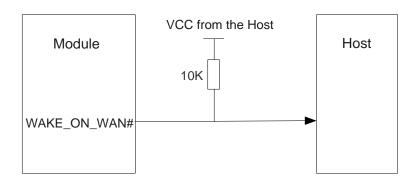


Figure 22: WAKE\_ON\_WAN# Signal Reference Circuit Design

#### 3.10.4. DPR Signal

EM12-G provides a DPR (Dynamic Power Reduction) signal for body SAR (Specific Absorption Rate) detection. The signal is sent by a host system proximity sensor to EM12-G module to provide an input trigger which will reduce the output power in the radio transmission.

**Table 15: Function of the DPR Signal** 

DPR Level	Function
High/Floating	Max transmitting power will NOT be backed off
Low	Max transmitting power will be backed off by executing AT+QCFG="sarcfg" command



Please refer to document [2] for more details about AT+QCFG="sarcfg" command.



# 3.11. Tunable Antenna Control Interface\*

ANTCTL[0:3] signals are used for tunable antenna control and should be routed to an appropriate antenna control circuitry.

More details about the interface will be added in the future version of the document.

Table 16: Pin Definition of Tunable Antenna Control Interface\*

Pin Name	Pin No.	I/O	Description	Comment
ANTCTL0*	59	DO	Tunable antenna control	1.8V power domain
ANTCTL1*	61	DO	Tunable antenna control	1.8V power domain
ANTCTL2*	63	DO	Tunable antenna control	1.8V power domain
ANTCTL3*	65	DO	Tunable antenna control	1.8V power domain



"\*" means under development.

# 3.12. Configuration Pins

EM12-G provides 4 configuration pins, and it is configured as WWAN-USB 3.0 2.

**Table 17: Pin Definition of Configuration Pins** 

Pin No.	Pin Name	I/O	Power Domain	Description
21	CONFIG_0		0	Connected to GND internally.
69	CONFIG_1		0	Connected to GND internally.
75	CONFIG_2		0	NC
1	CONFIG_3		0	NC

The 4 pins on EM12-G module are defined as below:



#### **Table 18: List of Configuration Pins**

Config_0	Config_1	Config_2	Config_3	Module Type and	Port
(Pin 21)	(Pin 69)	(Pin 75)	(Pin 1)	Main Host Interface	Configuration
GND	GND	NC	NC	WWAN-USB 3.0	2



# **4** GNSS Receiver

# 4.1. General Description

EM12-G includes a fully integrated global navigation satellite system solution that supports Gen9C-Lite of Qualcomm (GPS, GLONASS, BeiDou Galileo and QZSS).

EM12-G supports standard NMEA-0183 protocol, and outputs NMEA sentences at 1Hz data update rate via USB interface by default.

By default, EM12-G GNSS engine is switched off. It has to be switched on via AT command. For more details about GNSS engine technology and configurations, please refer to *document [3]*.



# **5** Antenna Interfaces

EM12-G provides a main antenna interface, an Rx-diversity antenna interface which is used to resist the fall of signals caused by high speed movement and multipath effect, and a GNSS antenna interface. The antenna ports have an impedance of  $50\Omega$ .

### 5.1. Main/Rx-diversity Antenna Interfaces

The main/Rx-diversity/GNSS antenna interfaces are shown as below.



Figure 23: Antenna Interfaces on the Module



# **5.1.1. Operating Frequency**

**Table 19: EM12-G Operating Frequencies** 

3GPP Band	Transmit	Receive	Unit
WCDMA B1	1920~1980	2110~2170	MHz
WCDMA B2	1850~1910	1930~1990	MHz
WCDMA B3	1710~1785	1805~1880	MHz
WCDMA B4	1710~1755	2110~2155	MHz
WCDMA B5	824~849	869~894	MHz
WCDMA B8	880~915	925~960	MHz
WCDMA B9	1750~1785	1845~1880	MHz
WCDMA B19	830~845	875~890	MHz
LTE B1	1920~1980	2110~2170	MHz
LTE B2	1850~1910	1930~1990	MHz
LTE B3	1710~1785	1805~1880	MHz
LTE B4	1710~1755	2110~2155	MHz
LTE B5	824~849	869~894	MHz
LTE B7	2500~2570	2620~2690	MHz
LTE B8	880~915	925~960	MHz
LTE B9	1749.9~1784.9	1844.9~1879.9	MHz
LTE B12	699~716	729~746	MHz
LTE B13	777~787	746~756	MHz
LTE B14	788~798	758~768	MHz
LTE B17	704~716	734~746	MHz
LTE B18	815~830	860~875	MHz
LTE B19	830~845	875~890	MHz



LTE B20	832~862	791~821	MHz
LTE B21	1447.9~1462.9	1495.9~1510.9	MHz
LTE B25	1850~1915	1930~1995	MHz
LTE B26	814~849	859~894	MHz
LTE B28	703~748	758~803	MHz
LTE B29	/	717~728	MHz
LTE B30	2305~2315	2350~2360	MHz
LTE B32	/	1452~1496	MHz
LTE B38	2570~2620	2570~2620	MHz
LTE B39	1880~1920	1880~1920	MHz
LTE B40	2300~2400	2300~2400	MHz
LTE B41	2496~2690	2496~2690	MHz
LTE B66	1710~1780	2110~2200	MHz

# 5.2. GNSS Antenna Interface

The following table shows frequency specification of GNSS antenna interface.

**Table 20: GNSS Frequency** 

Туре	Frequency	Unit
GPS/Galileo	1575.42±1.023	MHz
GLONASS	1597.5~1605.8	MHz
BeiDou	1561.098±2.046	MHz



#### 5.3. Antenna Installation

#### 5.3.1. Antenna Requirements

The following table shows the requirements on main antenna, Rx-diversity antenna and GNSS antenna.

**Table 21: Antenna Requirements** 

Туре	Requirements
	Frequency range: 1559MHz ~ 1609MHz
GNSS 1)	Polarization: RHCP or linear
GNSS "	VSWR: < 2 (Typ.)
	Passive antenna gain: > 0dBi
	VSWR: ≤ 2
	Efficiency: > 30%
	Max Input Power: 50W
	Input Impedance: $50\Omega$
	Cable insertion loss: <1dB
WCDMA/LTE	(WCDMA B5/B8/B19,
	LTE B5/B8/B12/B13/B14/B17/B18/B19/B20/B26/B28/B29)
	Cable insertion loss: <1.5dB
	(WCDMA B1/B2/B3/B4/B9, LTE B1/B2/B3/B4/B9/B21/B25/B32/B39/B66)
	Cable insertion loss <2dB
	(LTE B7/B30/B38/B40/B41)

# NOTE

#### 5.3.2. Recommended RF Connector for Antenna Installation

EM12-G is mounted with standard 2mm × 2mm receptacle RF connectors for convenient antenna connection. The connector dimensions are illustrated below:

<sup>&</sup>lt;sup>1)</sup> It is recommended to use a passive GNSS antenna when LTE B13 or B14 is supported, as the use of active antenna may generate harmonics which will affect the GNSS performance.



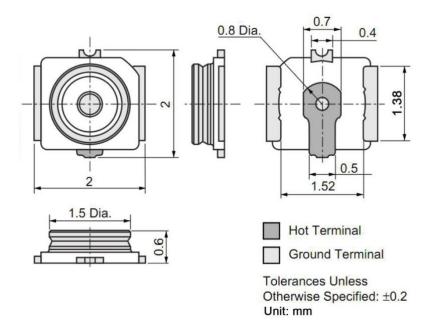


Figure 24: EM12-G RF Connector Dimensions (Unit: mm)

**Table 22: Major Specifications of the RF Connector** 

Item	Specification
Nominal Frequency Range	DC to 6GHz
Nominal Impedance	50Ω
Temperature Rating	-40°C to +85°C
	Meet the requirements of:
Voltage Standing Wave Ratio (VSWR)	Max 1.3 (DC~3GHz)
	Max 1.45 (3GHz~6GHz)

The receptacle RF connector used in conjunction with EM12-G will accept two types of mating plugs that will meet a maximum height of 1.2mm using a Ø0.81mm coaxial cable or a maximum height of 1.45mm utilizing a Ø1.13mm coaxial cable.

The following figure shows the specifications of mating plugs using Ø0.81mm coaxial cables.



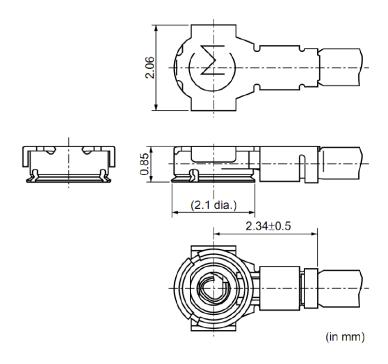


Figure 25: Specifications of Mating Plugs Using Ø0.81mm Coaxial Cables

The following figure illustrates the connection between the receptacle RF connector on EM12-G and the mating plug using a Ø0.81mm coaxial cable.

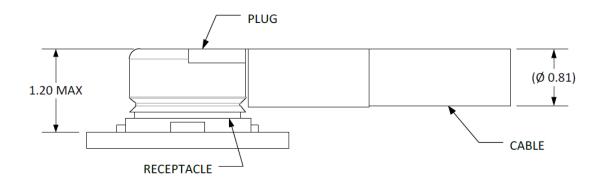


Figure 26: Connection between RF Connector and Mating Plug Using Ø0.81mm Coaxial Cable

The following figure illustrates the connection between the receptacle RF connector on EM12-G and the mating plug using a Ø1.13mm coaxial cable.



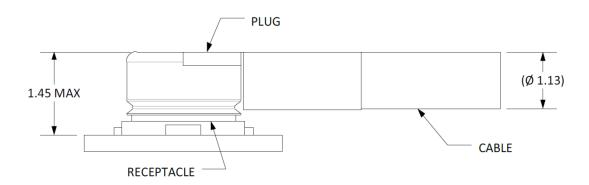


Figure 27: Connection between RF Connector and Mating Plug Using Ø1.13mm Coaxial Cable



# **6** Electrical, Reliability and Radio Characteristics

# 6.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of the module are listed in the following table.

**Table 23: Absolute Maximum Ratings** 

Parameter	Min.	Max.	Unit
VCC	-0.3	4.7	V
Voltage at Digital Pins	-0.3	2.3	V

# 6.2. Power Supply Requirements

The typical input voltage of EM12-G is 3.7V, as specified by *PCle M.2 Electromechanical Spec Rev1.0*. The following table shows the power supply requirements of EM12-G.

**Table 24: Power Supply Requirements** 

Parameter	Description	Min.	Тур.	Max.	Unit
VCC	Power Supply	3.135	3.7	4.4	V



### 6.3. I/O Requirements

Table 25: I/O Requirements

Parameter	Description	Min.	Max.	Unit
VIH	Input high voltage	$0.7 \times V_{DD18}^{1)}$	V <sub>DD18</sub> +0.3	V
V <sub>IL</sub>	Input low voltage	-0.3	0.3 × V <sub>DD18</sub>	V
V <sub>OH</sub>	Output high voltage	V <sub>DD18</sub> -0.5	V <sub>DD18</sub>	V
V <sub>OL</sub>	Output low voltage	0	0.4	V

# NOTE

# 6.4. Operation and Storage Temperatures

**Table 26: Operation and Storage Temperatures** 

Parameter	Min.	Тур.	Max.	Unit
Operation Temperature Range 1)	-30	+25	+70	°C
Extended Temperature Range <sup>2)</sup>	-40		+85	°C
Storage temperature Range	-40		+90	°C

### **NOTES**

- 1. 1) Within operation temperature range, the module is 3GPP compliant.
- 2. <sup>2)</sup> Within extended temperature range, the module remains the ability to establish and maintain a voice, SMS, data transmission, emergency call, etc. There is no unrecoverable malfunction. There are also no effects on radio spectrum and no harm to radio network. Only one or more parameters like P<sub>out</sub> might reduce in their value and exceed the specified tolerances. When the temperature returns to the normal operating temperature levels, the module will meet 3GPP specifications again.

<sup>1)</sup> V<sub>DD18</sub> refers to I/O power domain.



# 6.5. Current Consumption(TBD)

# 6.6. RF Output Power

The following table shows the RF output power of EM12-G module.

**Table 27: RF Output Power** 

Frequency	Max.	Min.
WCDMA bands	24dBm+1/-3dB	<-50dBm
LTE- FDD bands	23dBm±2dB	<-40dBm
LTE-TDD bands	23dBm±2dB	<-40dBm

# 6.7. RF Receiving Sensitivity

The following tables show conducted RF receiving sensitivity of EM12-G module.

Table 28: EM12-G Conducted RF Receiving Sensitivity(PRX、DRX TBD)

Frequency	Primary (Typ.)	Diversity (Typ.)	SIMO <sup>1)</sup> (Typ.)	3GPP (SIMO)
WCDMA B1	-109.5	/	/	-106.7dBm
WCDMA B2	-109.5	/	/	-104.7dbm
WCDMA B3	-109.5	/	/	-103.7dbm
WCDMA B4	-109.0	/	/	-106.7dBm
WCDMA B5	-110.5	/	/	-104.7dbm
WCDMA B8	-110.5	/	/	-103.7dBm
WCDMA B9	-109.5	/	/	-105.7dBm
WCDMA B19	-110.5	/	/	-106.7dBm
LTE-FDD B1 (10M)	-96.5	-96.0	-98.5dbm	-96.3dBm



LTE-FDD B2 (10M)	-97.5	-97.0	-99.5dbm	-94.3dBm	
LTE-FDD B3 (10M)	-97.0	-96.5	-99.0dbm	-93.3dBm	
LTE-FDD B4 (10M)	-97.0	-96.0	-99.0dBm	-96.3dBm	
LTE-FDD B5 (10M)	-98.5	-98.5	-100.5dBm	-94.3dBm	
LTE-FDD B7 (10M)	-96.5	-96.0	-98.5dBm	-94.3dBm	
LTE-FDD B8 (10M)	-98.0	-98.0	-101.5dBm	-93.3dBm	
LTE-FDD B9(10M)	-97.5	-97.5	-100.0dBm	-95.3dBm	
LTE-FDD B12 (10M)	-98.5	-99.0	-101.5dBm	-93.3dBm	
LTE-FDD B13 (10M)	-99.0	-99.0	-101.0dBm	-93.3dBm	
LTE-FDD B14 (10M)	-97.0	-97.5	-100.0dBm	-93.3dBm	
LTE-FDD B17 (10M)	-99.0	-99.0	-101.0dBm	-93.3dBm	
LTE-FDD B18 (10M)	-99.0	-99.0	-101.0dBm	-96.3dBm	
LTE-FDD B19 (10M)	-98.5	-98.5	-100.5dBm	-96.3dBm	
LTE-FDD B20 (10M)	-98.5	-98.5	-100.5dBm	-93.3dBm	
LTE-FDD B21 (10M)	-96.0	-96.0	-98.0dBm	-96.3dBm	
LTE-TDD B25 (10M)	-96.5	-97.0	-99.0dBm	-92.8dBm	
LTE-TDD B26 (10M)	-99.0	-98.5	-100.5dBm	-93.8dBm	
LTE-TDD B28 (10M)	-98.0	-99.0	-100.5dBm	-94.8dBm	
LTE-TDD B29 (10M)	/	/	/	/	
LTE-TDD B30 (10M)	-97.0	-95.0	-98.0dBm	-95.3dBm	
LTE-TDD B32 (10M)	/	/	/	/	
LTE-TDD B38 (10M)	-96.5	-96.0	-98.0dBm	-96.3dBm	
LTE-TDD B39 (10M)	-97.0	-97.5	-99.5dBm	-96.3dBm	
LTE-TDD B40 (10M)	-96.5	-96	-98.0dBm	-96.3dBm	
LTE-TDD B41 (10M)	-96.0	-95.5	-97.5dBm	-94.3dBm	



LTE-TDD B66 (10M)	-97.0	-96.0	-99.0dBm	-95.8dBm

# NOTES

- 1. ¹¹ SIMO is a smart antenna technology that uses a single antenna at the transmitter side and multiple (two for EM12-G) antennas at the receiver side, which can improve Rx performance.
- 2. <sup>2)</sup> Per 3GPP specification.

#### 6.8. ESD Characteristics

The module is not protected against electrostatic discharge (ESD) in general. Consequently, it is subject to ESD handling precautions that typically apply to ESD sensitive components. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any application that incorporates the module.

The following table shows the module electrostatic discharge characteristics.

Table 29: Electrostatic Discharge Characteristics (Temperature: 25°C, Humidity: 40%)

Tested Points	Contact Discharge	Air Discharge	Unit
VBAT, GND	±5	±10	kV
Antenna Interfaces	±4	±8	kV
Other Interfaces	±0.5	±1	kV

# 6.9. Thermal Dissipation

EM12-G is designed to work over an extended temperature range. In order to achieve a maximum performance while working under extended temperatures or extreme conditions (such as with maximum power or data rate, etc.) for a long time, it is strongly recommended to add a thermal pad or other thermally conductive compounds between the module and the main PCB for thermal dissipation.

The thermal dissipation area (i.e. the area for adding thermal pad) is show as below. The dimensions are measured in mm.



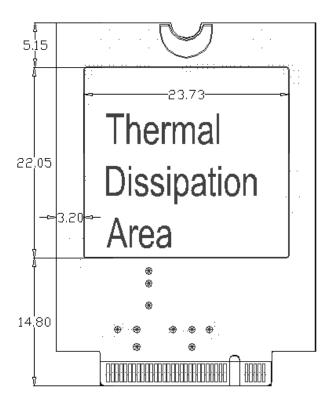


Figure 28: Thermal Dissipation Area on Bottom Side of Module (Top View)

There are some other measures to enhance heat dissipation performance:

- Add ground vias as many as possible on PCB.
- Maximize airflow over/around the module.
- Place the module away from other heating sources.
- Module mounting holes must be used to attach (ground) the device to the main PCB ground.
- It is NOT recommended to apply solder mask on the main PCB where the module's thermal dissipation area is located.
- Select an appropriate material, thickness and surface for the outer housing (i.e. the mechanical enclosure) of the application device that integrates the module so that it provides good thermal dissipation.
- Customers may also need active cooling to pull heat away from the module.
- If possible, add a heatsink on the top of the module. A thermal pad should be used between the heatsink and the module, and the heatsink should be designed with as many fins as possible to increase heat dissipation area.



# 7 Mechanical Dimensions and Packaging

This chapter mainly describes mechanical dimensions and packaging specifications of EM12-G module. All dimensions are measured in mm, and the tolerances for dimensions without tolerance values are ±0.05mm.

#### 7.1. Mechanical Dimensions of the Module

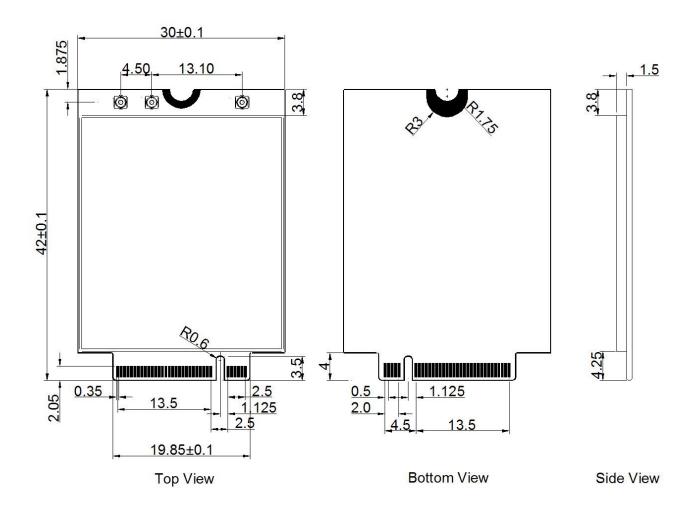


Figure 29: Mechanical Dimensions of EM12-G (Unit: mm)



## 7.2. Standard Dimensions of M.2 PCI Express

The following figure shows the standard dimensions of M.2 PCI Express. Please refer to **document [4]** for detailed A and B.


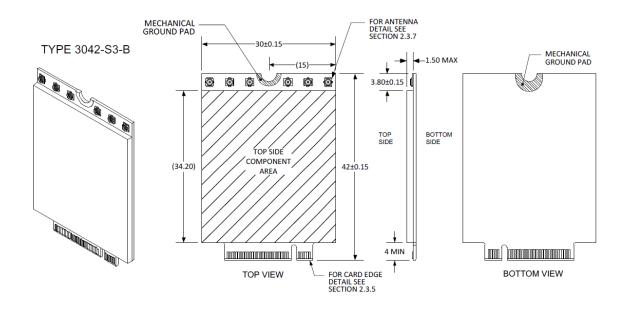


Figure 30: Standard Dimensions of M.2 Type 3042-S3 (Unit: mm)

According to M.2 nomenclature, EM12-G is Type 3042-S3-B (30.0mm × 42.0mm, max component height on the top is 1.5mm and single-sided, key ID is B).

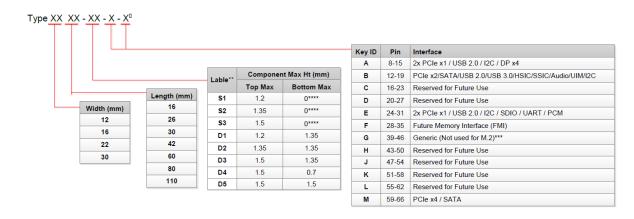

- \* Use ONLY when a double slot is being specified
- \*\* Label included in height dimension
- \*\*\* Key G is intended for custom use. Devices with this key will not be M.2-compliant. Use at your own risk!
- \*\*\*\* Insulating label allowed on connector-based designs

Figure 31: M.2 Nomenclature



# 7.3. Design Effect Drawings of the Module



Figure 32: Top View of the Module

NOTE

These are design effect drawings of EM12-G module. For more accurate pictures, please refer to the module that you get from Quectel.

#### 7.4. M.2 Connector

EM12-G adopts a standard PCI Express M.2 connector which compiles with the directives and standards listed in the *document* [4].

#### 7.5. Barcode Rule

The PN (Q1-A2449) printed on the label is fixed for Quectel.

For the **SN** shown in the top view, the first two digits indicate project stage. For example, "D1" means DVT1. The next one digit indicates the code of the factory where the module is manufactured. The next



four digits indicate the day, month and year when the module is manufactured. For instance, "18FD" means 13<sup>th</sup> June, 2018. The next two digits indicate serial number of the manufacturing order. The last six digits vary by module which could not be the same in certain time. Meanwhile, the **SN** and **IMEI** can be checked by scanning the QR code.

# 7.6. Packaging

EM12-G modules are packaged in trays. The following figure shows the tray size.

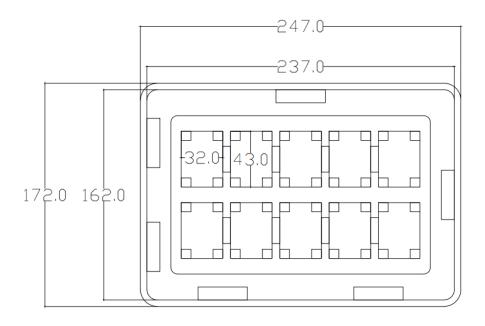


Figure 33: Tray Size

Each tray contains 10 modules. The smallest package contains 100 modules. Tray packaging procedure as below.

- 1. Use 10 trays to package 100 modules at a time (tray size: 247mm × 172mm).
- 2. Place an empty tray on the top of the 10-tray stack.
- 3. Fix the stack with masking tape in "#" shape as shown in the figure.
- 4. Pack the stack with conductive bag, and then fix the bag with masking tape.
- 5. Place the IMEI No. list into the small carton.
- 6. Seal the carton and then label the seal with sealing sticker (small carton size:  $250 \text{mm} \times 175 \text{mm} \times 128 \text{mm}$ ).





Figure 34: Tray Packaging Procedure



# 8 Appendix References

**Table 30: Related Documents** 

SN	Document Name	Remark
[1]	Quectel_M.2_EVB_User_Guide	M.2 EVB User Guide
[2]	Quectel_EP06&EG06&EM06_AT_Commands_Manual	EP06, EG06 and EM06 AT Commands Manual
[3]	Quectel_EP06&EG06&EM06_GNSS_AT_Commands_ Manual	EP06, EG06 and EM06 GNSS AT Commands Manual
[4]	PCI Express M.2 Specification	PCI Express Specification

**Table 31: Terms and Abbreviations** 

Abbreviation	Description
bps	Bits Per Second
DC-HSPA+	Dual-carrier High Speed Packet Access
DFOTA	Delta Firmware Upgrade Over The Air
DL	Down Link
ESD	Electrostatic Discharge
FDD	Frequency Division Duplexing
GLONASS	GLObalnaya Navigatsionnaya Sputnikovaya Sistema, the Russian Global Navigation Satellite System
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
GSM	Global System for Mobile Communications
HR	Half Rate
HSPA	High Speed Packet Access



HSUPA	High Speed Uplink Packet Access
kbps	Kilo Bits Per Second
LED	Light Emitting Diode
LTE	Long Term Evolution
Mbps	Million Bits Per Second
ME	Mobile Equipment (Module)
MIMO	Multiple-Input Multiple-Output
MLCC	Multiplayer Ceramic Chip Capacitor
MMS	Multimedia Messaging Service
MO	Mobile Originated
MT	Mobile Terminated
PDU	Protocol Data Unit
PPP	Point-to-Point Protocol
RF	Radio Frequency
Rx	Receive
SAR	Specific Absorption Rate
SMS	Short Message Service
Тх	Transmit
UART	Universal Asynchronous Receiver & Transmitter
UL	Up Link
URC	Unsolicited Result Code
(U)SIM	(Universal) Subscriber Identification Module
WCDMA	Wideband Code Division Multiple Access