


User Manual

∩∪∪ Splash

User Manual

GETTING STARTED

- a) On/Off Switch
- b) Action Button c) 3.5mm Audio Input d) Charging Port e) Status Light f) Charging Indicator

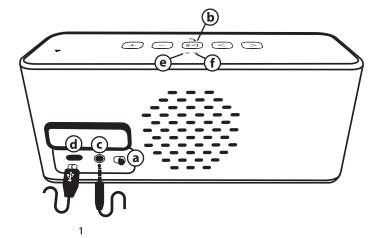

a) On/Off Switch

Slide the switch to the right to turn the NUU Splash on. You will hear a short 'chirp', indicating that the speaker is on.

Slide the switch to the left to turn the NUU Splash off. You will hear a short 'chirp', indicating that the speaker has been switched off.

Note: Do not flip the power switch on/off rapidly. Wait for the 'chirp' before moving the switch again.

- b) Action Button (Bluetooth) Pairing With Your Phone or Bluetooth Device 1) Switch on the NUU Splash. The Bluetooth Status Light (e) will flash slowly.
- 2) Press and hold the Action Button for about 3 seconds. You will hear a low-pitched 'beep' and the Bluetooth Status Light will flash quickly. The NUU Splash is now in pairing mode.
- 3) Enable Bluetooth on your phone or device.* Then select "NUU Splash" from the list of discoverable devices.

- *Note: Procedures for activating Bluetooth will vary across devices. Consult the documentation that came with your device for further information.
- 4) If prompted for a PIN code, enter "0000" (4 zeros).
- 5) Allow around 10-15 seconds for the NUU Splash to pair with your device. When pairing is successful, you will hear a high-pitched 'beep' and the Bluetooth Status Light will remain steadily lit.

c) 3.5mm Audio Input – Plug & Play

The NUU Splash can connect to any device with a 3.5mm headphone jack. Use the supplied 3.5mm input cable to plug and play, no Bluetooth required.

Audio content via 3.5mm stereo input will override audio streamed via Bluetooth.

d) Charging Port – Charging the Battery

For best results, ensure the NUU Splash is fully charged before use.

Connect the supplied AC power adaptor to the charging port, and plug it into your wall outlet. The green charging indicator will remain illuminated while the unit is charging. The indicator will automatically switch off when the unit is fully charged. Allow 2.5 hours for the battery to fully charge. The NUU Splash may be used while it is charging*.

*NOTE: You may charge the NUU Splash by connecting it to your computer with a micro USB cable. However, if you intend to use the NUU Splash while charging, charge only with the supplied power adaptor. Audio output quality may suffer during playback while charging via computer.

e) Status Light

If the blue LED is...

Flashing slowly

The NUU Splash is switched on, but not paired to a Bluetooth device.

· Flashing quickly

The NUU Splash is in pairing mode and ready to pair with your phone or Bluetooth device.


Steadily lit

The NUU Splash is paired with your phone or Bluetooth device and ready to use.

f) Charging Indicator

A steady red light indicates that the battery is low and should be recharged soon. When charging, this light shows green until the NUU Splash is fully charged.

USING THE NUU SPLASH



- a) Action Button
- b) Built-in Microphone
- c) Playback Controls
- d) Volume Controls

a) Action Button

Play/Pause — During audio playback, press once to pause the track. Press again to resume playback.

Answer/End a Call —Incoming and outgoing calls are given priority over Bluetooth audio playback. (But not 3.5mm input: see above.) If a call comes in when streaming audio, the track will pause and your ringtone will play through the speaker. Press the Action Button once to answer and end calls. The audio track will resume once the call is ended.

To reject an incoming call, press and hold the Action Button for 1-2 seconds until you hear a 'beep'.

b) Built-in Microphone — Making Calls

The NUU Splash may be used as a wireless speakerphone. Use your phone to dial as usual, and speak toward the built-in microphone located at the top of the unit. The built-in microphone only works when your phone/device is connected via Bluetooth.

c) Playback Controls — Skip to a Track

When streaming audio via Bluetooth, press the \bigcirc button to skip forward to the next track in your playlist. Press the \bigcirc button to skip back to the previous track in your playlist, or to the beginning of your current track.

d) Volume Controls — Setting the Best Sound

Change the volume by pressing the plus and minus buttons. If you hear a beep when pressing the plus button, the NUU Splash has reached its maximum volume output. To get the best sound, make sure the NUU Splash is standing on its base and the front grill is facing towards you.

When connected via Bluetooth: turn the volume up on your phone/device to its maximum and then use the NUU Splash volume controls to adjust.

When connected via 3.5mm input cable: turn down the volume on your phone/device before adjusting the volume on the NUU Splash. The audio signal may be distorted if the volume on your phone/device is up too high.

SPECIFICATIONS

Bluetooth: Version 2.0 Bluetooth Range: 10m

Water Resistance Rating: IPX5

Battery Life: Up to 7 hours playback time (varies by volume level and audio content)

Audio Output Power: 2 x 3W

Speaker Driver: 2 x 40mm 4 ohm

AC Adaptor: 5V/2.6A with Micro USB plug

Supports Bluetooth A2DP audio profile, Bluetooth Handsfree profile (HFP) and Headset

Profile (HSP)

TROUBLESHOOTING

a) Unable to pair with your Bluetooth device?

- 1) Ensure that your phone/device is Bluetooth compatible, and that Bluetooth has been enabled correctly. Check the documentation that came with you phone/device for further instructions.
- 2) Ensure that your phone/device is within a few feet the NUU Splash.
- 3) If your phone/device is connected to a number of other Bluetooth devices, disconnect some of them before pairing with the NUU Splash.
- 4) Turn Bluetooth off and then on again in your phone/device. If the NUU Splash still won't pair, remove it from the list of discoverable devices and retry the pairing process from the start.
- 5) Ensure that both devices are sufficiently charged.

b)Problems with the sound?

1) For sound distortion, try lowering the volume on the NUU Splash or your phone/device.

- 2) Move the NUU Splash closer to your phone/device.
- 3) Connect your phone/device to the NUU Splash via the 3.5mm input cable rather than Bluetooth. Ensure that the cable is fully inserted at both ends.
- 4) Ensure that both devices are sufficiently charged.

c) NUU Splash not responding to commands?

- 1) Switch the NUU Splash off and then on again.
- 2) Reset the NUU Splash by turning the unit on, and then press and hold both playback control buttons (() and ()) for 3 seconds.
- 3) If there is still no response after step 2, connect the unit to the supplied power adaptor or computer USB port and repeat step 2.
- 4) Ensure that both devices are sufficiently charged.

For further technical support and information, please visit gonuu.com/support or contact support@gonuu.com

WARNINGS

Read all instructions and warnings before using this product to ensure your personal safety and prevent property damage.

- The NUU Splash has a water resistance rating of IPX5, meaning it is protected against
 water drips, sprays, splashes and jets projected by nozzles of up to 6.3mm. It is NOT
 protected again water immersion or submersion and should never be placed under
 water
- Do not expose this product to fire or other sources of excessive heat.
- Do not leave this product in direct sunlight for extended periods of time.
- · Do not block any ventilation openings.
- Do not disassemble this product or attempt to modify it in any manner. Unauthorized alterations may compromise safety, regulatory compliance, product performance, and will void the warranty
- Do not expose this product to excessive impact or other physical abuse.
- Do not insert anything into this product unless otherwise specified in the user manual.

- Do not use abrasive cleaners on this product. Wipe it with a soft, water-dampened cloth.
- Only charge the battery in accordance with the user manual supplied. Use only the manufacturer supplied charger. Using other chargers could result in electric shock and/or damage the NUU Splash.
- Do not charge the NUU Splash in damp areas or in extremely high or low temperatures, as this could result in electric shock.
- Do not attempt to replace the product's built-in battery.
- Obey all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Do not place the NUU Splash on high surfaces. During music playback, the product may move or shift, causing it to fall off the edge.
- Do not dispose of the NUU Splash in a fire. The battery could explode causing injury or death.
- Dispose of the NUU Splash and its battery in accordance with local regulations. Do not dispose of battery with regular household waste.

FCC Warning:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.