



AIRCRAFT
MAINTENANCE MANUAL

LAVATORY DOOR LOCK - SERVICING

EFFECTIVITY: ALL

1. General

- A. This section gives the general instructions to lubricate the lavatory door components.
- B. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-40-02-600-801-A	LAVATORY DOOR- LUBRICATION	ALL



EMB145 - EMB135

AIRCRAFT
MAINTENANCE MANUAL

TASK 25-40-02-600-801-A

EFFECTIVITY: ALL

2. LAVATORY DOOR- LUBRICATION

A. General

WARNING: THE SOLVENT CONTAINS POISONOUS AGENTS. PUT ON GLOVES WHEN YOU USE IT AND DO NOT LET IT TOUCH YOUR SKIN OR EYES. HAVE A SUFFICIENT FLOW OF AIR OR USE RESPIRATORS.

- (1) For a satisfactory result, it is most important to fully clean the parts before you lubricate them. Before you apply the lubricant, clean all metallic moving parts to remove dust, grease, and oil.
- (2) Dust and sand, mixed with grease or oil, cause a grinding mixture which can cause bad damage to moving parts.
- (3) Before you lubricate, it is necessary to remove all old grease, oil, and dust with a cloth moist with solvent MIL-PRF-680.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Rubber Gloves	To protect the hands	AR

E. Consumable Materials

SPECIFICATION (BRAND)	DESCRIPTION	QTY
MIL-L-7808	Oil	AR
MIL-PRF-680	Solvent	AR

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Lavatory door

H. Lavatory Door Latch - Lubrication ([Figure 301](#))

SUBTASK 640-002-A

- (1) Lift the hinged lavatory sign assembly. Refer to Det. B,[Figure 301](#)



AIRCRAFT
MAINTENANCE MANUAL






- (2) Lubricate the lavatory door latch with Molykote 7808 or equivalent. Refer to Det. B,[Figure 301](#).

NOTE: Do not lubricate the rod and the escutcheon plate. Refer to Det. C and D,
[Figure 301](#).

EFFECTIVITY: ALL

Lavatory Door Latch Lubrication

Figure 301

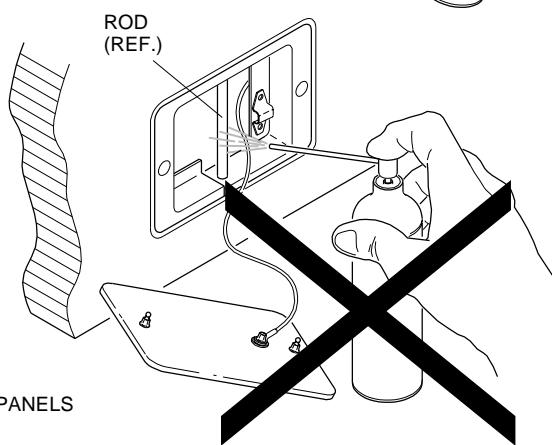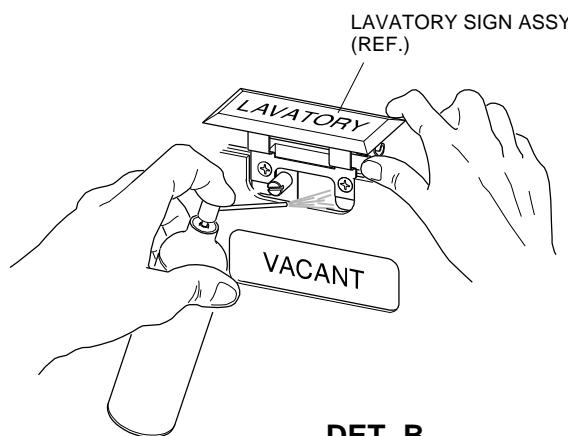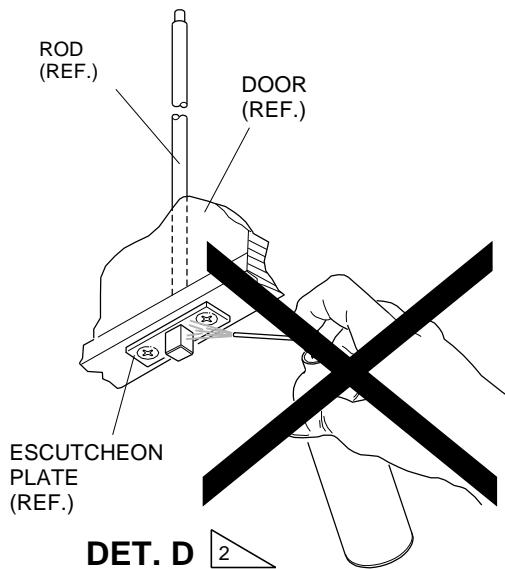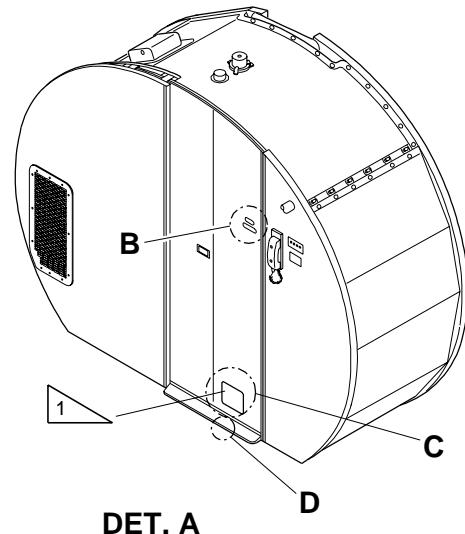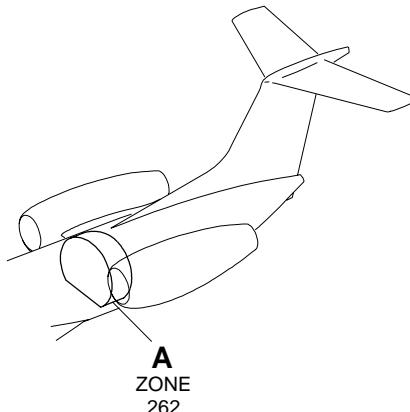

**1 FOR AIRCRAFT WITH ACCESS PANELS
261AZ AND 261BZ.**

2 DO NOT LUBRICATE.

EM145AMM252819A.DGN