RECEIVER AND TRANSMITTER ASSEMBLY

1. Remove the front panels from the receiver and transmitter.

2. Remove handles and front panel fasteners.

3. Connect the two blank front panels to the small “L” bracket using the four M2.5 x 8 screws provided (see Figure 1).

   The transmitter front panel should be mounted on the left side looking from the front.

4. Reconnect the transmitter main body to the front panel (see Figure 2).

5. Reconnect the receiver main body to the front panel.

6. Remove the back panels from the receiver and transmitter.

7. Connect the larger “L” bracket to the back of the receiver and transmitter using male / female standoffs (see Figure 3).

   One standoff connects to the receiver using the screw hole at the bottom right. The other standoff connects to the transmitter using the screw hole at the top left.

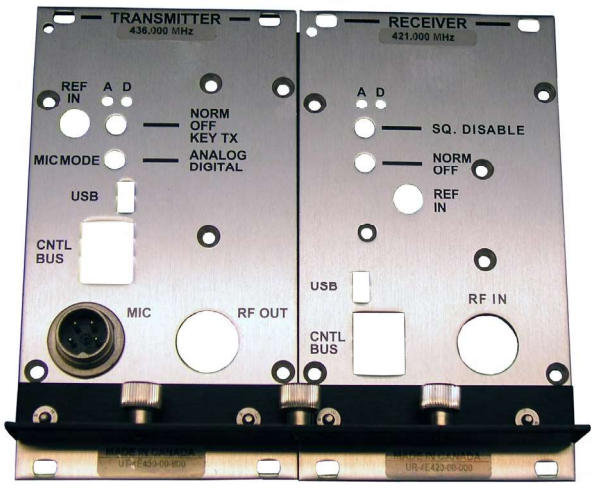


FIGURE 1

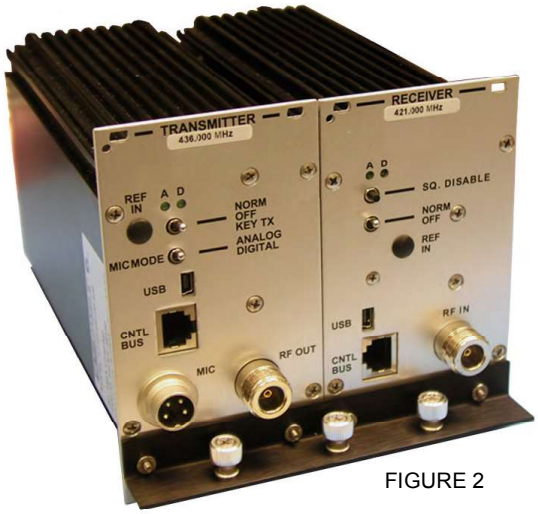


FIGURE 2

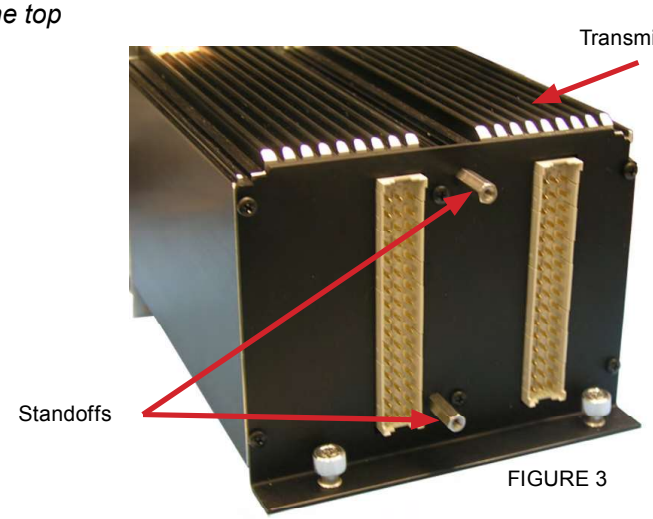


FIGURE 3

Printed Copy Not Controlled

8. Install the other six screws, using the M3 x 6 screws from the receiver and transmitter.

9. Add the tactical motherboard (see Figure 4) to the back of the receiver and transmitter assembly using the last two M3 x 6 screws for the modules (see Figure 5).

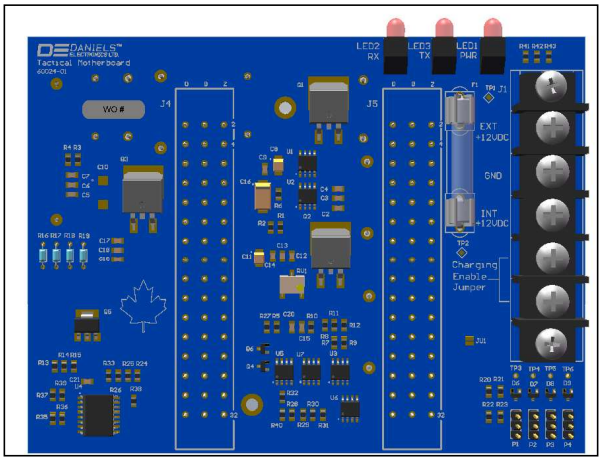


FIGURE 4

If the ET-5 is to be used with the 10.5 Ahr rechargeable battery,

10. Install the green jumper wire provided onto J1 Pins 4 and 5 (see Figure 6).

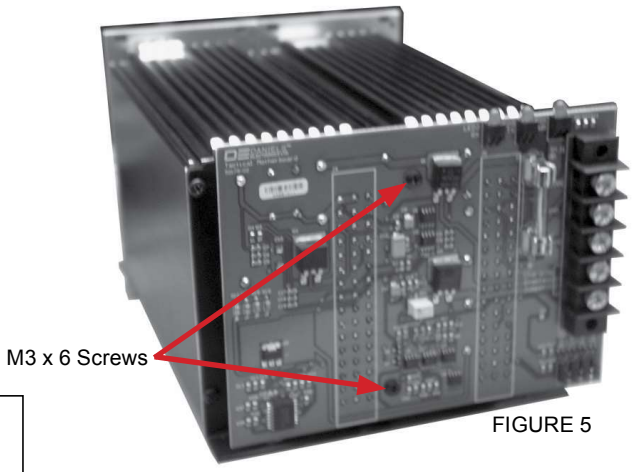


FIGURE 5

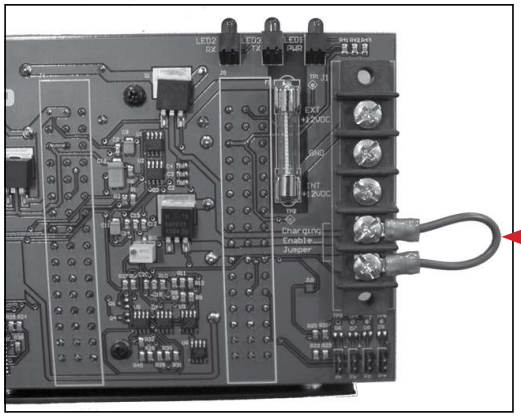


FIGURE 6

11. Connect 13.8 V to EXT +12 VDC input and GND.

12. Adjust RV1 until TP2 = 9.5 VDC.

Printed Copy Not Controlled

WIRING HARNESS ASSEMBLY

Using the wiring diagram (see Figure 7), assemble the wiring harness and connect to the tactical motherboard as shown (see Figure 8).


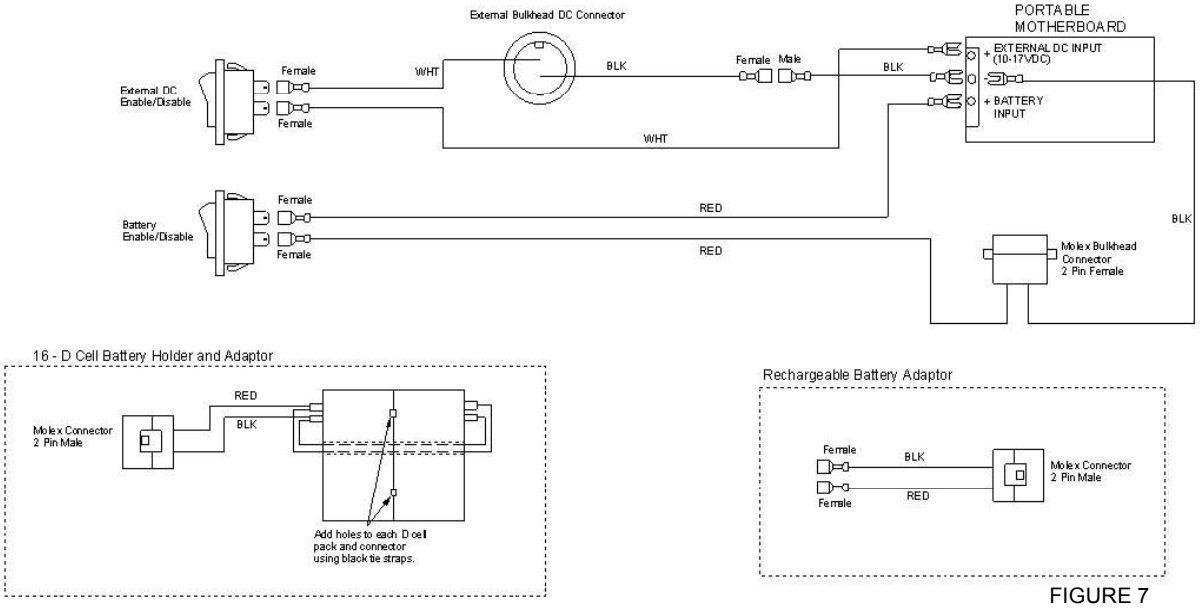


FIGURE 7

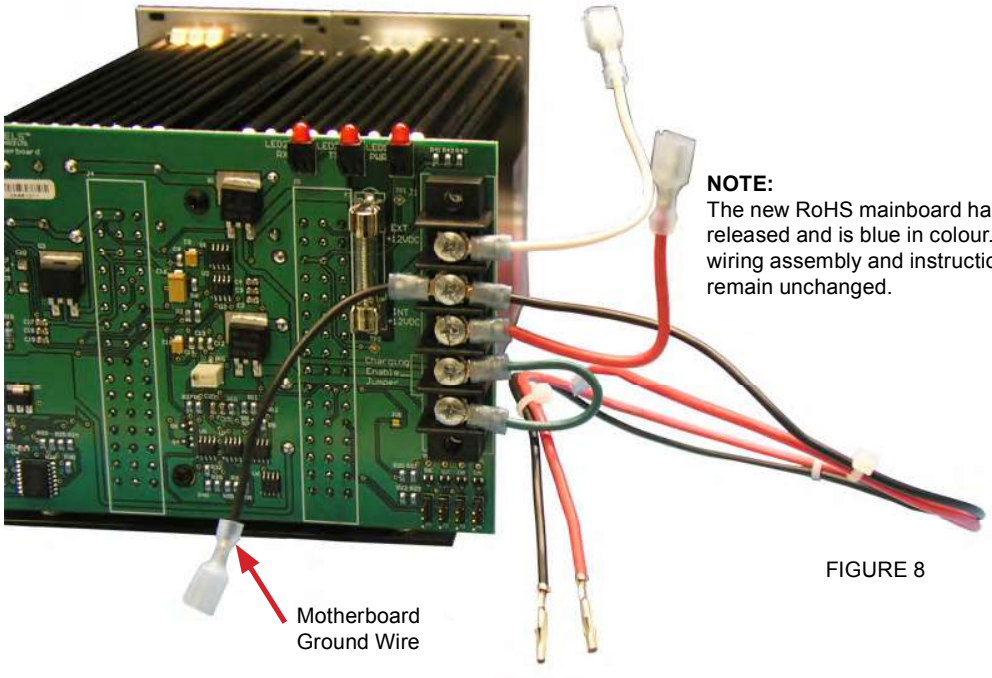

NOTE:
The new RoHS mainboard has been released and is blue in colour. The wiring assembly and instructions remain unchanged.

FIGURE 8

Printed Copy Not Controlled

FINAL ASSEMBLY

Sub-assembly Installation

1. Install the duplexer to the main portable case mounting bracket (see Figure 9).


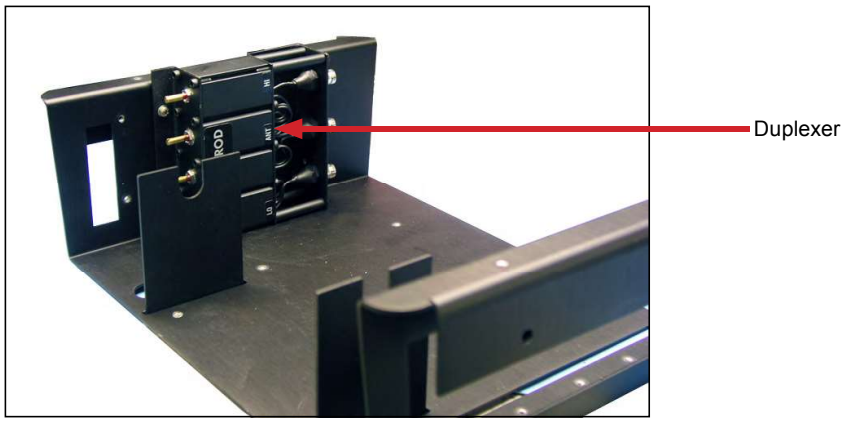


FIGURE 9

2. Install the receiver and transmitter assembly onto the main portable case mounting bracket.

3. Run the internal battery connector under the bracket through the two holes provided (see Figure 10).

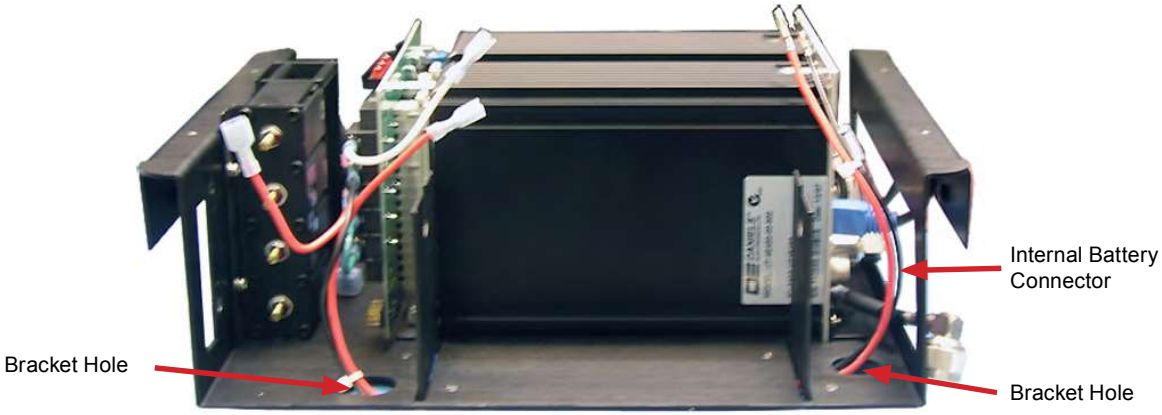

NOTE: The mainboard may be coloured either green or blue.

FIGURE 10

Printed Copy Not Controlled

4. Install the RJ45 cable to the front of the receiver and the transmitter (see Figure 11).

5. Install the RF connectors from the front of the receiver and transmitter to the duplexer.

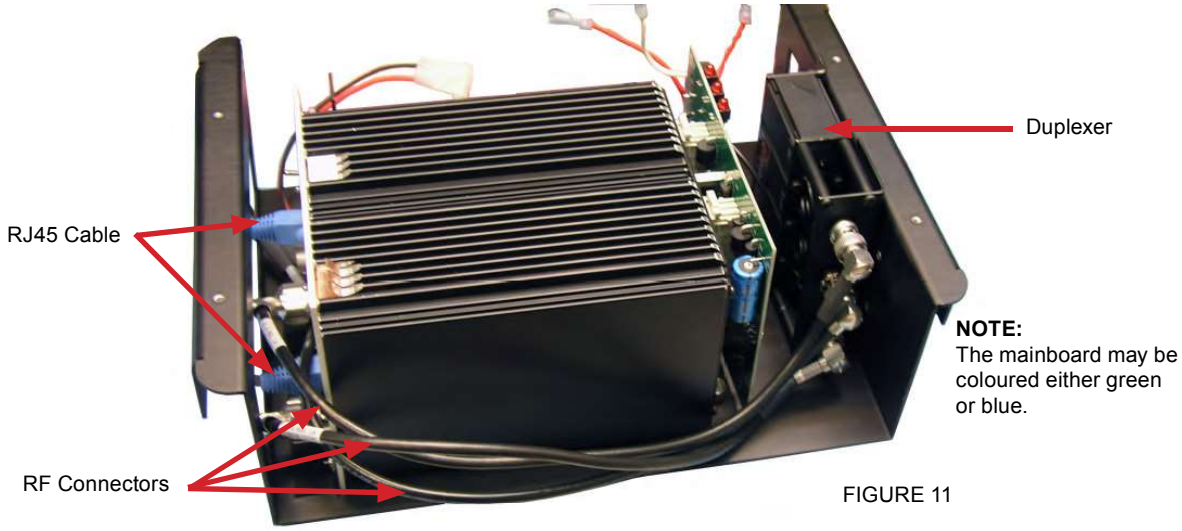


FIGURE 11

6. Place the entire assembly into the ET-5 case.

7. Secure the assembly using four M4 x 10 pan Phillips black screws.

8. Connect the RF connector to the case antenna bulkhead Type-N adapter (see Figure 12).

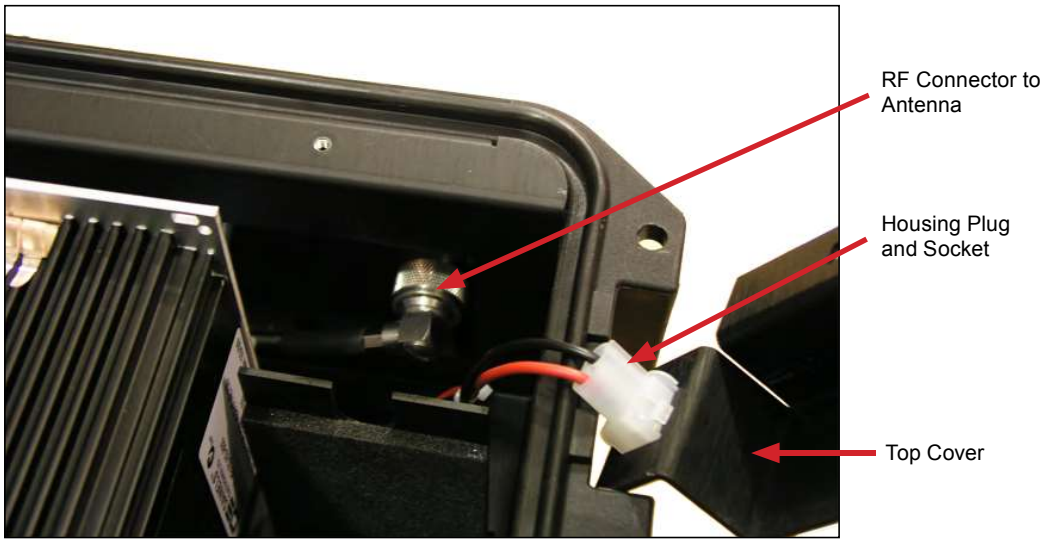


FIGURE 12

Printed Copy Not Controlled

9. Connect the ground wire from the DC connector to the ground wire on the motherboard (see Figure 8).

10. Connect the Molex housing plug to the housing socket on the top cover.

11. Connect the white wires to the external power switch and the red wires to the internal power switch (see Figure 13).

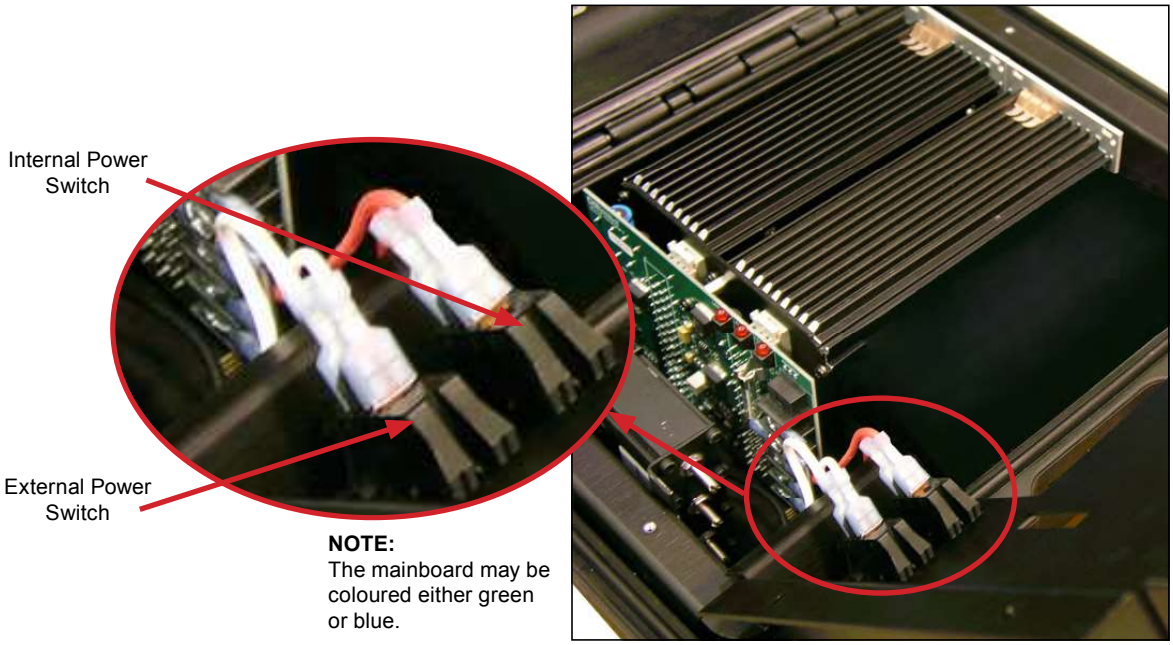


FIGURE 13

12. Connect the top cover to the main portable case mounting bracket using four M3x 8 black screws.


Serial Number Placement

1. Print out serial number labels.

2. Add the large main label to the inside of the case on the main bracket just in front of the duplexer.

Printed Copy Not Controlled

3. Add the two smaller serial number labels to the top cover: one on the back left, one on the back right (see Figure 14).

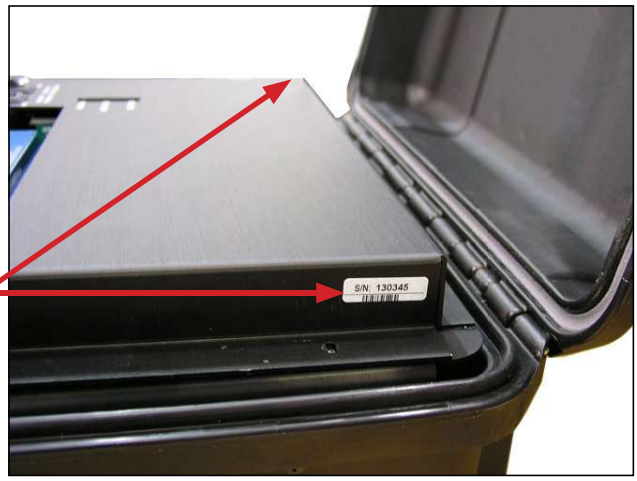

NOTE: Label displayed here is an example only.

FIGURE 14

D-Cell Battery Installation

1. Install the empty battery holder into the case (see Figure 15).

2. Connect the housing plug into the housing socket as shown.



FIGURE 15

Printed Copy Not Controlled

Rechargeable Battery Installation

1. Connect the battery cable adapter to the rechargeable battery – red wire to positive and black wire to negative (see Figure 16).

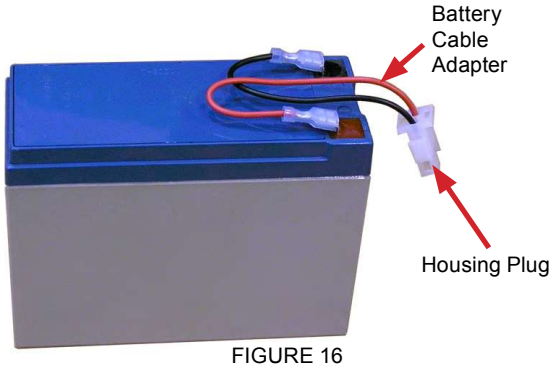


FIGURE 16

2. Place the foam battery wrap around the battery and slide the battery into the battery holder (see Figure 17 and Figure 18).

3. Plug the housing plug into the housing socket on the top cover.

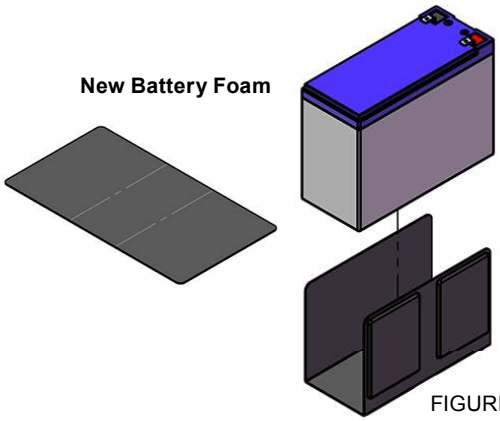


FIGURE 17

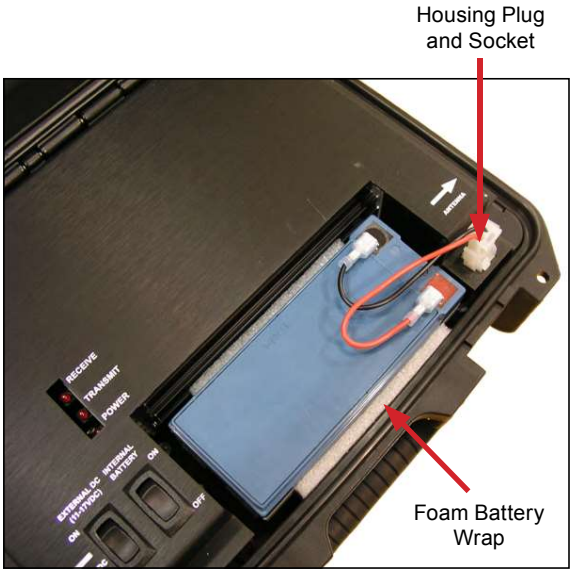


FIGURE 18

NOTE:
The foam to wrap around the battery now looks different, but installs the same.

4. Adhere the square foam piece onto the top of the rechargeable battery (see Figure 19).

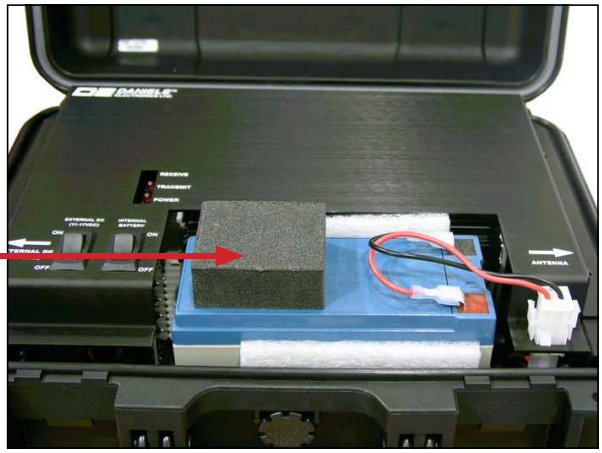


FIGURE 19

Printed Copy Not Controlled