
## **Panduan instl software robot**



- 1. klik lalu tekan enter pada file Rus-setup atau double klik pada file
- 2. Jika muncul windows proteted your PC sperti dibwah




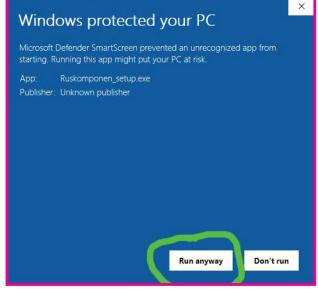

a. tekan More info

b. tekan Run anyway

3. jika tidak muncul tekan next

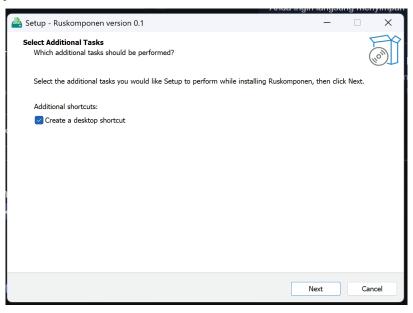

## 4. Tekan Install

