

CUT • MARK • STACK

One outdoor toilet, drawn from the parametric model. Every dimension on these sheets is measured off that model.

PROJECT	DASS
ISSUE	2026-07-30
UNITS	MILLIMETRES
KERF	2 PER CUT
SHEETS	A-000 TO A-500

MATERIAL SCHEDULE

ITEM	SECTION	STOCK LENGTH	QUANTITY
Frame timber	45 × 45	4 200	8
Råspont cladding	120 × 23	4 500	12
Metal roof sheet	1 050 × 1 085	—	1
Coded pieces cut from this stock			87
Total offcut after every kerf			9 705.1

CAUTION • VERIFY THE STOCK FIRST

Make sure that your stock matches the material schedule. These sheets are exact only for these three stock sizes. One kerf is reserved for every piece released.

METHOD

This set gives every cut, every code, and every assembly step. The sheets run in the order of the work.

01 • CUT FACE

Plane and square the stock first. Work from one verified factory end. Every unmarked cut is square.

02 • CODE FACE

Write the code on the kept face after each cut. Do not mark a tongue or a weather face.

03 • STACK

Move each marked piece to its lettered stack. Do not sort the pieces by length.

GENERAL ARRANGEMENT

The renders and the model show the same geometry as the cut lists.
Use the model to see how the door and the roof clear the shell.



Standing in the clearing with the door and roof open.

STRUCTURAL TIMBER

The stock bars form one continuous batch sequence. A batch that reaches the end of a stock length continues on the next length.

Cut every piece at one stop setting before you change the stop.





BATCH ORDER • A-200

PASS	STOP	SAW SETUP	MARK THESE PIECES
1	1 315.1	41.2° mitre, both ends; cuts parallel	2 x BWD1 DBD1
2	1 202.2	34.9° mitre, both ends; cuts parallel	2 x LSD1 RSD1
3	1 150	90° square	4 x LSV1 LSV2 RSV1 RSV2
4	1 050	90° square	2 x DBV1 DBV2
5	990	90° square	2 x RBH1 RBH2
6	900	90° square	6 x BWH1 BWH2 DBH1 DBH2 FBH1 RBC1
7	854	90° square	4 x FBB1 SBH1 SBH2 SBH3
8	812.7	90° square	2 x RBS1 RBS2
9	725	90° square	4 x LSH1 LSH2 RSH1 RSH2
10	657	90° square	2 x FBS1 FBS2
11	387	90° square	2 x SBS1 SBS2

BRACE RULE


LSD1 and RSD1 are cut at 34.9° at both ends. BWD1 and DBD1 are cut at 41.2° at both ends.

These are long-point lengths. Keep each pair of end cuts parallel. Turn the workpiece, not the saw setting, to make the parallelogram.

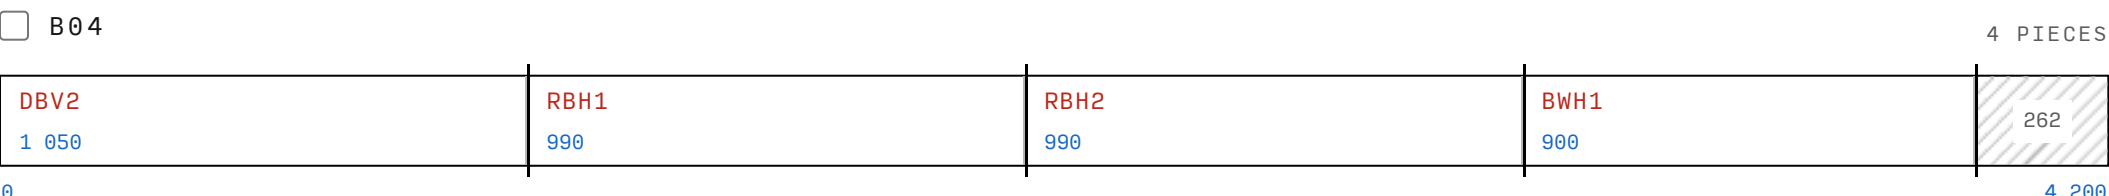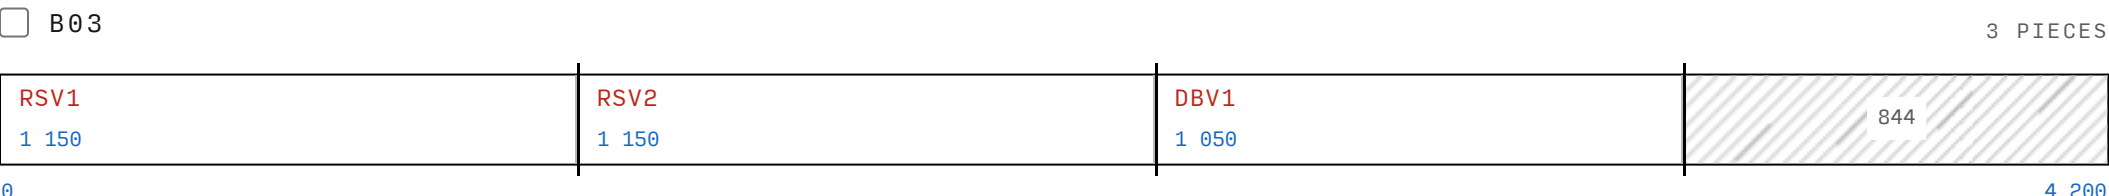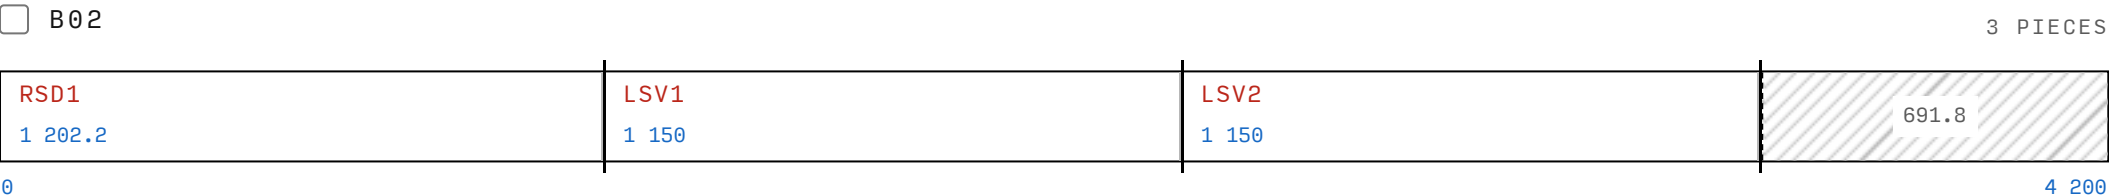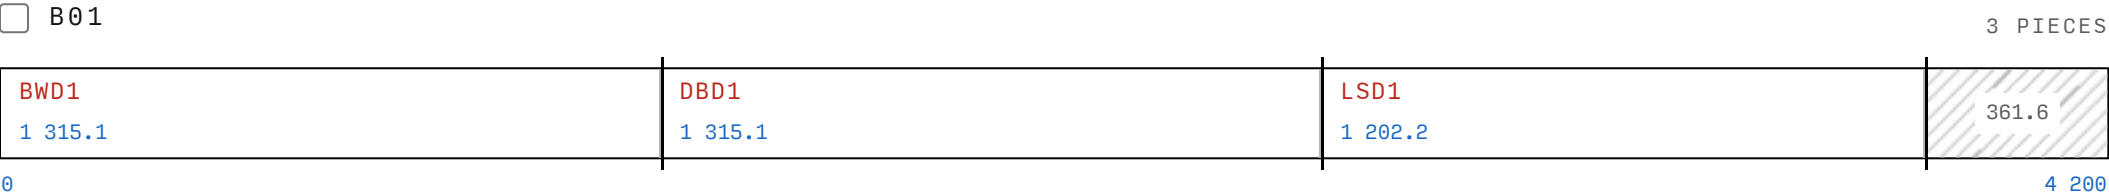


☐ B05

4 PIECES

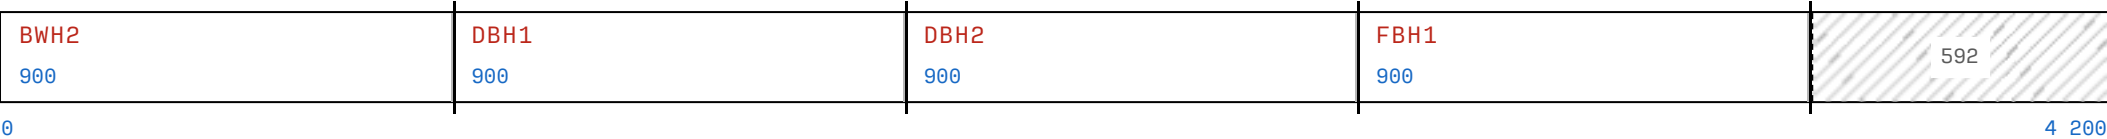


☐ B06

4 PIECES

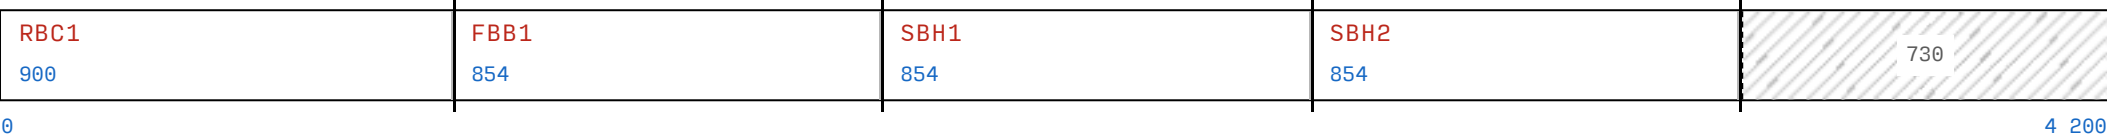


☐ B07

5 PIECES

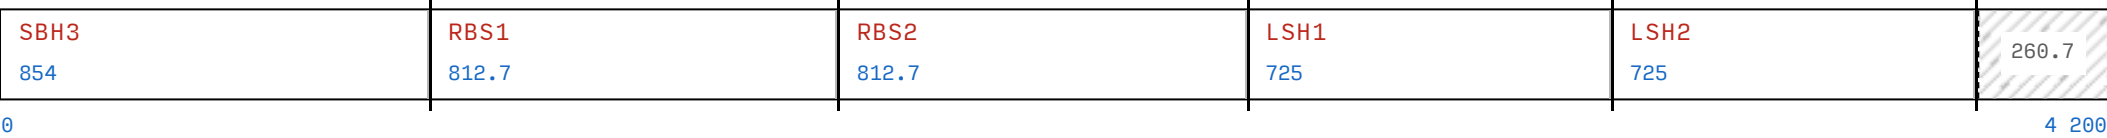

☐ B08

6 PIECES

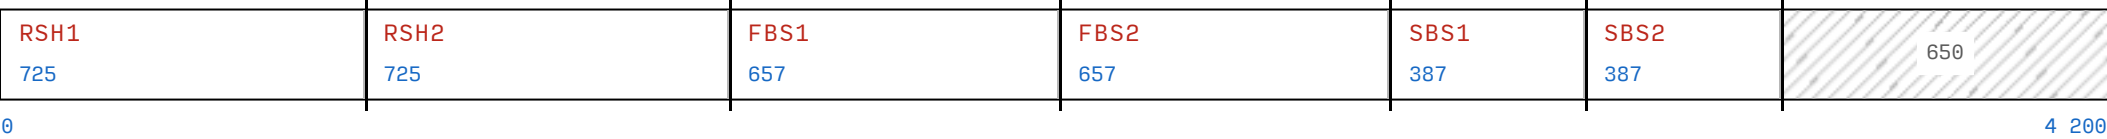


RÅSPONT

The first 8 stock lengths release all twenty-three 1 175 blanks.
Fourteen side boards come first, then nine door boards, at one stop
setting.

OPERATION A • RELEASE EVERY 1 175 BLANK

STOCK	CODES, CUT IN THIS ORDER	AVAILABLE AFTER THE BATCH
P01	LSC1 LSC2 LSC3	969 • keep for 397
P02	LSC4 LSC5 LSC6	969 • keep for 397
P03	LSC7 RSC1 RSC2	969 • keep for 397
P04	RSC3 RSC4 RSC5	969 • terminal offcut
P05	RSC6 RSC7 DCB1	969 • terminal offcut
P06	DCB2 DCB3 DCB4	969 • terminal offcut
P07	DCB5 DCB6 DCB7	969 • terminal offcut
P08	DCB8 DCB9	2 146 • keep for 1 050


1. Set the stop once. Cut all twenty-three blanks from P01 onward.
Mark each code immediately. When a stock length ends, continue at the same setting on the next one.
2. Label the P01 to P03 remainders. Keep them for the final 397 pass.
3. Join LSC1 to LSC7 and RSC1 to RSC7 as two separate fields. Keep the terminal trim for the gang cut.
4. Mark 1 175 at the front edge and 1 075 at 770 from the front.
Extend that line across the trim, then make each gang cut.
5. Rip 10 from the terminal rear edge of LSC7 and RSC7. Then cut the 45 x 45 notch at the bottom front of each field.

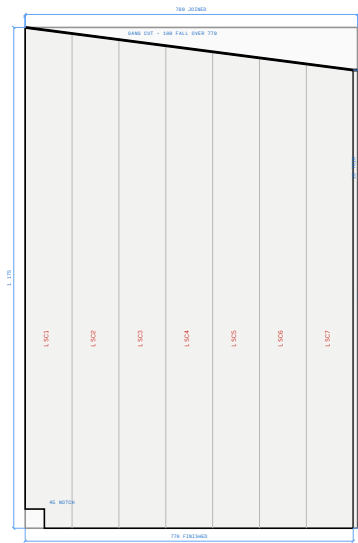

LEFT SIDE FIELD

A-301 • BENCH LAYOUT

7 boards from 1 175 blanks • gang-cut to the roof pitch
after joining

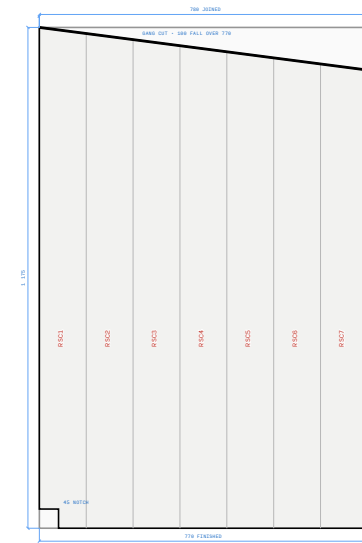

RIGHT SIDE FIELD

A-302 • BENCH LAYOUT

7 boards from 1 175 blanks • gang-cut to the roof pitch
after joining

CAUTION • DO NOT PRE-CUT THE ROOF RELIEFS

Build the roof unit first. Dry-fit its hinge, clamp the roof closed, and scribe both side fields. Then cut to the scribe.

The model carries these reliefs at nominal size. A pre-cut relief will not match the hinge that you install.

Operation B • change the stop only once per row. Cut every piece in that row, then move to the next stop. The final 397 row uses the labeled P01 / P02 / P03 remainders.

BATCH ORDER • A-300 OPERATION B

PASS STOP SAW SETUP MARK THESE PIECES

1 1 050 90° square 8 × BWC1 BWC2 BWC3 BWC4 BWC5 BWC6 BWC7 BWC8

PASS	STOP	SAW SETUP	MARK THESE PIECES
2	747	90° square	8 × FCB1 FCB2 FCB3 FCB4 FCB5 FCB6 FCB7 FCB8
3	500	90° square	8 × STB1 STB2 STB3 STB4 STB5 STB6 STB7 STB8
4	397	90° square	8 × SFB1 SFB2 SFB3 SFB4 SFB5 SFB6 SFB7 SFB8

☐ P01

5 PIECES

LSC1	LSC2	LSC3	SFB1	SFB2	171
1 175	1 175	1 175	397	397	

04 500

☐ P02

5 PIECES

LSC4	LSC5	LSC6	SFB3	SFB4	171
1 175	1 175	1 175	397	397	

04 500

☐ P03

5 PIECES

LSC7	RSC1	RSC2	SFB5	SFB6	171
1 175	1 175	1 175	397	397	






04 500

☐ P04

3 PIECES

RSC3	RSC4	RSC5	969
1 175	1 175	1 175	

04 500

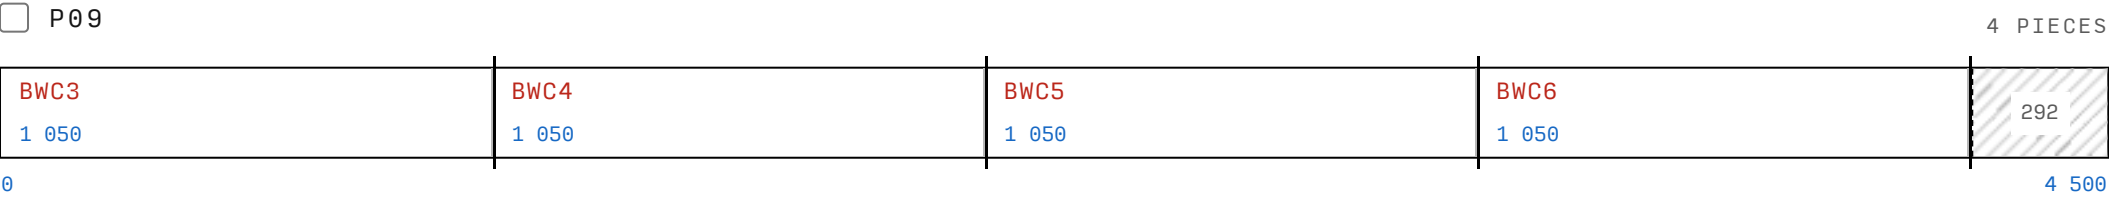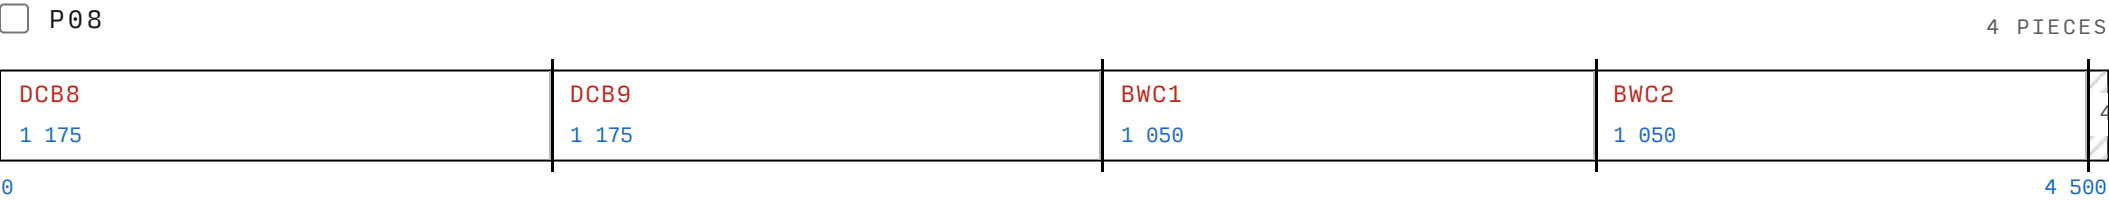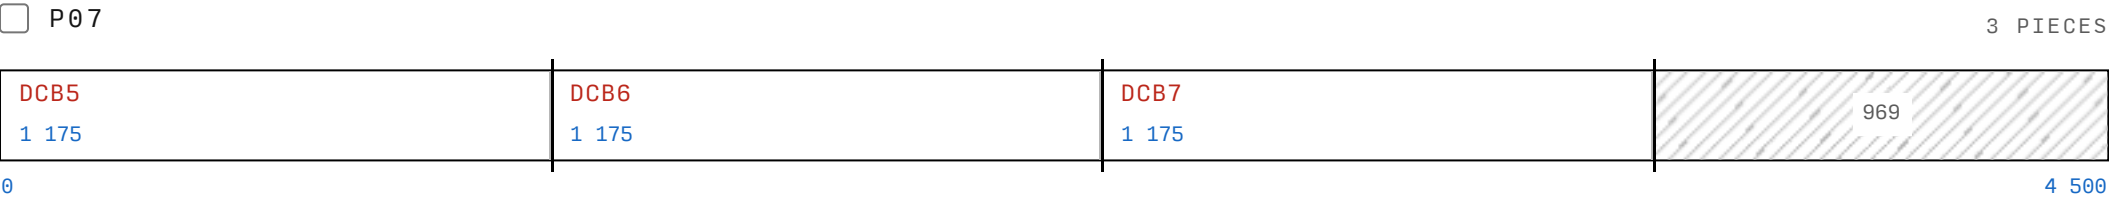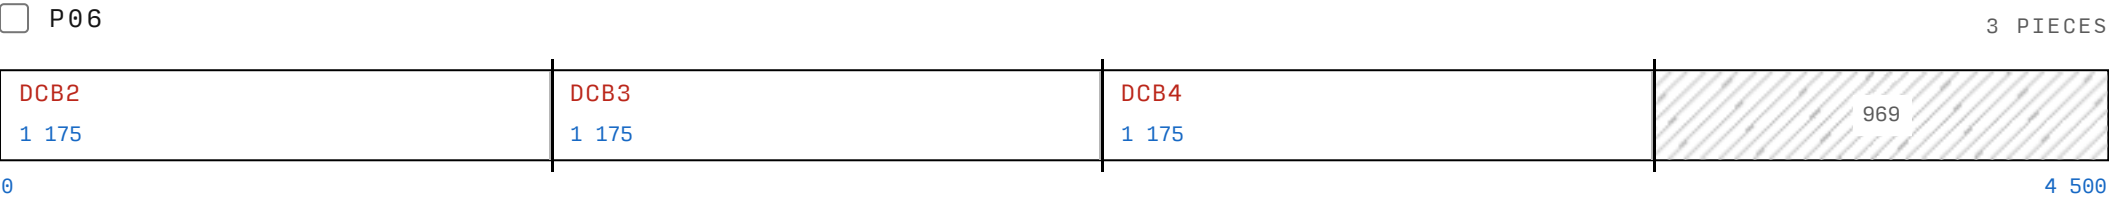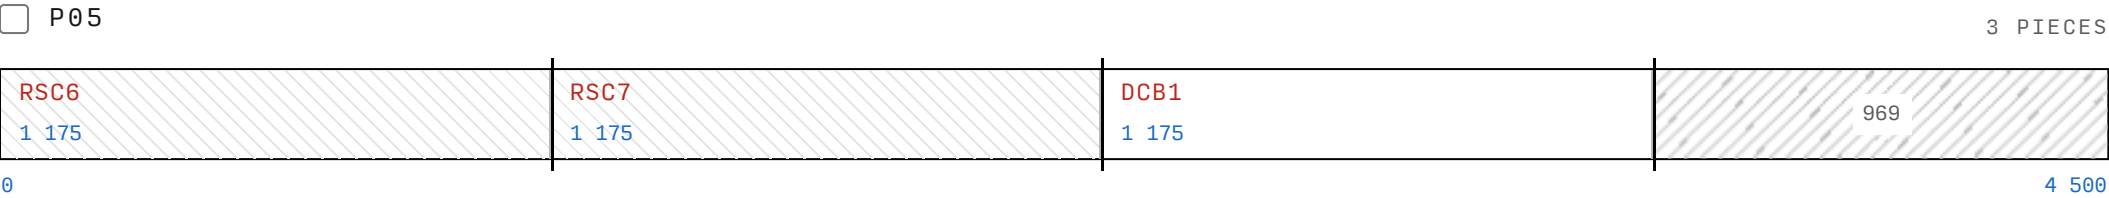

☐ P10

5 PIECES

BWC7 1 050	BWC8 1 050	FCB1 747	FCB2 747	FCB3 747	149
0					4 500

☐ P11

6 PIECES


FCB4 747	FCB5 747	FCB6 747	FCB7 747	FCB8 747	STB1 500	253
0					4 500	

☐ P12

9 PIECES

STB2 500	STB3 500	STB4 500	STB5 500	STB6 500	STB7 500	STB8 500	SFB7 397	SFB8 397	188
0									4 500


Lay the boards of each field in code order. Join them to the joined width. Then take the trim off the terminal edge only. Do not trim both edges. The two tapered gang strips remove a further 700 of board material.

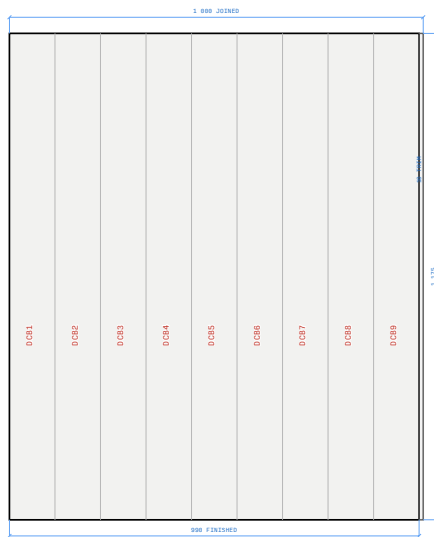

DOOR FIELD

A-303 • BENCH LAYOUT


9 boards from 1 175 blanks • fixed to the inside face of the door frame

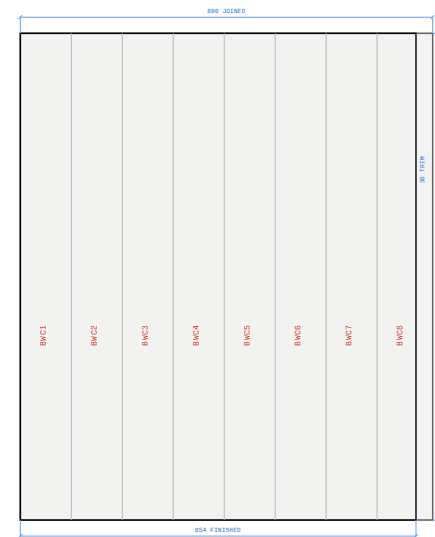

BACK WALL FIELD

A-304 • BENCH LAYOUT


8 boards from 1 050 blanks • centred between the rear posts

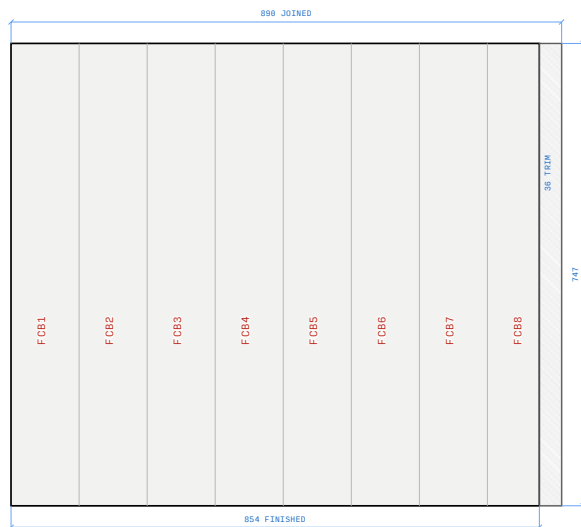

FLOOR DECK

A-305 • BENCH LAYOUT


8 boards from 747 blanks • lands on three bearers and the front rail

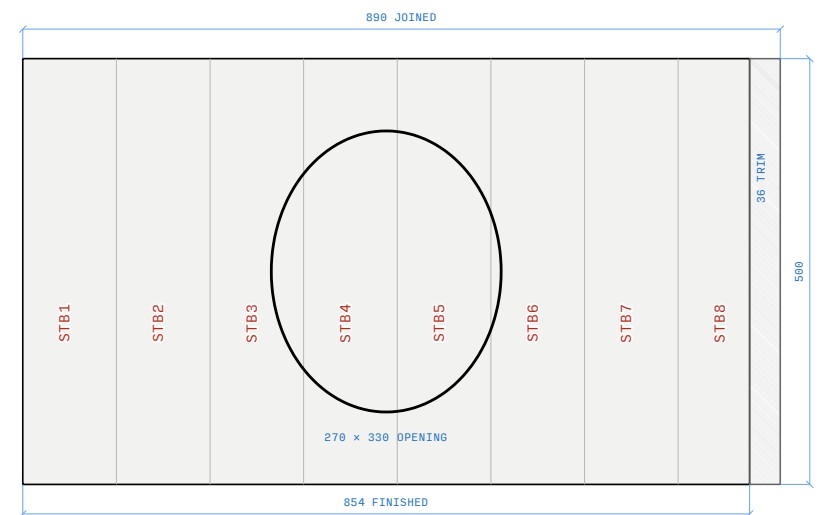

SEAT TOP

A-306 • BENCH LAYOUT

8 boards from 500 blanks • oval opening cut after joining

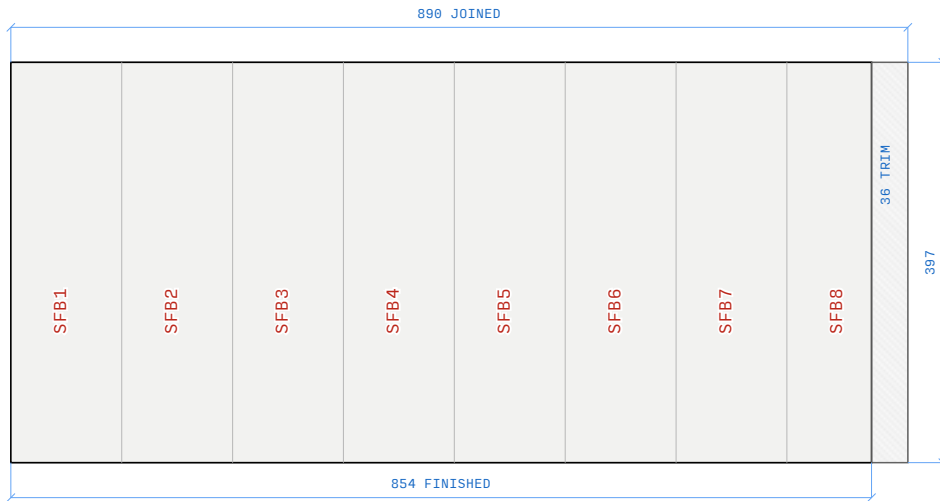

SEAT FRONT FIELD


A-307 • BENCH LAYOUT

8 boards from 397 blanks • closes the seat box down to the floor

UNIT DRAWINGS

Each drawing is an orthographic projection off the model. Solid members are the frame. Tinted fields are joined cladding. Hatching is material that the section plane cuts.

solid = frame • tinted = cladding field • diagonals are the braces cut through

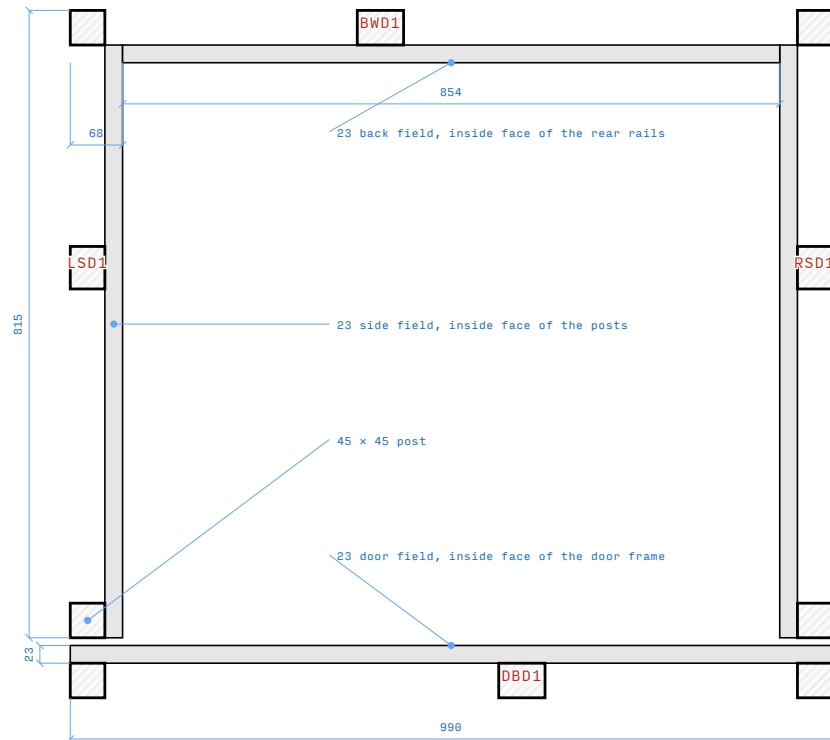


FRAME AND CLADDING REGISTRATION

A-400 • PLAN SECTION AT 520

measured off the model, above the ground

Stack A ROOF UNIT

Build flat; fit the moving hinge leaf and sheet on the bench.

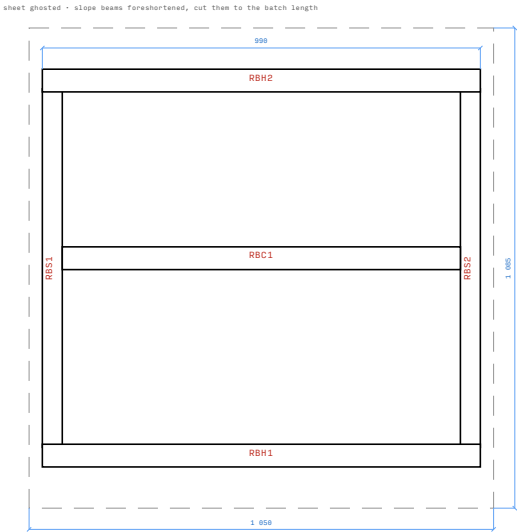

ROOF UNIT

A-401 • PLAN


front edge at the bottom • built flat, then hung

RBC1 RBH1 RBH2 RBS1 RBS2

☐ STACK COMPLETE

Stack B DOOR UNIT

Build, clad, trim, brace, and hang as one unit.

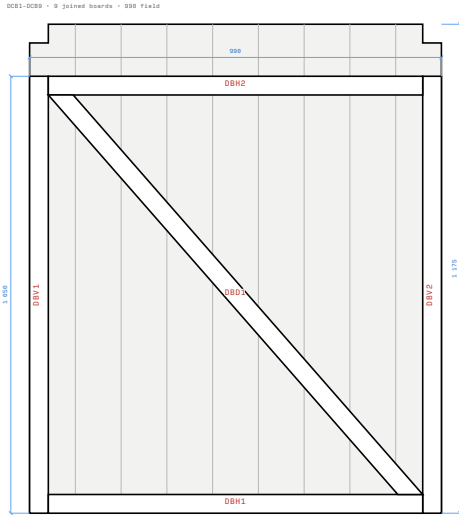

DOOR UNIT

A-402 • FRONT ELEVATION


seen from outside the door • field fixed behind the frame

DBD1 DBH1 DBH2 DBV1 DBV2 DCB1 DCB2 DCB3 DCB4 DCB5 DCB6 DCB7 DCB8
DCB9

☐ STACK COMPLETE

Stack C LEFT SIDE

Build as a complete braced and clad wall unit.

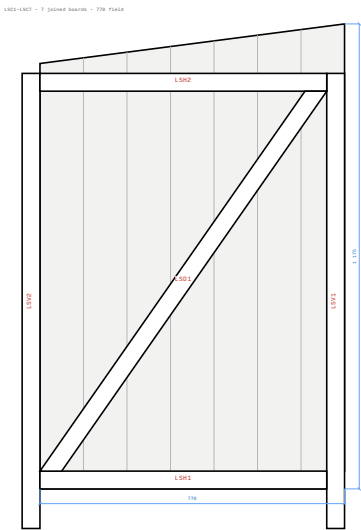

LEFT SIDE UNIT

A-403 • LEFT ELEVATION


front edge to the right • roof reliefs scribed at dry fit

LSC1 LSC2 LSC3 LSC4 LSC5 LSC6 LSC7 LSD1 LSH1 LSH2 LSV1 LSV2

☐ STACK COMPLETE

Stack D RIGHT SIDE

Mirror the left unit; keep front/back marks visible.

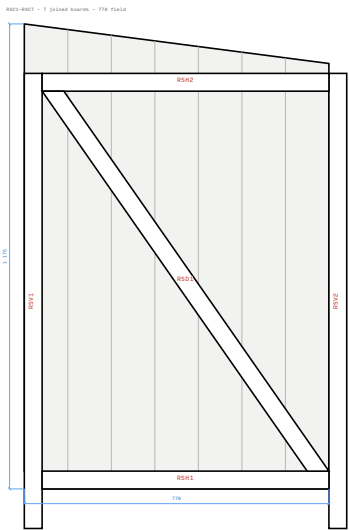

RIGHT SIDE UNIT

A-404 • RIGHT ELEVATION


front edge to the left • roof reliefs scribed at dry fit

RSC1 RSC2 RSC3 RSC4 RSC5 RSC6 RSC7 RSD1 RSH1 RSH2 RSV1 RSV2

☐ STACK COMPLETE

Stack E BACK UNIT

Build flat, then fit between the two side units.

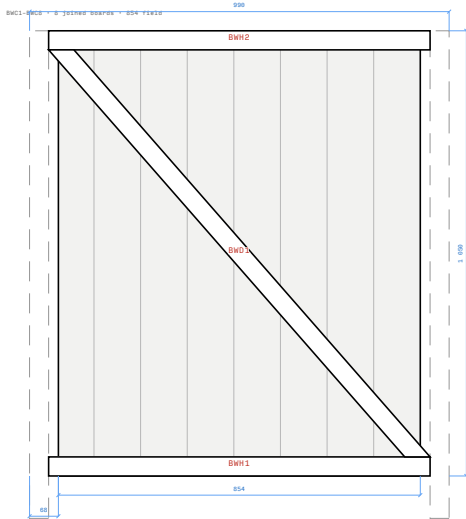

BACK UNIT

A-405 • REAR ELEVATION


seen from outside the back wall • posts belong to the side units

BWC1 BWC2 BWC3 BWC4 BWC5 BWC6 BWC7 BWC8 BWD1 BWH1 BWH2

☐ STACK COMPLETE

Stack F FLOOR DECK

Prebuild three-sided; fasten its front edge after shell squaring.

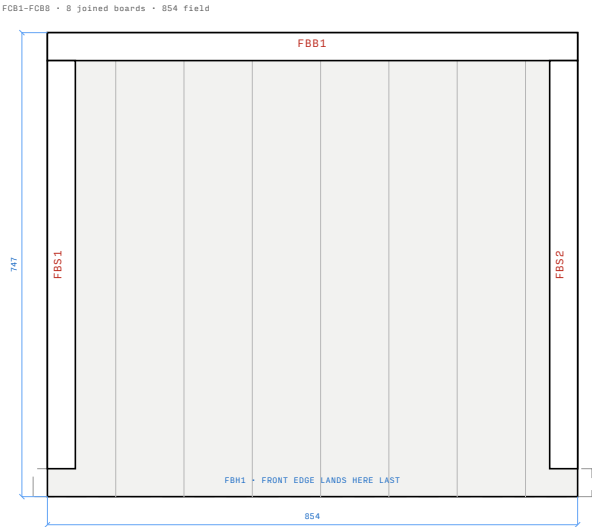

FLOOR DECK

A-406 • PLAN


front edge at the bottom • fasten the front edge after squaring

FBB1 FBS1 FBS2 FCB1 FCB2 FCB3 FCB4 FCB5 FCB6 FCB7 FCB8

☐ STACK COMPLETE

Stack G SHELL JOINT

Install the front opening rail while joining the wall units.

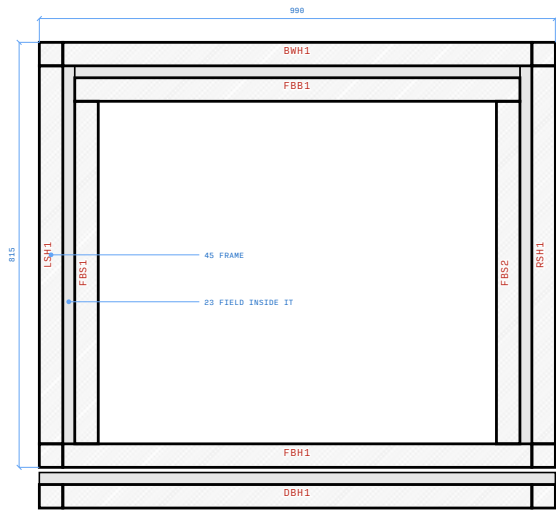

SHELL JOINT

A-407 • PLAN SECTION AT 122.5
every landing shown, measured off the ground


FBH1

☐ STACK COMPLETE

Stack H SEAT BOX

Install only after the shell and floor are fixed.

STB1-STB8 • joined, then the opening is cut

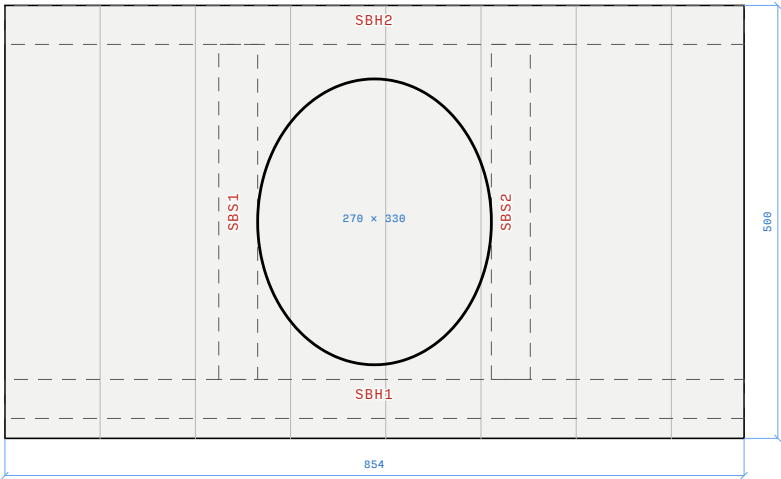

SEAT BOX

A-408 • PLAN
front edge at the bottom • rails and bearers shown under the top

SBH1 SBH2 SBH3 SBS1 SBS2 SFB1 SFB2 SFB3 SFB4 SFB5 SFB6 SFB7 SFB8
STB1 STB2 STB3 STB4 STB5 STB6 STB7 STB8

☐ STACK COMPLETE

ASSEMBLY

The roof, the door, the two sides, the back, and most of the floor are bench-built units. The seat box waits until the shell and the floor are fixed.

01 ROOF UNIT • STACK A

Lay RBH1 and RBH2 around RBS1 and RBS2. Center RBC1. Match the diagonals, then fix.

Center the metal sheet with 30 at each side and 93.1 at the front and the rear. Fit the moving hinge leaf. Keep the fixed leaf for the shell.

02 DOOR UNIT • STACK B

Build the door frame with full-height DBV stiles and DBH rails between them. Fit DBD1. Then fix DCB1 to DCB9 on the inside face.

Trim the field to drawing A-303, match both diagonals, and fit the two moving hinge leaves.

03 SIDE UNITS • STACKS C AND D

Build each side flat with its two posts, two rails, and diagonal. Fit the gang-cut field to drawing A-403. Keep the front and rear marks visible.

04

BACK UNIT • STACK E

Build BWH1 and BWH2 with BWD1 as one flat unit. Join BWC1 to BWC8, trim the field, and center it between the rails.

05

FLOOR DECK • STACK F

Join FCB1 to FCB8 and trim the deck. Fix it to FBS1, FBS2, and FBB1 as a three-sided deck. Leave the front edge free.

06

STAND AND SQUARE THE SHELL • STACK G

Brace the left and right units upright to drawing A-407. Install the back unit between them. Then install FBH1 across the front at the 100 leg datum.

Match the shell diagonals before you fix anything.

07

FLOOR, ROOF, AND DOOR

Lower the floor deck into the shell. Fasten its front edge to FBH1.

Fit the fixed roof hinge leaf and hang the roof. Close the roof and scribe the two side reliefs. Then hang the door with a 10 hinge gap.

Install SBH3 and the SFB1 to SFB8 front field. Then install SBH1 and SBH2. Place SBS1 and SBS2 under the sides of the opening.

Make sure that the opening clears both bearers and both rails. Then fit the joined STB1 to STB8 top.

FINAL HOLD POINTS

- ☐ The shell diagonals match before the cladding is locked
- ☐ The floor bears on FBH1, FBB1, FBS1, and FBS2
- ☐ The closed roof clears both scribed side reliefs
- ☐ The door holds its 10 hinge stand-off through the swing
- ☐ The seat opening clears SBS1, SBS2, and both upper rails
- ☐ Every fresh råspont cut and opening is sealed