


WORKING DRAWING

CAN AI BUILD A TOILET YET?

Outdoor toilet drawn from a parametric model using claude and codex.

PROJECT	DASS
ISSUE	2026-07-30
ARCHITECT	@HANNES.SODERQUIST
CODE	@FEELEPXYZ
SOURCE	🔗 GITHUB
UNITS	MILLIMETRES
KERF	2.8 PER CUT
SHEETS	A-200 TO A-400

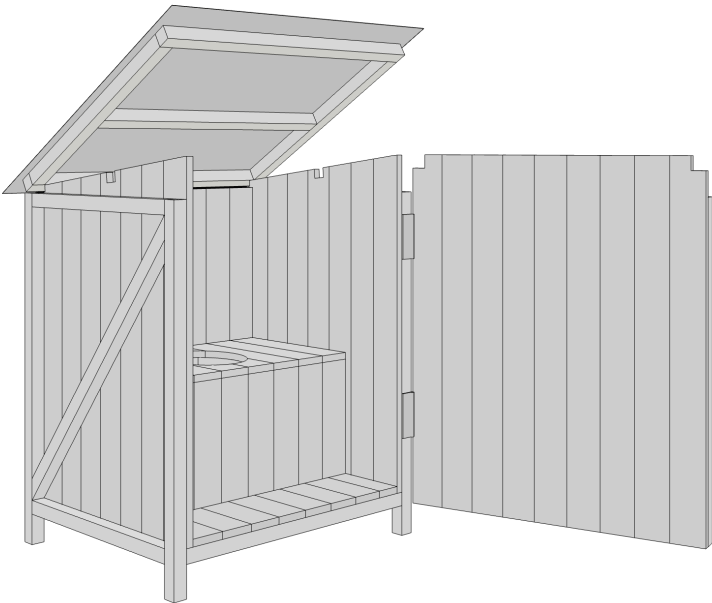

The finished building.

STRUCTURAL TIMBER

Material: Frame timber, 45 × 45 × 4 200 mm. Quantity: 8 lengths.

CAUTION • VERIFY THE STOCK FIRST

Make sure that your stock matches the material. These sheets are exact only for this material size. One 2.8 mm kerf is used for every piece.

Cut every piece at one stop setting before you change the stop. A batch that reaches the end of a stock length continues on the next length.

WORKSHOP PREPARATION • CLEAN STOCK ENDS

Before cutting the beams, run every beam in a serial pass and shave a little from one end. Mark the new clean datum, then start the batches below. This is workshop preparation, not a factory process; keep the modeled piece lengths and check the stock before you begin.

BATCH ORDER • A-200



PASS	STOP	SAW SETUP	MARK THESE PIECES
1	1 315.9	41.2° mitre, both ends; cuts parallel	2 × BWD1 DBD1
2	1 203	34.9° mitre, both ends; cuts parallel	2 × LSD1 RSD1
3	1 150	90° square	4 × LSV1 LSV2 RSV1 RSV2
4	1 050	90° square	2 × DBV1 DBV2






PASS	STOP	SAW SETUP	MARK THESE PIECES
5	990	90° square	2 x RBH1 RBH2
6	900	90° square	6 x BWH1 BWH2 DBH1 DBH2 FBH1 RBC1
7	854	90° square	4 x FBB1 SBH1 SBH2 SBH3
8	812.7	90° square	2 x RBS1 RBS2
9	725	90° square	4 x LSH1 LSH2 RSH1 RSH2
10	657	90° square	2 x FBS1 FBS2
11	387	90° square	2 x SBS1 SBS2

BRACE RULE

LSD1 and RSD1 are cut at 34.9° at both ends. BWD1 and DBD1 are cut at 41.2° at both ends.


These are long-point lengths. Keep each pair of end cuts parallel. Turn the workpiece, not the saw setting, to make the parallelogram.

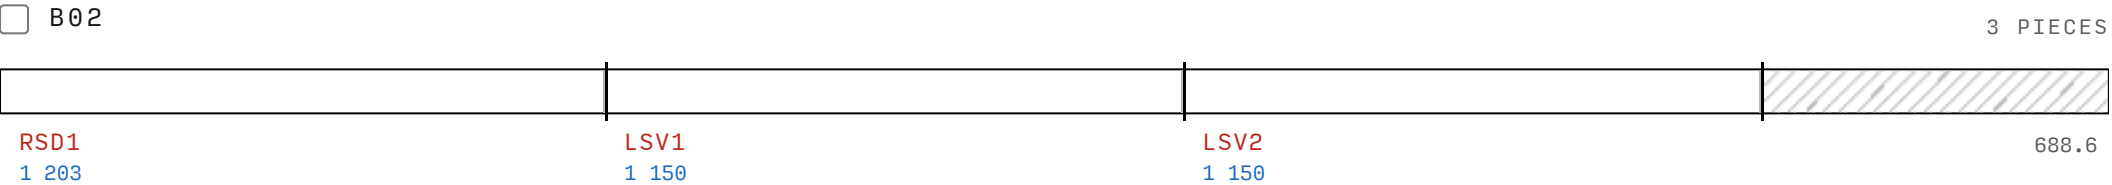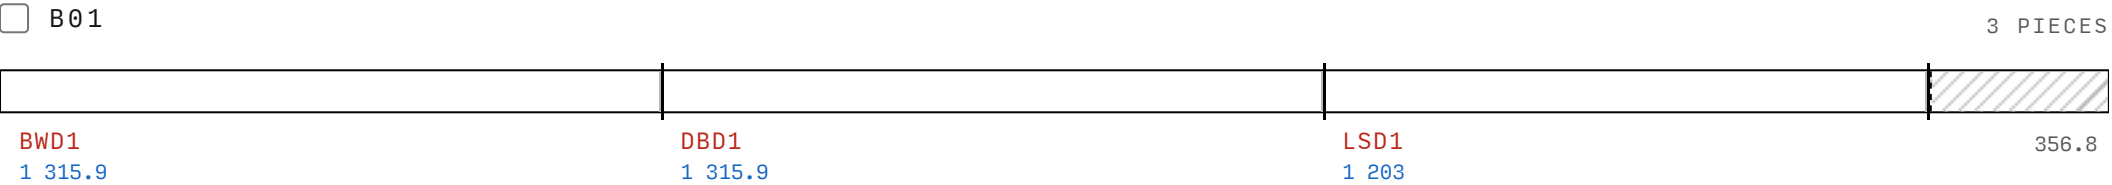

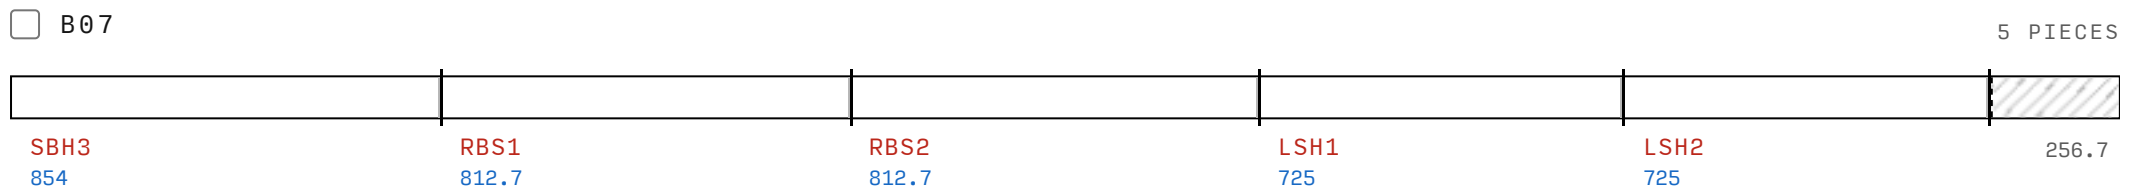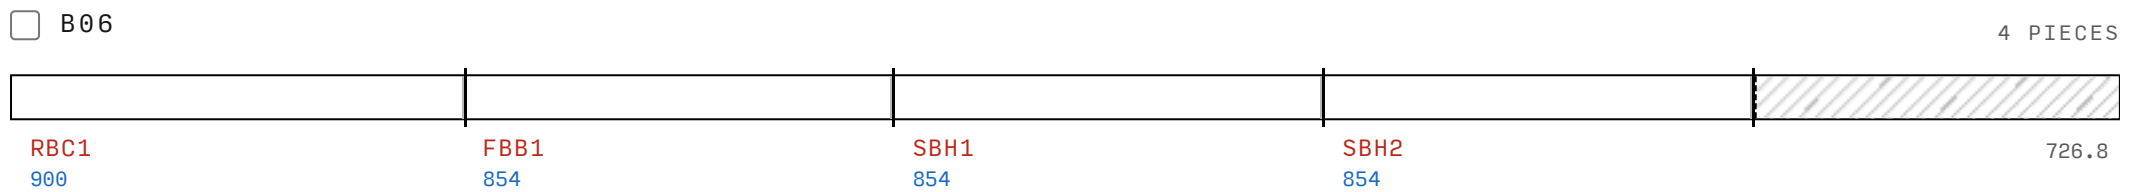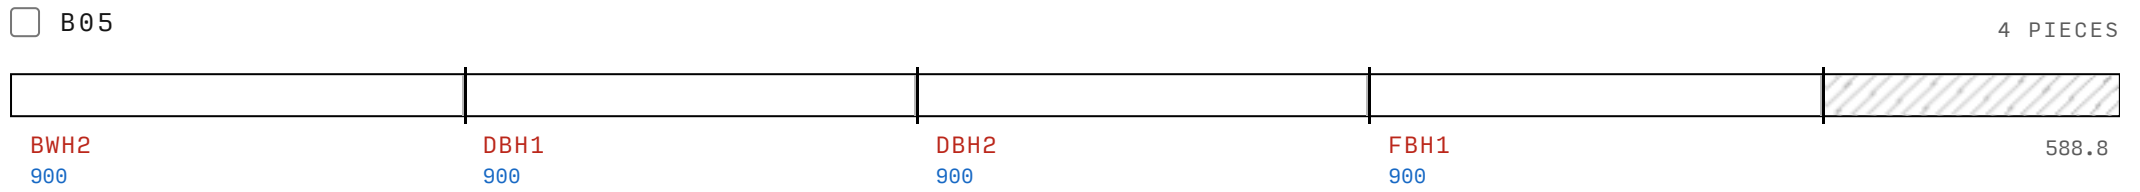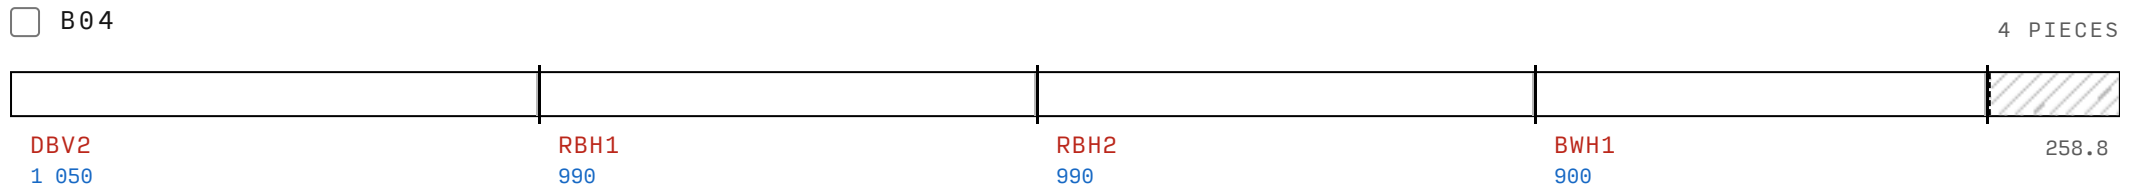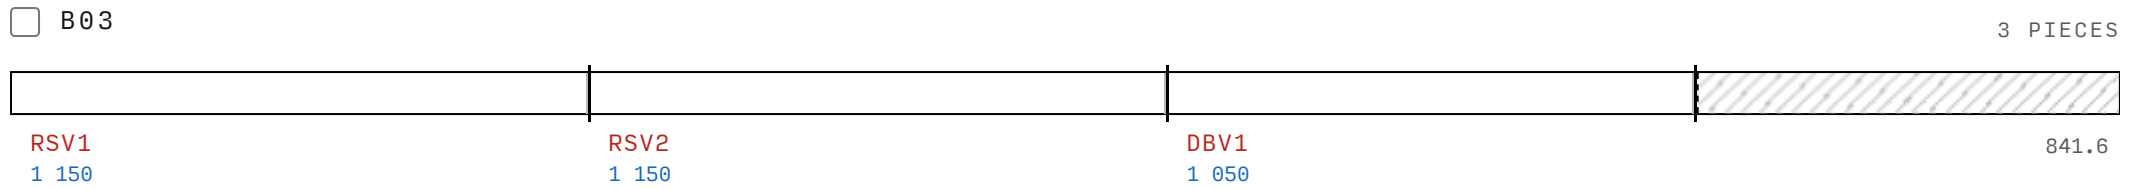

☐ B08

6 PIECES

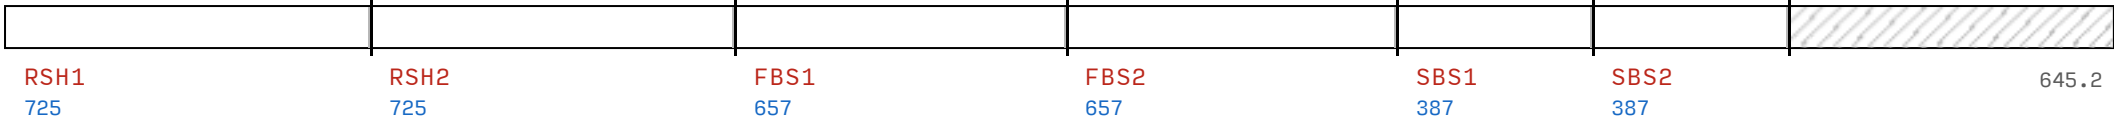

RÅSPONT

Material: Råspont, 120 × 23 × 4 500 mm. Quantity: 12 lengths.

CAUTION • VERIFY THE STOCK FIRST

Make sure that your stock matches the material. These sheets are exact only for this material size. One 2.8 mm kerf is used for every piece.

The first 8 stock lengths release all twenty-three 1 175 blanks. Fourteen side boards come first, then nine door boards, at one stop setting.

WORKSHOP PREPARATION • CLEAN STOCK ENDS

Before cutting the cladding planks, run every plank in a serial pass and shave a little from one end to make a clean workshop datum. Mark that end, then cut the modeled blanks below. This end clean-up is separate from the on-frame cladding trim.

OPERATION A • RELEASE EVERY 1 175 BLANK

STOCK	CODES, CUT IN THIS ORDER			AVAILABLE AFTER THE BATCH
P01	LSC1	LSC2	LSC3	966.6 • keep for 397
P02	LSC4	LSC5	LSC6	966.6 • keep for 397
P03	LSC7	RSC1	RSC2	966.6 • keep for 397
P04	RSC3	RSC4	RSC5	966.6 • terminal offcut
P05	RSC6	RSC7	DCB1	966.6 • terminal offcut
P06	DCB2	DCB3	DCB4	966.6 • terminal offcut
P07	DCB5	DCB6	DCB7	966.6 • terminal offcut
P08	DCB8	DCB9		2 144.4 • keep for 1 050



1. Set the stop once. Cut all twenty-three blanks from P01 onward.
Mark each code immediately. When a stock length ends, continue at the same setting on the next one.
2. Label the P01 to P03 remainders. Keep them for the final 397 pass.
3. Move every marked blank to its unit stack. Do not join or trim loose cladding.





OPERATION B • CUT THE REMAINING PIECES





Change the stop only once per row. Cut every piece in that row, then move to the next stop. The final 397 row uses the labeled P01 / P02 / P03 remainders.

BATCH ORDER • A-300 OPERATION B

PASS	STOP	SAW SETUP	MARK THESE PIECES							
1	1 050	90° square	8 ×	BWC1	BWC2	BWC3	BWC4	BWC5	BWC6	BWC7 BWC8
2	747	90° square	8 ×	FCB1	FCB2	FCB3	FCB4	FCB5	FCB6	FCB7 FCB8
3	500	90° square	8 ×	STB1	STB2	STB3	STB4	STB5	STB6	STB7 STB8
4	397	90° square	8 ×	SFB1	SFB2	SFB3	SFB4	SFB5	SFB6	SFB7 SFB8

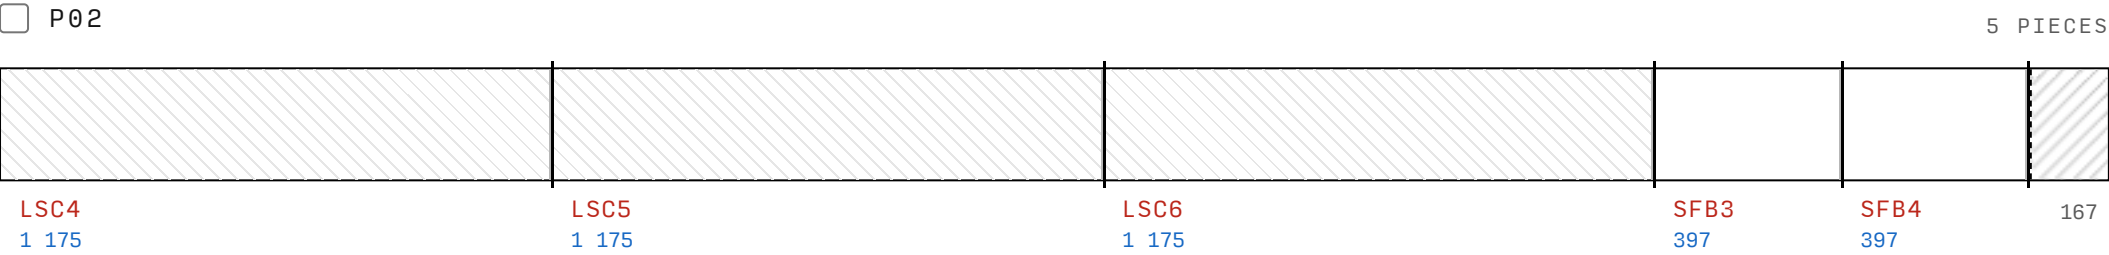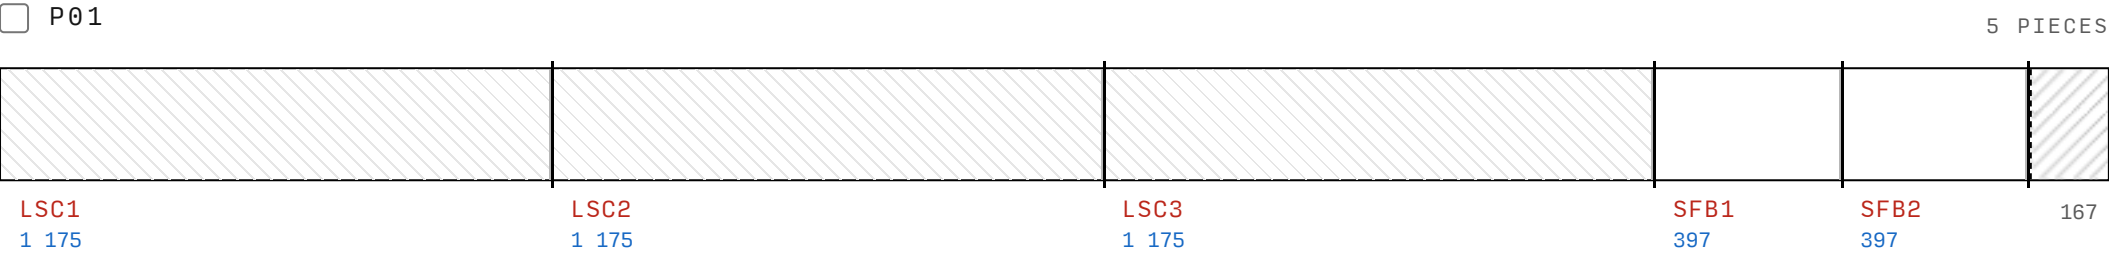


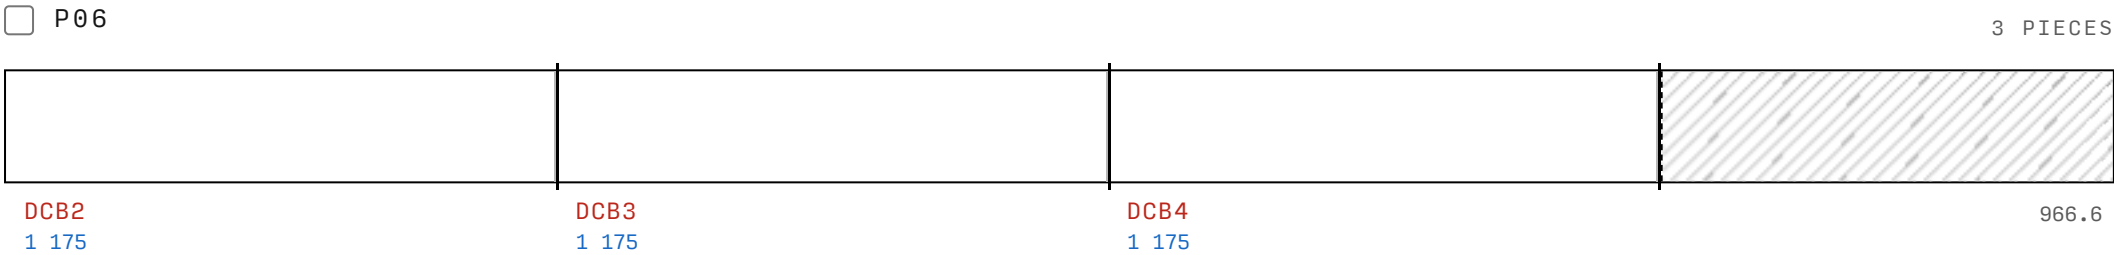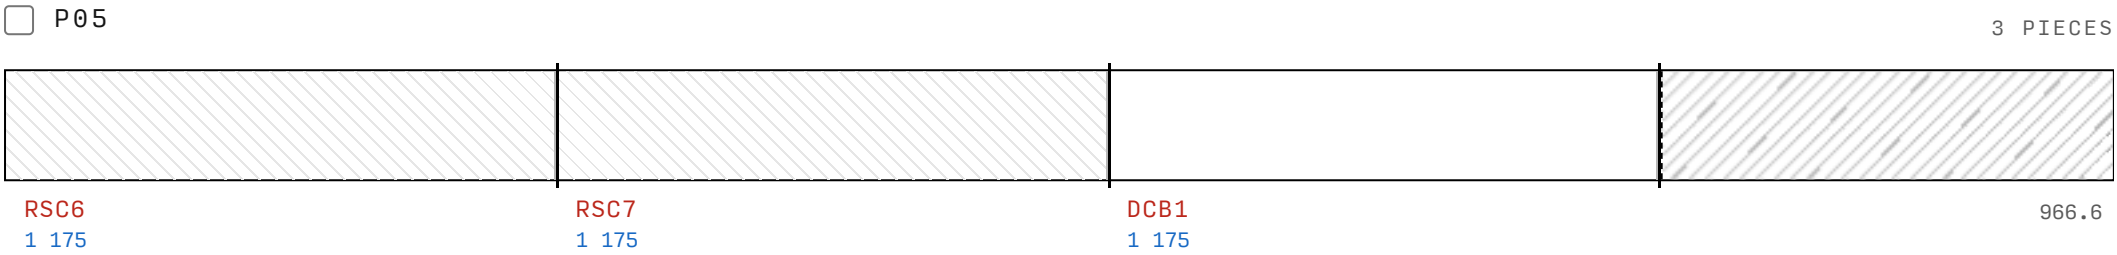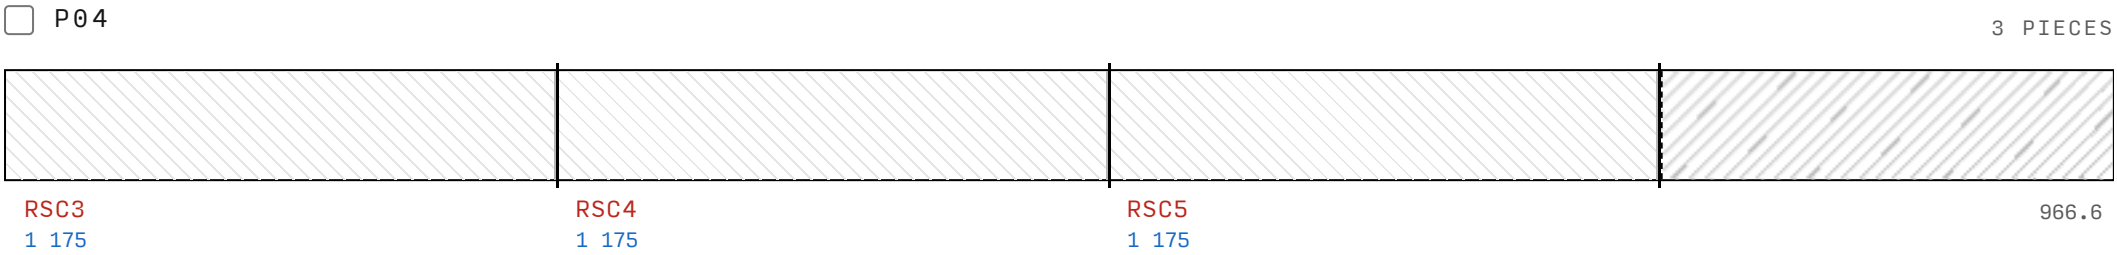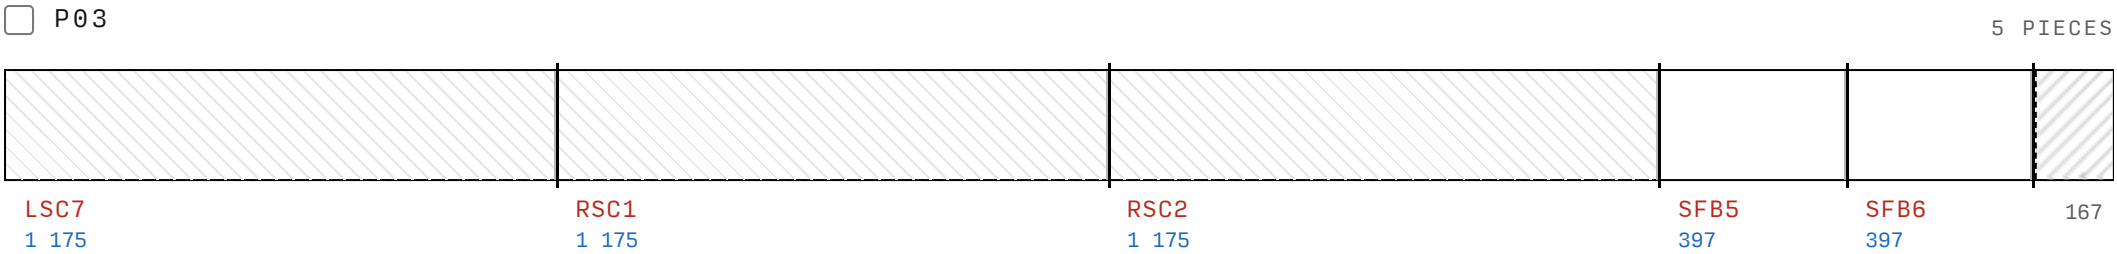

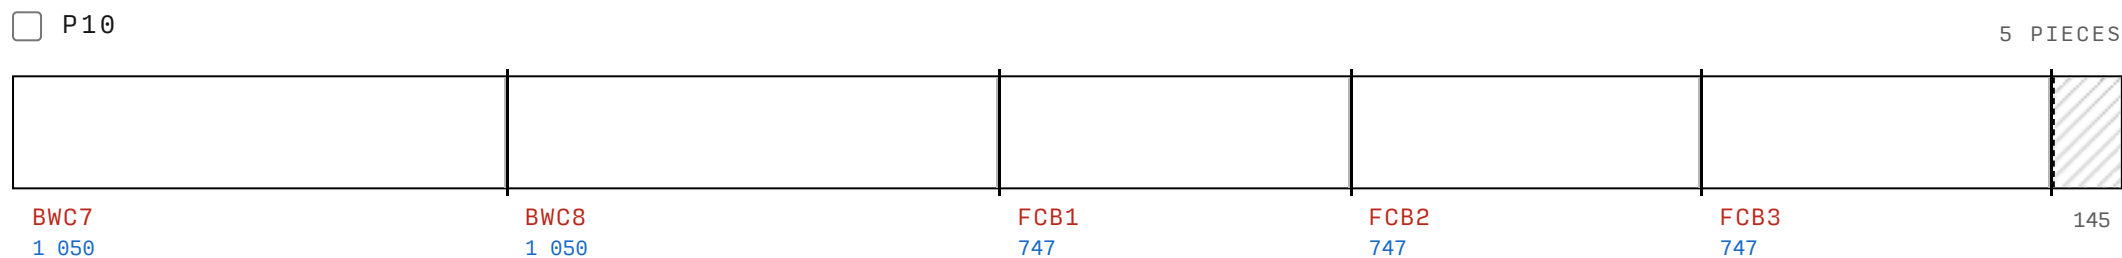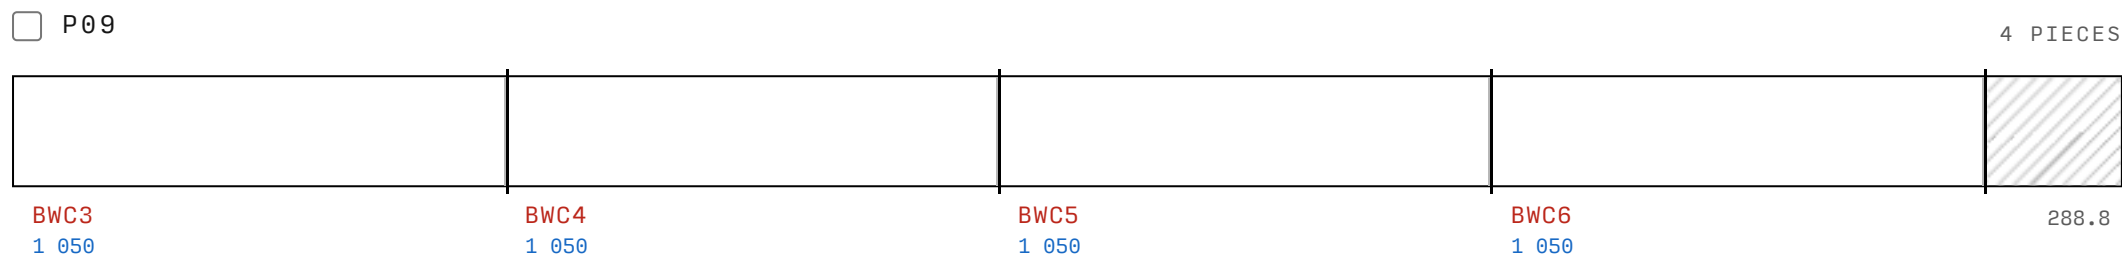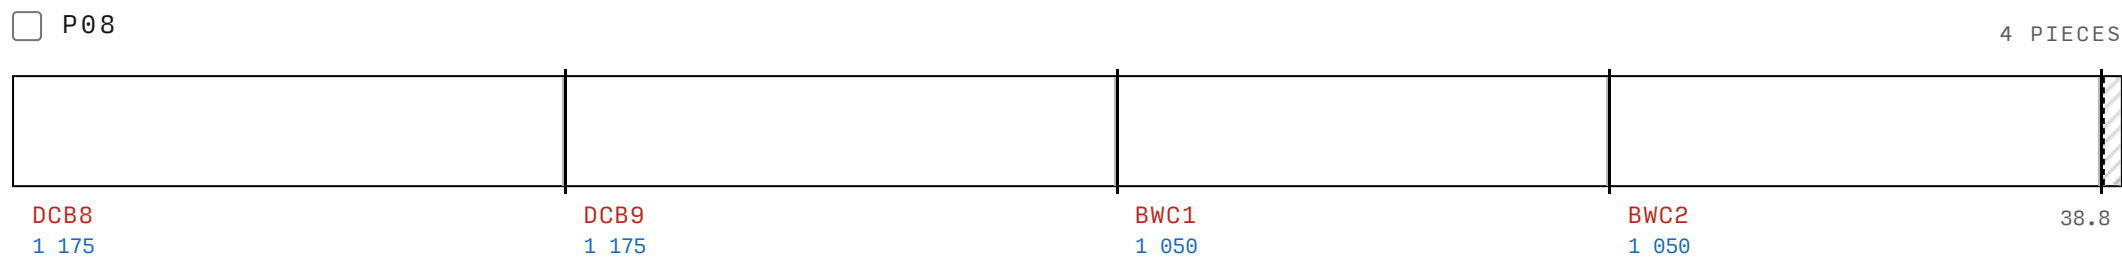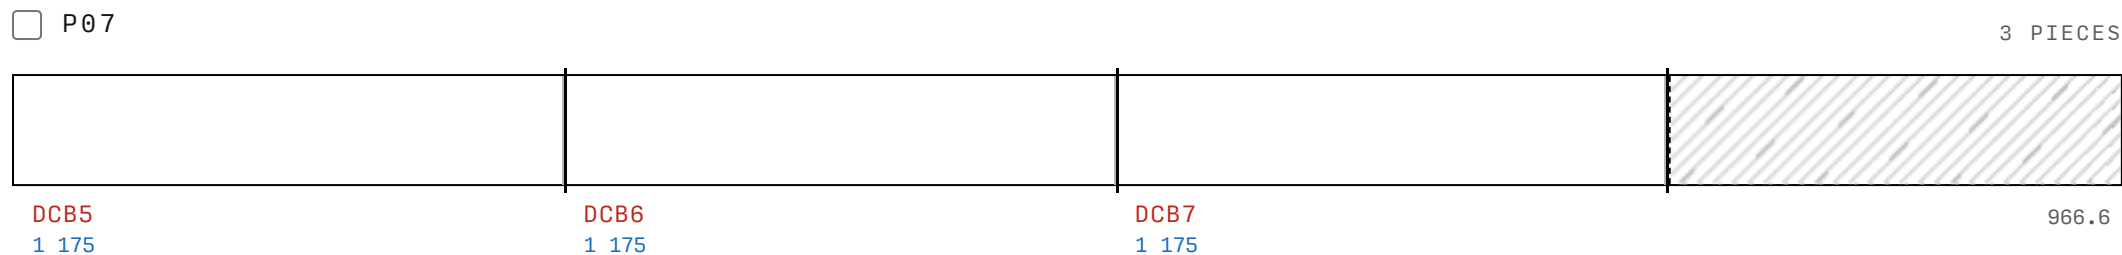

☐ P11

6 PIECES

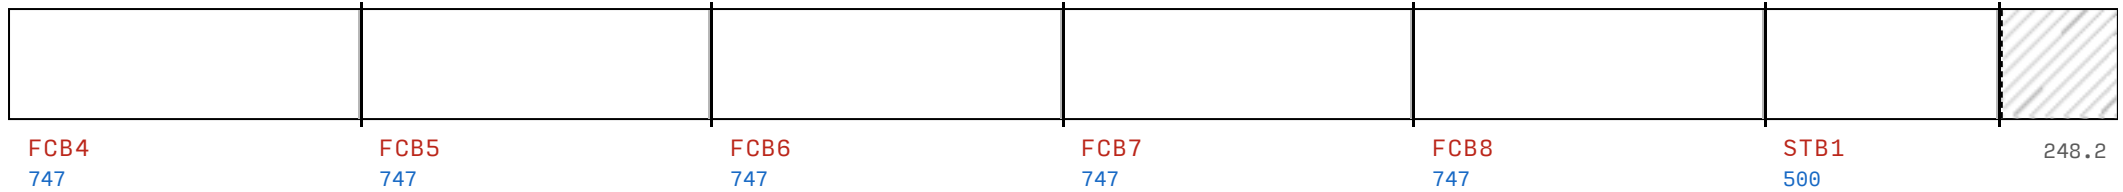

☐ P12

9 PIECES



DO NOT TRIM LOOSE CLADDING

Gaps between boards change the joined width. Fix each board to its unit frame before you mark any final edge.

Use the frame edge to set the circular-saw guide. Cut only after the boards are fixed. Sheet A-400 shows each estimated overhang and cut line.

UNIT DRAWINGS AND ASSEMBLY

Each drawing is an orthographic projection off the model. Solid members are the frame. Tinted fields are cladding. Hatching shows the nominal material left for an on-frame cut.

Each unit is drawn on its own sheet, with its assembly steps and its codes beside it.

FRAME FASTENING AND FINISHED-ANGLE CHECK


84 nominal beam screw marks across 42 beam-to-beam connections • 0 screw-mark overlaps • 0 screw-path collisions • PASS. Diagonals run corner to corner; their 120 mm screws start in the vertical members at 10° and are checked as paths; measure the finished frame angle before the final screws. Cladding is nailed, not included in this check.

Fasten beam to beam from the marked face. Do not place a new screw in an existing screw path. Every diagonal runs corner to corner and is trimmed flush with the vertical member faces; its screw starts in that vertical member at a slight angle.

Before final fastening, measure the finished frame with a bevel gauge and record the actual angle. Use the drawing and model values as the starting guide: side pitch 7.4° , roof pitch 8.8° , D1 cut 34.9° against the drawing 36.0° , and D2 cut 41.2° against the drawing 40.0° . Scribe to the measured frame if it has moved. Do not use the cladding nail pattern for beam screws.

Stack A ROOF UNIT

sheet ghosted • slope beams foreshortened, cut them to the batch length

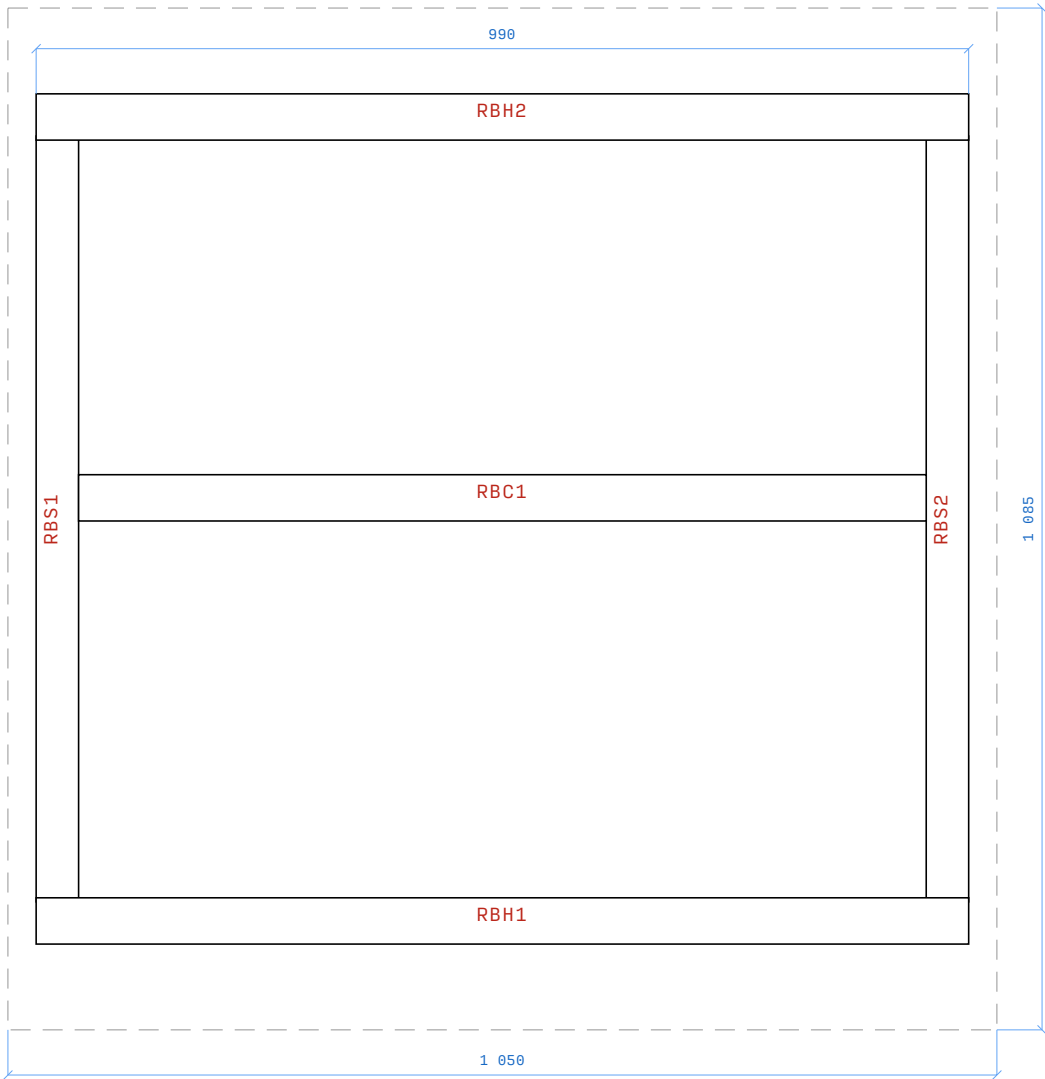

ROOF UNIT • A-401 • PLAN

front edge at the bottom • built flat, then hung


ASSEMBLY

- 1. Lay RBH1 and RBH2 around RBS1 and RBS2. Center RBC1. Match the diagonals, then place the frame screw marks.
- 2. Center the metal sheet with 30 at each side and 93.1 at the front and rear.
- 3. Fit the moving hinge leaf. After the shell is square, fit the fixed leaf and hang the roof.

RBC1 RBH1 RBH2 RBS1 RBS2

☐ UNIT COMPLETE

Stack B DOOR UNIT

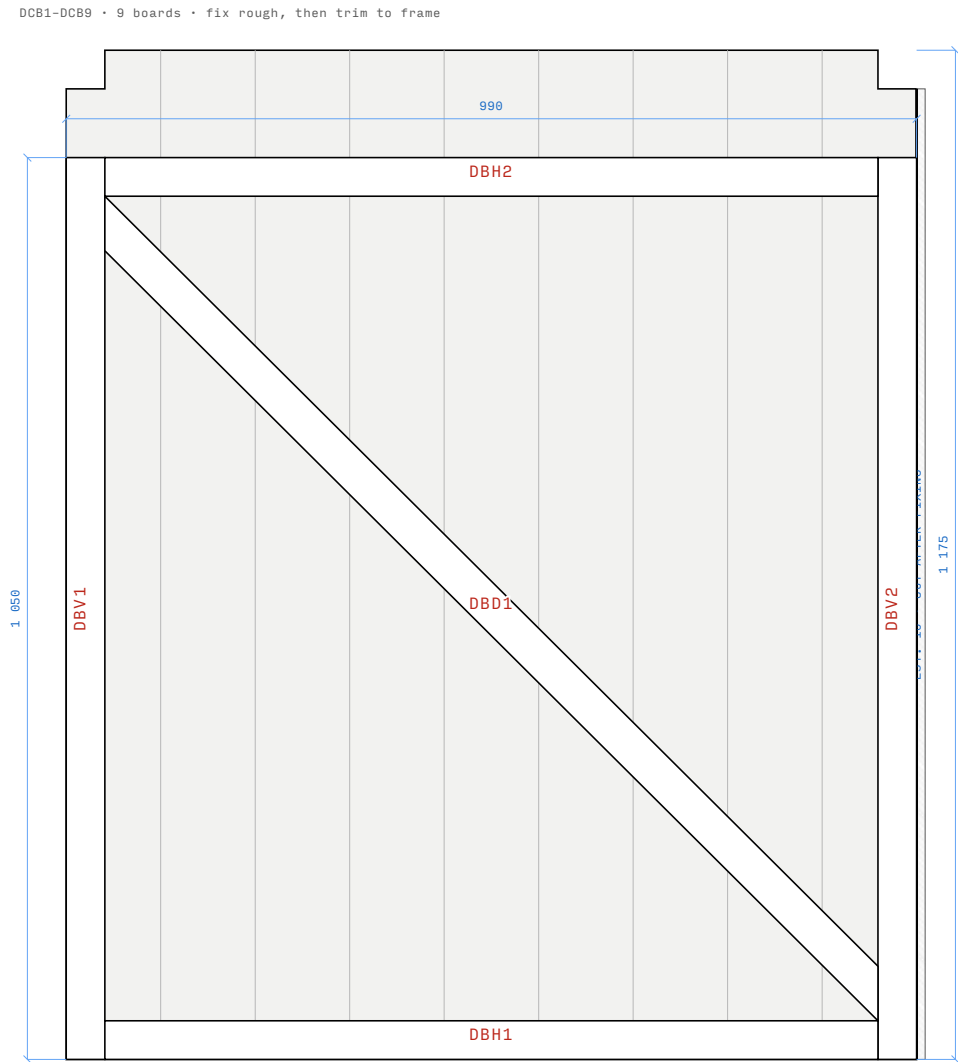

DOOR UNIT • A-402 • FRONT ELEVATION

seen from outside the door • hatched edge is the estimated
on-frame trim

ASSEMBLY


1. Build the DBV and DBH frame. Fit DBD1 and match the diagonals.
2. Fix DCB1 to DCB9 on the inside face. Align DCB1 with the left frame edge.
3. Use the right frame edge to set the circular-saw guide. Cut the estimated 10 overhang after the boards are fixed.
4. Cut the two top reliefs shown. Fit the moving hinge leaves, then hang the door with a 10 gap after the shell is square.

DBD1 DBH1 DBH2 DBV1 DBV2 DCB1 DCB2
DCB3 DCB4 DCB5 DCB6 DCB7 DCB8 DCB9

☐ UNIT COMPLETE

Stack C LEFT SIDE

LSC1-LSC7 • 7 boards • fix rough, then trim to frame

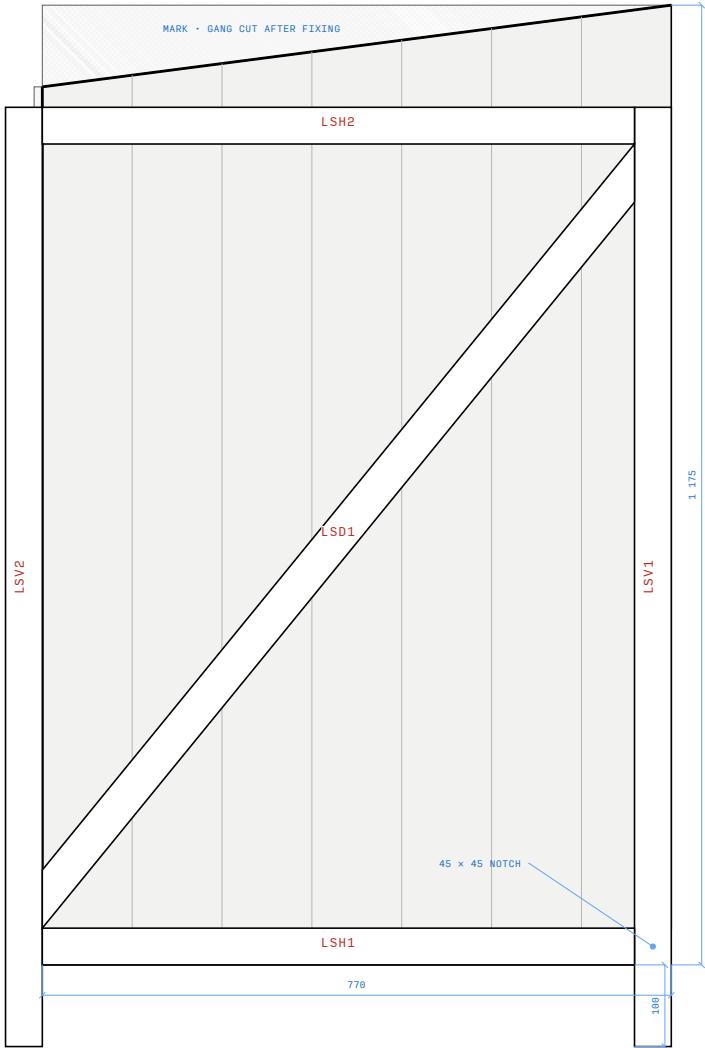

LEFT SIDE UNIT • A-403 • LEFT ELEVATION

front edge to the right • 100 fall over 770 • 45 x 45
bottom-front notch


ASSEMBLY

1. Build the frame. Match its diagonals before you fix LSC1 to LSC7.
2. Fix the square LSC boards from front to rear. Align their lower and front edges.
3. Mark 1 175 at the front and 1 075 at the rear. Set the circular-saw guide and make one gang cut after the boards are fixed.
4. Use the rear frame edge to set the circular-saw guide. Cut the estimated 10 overhang, then cut the 45 x 45 bottom-front notch.
5. Do not pre-cut the roof reliefs. Hang and close the roof, then cut only to the scribe.

LSC1 LSC2 LSC3 LSC4 LSC5 LSC6 LSC7
LSD1 LSH1 LSH2 LSV1 LSV2

☐ UNIT COMPLETE

Stack D RIGHT SIDE

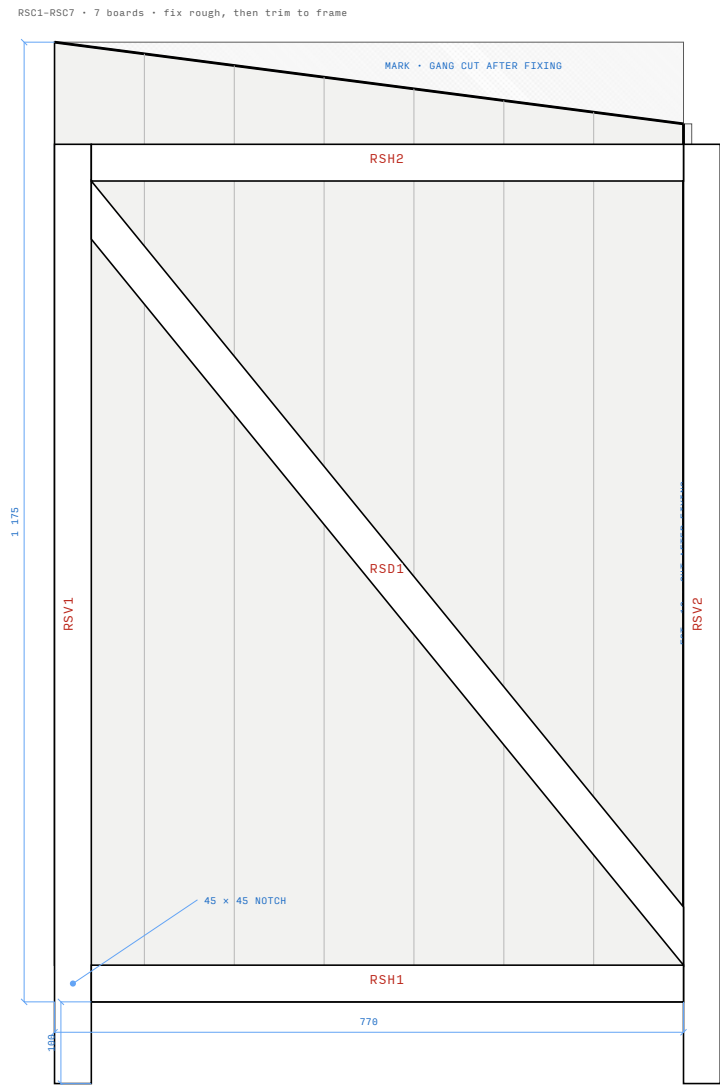

RIGHT SIDE UNIT • A-404 • RIGHT ELEVATION

front edge to the left • 100 fall over 770 • 45 x 45
bottom-front notch


ASSEMBLY

1. Build the frame. Match its diagonals before you fix RSC1 to RSC7.
2. Fix the square RSC boards from front to rear. Align their lower and front edges.
3. Mark 1 175 at the front and 1 075 at the rear. Set the circular-saw guide and make one gang cut after the boards are fixed.
4. Use the rear frame edge to set the circular-saw guide. Cut the estimated 10 overhang, then cut the 45 x 45 bottom-front notch.
5. Do not pre-cut the roof reliefs. Hang and close the roof, then cut only to the scribe.

RSC1 RSC2 RSC3 RSC4 RSC5 RSC6 RSC7
RSD1 RSH1 RSH2 RSV1 RSV2

☐ UNIT COMPLETE

Stack E BACK UNIT

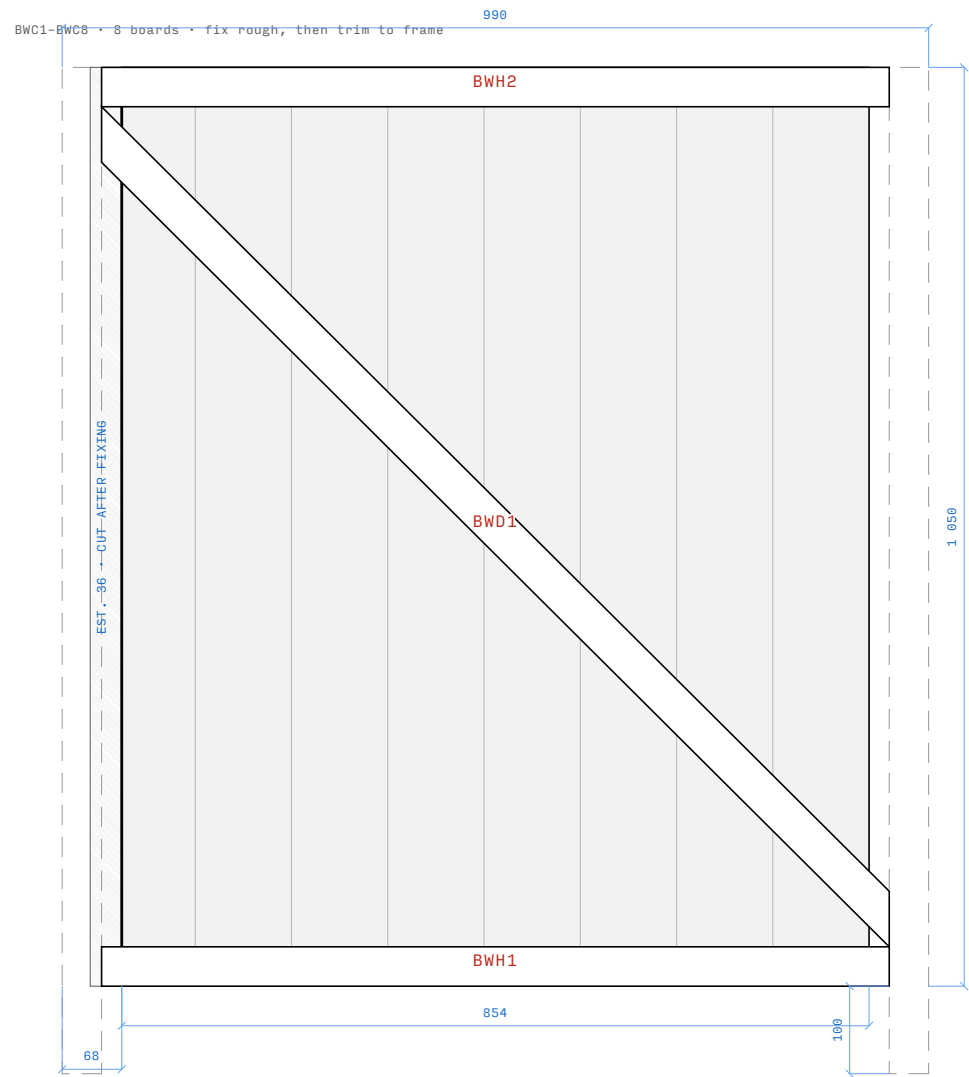

BACK UNIT • A-405 • REAR ELEVATION

seen from outside the back wall • posts ghosted • trim
after the boards are fixed

ASSEMBLY


1. Build BWH1 and BWH2 with BWD1.
Install this bare frame between the
two side units.
2. Fix BWC1 to BWC8 inside the side
cladding. Align BWC1 with the left
landing mark.
3. Use the right landing mark to set
the circular-saw guide. Cut the
estimated 36 overhang after the
boards are fixed.

BWC1 BWC2 BWC3 BWC4 BWC5 BWC6 BWC7
BWC8 BWD1 BWH1 BWH2

☐ UNIT COMPLETE

Stack F FLOOR DECK

FCB1-FCB8 • 8 boards • fix rough, then trim to frame

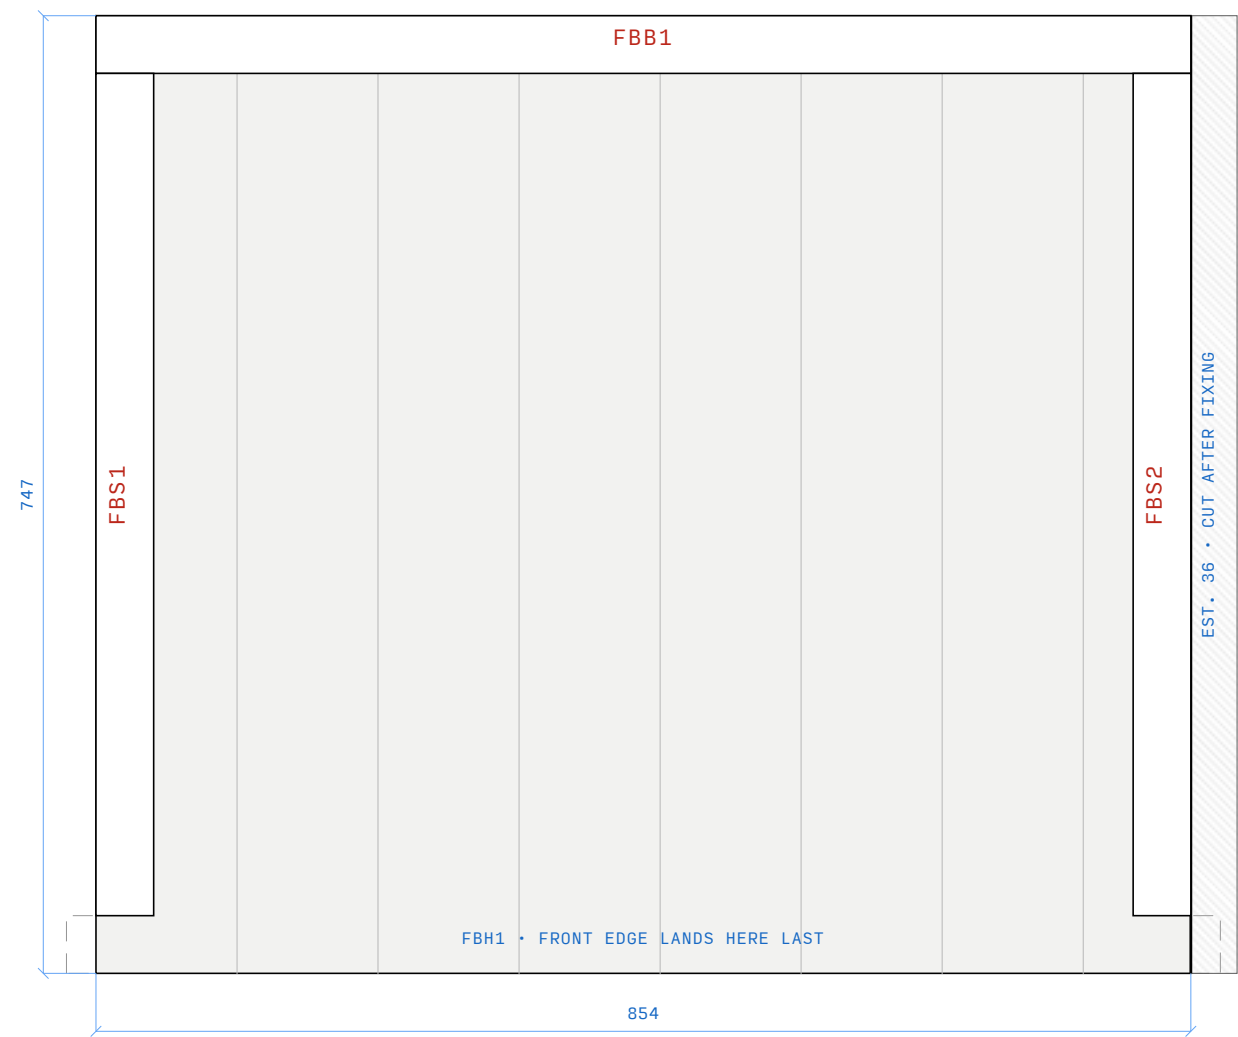

FLOOR DECK • A-406 • PLAN

front edge at the bottom • trim on the bearers before
fitting the deck


ASSEMBLY

1. Build the three-sided bearer frame from FBS1, FBS2, and FBB1.
2. Fix FCB1 to FCB8 to the bearers. Align FCB1 with the left bearer edge.
3. Use the right bearer edge to set the circular-saw guide. Cut the estimated 36 overhang after the boards are fixed.
4. Lower the deck into the square shell. Fasten its front edge to FBH1.

FBB1 FBS1 FBS2 FCB1 FCB2 FCB3 FCB4
FCB5 FCB6 FCB7 FCB8

☐ UNIT COMPLETE

Stack G SHELL JOINT

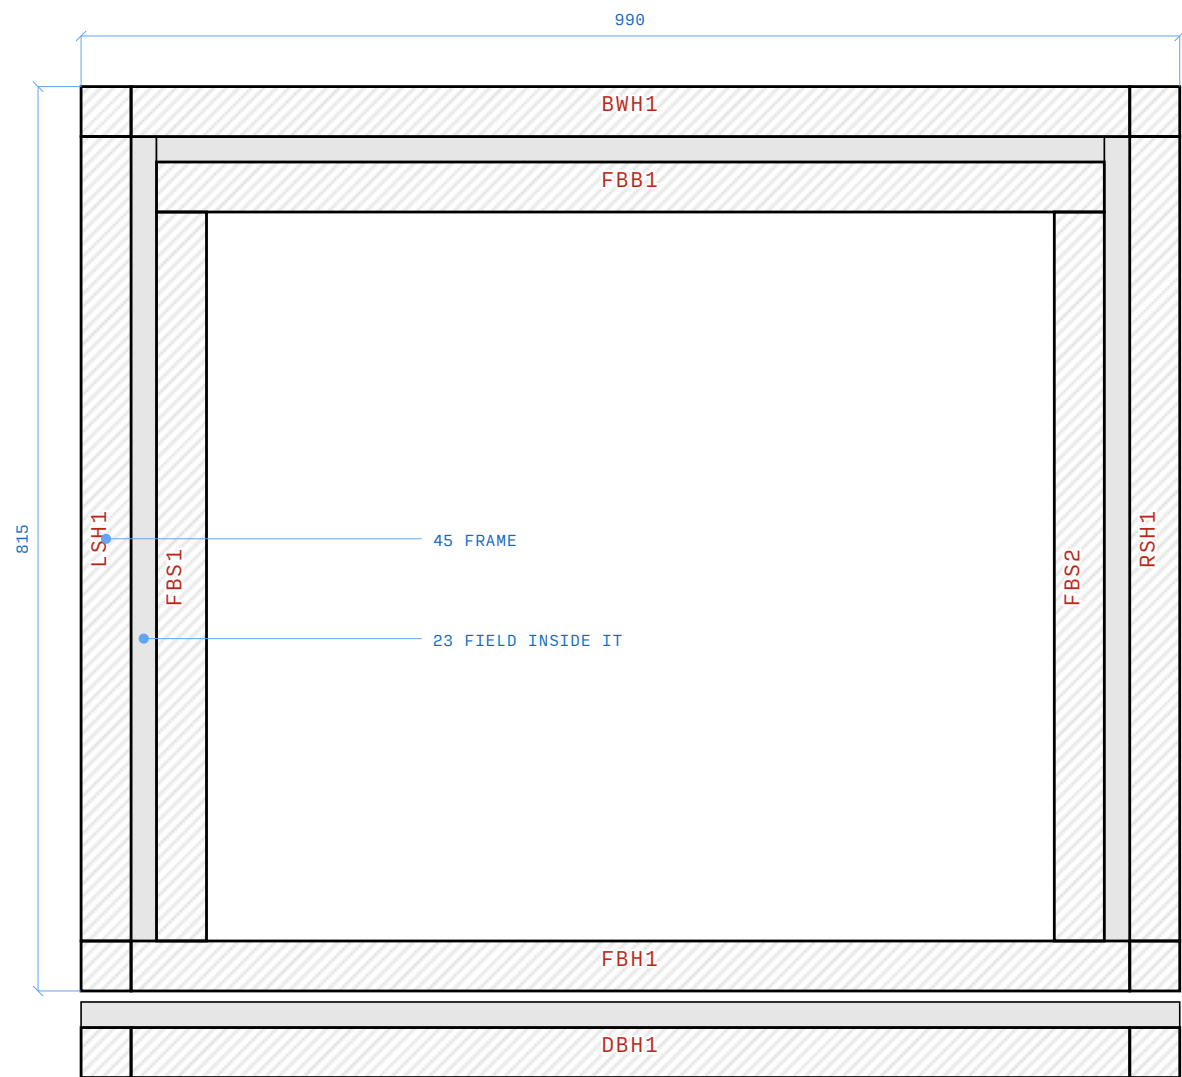

SHELL JOINT • A-407 • PLAN SECTION AT 122.5
every landing shown, measured off the ground

ASSEMBLY


1. Brace the left and right units upright. Keep the bottom of LSH1, RSH1, and BWH1 100 mm above ground while you install the back frame between them.
2. Install FBH1 across the front at the 100 leg datum.
3. Measure the finished side and roof beam angles, then match the shell diagonals before the final fasteners. Install the floor deck after the measurement.

FBH1

☐ UNIT COMPLETE

Stack H SEAT BOX

STB1-STB8 • joined, then the opening is cut

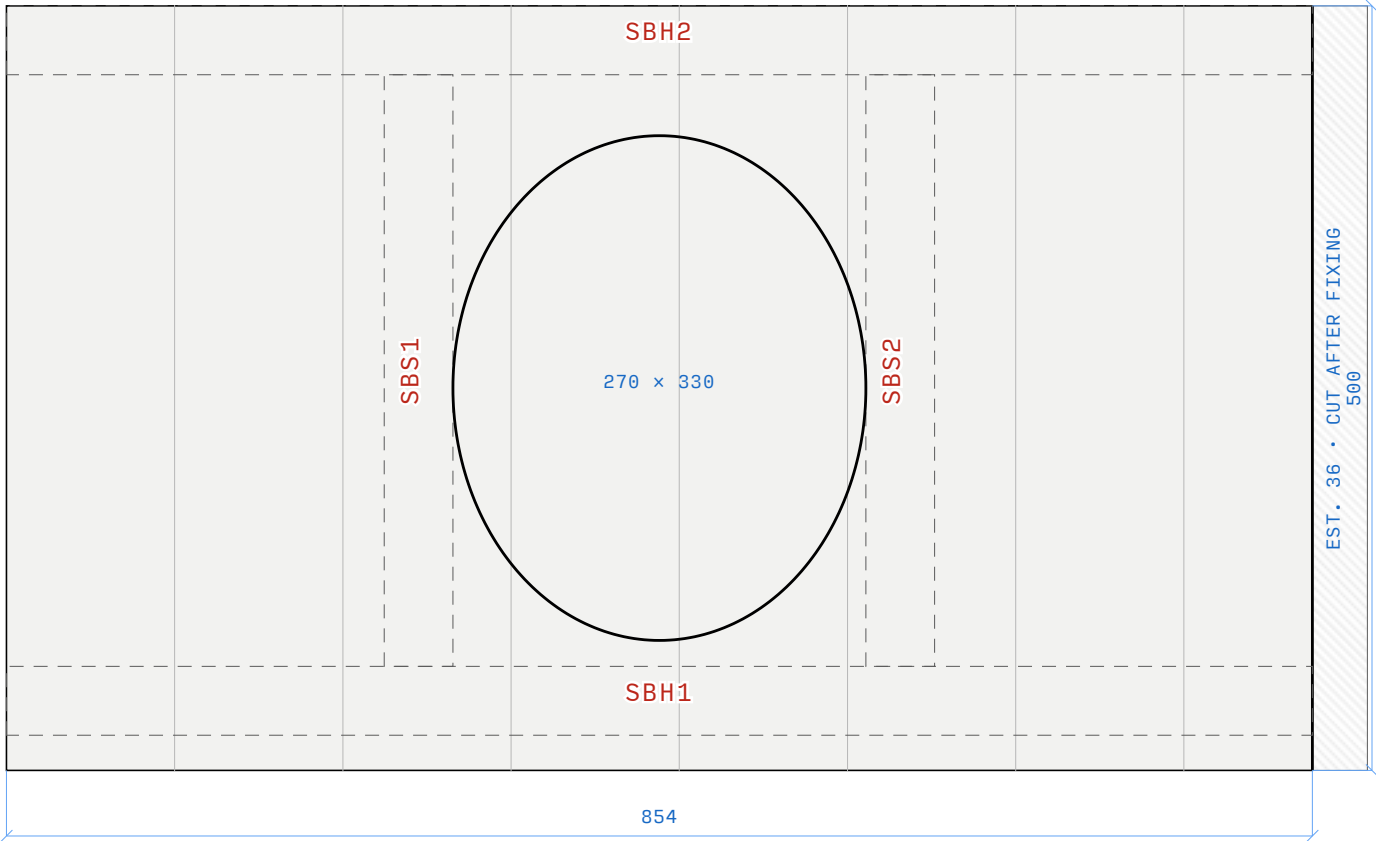

SEAT BOX • A-408 • PLAN

front edge at the bottom • trim the fixed top before
cutting its opening

ASSEMBLY

1. Install SBH3, SBH1, SBH2, SBS1, and SBS2 after the shell and floor are fixed.
2. Fix SFB1 to SFB8 to the seat front. Trim the fixed field from the frame landing.
3. Fix STB1 to STB8 to the top frame. Use its right edge to set the circular-saw guide.
4. Cut the estimated 36 overhang. Then cut the 270 x 330 opening.
5. Make sure that the opening clears both bearers and rails. Seal every fresh cladding cut.

SBH1 SBH2 SBH3 SBS1 SBS2 SFB1 SFB2
SFB3 SFB4 SFB5 SFB6 SFB7 SFB8 STB1
STB2 STB3 STB4 STB5 STB6 STB7 STB8

☐ UNIT COMPLETE