Board r1c1 mini52 | Page 1/1 | cols 0-51 rows 0-51

52x52 cells | pitch 2.6mm | pitch field 135.2x135.2mm

r1c1

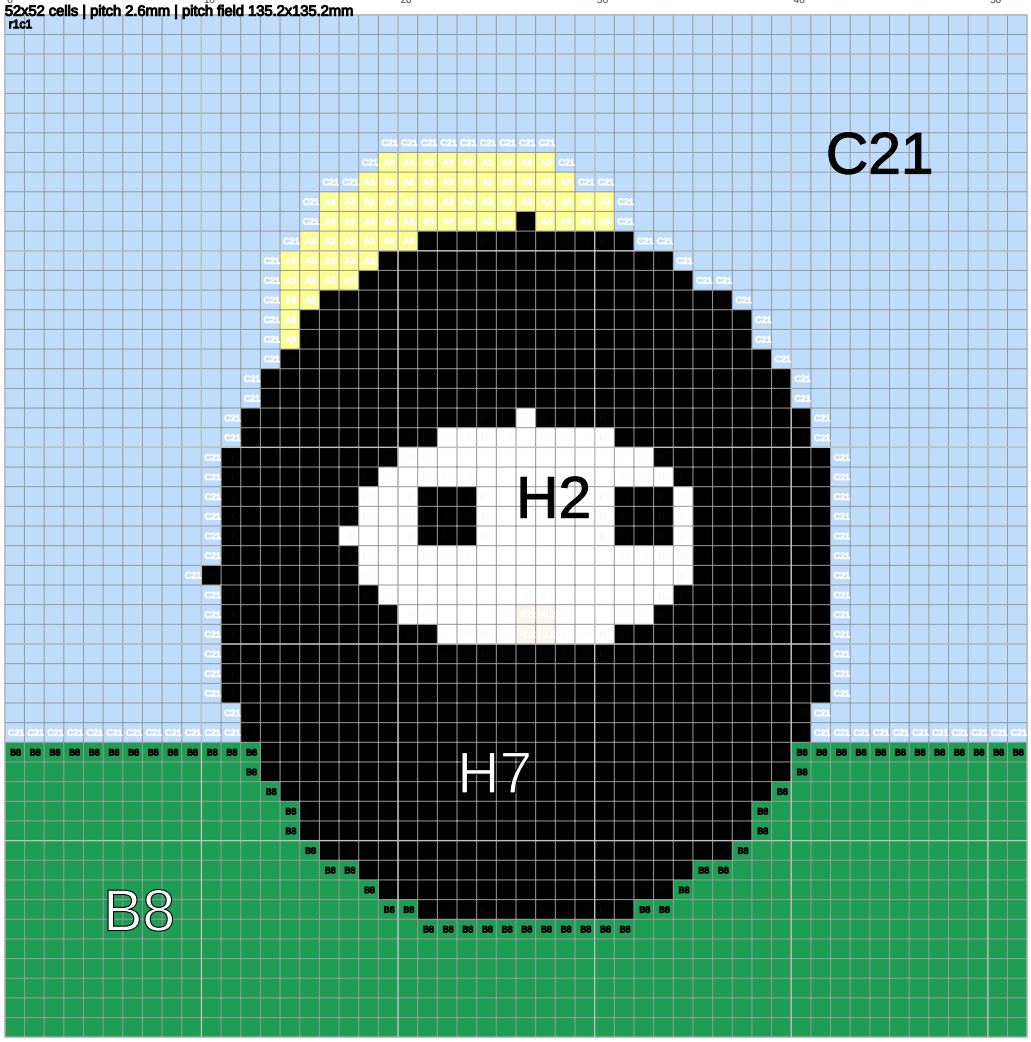

100 mm - measure this. Print at 100% / actual size, turn OFF "fit to page".

20 beads = 52.0 mm

HOW TO PRINT AND TAPE THE PAGES TOGETHER

1. Print at 100% / Actual size. Turn OFF every "fit to page" / "scale to fit" option.
2. Print page 1 first. Measure the 100 mm ruler at the bottom of the page.
   It must be exactly 100.0 mm. If not, the printer is scaling: fix the settings
   or use another printer.
3. For page 2 and later: cut off the left blank margin along the dashed "CUT HERE" line.
4. Put the left edge of page k+1 on top of the right part of page k, so the columns
   shared by both pages overlap. Matching colors is the best alignment guide.
5. Check the registration crosses in the overlap band: all crosses must line up
   with the pixels underneath.
6. Tape the pages. Trim the excess paper on the right side of page k.

WHY OVERLAP INSTEAD OF BUTT-JOINING:
Cutting paper by hand gives about +/-0.5 mm error. Over 176 pages that becomes 8 mm
\(3 beads\). The overlap band makes every page align to what the previous page
ACTUALLY printed, not to an ideal position. So the error never accumulates.

COLOR CODES:
Big regions are labelled once in the middle with the bead code, and every cell on the
boundary is labelled cell by cell, so you know exactly where to switch color.
When a code does not fit inside a cell, a 1-2 digit number is printed instead and the
bill of materials page maps numbers back to codes.