

VD13 = BAT 42
VD1...VD8 = BAT42

TITLE: Z1013-128

Document Number:

REV:


Date: 21.12.2016 22:42:36

Sheet: 1/5

DATENBUS:D[0..7]

ADRESBUS:A[0..17]

STEUERBUS:GND,P5,P12,N5,N12,/WR,/MREQ,/IO,/RESET,TAKT,/IODI,/NMI,/WAIT,/RFSH,/PM1,/BUSAk/RD,/MEMDI,/IORQ1,/BUSRQ,/INT,/IORQ,CASG,/HALT,PM1,/BS,/RESET-T/DK10,/DK13,MREQ,TEST,/RESET-C,/IOSEL1,ROM-A,E,X1A3,X1C3,X1C25,X1C27,Z17,/MEMDI+

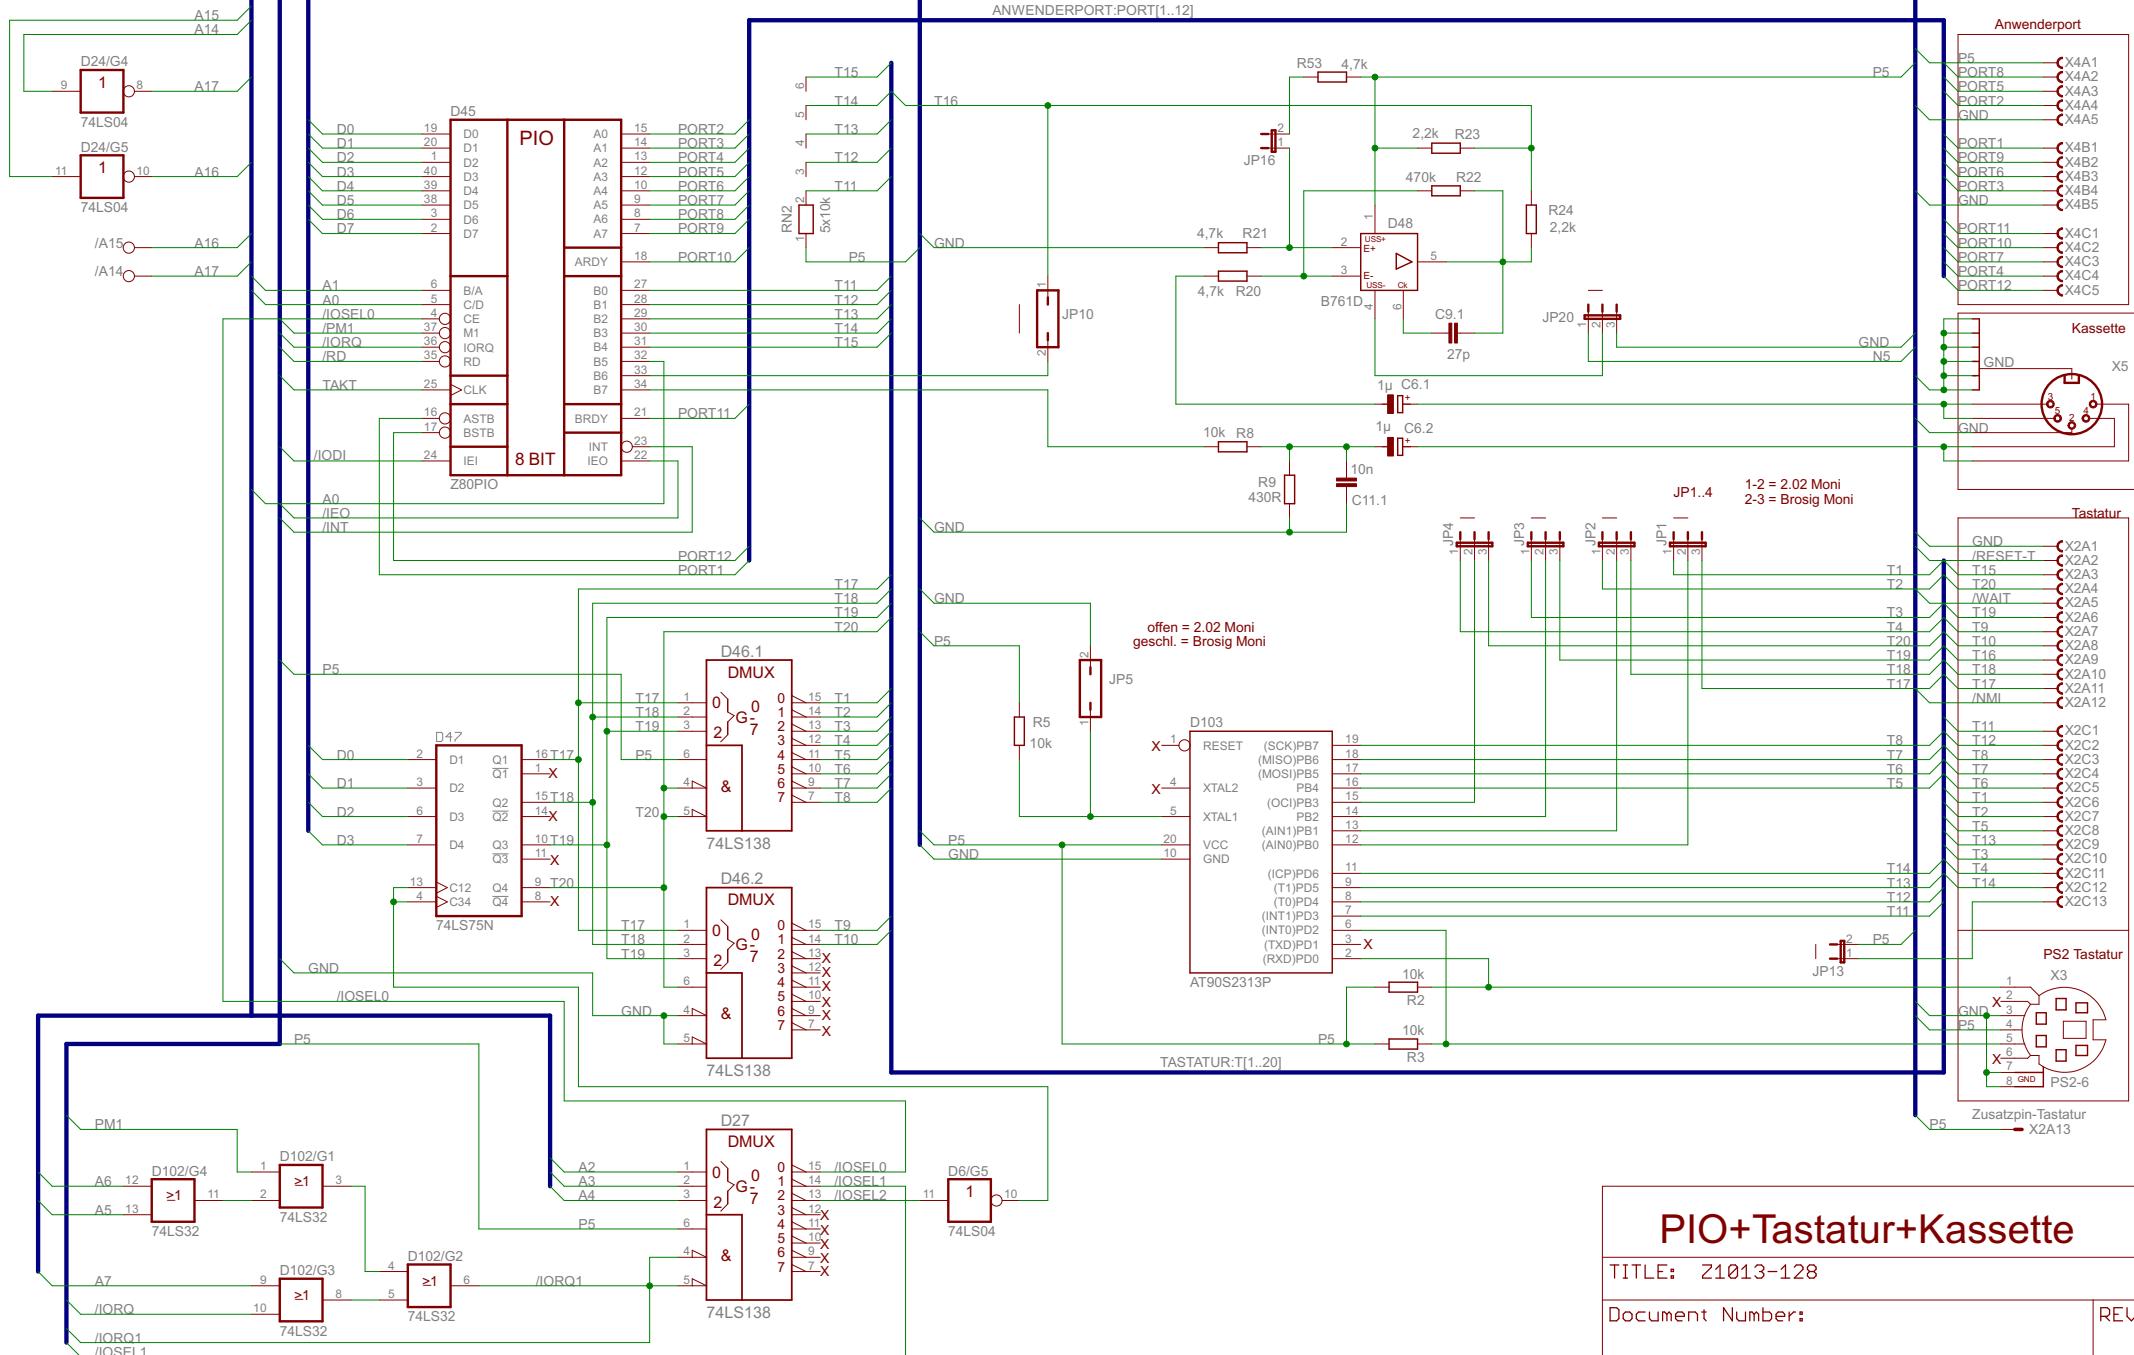

PIO+Tastatur+Kassette

TITLE: Z1013-128

Document Number:

REV:


Date: 21.12.2016 22:42:36

Sheet: 2/5

DATENBUS:D[0..7]

ADRESBUS:A[0..17]


STEUERBUS:GND,P5,P12,N5,N12,WR,/MREQ,/IEO/RESET,TAKT,/IODI,/NMI,/WAIT,/RFSH,/PM1,/BUSAk,/RD,/MEMDI,/IORQ1,/BUSRQ,/INT,/IORQ,CASG,/HALT,PM1/BS,/RESET-T,/DK10,/DK13,MREQ,TEST,/RESET-C,/IOSEL1,ROM-A,E,X1A3,X1C3,X1C25,X1C27,Z17,/MEMDI+

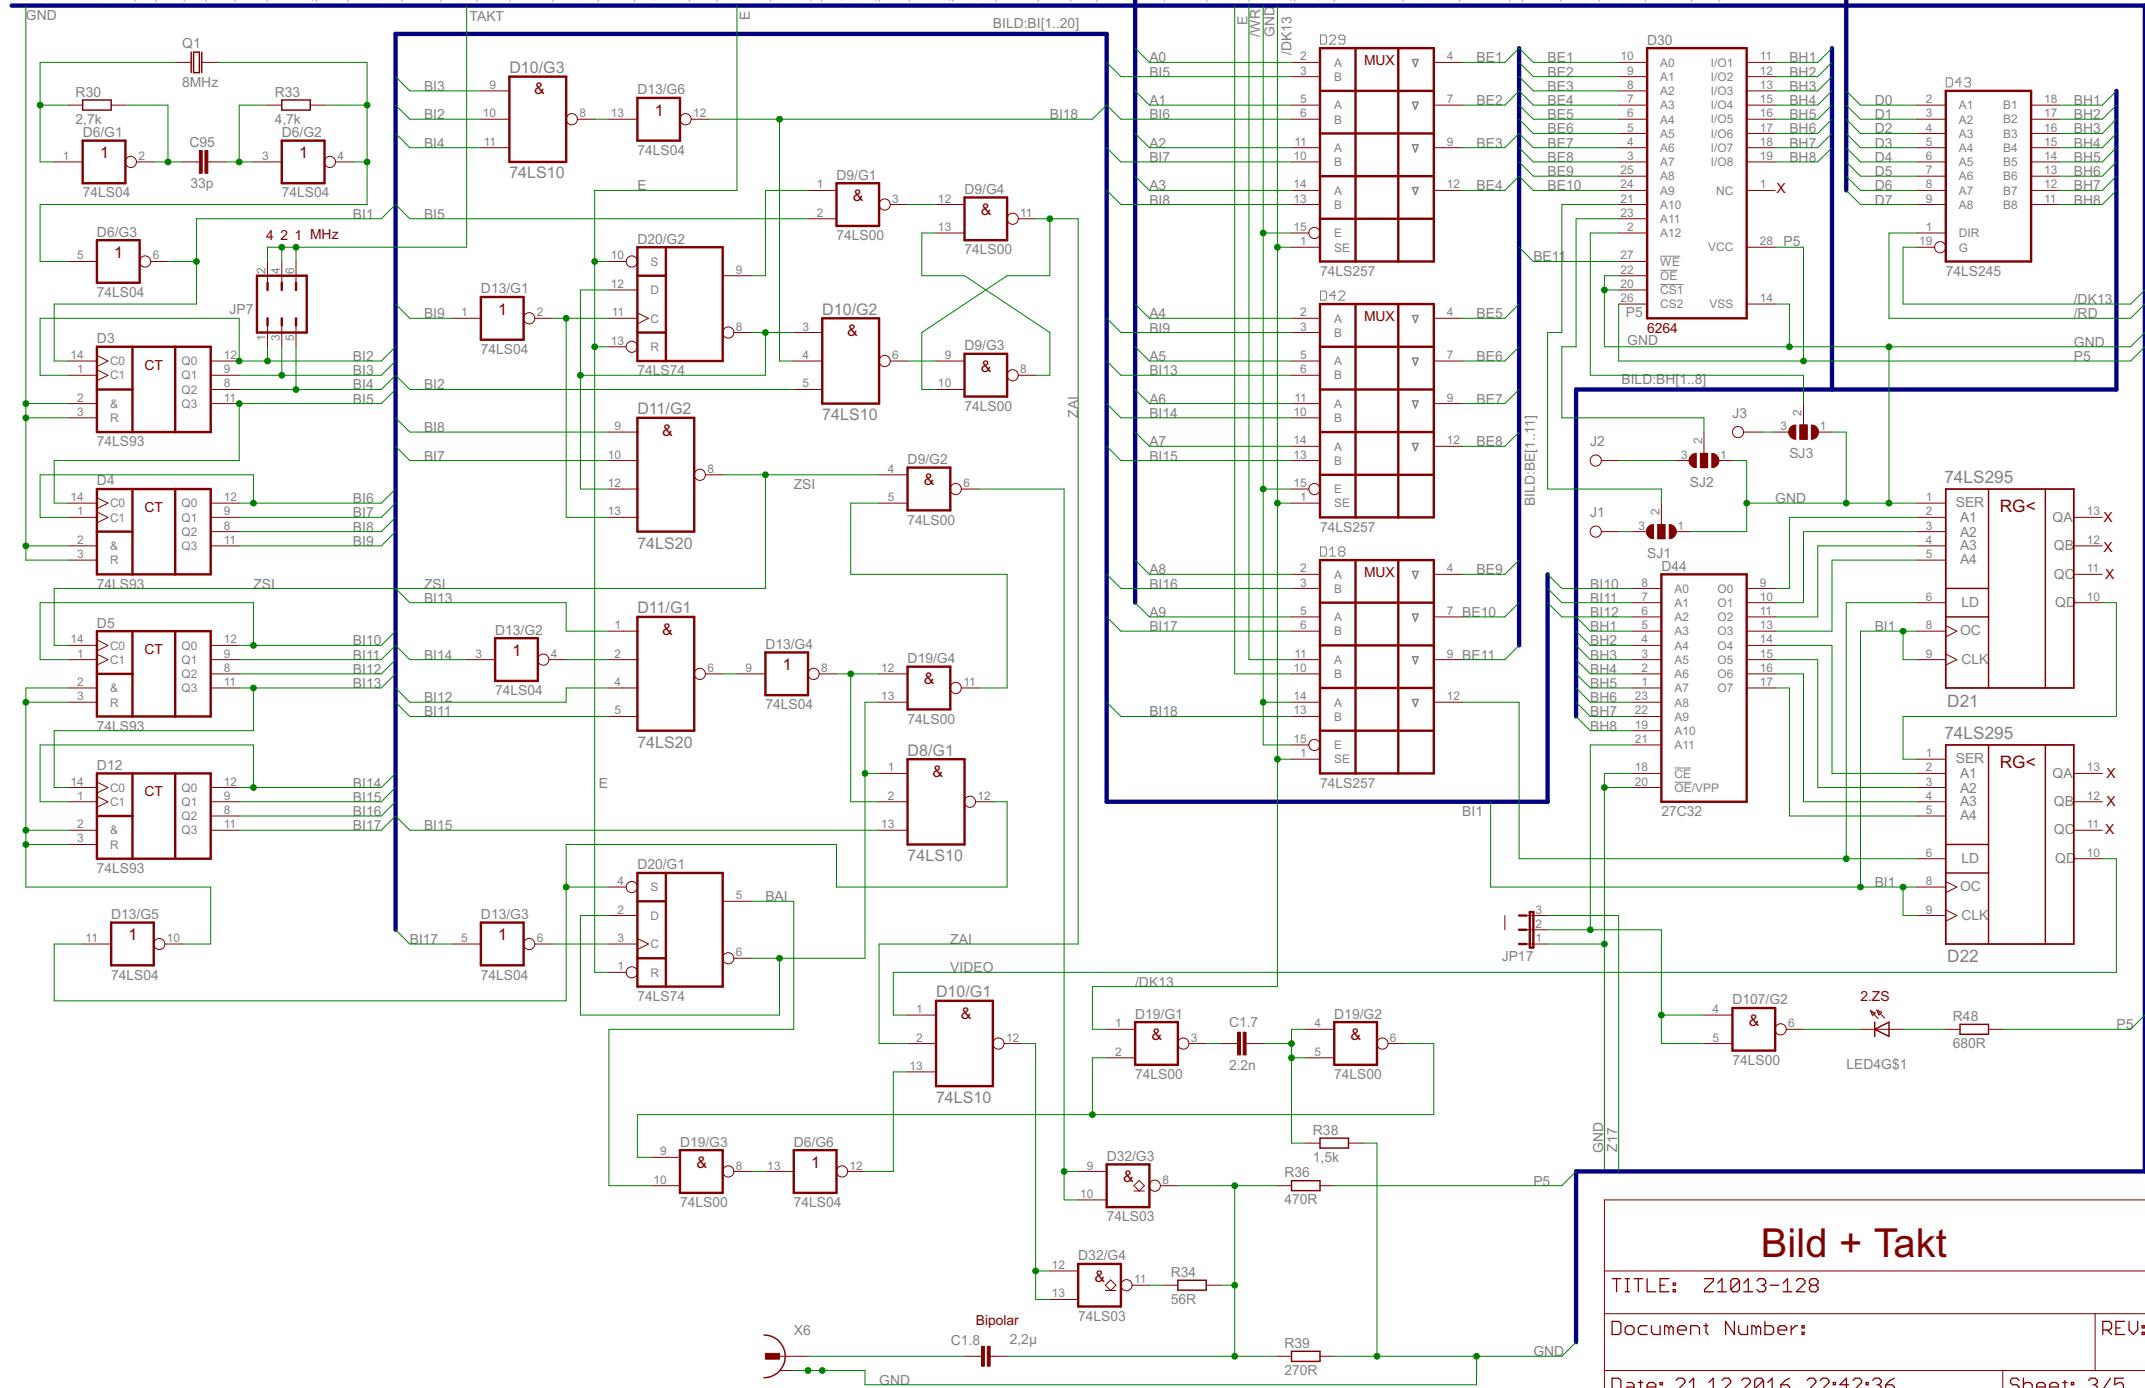

DATENBUS:D[0..7]

ADRESBUS:A[0..17]

STEUBERBUS:GND,P5,P12,N5,N12,/WR,/MREQ,/IEO,/RESET,TAKT,/IODI,/NMI,/WAIT,/RFSH,/P1M1,/BUSAK,/RD,/MEMDI,/IORQ1/BUSRQ,/INT,/IORQ,CASG/HALT,PM1,/BS,/RESET-T,/DK10,/DK13,MREQ,TEST,/RESET-C,/IOSEL1,ROM-A,E,X1A3,X1C3,X1C25,X1C27,Z17, MEMDI+

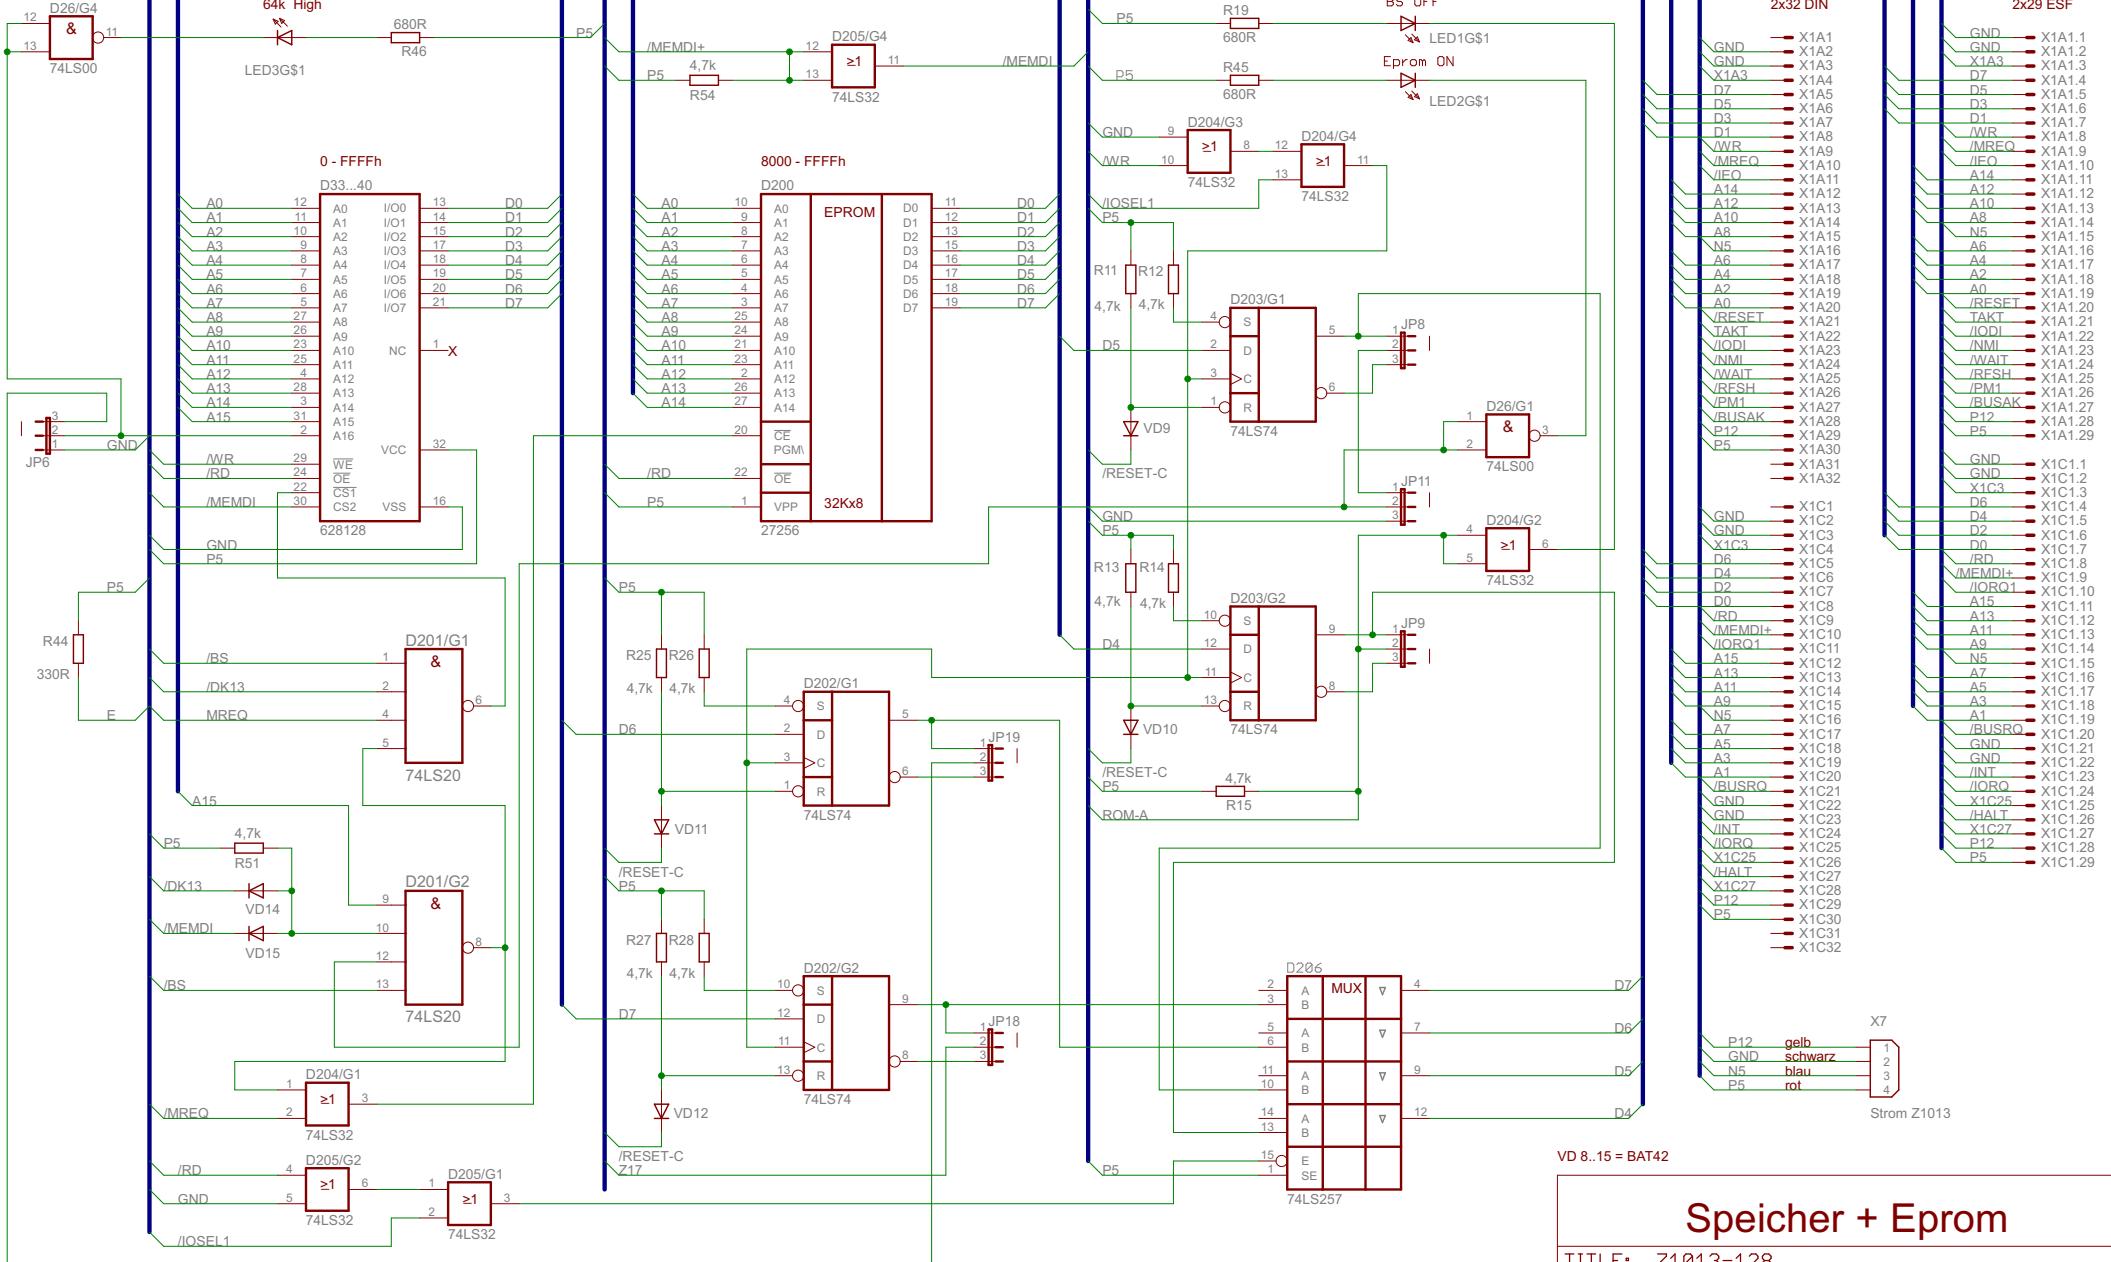

STEUBERBUS:GND,P5,P12,N5,N12,WR,/MREQ,/IEO,/RESET,TAKT,/ODI,/NMI,/WAIT,/RFSH,/PM1,/BUSAK,/RD,/MEMDI,/IORQ1,/BUSRQ,/INT,/IORQ,CASG,/HALT,PM1,/BS,/RESET-T,/DK10,/DK13,MREQ,TEST,/RESET-C,/IOSEL1,ROM-A,E,X1A3,X1C3,X1C25,X1C27,Z17,/MEMDI+

