PILZ SAFETY ARCHITECTURE - 11 LOCKED GUARD DOORS

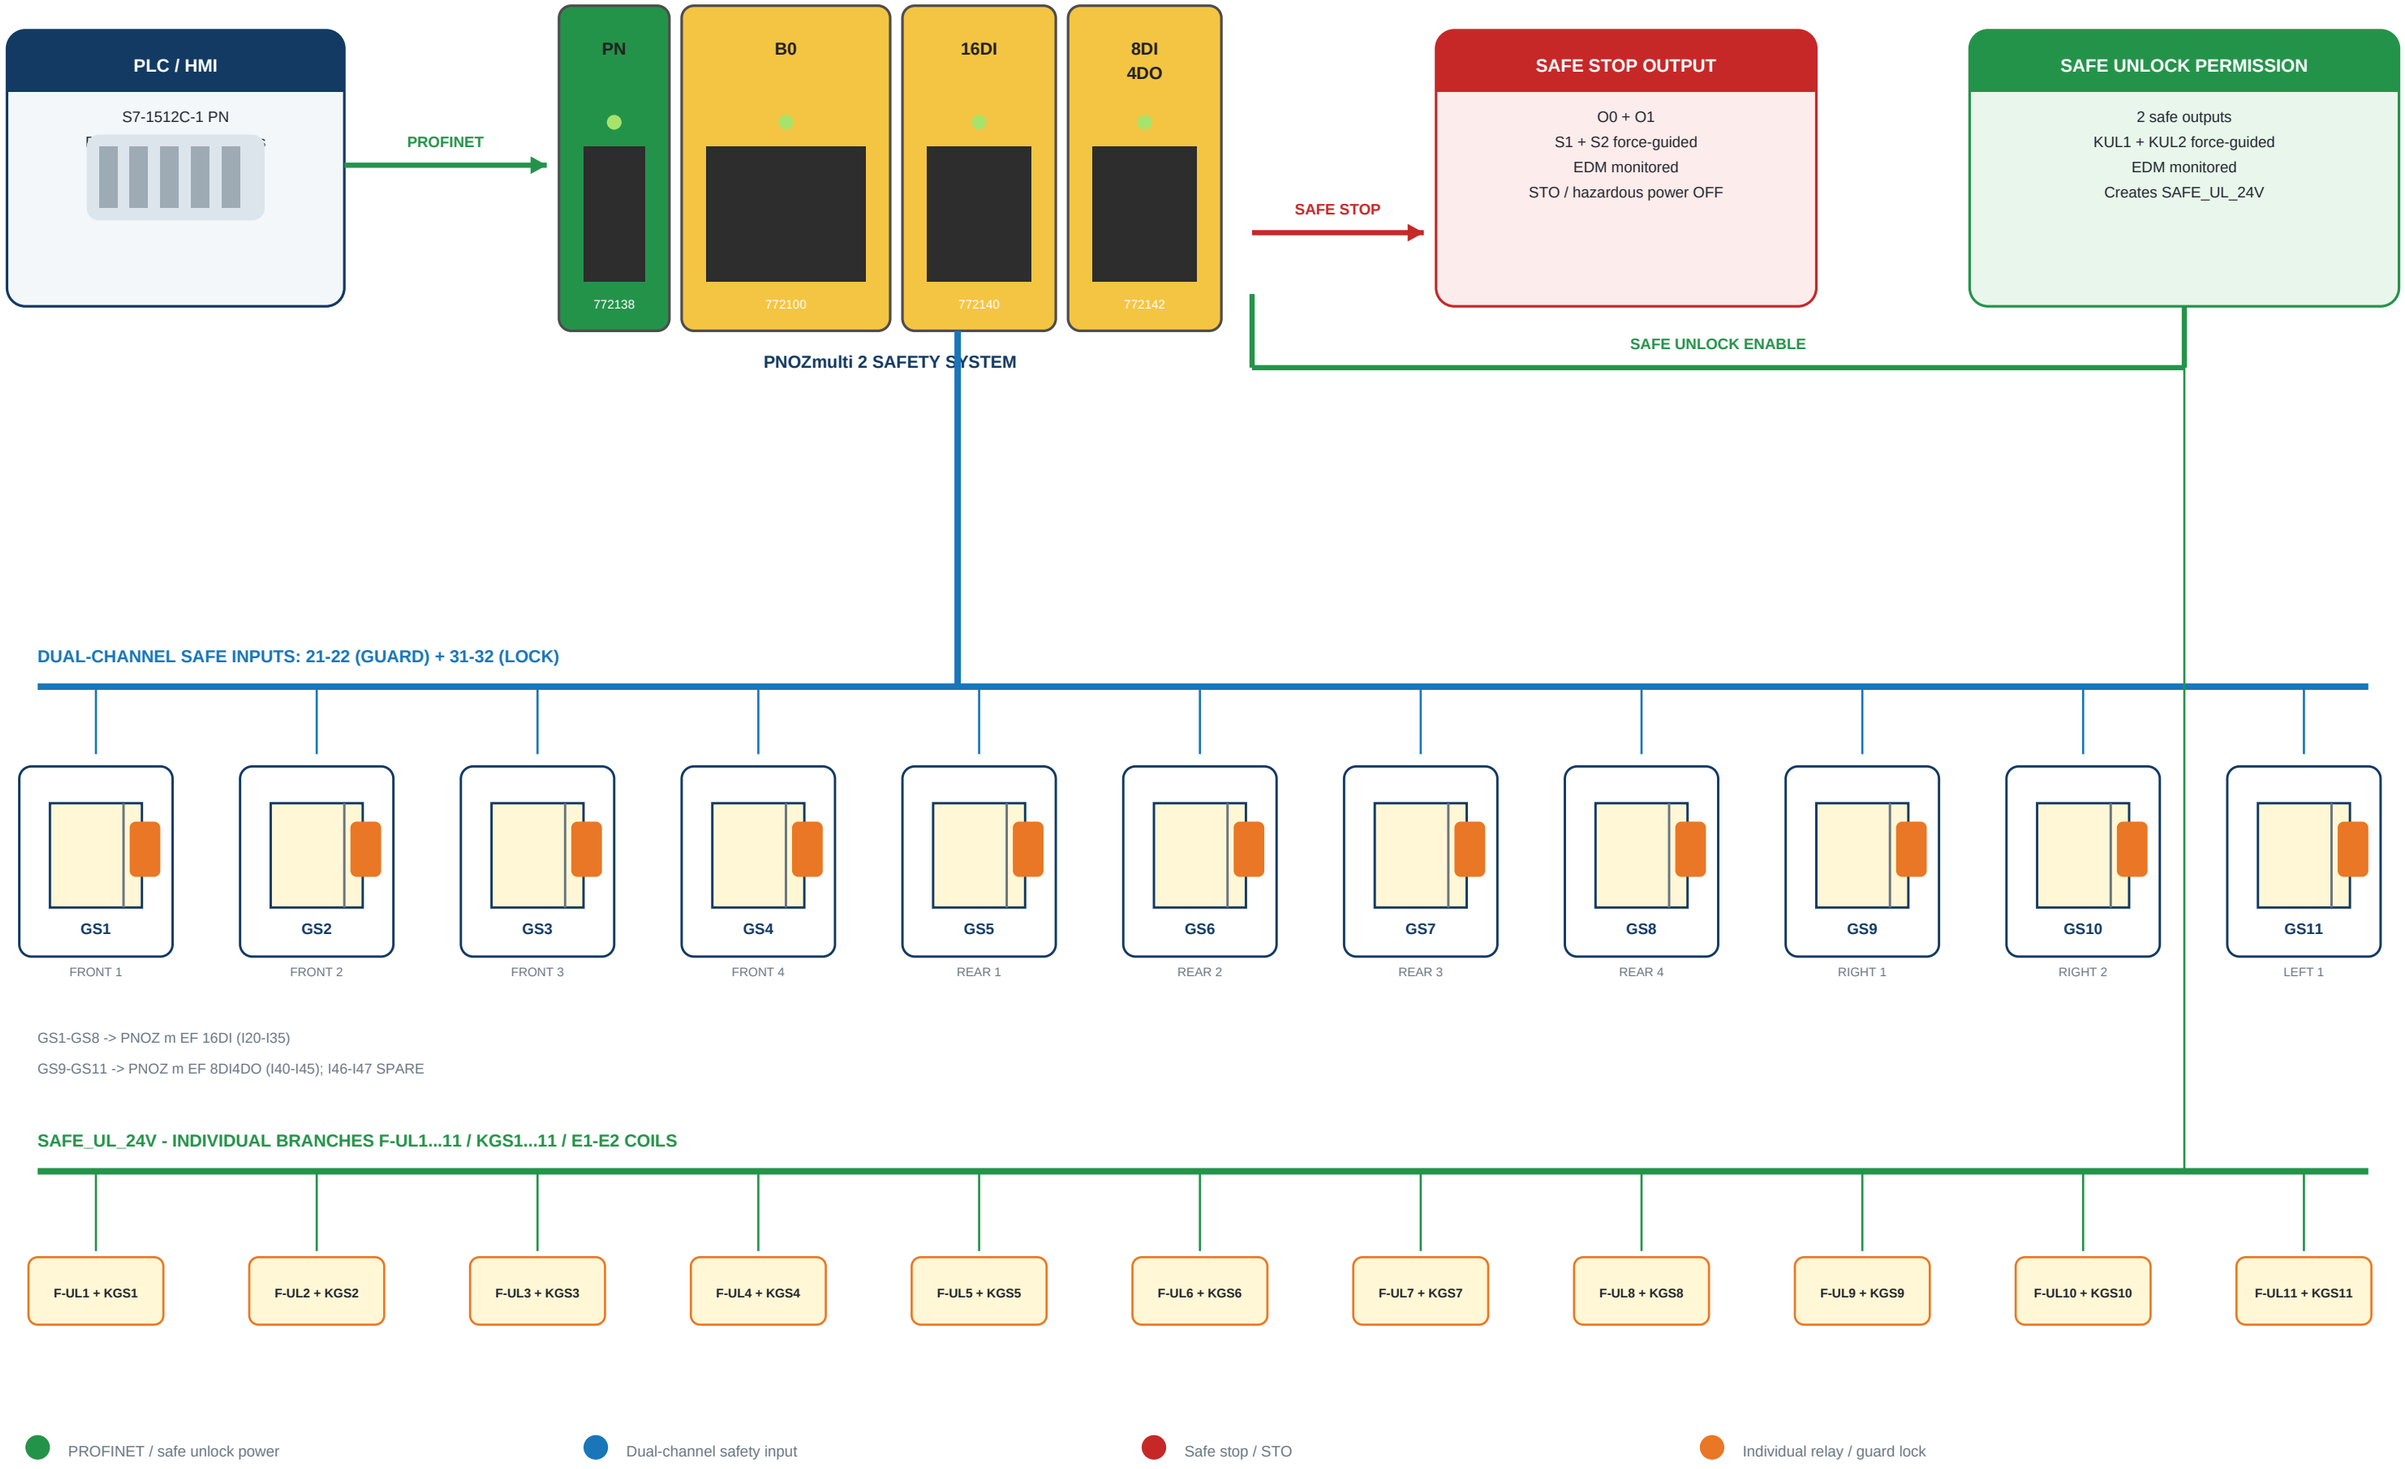

NOT FOR CONSTRUCTION - Safety validation, stop time, PLr and unlock zoning must be approved before wiring.

TYPICAL GUARD CONNECTION - REPEAT FOR GS1 TO GS11

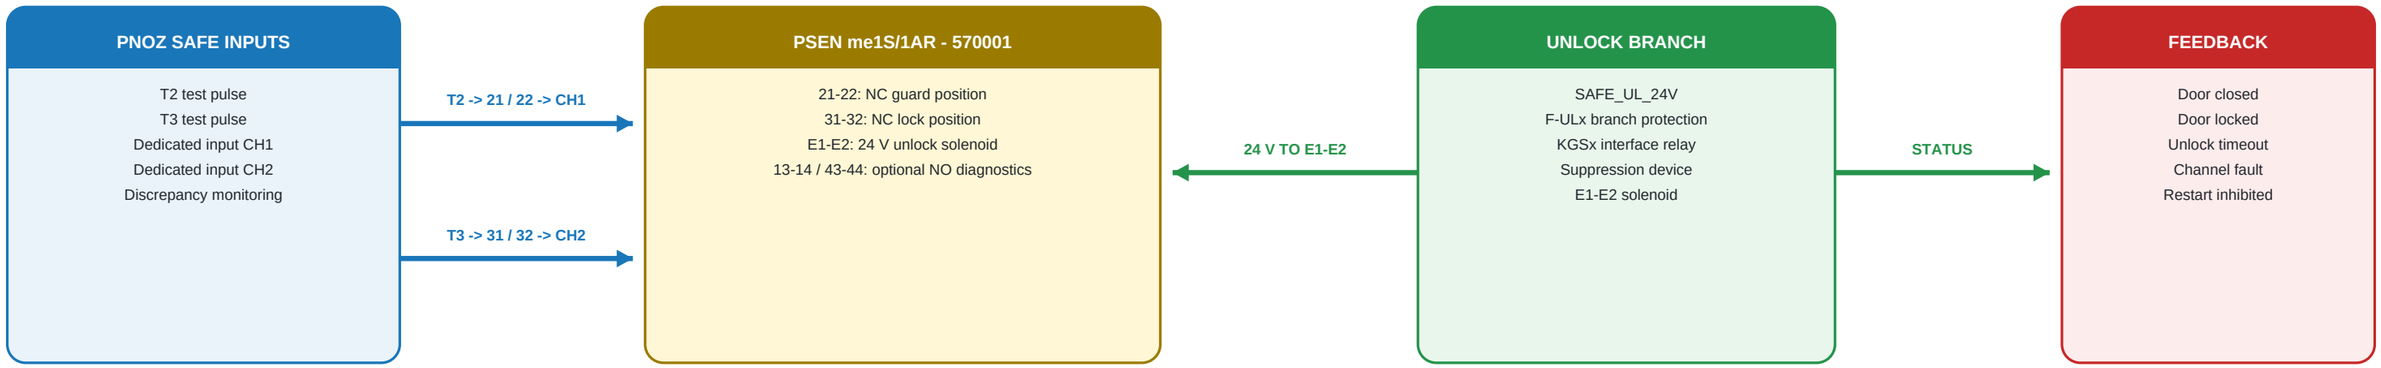

Safe operating sequence

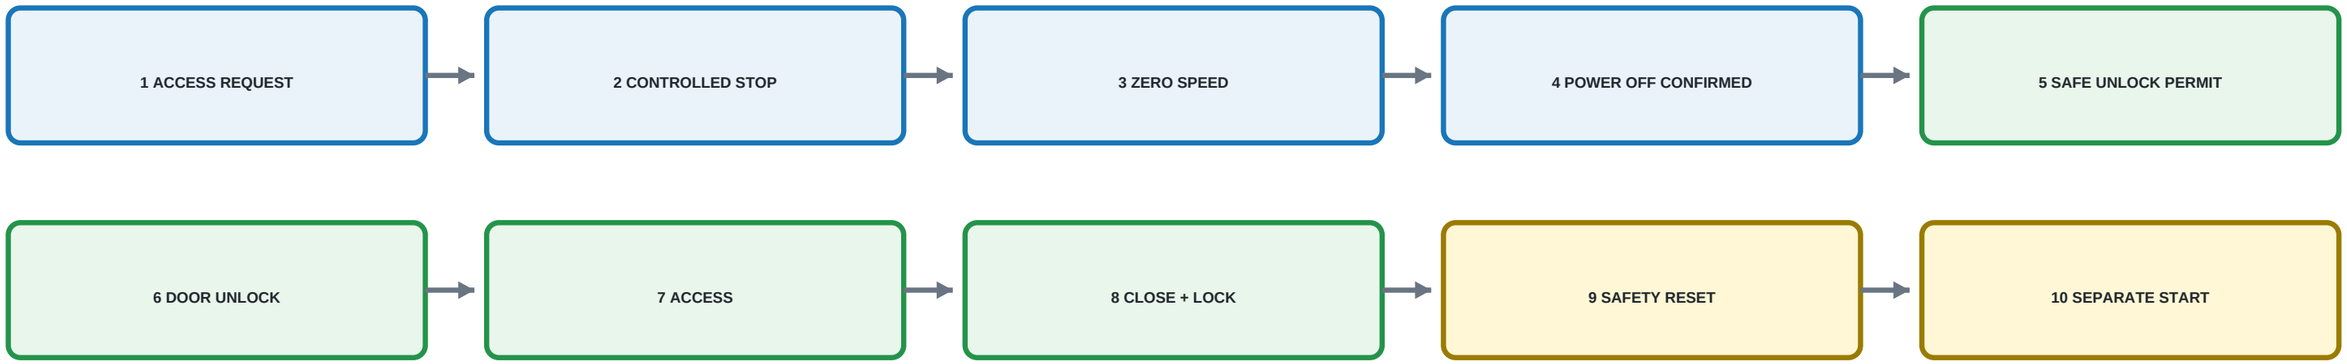

MANDATORY: no automatic restart. Any open/unlocked guard, channel discrepancy, EDM fault or loss of safety communication inhibits restart.

Electrical drawing must show XGS1-XGS11 terminal blocks, wire/core numbers, E1-E2 connections, individual protection and cross-references to the PNOZmulti project.

All eleven device nameplates and the second PNOZ expansion-module nameplate must be verified before issue for construction.