
PNOZ m EF 1MM - AXIS 1 CONNECTION ARCHITECTURE

Where the module belongs and what may be connected

1. PHYSICAL POSITION IN THE PNOZmulti 2 RACK

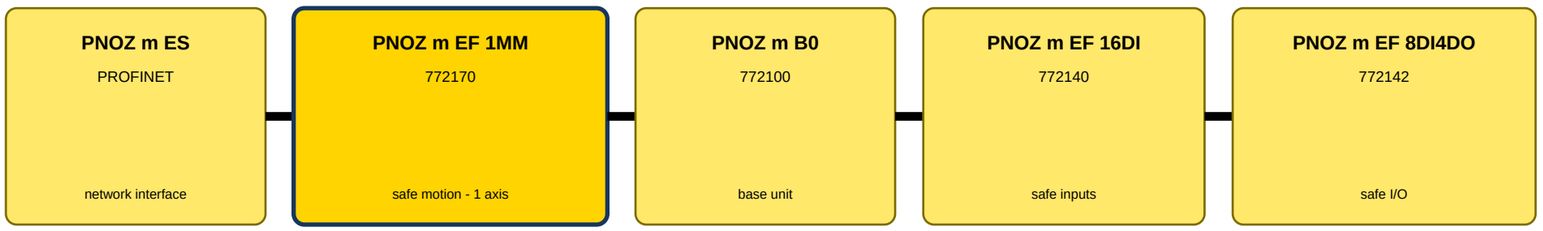


Modules exchange safety data through the lateral PNOZmulti bus - no external signal wire is required between modules



Installed module photograph: order 772170, version 2.4

2. CORRECT FIELD CONNECTION

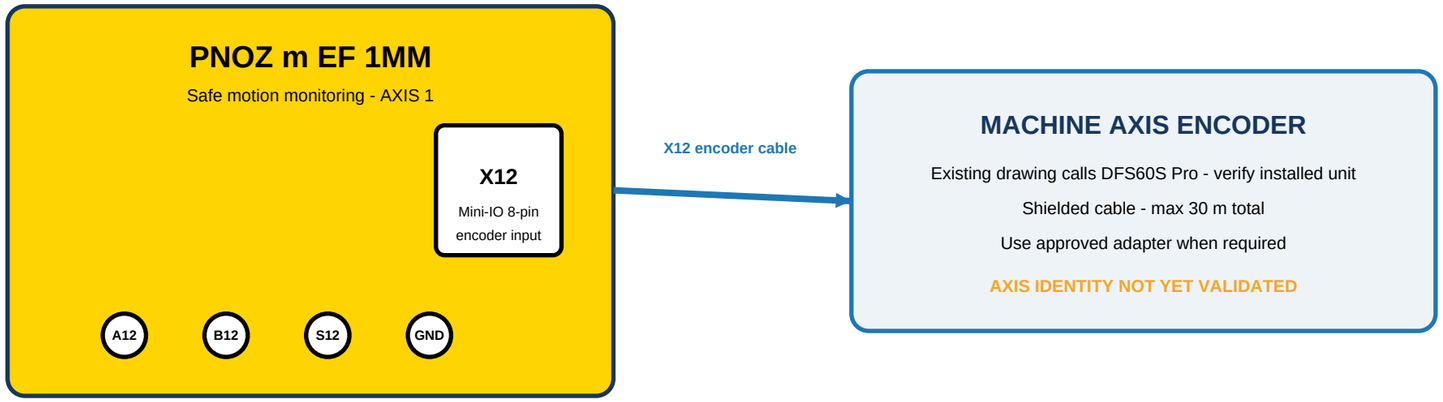

DO NOT CONNECT TO THIS MODULE

- X Door interlock channels GS1-GS11
- X Hood 1 FilterClogged %I12.4
- X Hood 2 FilterClogged %I12.7
- X Emergency-stop channels or ordinary 24 VDC PLC signals

PNOZ m EF 1MM - TERMINAL AND CABLE DETAIL

Choose only the connection method configured in PNOZmulti Configurator

OPTION A - ENCODER TO X12: ONE CONDUCTOR PER ROW

PNOZ X12		DOCUMENTED DFS60S PRO CONDUCTOR	ENCODER TERMINAL / FUNCTION
1	S	RED	+U / supply monitor
2	GND	BLUE	GND / 0 V
3	Z	PURPLE	Z index
4	A	WHITE	A track
5	/A	BROWN	/A track
6	/Z	YELLOW	/Z index
7	B	PINK	B track
8	/B	BLACK	/B track

+24 VDC feeds encoder +U; X12 pin 1 S only monitors that supply. 0 V connects encoder GND to X12 pin 2. Connect cable shield to PE at one point.

Wire colours are taken from the existing DFS60S Pro drawing; verify the installed encoder label and continuity before termination.

OPTION B - TWO 3-WIRE PROXIMITY SWITCHES: SEPARATE A AND B CABLING

PROXIMITY A -> AXIS 1

3-wire sensor - PNP/NPN as configured

+24 VDC PELV/SELV	to sensor supply +	SENSOR +
0 VDC	to sensor 0 V and module common	GND
sensor output	motion pulse signal	A12
+24 V monitor branch	supply supervision only	S12

S12 monitors +24 V only; GND is common 0 V. Do not use two-wire proximity switches.

PROXIMITY B -> AXIS 1

3-wire sensor - PNP/NPN as configured

+24 VDC PELV/SELV	to sensor supply +	SENSOR +
0 VDC	to sensor 0 V and module common	GND
sensor output	motion pulse signal	B12
+24 V monitor branch	supply supervision only	S12

S12 monitors +24 V only; GND is common 0 V. Do not use two-wire proximity switches.

INSTALLATION HOLD: confirm the selected sensor method and Axis 1 assignment in the actual PNOZmulti project before wiring or commissioning.