


>> Clamps for Guiding Components





Guide Bush Clamp

Code: **G102**

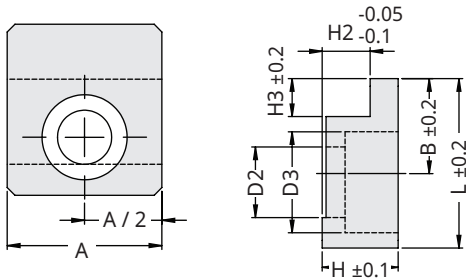

Order Code	d - d1 Pillar / Bush	A	B	L	H	H2	H3	D2	D3	Screw
G102A	25 - 32 40 - 50	20	12.5	20	10	6.3	5	7	11	M6x16
G102B	63 - 80 100 - 125 160	20	15	25	12	6.3	5	9	15	M8x20
G102C	63 - 80 100 - 125	25	21	32	16	6.3	10	11	18	M10x20
G102D	63 - 80 100 - 125 160	32	21	32	16	10	10	11.5	17.5	M10x20

It is used to fix from cap or flange portion at guide pillar and self lubricating bush. While using for self-lubricating guide bushes and other bush components with bushes for $\varnothing \leq 63$ - 2 pcs. and for $\varnothing \geq 80$ - 3 pcs. clamps are used. Mounting screws should be supplied separately.

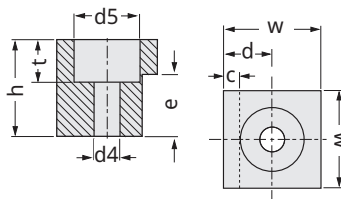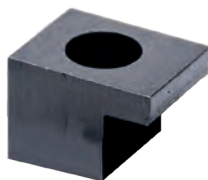

Bush Clamp

Code: **G102E**

Bush	w	p	h	e	c	t	d4	d5
40	18	9.5	12	8	3	7	6.6	11
50	22	12	16	10	4	9	9	15
63	26	15	20	12	5	11	11	18
80	26	15	25	16	5	11	11	18
100	26	15	32	20	5	11	11	18




Order: **G102E**. Bush



Guide Pillar & Bush Clamp


Order Code: **G100**

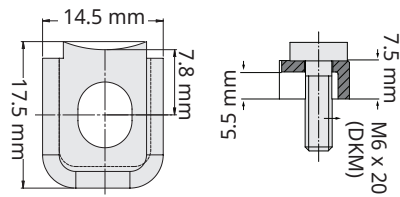

Mounting Example




G100 Bush

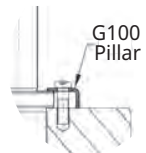

G100 Pillar

Can be used in clamping of demountable guide pillars (G10 - G15 - G01 - G08) in clamping system of guide pillars.


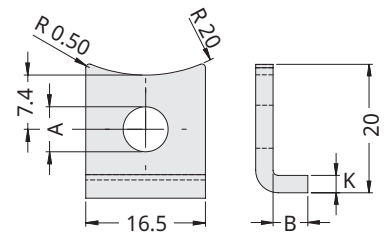


Guide Pillar & Bush Clamp

Code: **G143**

Order Code	Form	Screw	A	B	K
G143A	A	M6	6.20	4.80	2.5
G143B	B	M8	8.40	5.80	4

Thick and walled clamps used in clamping of guide pillar / bush sets in dies.

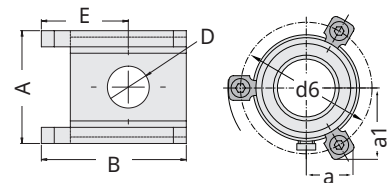

Screw / Form A
M6 x 20

Screw / Form B
M8 x 20

Guide Bush Clamp

Code: **G101**

Order Code	Bush	A	B	C	D	E	G
G101A	32 / 40 50 / 63 63 / 80 100 / 115	17.5	22.5	12	6.5	13.5	6
G101B	32 / 40 50 / 63 63 / 80 100 / 115 125	21	25.5	13.5	8.5	15	5.5


While using for self-lubricating guide bushes and other bush components with bushes for $\varnothing \leq 63$ 2 pcs. and for $\varnothing \geq 80$ 3 pcs. clamps are used. Mounting screws are supplied separately.




Code: **G110**

Mounting Flange

Guide pillar fixation & Support washer

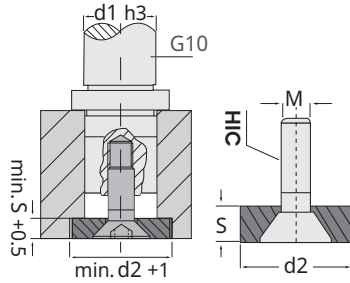

Order Code	d2	d1 Pillar Diameter	S Flange	M Screw
G11022	22	Ø 15 / 16	5.5	M8 x 20
G11025	25	Ø 19 / 20		
G11032	32	Ø 24 / 25		
G11040	40	Ø 32 / 30	7.5	
G11050	50	Ø 38 / 40	9.5	
G11060	60	Ø 48 / 50		
G11073	73	Ø 60 / 63		
G11093	93	Ø 80	12	M12 x 20

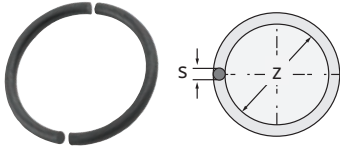


Code: **G112**

Circlip

G02 - G03 - G04 - G05 - G06 - G07
G09 - G20 = Compatible Guide Pillars

Order: **G112. Pillar**

Pillar	z	s
25	22.5	2.5
32	28	4
40	36	4
50	46	4
63	57	6
80	74	6
100	94	6

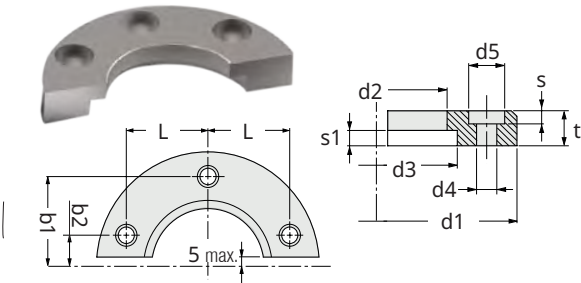

Bush Holder Flange

Code: **G118**

Bush	d1	d2	d3	d4	d5	t	s	s1	L	b1	b2
25	72	12	41	6.6	32	10	7	5	20	-	20
32	80	12	51	6.6	40	12	7	6	25	-	21
40	100	12	61	6.6	50	12	7	8	38.5	41	14
50	125	16	72	9	63	16	9	10	46	49	17
63	140	18	91	11	80	20	11	12	55	57.5	17
80	180	22	113	14	100	25	13	16	70	72	20
100	200	22	141	14	125	32	13	20	81	85	25



Order: **G118. Bush**

Reference:
CNOMO

Hex-socket Button Head Screw with Flange



Code: **IMBF**

ISO 7380-2
10.9 - Zinc Plated





NEW

d	L	d1	d2	SW
M6	10	13.6	3.3	4
	12			
	16			
M8	16	17.8	4.4	5
	20			
M10	20	21.9	5.5	6

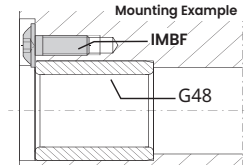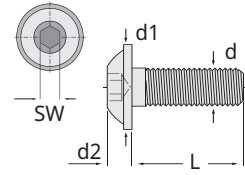

Order:
IMBF. d x L



NEW

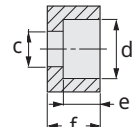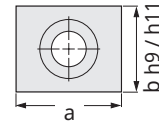

Holder Wedge Block (Ref: TSKMA)

Code: **G171**

Order Code	b	a	c	d	e	f	Tol.
G171 A	12	16	5.5	10	5	8	h9
G171 B	12	20	5.5	10	5	8	h9
G171 C	16	20	6.6	11	7	10	h9
G171 D	20	60	9	14	10	20	h11
G171 E	25	80	11	20	12	25	h11
G171 F	25	125	11	20	12	25	h11
G171 G	30	80	11	20	12	30	h11
G171 H	30	125	11	20	12	30	h11

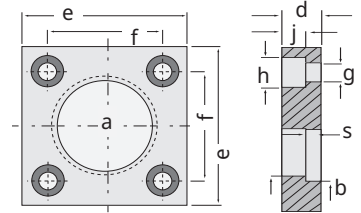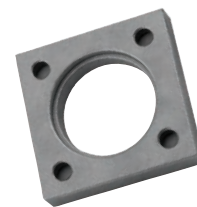

Square Flange for Guide Pillar

Code: **G119**

"G03 - G04 - G05" = Compatible Guide Pillars

a Pillar	b	d	e	f	g	h	j	s
25	28	10	45	31	6.6	11	7	2.7
32	37	10	56	36	6.6	11	7	4.2
40	45	12	70	50	6.6	11	7	4.2
50	55	14	80	55	9	16	9	4.2
63	70	18	100	70	11	18	11	6.2
80	87	20	110	80	13	22	14	6.2
100	107	20	140	100	13	22	14	6.2



Order: **G119. a (pillar)**