

## Installation of the DomoClick Quick Connection and Termination System


## The procedure is identical for all types

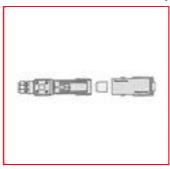


 Open the cover and draw it backwards. Remove the pressure part (cast metal).

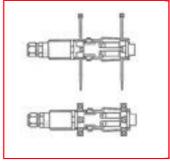


• pipe installation: use plastic fasteners wall installation: use metal brackets

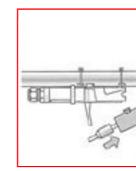


• Straighten the heating tape and cut it off at the marking of the housing.



• Remove 30 mm of the outer cover.

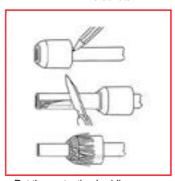


• Put the protection braiding over the pressure part.

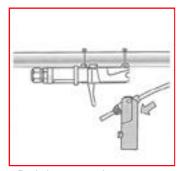

• Fix the housing to the pipe with

the plastic fasteners.

• Push the cover to the pressure part.

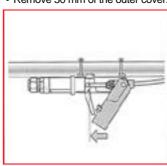


Insert the heating tape into the housing.

**IMPORTANT:** Push the heating tape against the red squeezing lever.




 Press the red squeezing-lever with your thumb and close the cover. Press the cover until **both** snap locks lock in place

## Installation of the Termination Cap

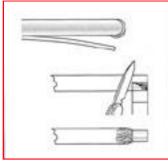

- Remove 15 mm of the outer sheath of the heating tape.
- Pull the protection braiding backwards.

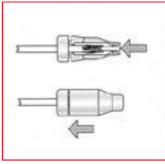

- Push the clamp part over the heating tape so that the heating tape meets the end of the clamp part.
- Push the sleeve over the clamp part until both cams snap in.



CAUTION! ensure free access to the connection terminals at any time.