
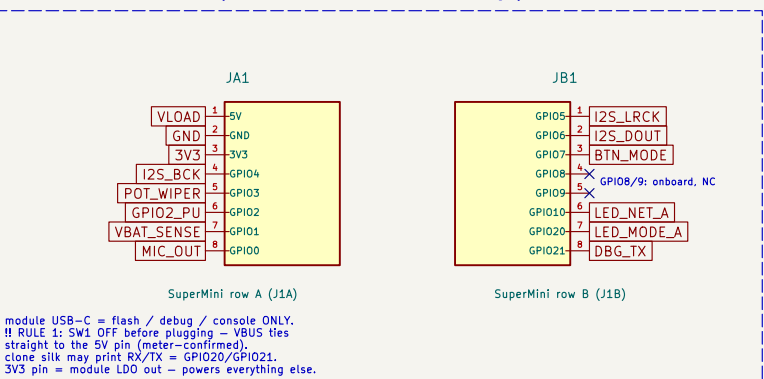



4 units for the show · 70 × 50 mm 2-layer · modules socketed · ESP32-C3 SuperMini + PCM5102A + TP4056 + MAX4466


LOAD-

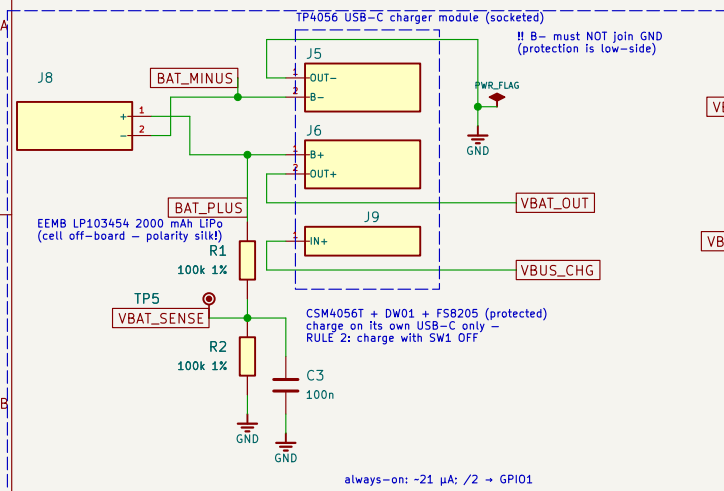


RULE 1 – SW1 OFF before plugging ANY USB.
The load-share block was meant to retire this rule; the
2026-07-26 review shows it cannot (state 4, §4.1/§4.3)
The rule stays until §4.4 passes on an assembled board.

RULE 3 – one USB at a time: charger-USB = charging, module-USB = development, SW1 ON only with no USB.


BREADBOARD DELTA (wiring.md): no load-share block – OUT+ → switch → 5V pin direct. VBAT_RAW = BAT_PLUS, VBAT_SW ≈ VLOAD. All signal wiring is identical.






J3 FMT/XSMT/DEMP/FLT are set by the module's own back bridges:
 FLT=L DEMP=L XSMT=H FMT=L – solder BEFORE first power-up;
 XSMT open = DAC hard-muted (#1 no-output cause – wiring.md §4)

10/R11: fit 0 Ω if the module's -470 Ω output R is confirmed in-line (§3.2)
 /Y ground pads + J3 AGND = analog island, single-neck join near J2 GND (§6.3)





Size: A3	Date: 2026-07-26
----------	------------------

KiCad E.D.A. 10.0.5

Rev: 1.1

Id: 1/1