



4 units for the show · 70 × 50 mm 2-layer · modules socketed · ESP32-C3 SuperMini + PCM5102A + TP4056 + MAX4466


LOAD-

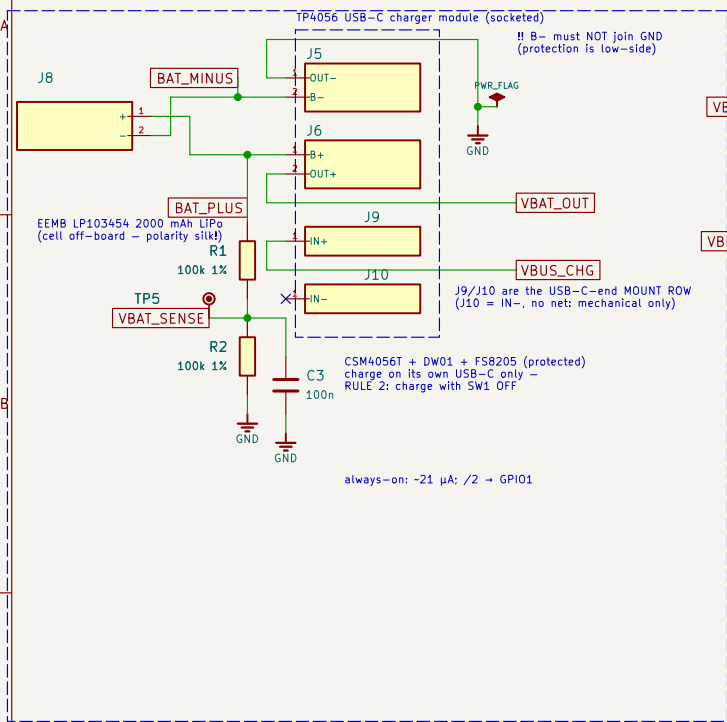



RULE 3 – one USB at a time: charger-USB = charging,
module-USB = development, SW1 ON only with no USB.

VBAT_SW $\approx$ VLOAD. All signal wiring is identical.

package opposite ways (TL451 onsemi vs TI; BC557 C-B-E vs E-B-C) - check the datasheet of the part actually bought (pcb.md \$5).







TR4

