ACRELEC



Dunkin' K27i
Single-Sided Kiosk
Installation Guide

02/19/2024

Version 1.2

TABLE OF CONTENTS

ABOUT THIS DOCUMENT 3

DOCUMENT AUDIENCE 3

SUMMARY OF CHANGES 4

TOOLS REQUIRED 5

KIOSK KIT CONTENTS 7

FISERV PAYMENT TERMINAL KIT CONTENTS 8

PRELIMINARY STEPS 9

INSTALLATION ENGINEERS CHECKLIST 14

STEP 1: DATA CABLING INSTALLATION (IF REQUIRED) 15

STEP 2: INSTALL BRIDGE PC & UNMANAGED SWITCH 16

BRIDGE PC & UNMANAGED SWITCH NETWORKING DIAGRAM 16

STEP 3: ATTACH THE KIOSK BODY TO THE FOOT 19

STEP 4: DEFINE KIOSK LOCATION & FIX TO THE FLOOR 21

FLOOR & CEILING MARKING 21
DRILL FLOOR FIXATION HOLES 22
FIX KIOSK TO THE FLOOR 23

STEP 5: ATTACH KIOSK HARDWARE 24

ATTACH PANEL PC 24
ATTACH FOOT COVERS 25
CEILING POLE ASSEMBLY 26
CEILING POLE EXTENSION SLEEVE (IF REQUIRED) 26
CEILING TRIM PLATE 26
ATTACH CEILING POLE 27

STEP 6: PAYMENT TERMINAL INSTALLATION 29

STEP 7: CONNECT KIOSK TO POWER & NETWORK 31

STEP 8: CONNECT LED LIGHT PERIPHERAL 32

STEP 9: DEVICE CONNECTIVITY 33

VERIFY KIOSK NETWORK CONNECTIVITY 33
VERIFY PAYMENT TERMINAL CONNECTIVITY 36
SCANNER CONNECTIVITY & CONFIGURATION 38

STEP 10: TRANSACTION TESTING 39

INSTALLATION SUPPORT CONTACT 41

COPYRIGHTS 41

ABOUT THIS DOCUMENT

This document provides instructions for the installation of the K27i Single-Sided kiosk (and related equipment) at Dunkin' store locations.

DOCUMENT AUDIENCE

This document should be used by the following individuals:

- Field Engineers who are responsible for the installation of Acrelec K27i Single-Sided Kiosks and connection to the Dunkin store network.
- Acrelec Deployment and Field Services professionals, for the purpose of verifying kiosk test and turn-up scenarios.

SUMMARY OF CHANGES

Date	Author	Revision	Details
06/30/2023	Brandon Satterwhite	1.0	Document creation
09/19/2023	Brandon Satterwhite	1.1	• Revisions to requirement 8 of Preliminary Steps section to include pictures of unopened equipment boxes. • Revisions to Ceiling Pole Assembly section to include the use of set screws. • Added QR code scan requirement to Scanner Connectivity & Configuration section. • Additional minor revisions for emphasis and/or clarity.
02/19/2024	Brandon Satterwhite	1.2	• Revisions to preliminary steps to add examples of completion pictures. • Added Installation Engineers Checklist Section. • Revised payment terminal installation section to capture: o use of new IO Module orange security cable. o step for removal of stylus and stylus holster. • Other minor revisions for emphasis and/or clarity.

Where significant changes are made to this document, the version number will be incremented by 1.0. Where changes are made for clarity, ease of reading, or to update historical information where no change is made to the meaning or intention of this document, the version number will be increased by 0.1.




TOOLS REQUIRED

 Rotary Hammer Drill & Masonry Bit Set (to include: 3/8" or 9mm, 1/2" or 12mm, 5/8" or 15mm drill bits)	 A-frame Ladder (min 8 ft)
 Flat-head & Phillips Screwdrivers	 3/8 Drive Ratchet & Metric Socket Set
 Assorted Allen Wrenches	 Hammer
 Hack Saw	 USB Keyboard & Mouse
 Measuring Tape	 Torpedo Level
 Box Cutter	 Shop Vacuum
 Electrical Tape	 Electric Extension
 Drywall Saw	 Portable HDMI Monitor & HDMI Cable

TOOLS REQUIRED (CONTINUED)

 Cat6 Ethernet Cable	 RJ45 Ethernet Cable Ends (Male)
 Data Cable Crimper	 Network Cable Tester
 Fish Tape and/or Push Rods (Min 100 ft)	 Laser Level

KIOSK KIT CONTENTS

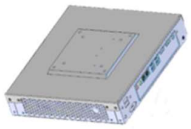Quantity	Description	
1, or as ordered	K27i Kiosk & Panel PC Assembly	
1 (per kiosk)	K27i Kiosk Foot	
1 (per kiosk, optional)	Ceiling Pole Assembly	PRODUCT IMAGE COMING SOON
1 (per kiosk)	Payment Terminal Bracket (payment terminal not included)	
1	Bridge PC	
1	D-Link Unmanaged Switch	
1	15' NEMA 5-15 to C13 power cable extension	
1	4' C14 to C13, NEMA 5-15R Y Splitter Power Cable	
2	3' Cat6 Ethernet Patch Cable	
1	Silicone Adhesive	
6	Floor Anchors	

FISERV PAYMENT TERMINAL KIT CONTENTS

Item	Description	Qty (per kiosk, unless noted)
Verifone M400		1
Verifone M4XX D1 IO Block (Orange Dongle)		1
Verifone Power Supply		1

NOTE: Acrelec does not supply the payment terminal kits. These will be shipped to the store separately by Fiserv. Inquire with the store's Franchisee or Manger on Duty (MOD) for these devices upon arriving on site.

PRELIMINARY STEPS

To allow for a successful installation, it is required that the installation team validate the following items upon arrival on site and prior to unpacking any kiosk equipment:

1. ***Verify with the Store Manager or designated site contact that the requisite 110v AC outlets are installed and are active.***

   - ✓ One 120v AC outlet per kiosk face
   - ✓ One 120v AC outlet for Acrelec Bridge PC
   - ✓ One 120v AC outlet for D-Link Unmanaged Switch

   For floor-mount kiosk installations, the AC outlets for the kiosks should be installed above the ceiling, or power lines should be running from conduit under the floor.

   For wall-mounted kiosk installations, the AC outlets for each kiosk should be installed to the wall directly above (or below) where kiosk will be fixed to the wall.

2. ***Verify with the Franchisee or designated site contact whether the requisite Cat 6 data cable runs have been installed. In most cases, these will not be pre-installed and will need to be done by the kiosk installation team.***

3. ***Review and validate with the store manager or designated site contact the exact location where the kiosks are to be installed.***

4. ***Verify delivery of kiosk(s) and related equipment. If delivery has not yet been made, please check the delivery tracking information – it is possible that delivery has been scheduled to occur within an hour of your arrival on site.***

   Typical Acrelec Kiosk delivery footprint:





5. ***Once delivery of the kiosk(s) and related equipment has been verified, examine the shipment with the Store Manager or designated site contact. Note any damages to the shipment that may be present. Take pictures of the damaged area(s).***

6. ***Proper cable management practices MUST be followed at all times.***


7. ***Upon completion of steps marked with the icon, please contact the Acrelec Product Delivery Team to verify connectivity:***



   - ✓ **(866) 932-0080, Option 3 (Mon – Fri, 8AM – 5PM Eastern)**

8. **Once installation is completed, a Dunkin Kiosk Installation Report must be completed and submitted to Acrelec. The installation report is administered via electronic form and can be accessed via the link below:**



   - ✓ ***https://app.smartsheet.com/b/form/141f9472fded4a8a8593aae40e6882bb***

9. The installation report MUST include the following set of installation completion photos (examples shown):

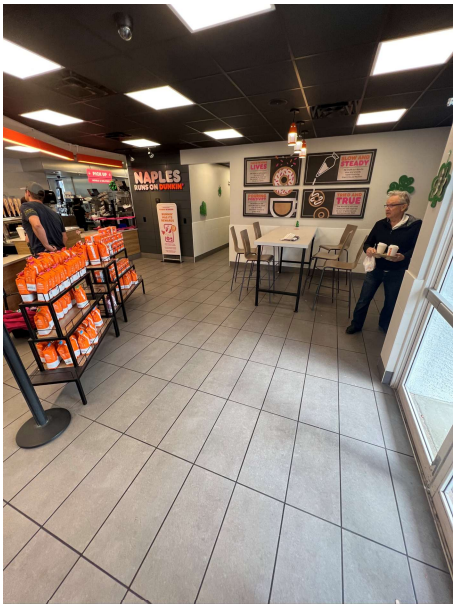1. **BEFORE BEGINNING INSTALLATION – Wide shot of installation area to clearly show floor and ceiling in the photo.**	
2. **Boxes of equipment on arrival at the location and prior to opening.**	

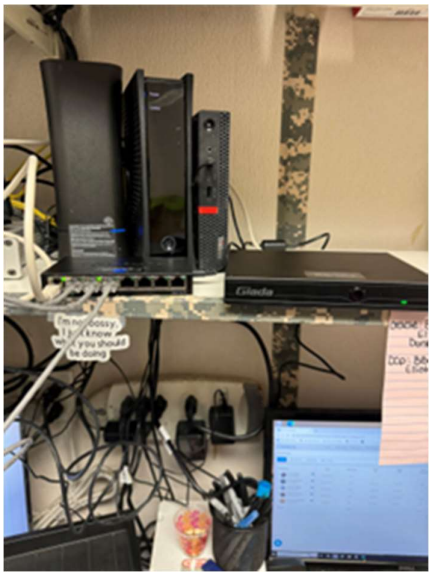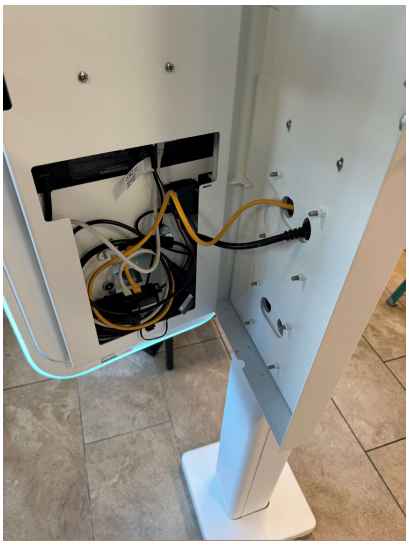3. **Infrastructure/Network location with Bridge PC and D-Link unmanaged switch installed and visible.** **NOTE: Show evidence of proper port usage on Comcast Cisco Meraki Switch – D-Link (port 13) and Bridge PC (port 14)**	
4. **Cable management is neat and tidy, with foot cover plate clearly visible.**	 

5. Ceiling pole attachment point to kiosk body. **NOTE: Photo MUST show that ALL four screws are securely fastened.**	 
6. Ceiling pole trim plate. **NOTE: Ideal placement is in the center of the ceiling tile, whenever possible. Ceiling pole trim plate MUST NOT be placed on the metal ceiling grid.** **For ceiling heights greater than 122", where 1m ceiling pole extensions are used, the fixation grub screws should be facing the REAR of the unit.**	

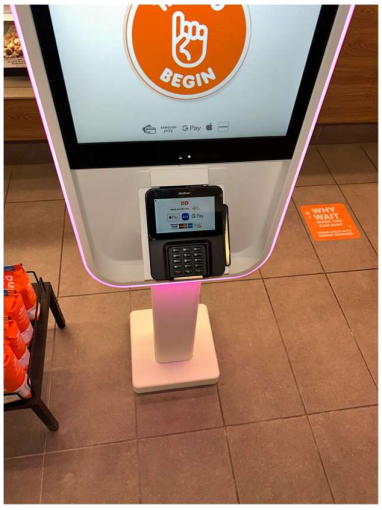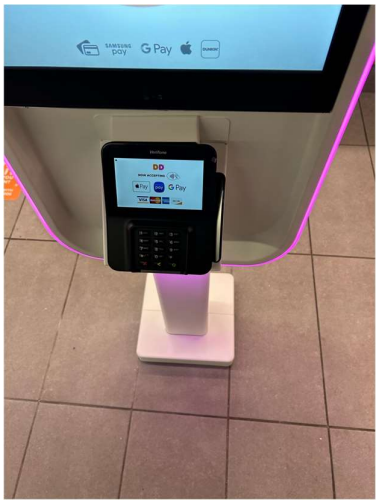7. **Kiosk payment terminal is securely installed and active.** **NOTE: The payment terminal stylus and holster should NOT be installed. See Step 6F for removal procedure.**	 
8. **Overview Completion Photo** • **Area cleaned with all tools removed.** • **Magenta LED Light Strip Operational.** • **For multiple kiosks, including double-sided units, ensure all faces are visible in the photo(s).**	

INSTALLATION ENGINEERS CHECKLIST

Prompt	Action	Timings
	1. **Welcome** – Introduce yourself to the site contact as the Lead Technician scheduled to install the Acrelec solution and confirm expected duration / time required to ensure a smooth installation. Confirm agreed pre-requisites are in place. **Validation of finalized kiosk placement and positioning with the site contact prior to any drilling.** Confirm expected timings based on number of kiosks and whether data cabling is required < 4 hours.	**15 Minutes**
	2. **Validate delivery of all Acrelec and Fiserv boxes** **In the event of any issues above, missing or damaged equipment – Escalate directly to the Acrelec Project Deployment Team Call (866) 932-0080 Option 3**	**15 Minutes**
	3. **Complete Data Cabling Installation (IF REQUIRED)**	**1 – 2 Hours**
 	4. **Installation of Bridge PC and D-Link unmanaged switch** Once the infrastructure is on-line, call the Acrelec Project Deployment Team. **Call (866) 932-0080 Option 3**	**15 minutes**
	5. **Take supporting photos 1–3:** Installation Area, Boxes & Installed Infrastructure	**15 minutes**
	6. **Installation of Kiosk hardware** Power & USB cables secured and cables managed. **MAGENTA LED LIGHT STRIP OPERATIONAL** **CEILING POLE, IF USED, IS LEVEL AND PLUMB**	**1 Hour (Per unit)**
	7. **Payment Terminal installation** **M400 stylus and rubber stylus holster should not be installed and may need to be removed.**	**15 minutes**
	8. **Confirm Connectivity & Testing** Credit / Debit Card transaction. Gift Card transaction. Scanner Update	**30 minutes**
	**9. Take supporting photos 4 – 8**	**15 minutes**
	**10. Confirm completion with site contact with handover of keys as needed and formal sign-off approval.**	**15 minutes**


STEP 1: DATA CABLING INSTALLATION (IF REQUIRED)


In very limited cases, the requisite home data cable runs for the kiosk(s) will already be present. However, in most cases, home data cable runs will NOT be pre-installed and will need to be installed by the kiosk installation technician.

- Two Cat6 data cable runs are required for each kiosk (one as primary, the second for redundancy) are to be installed from the back office near the location of the Comcast/Cisco Meraki 24-port managed switch and end where the kiosk(s) will be located within the store:



- Each data run should have enough length (6'-8') to allow it to be connected to the kiosk through the ceiling pole or kiosk foot.
- Each data run must be terminated at both ends using a RJ45 male cable end according to standard T-568B pinout and labeled at each end to identify its purpose:

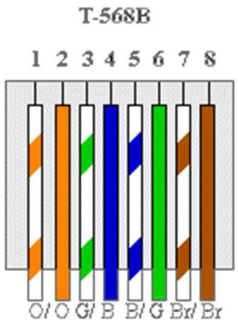

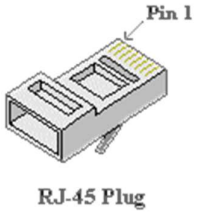



- For floor-mount kiosk installations, the data cabling should be installed above the ceiling, or should be running from conduit under the floor.

- **IMPORTANT: UNDER NO CIRCUMSTANCES SHOULD EXISTING DATA CABLING FOR THE STORE'S POINT-OF-SALE (POS) SYSTEM BE RE-PURPOSED FOR USE WITH THE SELF-ORDERING KIOSK.**

STEP 2: INSTALL BRIDGE PC & UNMANAGED SWITCH

The Bridge PC and D-Link unmanaged switch will be installed in the area of the store where the networking equipment (Comcast/Cisco Meraki Switch) is located. Typically, this will be in the Manager's office. Please confirm the location of the networking equipment with your on-site contact before proceeding.

The Bridge PC is a small headless (no monitor) PC unit that will be connected directly to the store's Comcast/Cisco Meraki switch via port 14. The D-Link unmanaged switch will be connected to the store's Comcast/Cisco Meraki switch via port 13. A power supply, cord, and data patch cable are provided for both devices.




Bridge PC




Unmanaged Switch

Bridge PC & Unmanaged Switch Networking Diagram

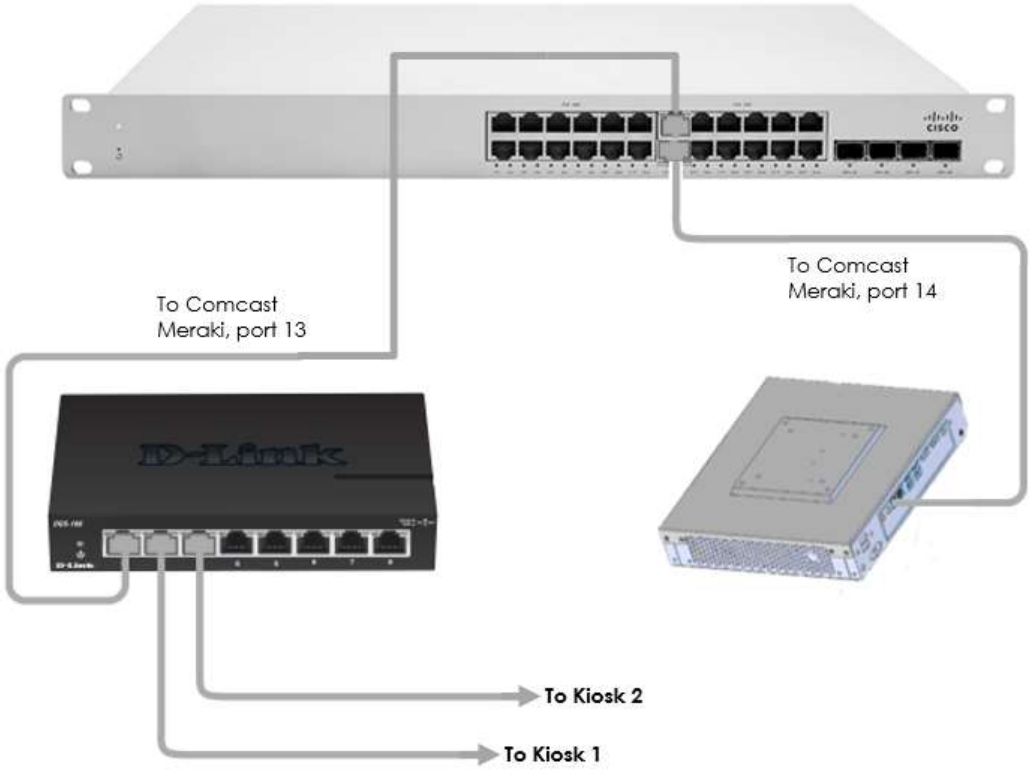


Place the Bridge PC and D-Link switch on a free shelf (if available) or they may be stacked on top of or next to the Comcast/Cisco Meraki Switch:

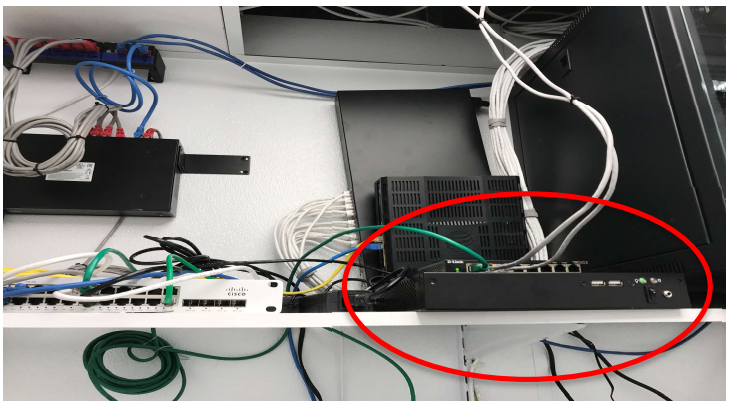

Connect the included ethernet patch cable to the LAN (ethernet) port on the Bridge PC. Connect the other end of the data patch cable from the Bridge PC to port 14 on the Comcast/Cisco Meraki Switch:




Connect the power supply to the 12V input of the Bridge PC and connect the power cord to the power supply. Plug the Bridge PC power cord into an available AC outlet, power strip, or surge protector. The Bridge PC should turn on automatically once connected to power:

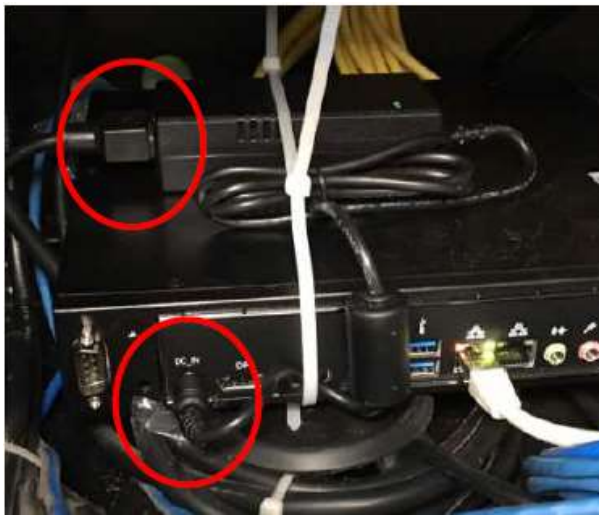

Connect the supplied power adapter to the D-Link unmanaged switch. Plug the power adapter for the switch into an available AC outlet, power strip, or surge protector. Verify the power indicator is lit on the switch:



Connect one end of the included ethernet patch cable to port 1 on the D-Link unmanaged switch. Connect the other end of this patch cable to port 13 on the Comcast/Cisco Meraki switch. Connect the ends of the data cable runs that were installed for each of the kiosks to the D-Link unmanaged switch starting with port 2.

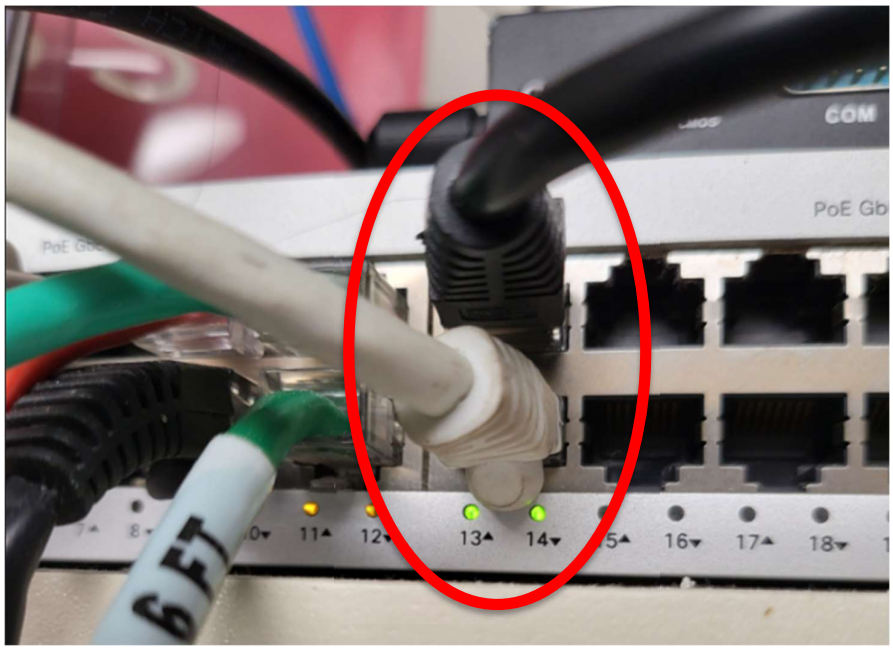

Cisco Merkaki Switch: Ports 13, 14 (In Use)

Once these steps have been completed, contact Acrelec's Product Delivery to verify Bridge PC connectivity – (866) 932-0080, Option 3


STEP 3: ATTACH THE KIOSK BODY TO THE FOOT

NOTE – THIS OPERATION REQUIRES 2 PEOPLE







3A. Remove the front and back plate cover using the four M04x010 screws:

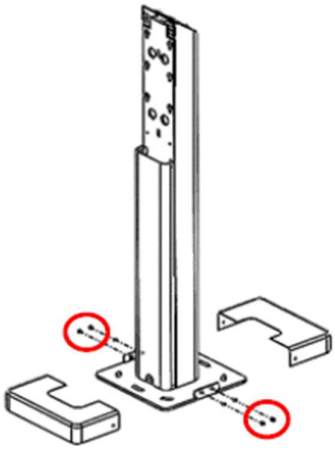

3B. Remove the kiosk foot back cover using the two M04x015 screws:

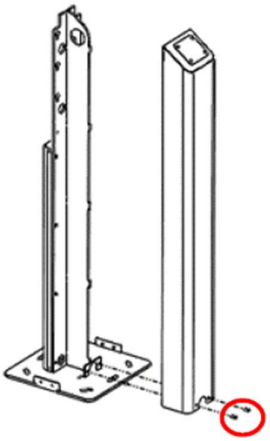


3C. Remove the kiosk foot front cover using the eight M04x015 screws:

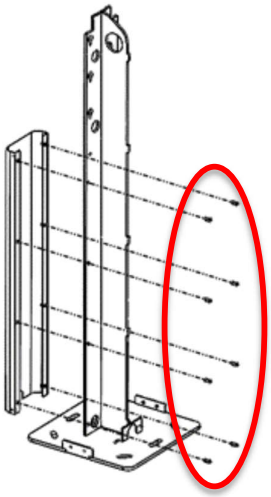

3D. Place two of the M06x030 screws in the top holes of the body/door:



3E. Hang the body/door on the kiosk foot using the top set of mounting holes:

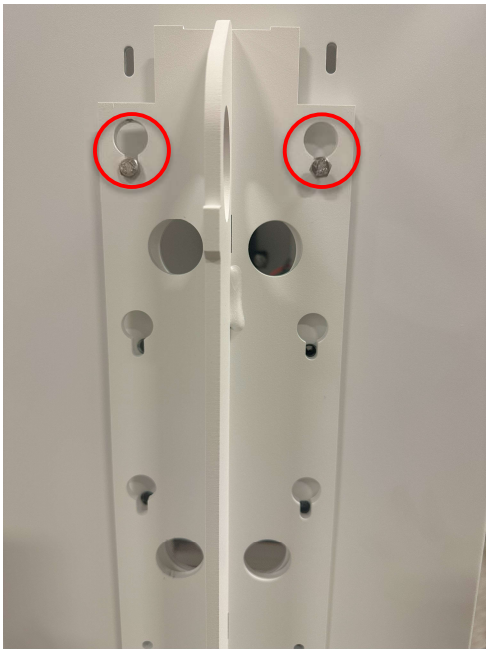

3F. Use six of the M06 washers and M06x030 screws to affix the body/door to the kiosk foot:



3G. Remove the top two M06x030 screws shown in Steps 3D, 3E and then replace using the remaining two M06 washers:



STEP 4: DEFINE KIOSK LOCATION & FIX TO THE FLOOR

NOTE – THIS STEP REQUIRES THE INVOLVEMENT AND APPROVAL OF THE STORE OWNER OR THEIR DESIGNEE. DO NOT MARK/DRILL/CUT FLOOR OR CEILING TILE WITHOUT FIRST HAVING AN AGREEMENT OF KIOSK POSITIONING WITH THIS INDIVIDUAL!

Floor & Ceiling Marking

After final kiosk positioning has been agreed, position the kiosk foot back cover that was removed in Step 3B back into place and remove the ceiling pole fixation cover plate using the four M04x012 screws. Place a magnetic laser line level on the back of the kiosk body/door to help determine proper ceiling marking positions:





NOTE – ENSURE THAT KIOSK PLACEMENT ALLOWS FOR A CEILING MARKING THAT PROVIDES ADEQUATE SPACE SO THAT CEILING POLE TRIM PLATE IS NOT PLACED ON THE METAL CEILING GRID/FRAME:










IDEAL PLACEMENT IS IN THE CENTER OF THE CEILING TILE, WHENEVER POSSIBLE.


Align the laser so that the upper and lower indicators are visible. The lower mark should be positioned within the area where the ceiling pole will attach to the kiosk. Once indicators are in place, mark the upper indicator on the ceiling:

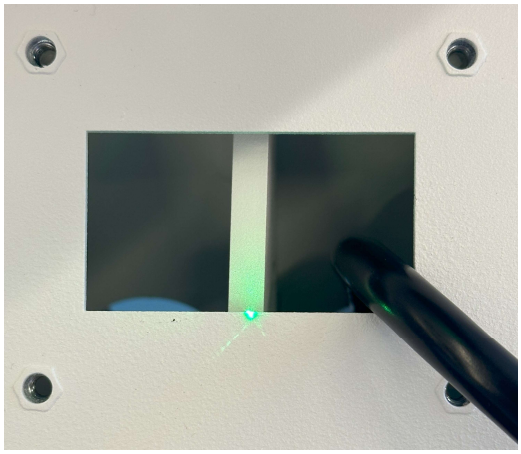

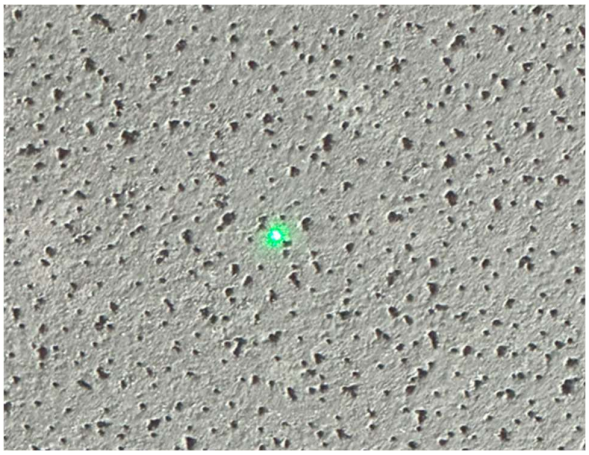


Once indicators are in place, mark the upper indicator on the ceiling with tape. Remove the ceiling tile and set aside. Use a marker or pencil to mark the floor fixation holes:

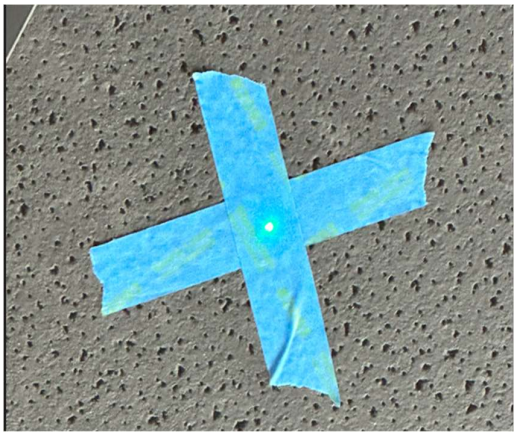

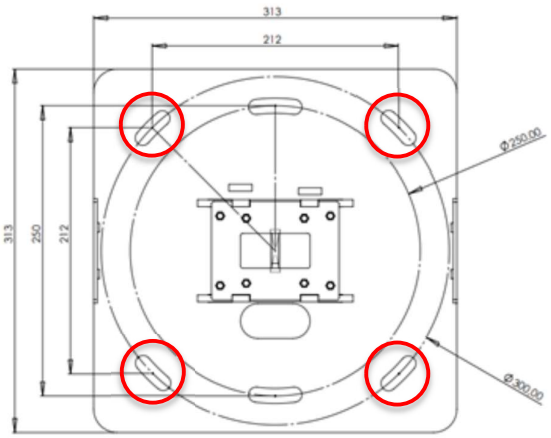

Drill Floor Fixation Holes

Remove the kiosk foot from its final position and locate the 4 drilling marks on the floor. Using a rotary hammer drill and masonry bit, drill the 4 holes for each foot. After checking that the holes are drilled to the proper depth and free of debris, install the provided drop-in anchors using a hammer to ensure that each anchor is flush with the floor:

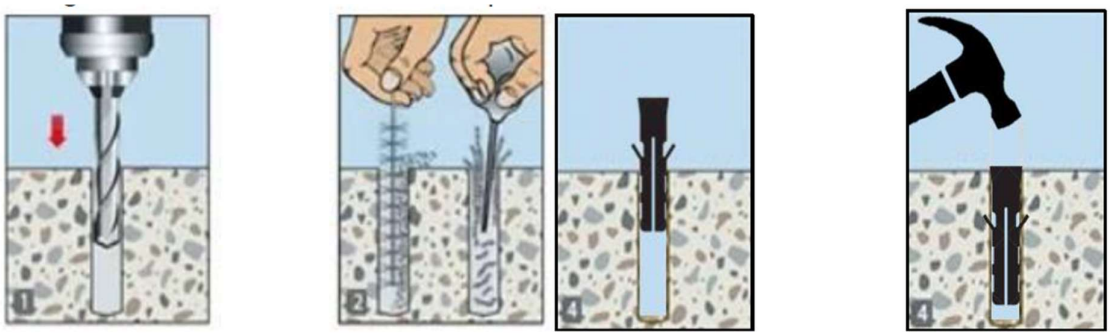

Fix Kiosk to the Floor

Move the kiosk back to its final position and install the provided anchor bolts and secure the kiosk to the floor. If necessary, use additional flat washers to ensure the kiosk foot is level.





STEP 5: ATTACH KIOSK HARDWARE


Feed the single end of the Y-Power cable through one of the two holes on the kiosk foot and then exit through the top of the back foot cover. The double cable end will remain inside the kiosk body.






Attach Panel PC


Open the kiosk door using the kiosk key. Using four M05x012 screws, fix the Panel PC to the kiosk door.

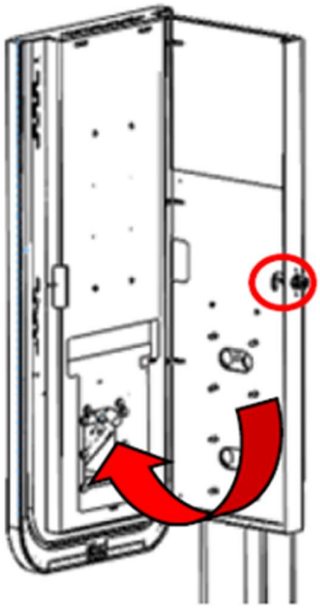

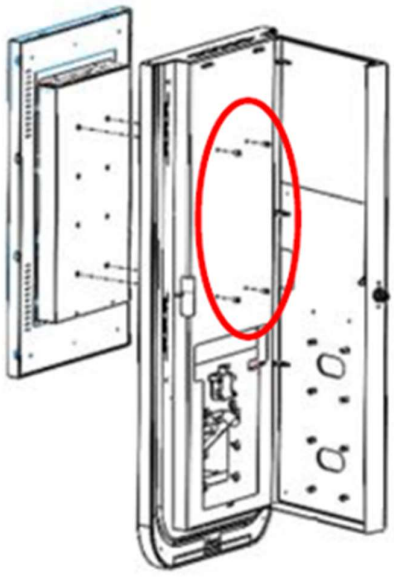


Attach Foot Covers


Attach the kiosk foot front cover to the foot using the eight M04x015 screws:

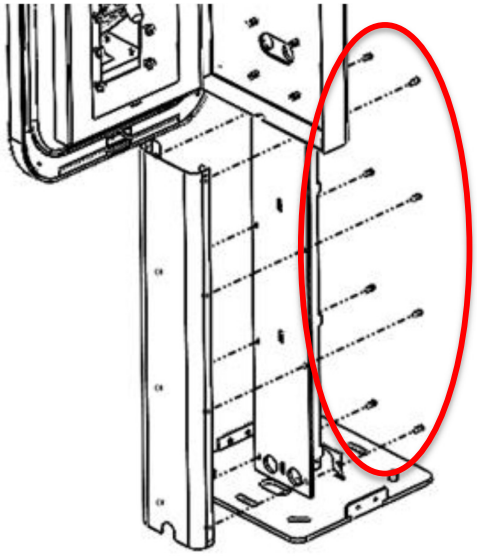

Attach the kiosk foot back cover using the four M04x015 screws:

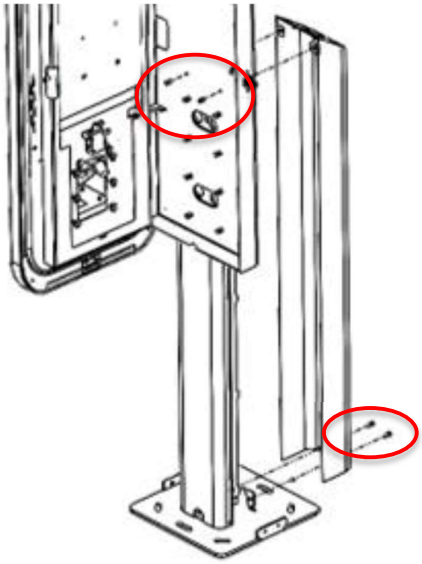

Attach the front and back foot plate cover using the four M04x010 screws:

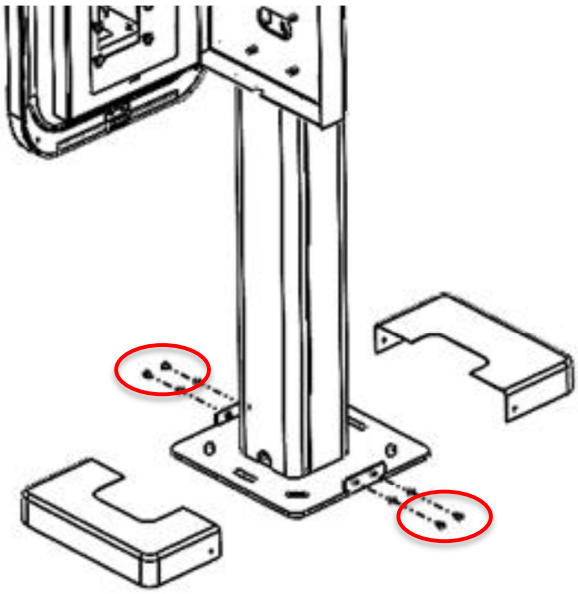


Ceiling Pole Assembly

NOTE: The ceiling pole assembly is intended for use on drop-type ceilings with removable tiles. For store locations with an exposed ceiling, the ceiling pole assembly can still be used without the ceiling trim plate. It is the responsibility of store management to choose how to tie the ceiling pole into the exposed ceiling trusses – Acrelec does not supply these parts.

Ceiling Pole Extension Sleeve (if required)

NOTE: The K27i kiosk standard installation allows for a drop-grid ceiling height of 122 inches (10' 2"), measured from the finished floor to the drop grid. A ceiling height greater than 122 inches will require the use of the included ceiling pole extension sleeve. The extension will increase the maximum ceiling height to 161 inches (13' 5"), and is currently the maximum installable ceiling height allowed.

If required, slide the ceiling pole extension sleeve onto the top (ceiling grid) end of the ceiling pole and secure to main ceiling pole using the included M04x4 (4) and M05x5 (2) set screws.

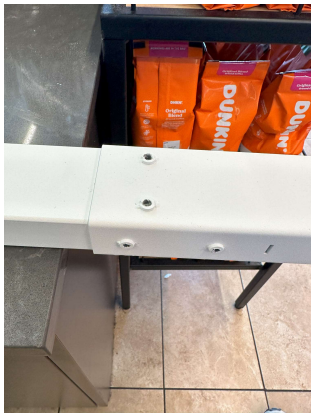




Ceiling Trim Plate

Using the ceiling tile measurement and marking made in Step 4, position the ceiling trim plate onto the front side of the tile and gently push the threaded studs into the ceiling tile. Slide the second plate over the stud ends on the back side of the tile and secure the ceiling tile into place using the included nuts.





Using a utility knife, cut out the section of tile inside the trim plate. Place the ceiling tile back into place and let power and data connections coming from above the ceiling grid pass through the hole cut into the tile.



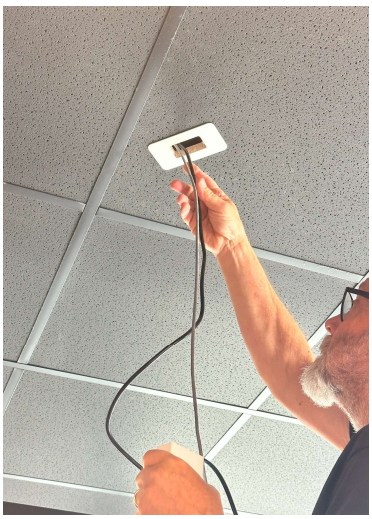

Attach Ceiling Pole

Position the ceiling pole in place and feed power and data connections from above the ceiling grid into the top of ceiling pole. Lift up on the ceiling pole to assist with guiding cabling through the ceiling pole. Connect the single end of the Y cable coming from the kiosk foot to the main power coming from the ceiling. Bring the data connection into the kiosk via one of the holes in the kiosk foot.

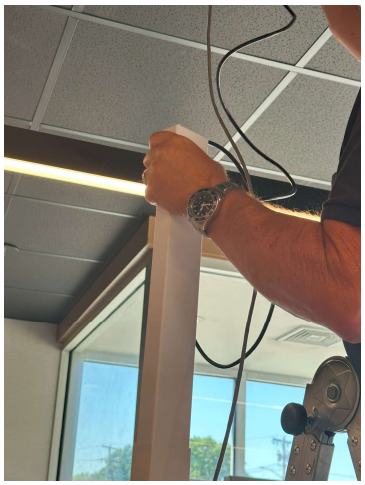




Line up the ceiling pole with the kiosk foot and ceiling trim plate. Attach using the four M04x012 screws removed during Step 4.





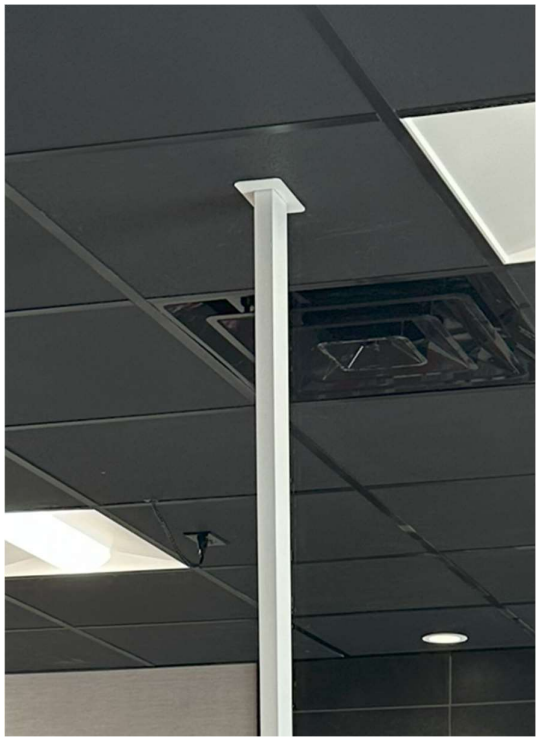





STEP 6: PAYMENT TERMINAL INSTALLATION

NOTE: the Verifone M400 payment devices are not supplied by Acrelec and will arrive at the store location separately prior to or on the day of kiosk installation. Please speak with the on-site contact to obtain the payment device for each kiosk.

6A: Attach the EFT bracket using the six M04 knurled nuts:

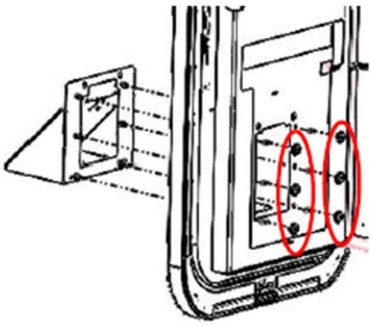


6B: Attach the 3 M03x012 screws to the EFT bracket. Be sure to use the LOWER set of holes:

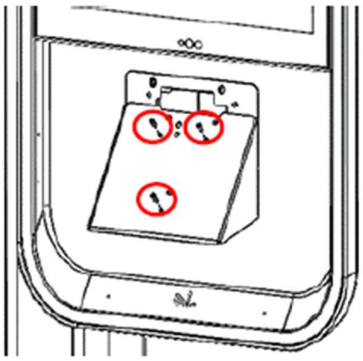


6C: Attach the ORANGE USB-C cable end to the USB-C port on the IO Module and lock into place by turning the metal screw tab above the USB-C connector clockwise.




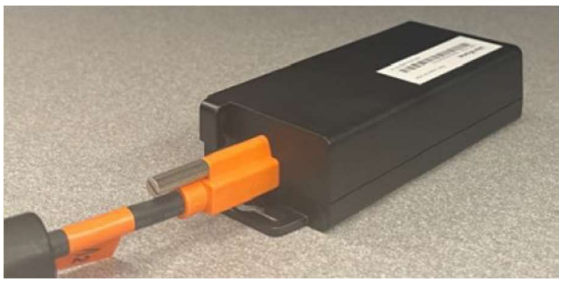

6D: Attach the payment device IO Module to the kiosk body and pass the cabling end through the cabling outlet on the door:

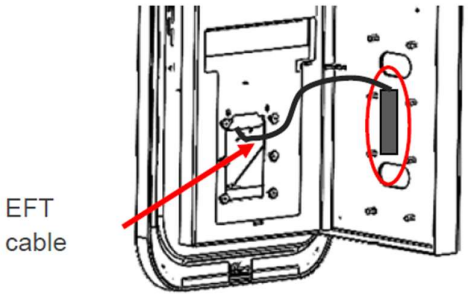


6E: Connect the BLACK USB-C cable end to the USB-C port at the back of the payment terminal:

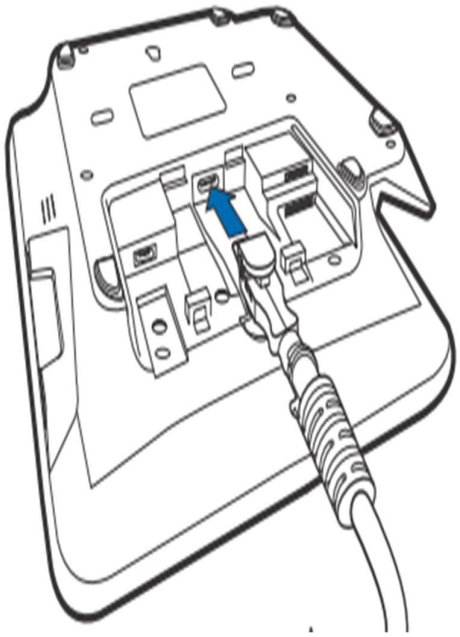


6F: If present, remove the payment terminal stylus and holster by pressing down on the release button:



6F: Attach the payment terminal to the EFT bracket using the screws installed during Step 6B and then secure to the bracket using one M05x012 screw and one M03 washer:

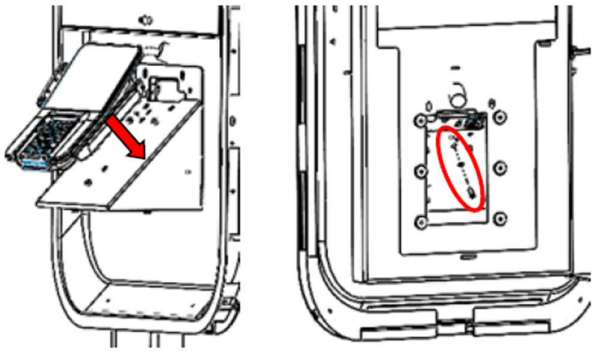


6G: Attach the EFT cabling cover using two M04 knurled nuts:

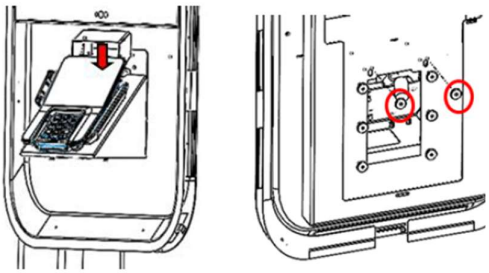

STEP 7: CONNECT KIOSK TO POWER & NETWORK

Connect the payment terminal 12v power supply to the payment terminal COMM Module and connect the adapter plug end to the kiosk's Y-cable terminal. Connect the main kiosk data connection coming from the store's switch (home run) to the first ethernet port. Connect a separate patch cable from the second ethernet port to the ethernet port on the kiosk panel pc.

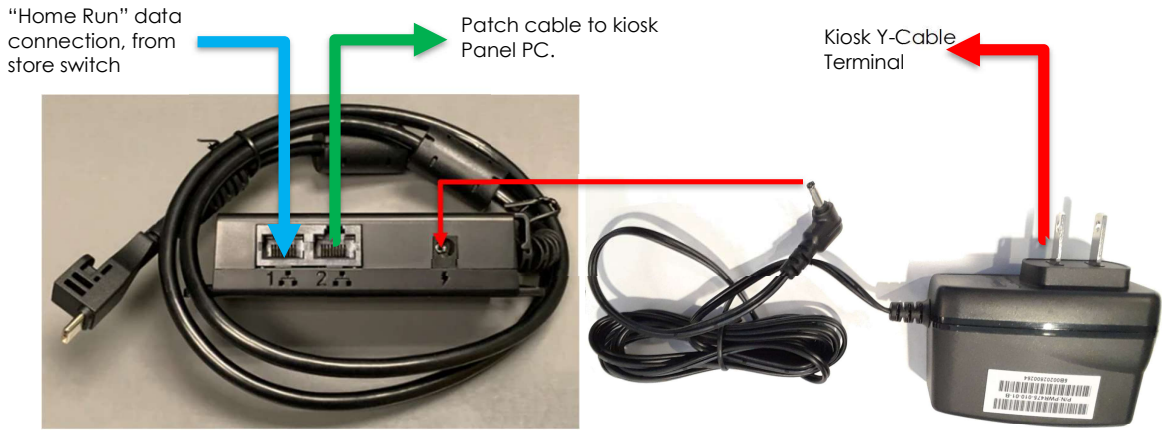


Connect the Panel PC's power supply cable to the Panel PC and connect the plug end to the remaining open terminal on the kiosk's Y-cable.



The Panel PC will begin to boot up immediately upon power recognition.


STEP 8: CONNECT LED LIGHT PERIPHERAL

Connect the LED light strip power supply cable from the bottom of the kiosk I/O board to the LED power supply port on the kiosk panel pc:

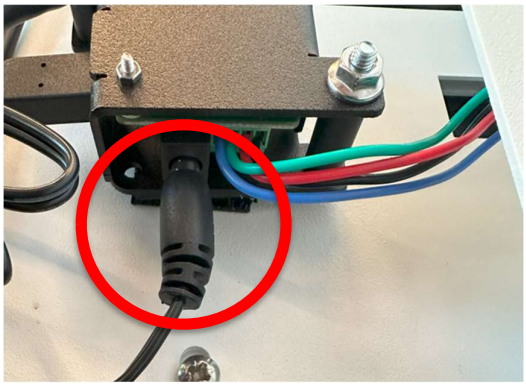



Connect the LED light strip USB driver cable from the Micro-USB port on the kiosk I/O board to an open USB port on the kiosk panel pc:

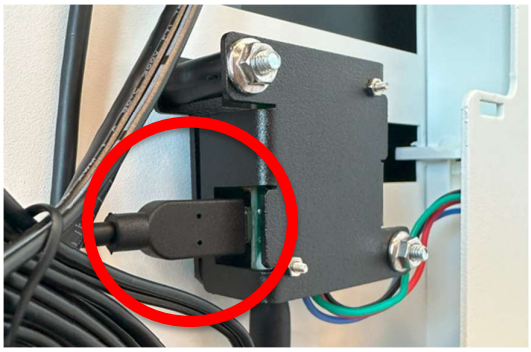



NOTE: Ensure that care is taken when connecting the Micro-USB cable to the kiosk I/O board so as to prevent damage to the Micro-USB port.


STEP 9: DEVICE CONNECTIVITY

NOTE: These steps should be completed for each kiosk installed and ONLY with the assistance of the Acrelec Installations Team

Verify Kiosk Network Connectivity

After the device has finished its boot sequence, you should be presented with the Acrelec Admin Panel on the kiosk screen. If you are not presented with this screen, rapidly tap the upper left-hand corner of the screen until the Acrelec Admin panel appears.

Once at the Acrelec Admin Panel, take note of the "Device Name" value at the bottom left corner of the screen:

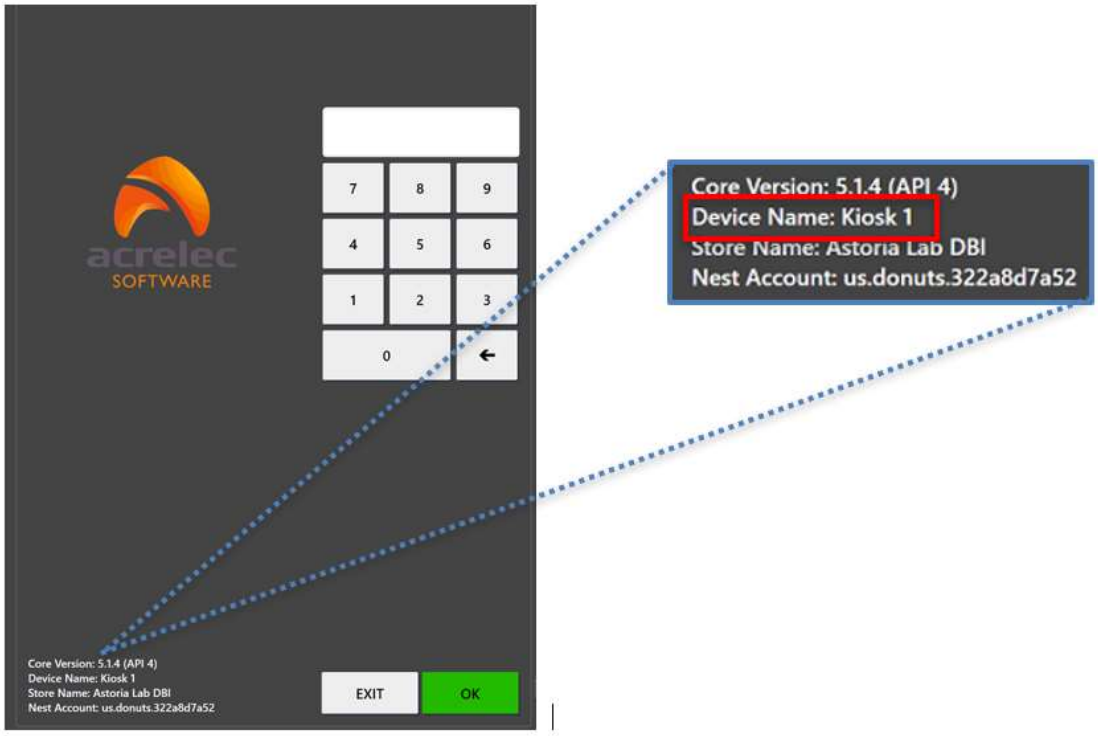

A PIN is required to access the Admin Panel. This PIN is based on the date and time shown in the upper left-hand corner of the screen.

NOTE: the date and time are expressed as follows:

DD-MM-YYYY HH:MM

The PIN is derived from the devices current date and time in the following manner:

- Sum of the hours (H+H)
- YY
- MM
- DD
- Sum of the minutes (M+M)

Using the date and time shown in the figure below, the PIN would be 1019070813:




- Sum of the hours (1+9) =10
- YY = 19
- MM = 07
- DD = 08
- Sum of the minutes (4+9) = 13

Key the PIN into using the number pad on the screen. When finished, tap the OK button:



Once you have successfully entered the kiosk's Admin Panel, verify that the device IP is configured properly. The relevant information can be found in the bottom left corner of the kiosk screen:

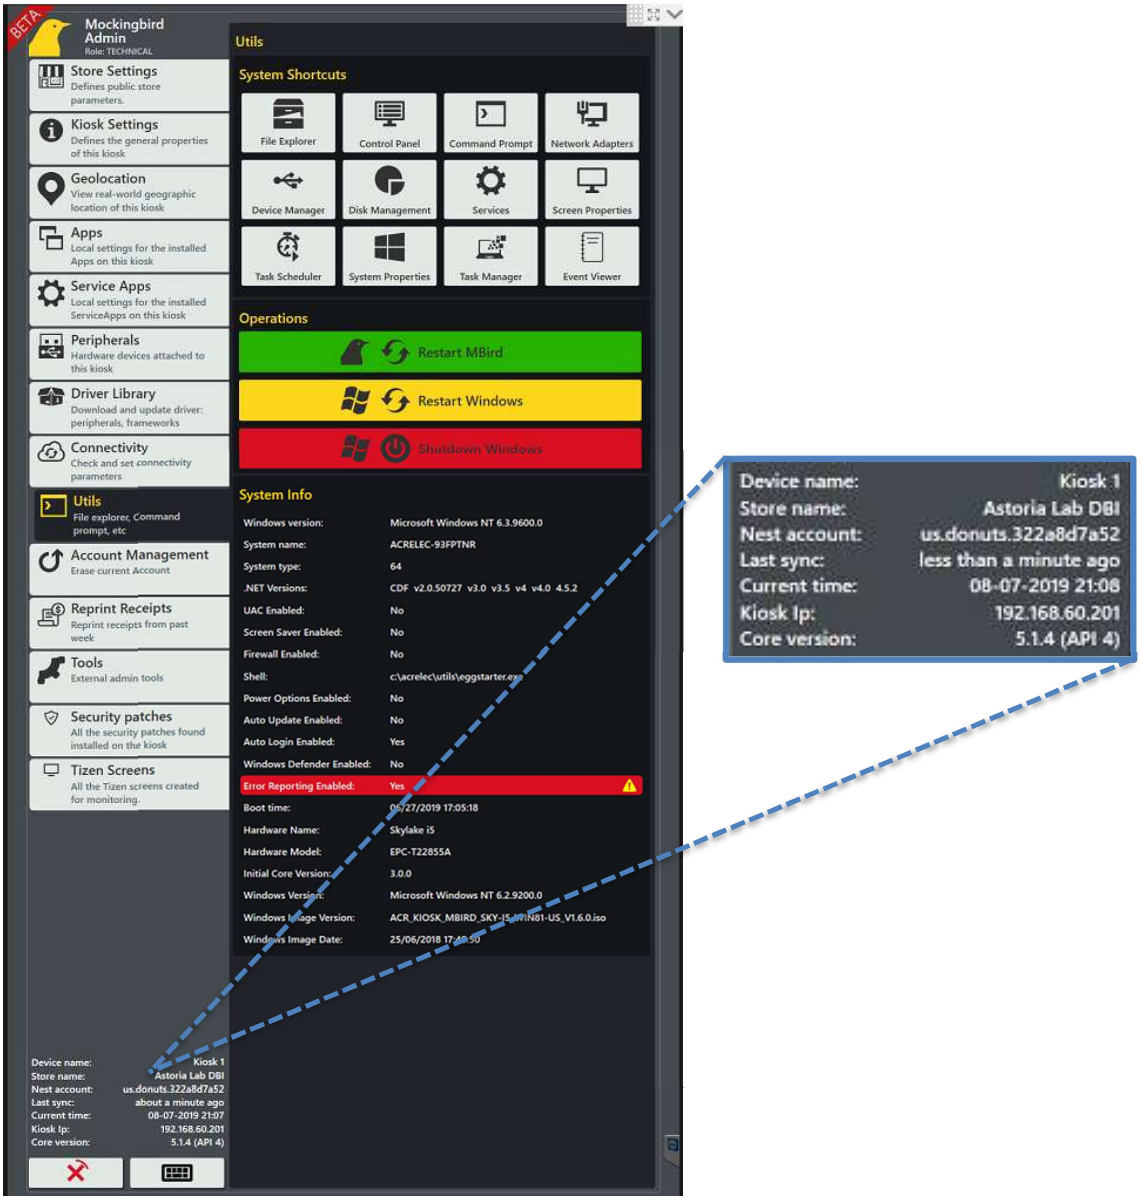

The kiosk IP should be set according to the following scheme:


Device Name	Kiosk IP
Kiosk 1	192.168.60.201
Kiosk 2	192.168.60.202
Kiosk 3	192.168.60.203
Kiosk 4	192.168.60.204
Kiosk 5	192.168.60.205

For each additional kiosk, the final octet of the IP address would increase by 1 digit (.206, .207, etc.).


Verify Payment Terminal Connectivity

The following measures must be completed for the payment terminal for each kiosk installed.

From the kiosk's Admin Panel, select "Peripherals" from the options on the left:

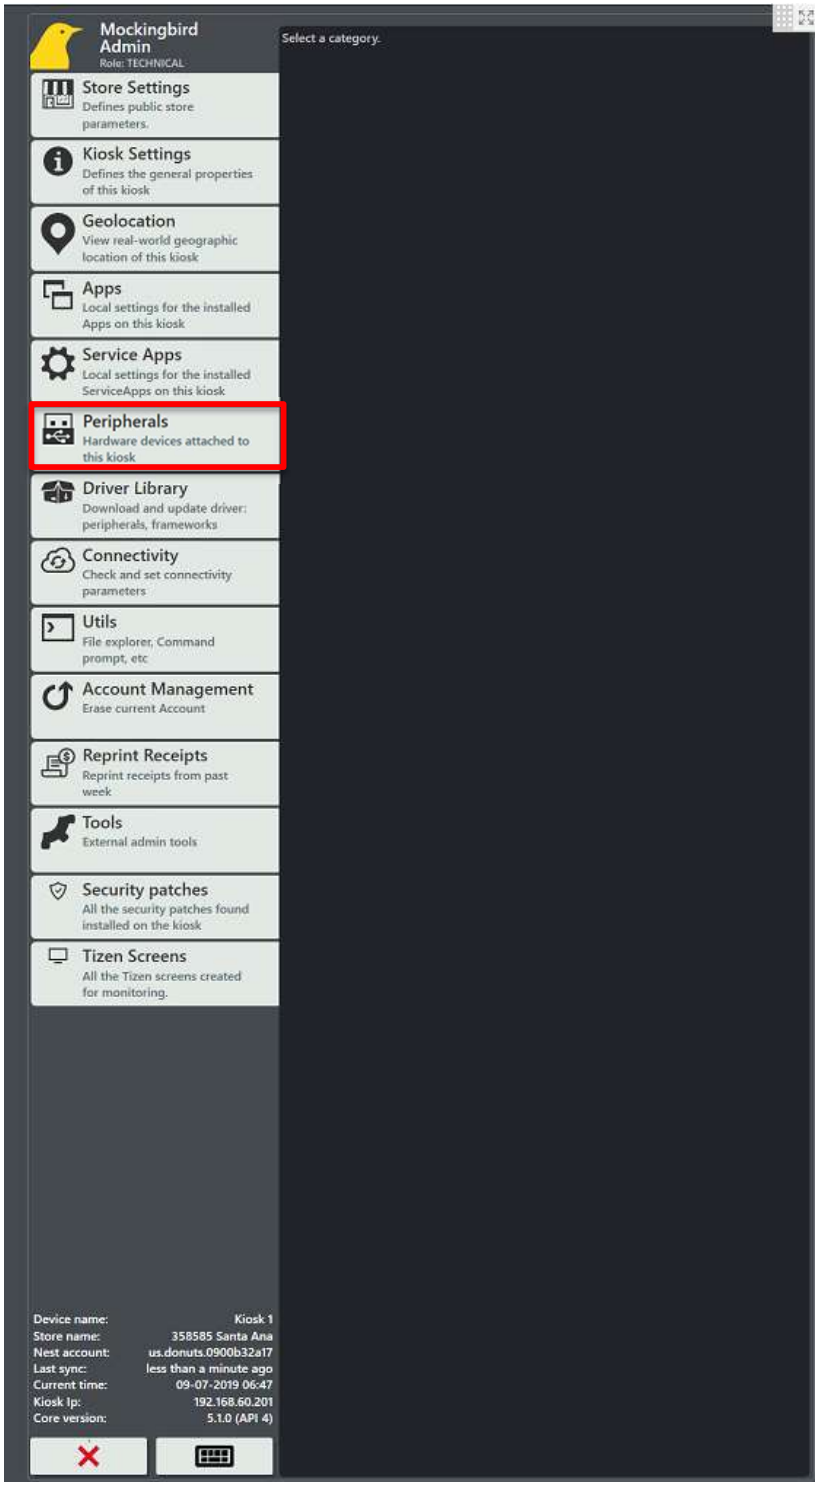

Select the tab labeled "Payment 1" at the top of the screen. Using the dropdown menu to the right of "Select Payment", set the value as "US_VERIFONE_MX version 1.0.21.0". The payment device details will appear on the screen. Note the value given for "Device IP Address":

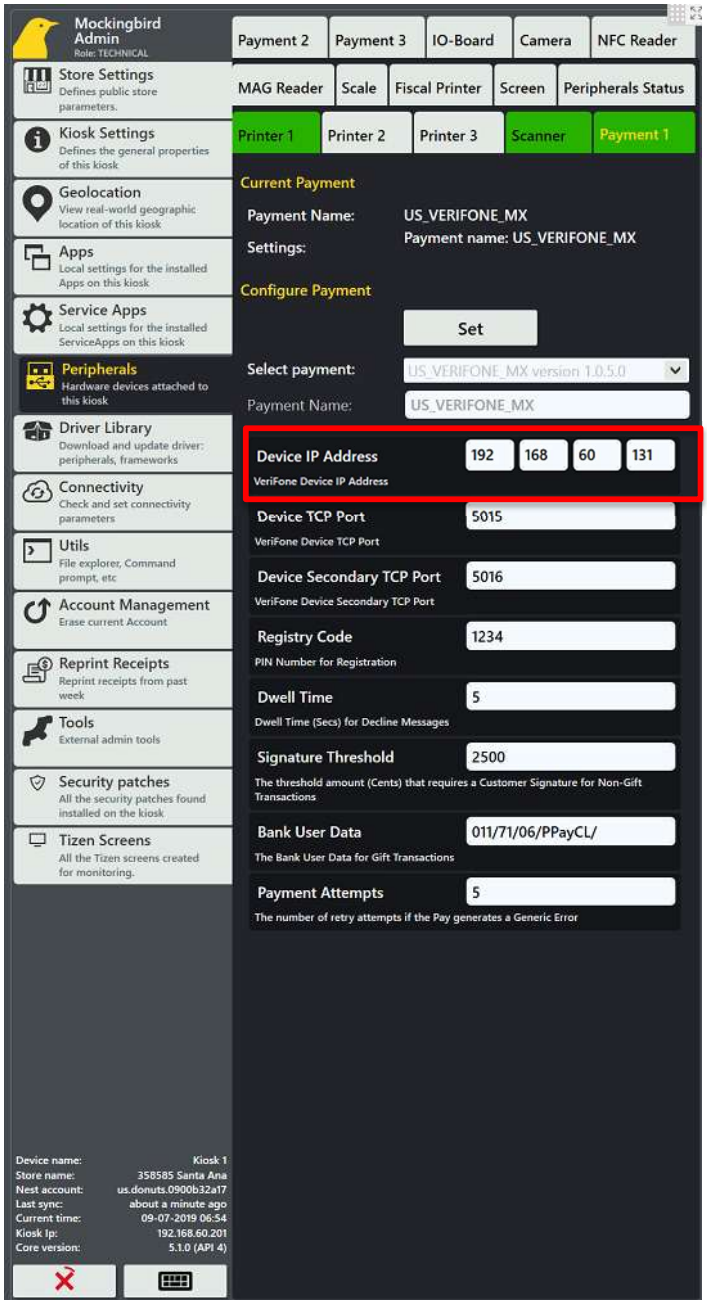


Validate that the Verifone Device IP Address field is set according to the following scheme:

Device Name	Payment Device IP Address
Kiosk 1	192.168.60.131
Kiosk 2	192.168.60.132
Kiosk 3	192.168.60.133
Kiosk 4	192.168.60.134
Kiosk 5	192.168.60.135

Scanner Connectivity & Configuration

Select the peripheral tab marked “Scanner 1” at the top of the screen. Using the dropdown menu to the right of “Select Scanner”, ensure the value is set to “Zebra SE2707 version 1.0.0.2”:

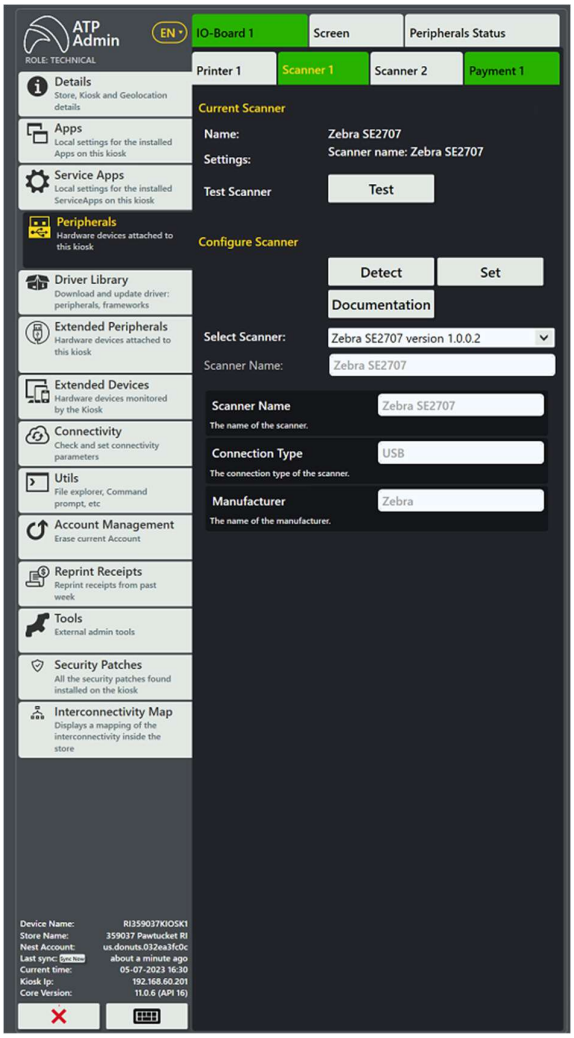

After verifying connection of the scanner peripheral, the installation technician should scan the following QR code. This code will set the scanner configuration to read QR and bar codes to be read from an optimal distance. The scanner will produce an audible tone upon successfully reading the following code:

STEP 10: TRANSACTION TESTING

Once the Acrelec Field Services Team has completed remote configuration of all installed devices, transactions must be tested. Completion of these tests should always first be offered to a member of the store team (Franchisee, Store Manager, etc.) to complete. **Two tests are required for each kiosk installed – one credit/debit card transaction and one gift card transaction.** If either or both transaction tests cannot be completed by a member of the store team, the testing should be completed by the lead installation technician on site.

Transaction Test 1 – Credit/Debit Card

For testing of a credit/debit card transaction, again order an inexpensive item via the kiosk and complete your order. Choose the "Other Payments" option, and follow the instructions via the Verifone payment terminal. Credit/debit card transactions must be made using the payment terminal's chip reader slot if your credit/debit card is chip-enabled. Other payment options include the swipe method or tap to pay. Once your transaction is completed, take the paper receipt and have the manager on duty verify that item pricing and tax rate percentages are correct.

Transaction Test 2 – Gift Card

Gift card transactions can be tested using either a physical gift card or the DD mobile phone application. A physical gift card can be obtained directly from the store for any monetary value for immediate use. The DD mobile phone application can be downloaded to your mobile device via the following:

Download on the App Store

GET IT ON Google Play

Purchase an inexpensive item via the kiosk – an order of three (3) munchkins or a small hot coffee will be suffiicient, costing approximately $1.50. Complete your order and select the gift card option when asked what form of payment you would like to use. If you are using a physical gift card, you will swipe the card via the kiosk's Verifone payment terminal. DO NOT insert the gift card into the chip reader. If using the DD mobile phone app, bring up your gift card and scan the QR code from the app using the kiosk's RF scanner peripheral. Once your transaction is completed, take the paper receipt and have the manager on duty verify that item pricing and tax rate percentages are correct.

Save all test transaction receipts for submission as a reimbursable cost that can be passed through to Acrelec upon closing your work order. Alternatively, you can request that these transactions be refunded, which can be done by the manager on duty on the store's main POS terminal.

Page Left Intentionally Blank

INSTALLATION SUPPORT CONTACT

Acrelec America
5490 Campbells Run Road
Pittsburgh, PA 15205
USA

Tel: (866) 932-0080, Option 2

COPYRIGHTS

© 2018 – 2024 Acrelec – All rights reserved

No part of this publication may be reproduced, photocopied, stored on a retrieval system, or transmitted without the express prior written consent of the publisher.

Acrelec is a branch of the AKSOR Group.

Acrelec and its logo are registered trademarks of Acrelec, SAS.

Information in this document is subject to change without notice. Acrelec shall not be liable for errors contained herein.

Acrelec SAS
3 rue Louis de Broglie
77400 St-Thibault des Vignes
France