K27 LITE – Installation guide



ACRELEC

Address

Acrelec International
2, rue Louis de Broglie
77 400 Saint-Thibault des Vignes
France

Phone

Phone: (+33) 01 72 03 24 10

Online

Website: www.acrelec.com

TABLE OF CONTENTS

1 VERSIONING 3
2 SCOPE OF THE DOCUMENT 3
3 PACKAGING 3
3.1 CONTENT OF THE PACKAGING / INSTALLATION KIT 3
3.2 IMPORTANT 5
3.3 UNPACKING INSTRUCTION 6
3.4 MOVING / HANDLING THE KIOSK 9
4 MEANS FOR INTERVENTION 9
4.1 NUMBER OF TECHNICIANS / NUMBER OF DAYS 9
4.2 TOOLS NEEDED 9
5 MOUNTING STEPS CONFIGURATION ON THE FOOT AIO 10
5.1 WARNING / SAFETY 10
5.2 SUMMARY OF STEPS 10
5.2.1 FIXATION OF THE HARDWARE 10
5.2.2 SCREEN 12
5.2.3 PC (K-BOX) 13
5.2.4 DEFINE THE LOCATION AND FIX THE K27 LITE LITE 14
5.2.5 CEILING POLE 17
5.2.6 CONNECT THE K27 LITE LITE AND FINALIZE INSTALLATION 18
6 MOUNTING STEPS STD FOOT CONFIGURATION 20
6.1 WARNING / SAFETY 20
6.2 SUMMARY OF STEPS 20
6.3 STANDARD VERSION 21
6.3.1 SUPPORT SCREEN 21
6.3.2 SCREEN 27P 22
6.3.3 PC (K-BOX) 23
6.3.4 PRINTER 24
6.3.5 FOOT COVER 26
6.4 CEILING POLE 26
6.5 CONNECT THE K27 LITE LITE AND FINALIZE INSTALLATION 28
6.6 SCANNER SETTING AND TEST: 29
7 MOUNTING WALL MOUNTED CONFIGURATION 30
7.1 PRE-REQUISITES: 30
7.2 WARNING / SAFETY 30
7.3 SUMMARY OF STEPS 30
7.3.1 WALL MARKING 31
7.3.2 DRILLING THE WALL 31
7.3.3 PRINTER 33
8 POWER & SETUP 34
9 ANNEXES 34

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

9.1 INSTALLATION REPORT 34

10 COPYRIGHTS 34

1 VERSIONING

Date	Author	Release	Company	Comment
30/08/2023	DIEFENTHAL Fabien	00	Acrelec	Creation
05/12/2023	BIABIANY Joey	01	Acrelec	Update (config foot std)
16/02/2023	BIABIANY Joey	02	Acrelec	Update (add wall configuration)
25/09/2024	BIABIANY Joey	03	Acrelec	Update (add new hinge)

2 SCOPE OF THE DOCUMENT

The topic of this document is to provide instructions for kiosk installation in the restaurant

Any modification of the product described in this document has to be approved by Acrelec Manufacturing before implementation.

3 PACKAGING

3.1 CONTENT OF THE PACKAGING / INSTALLATION KIT

- **Ground configuration**

Reference PMI**: KE22011001 cc2**

3x VI010901M10L080	SCREWS + DOWEL + WASHERS	
4x CARESEA0002	NETWORK CABLE 1M	
1x CACOSEC0057	CABLE C13DROIT	

- **Ceiling configuration**

Reference PMI**: KE22011002 cc2**

3x VI010901M10L080	SCREWS + DOWEL + WASHERS	

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

1x CARESEA0019	NETWORK CABLE 5M	
1xCARESEA0021	CABLE RESEAU 5M	
1x CARESEA0057	CABLE C13DROIT	


All screws used to fix the K27 LITE Lite must be stainless steel.

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

3.2 IMPORTANT

Handling of K27 LITE Lite:

DO NOT

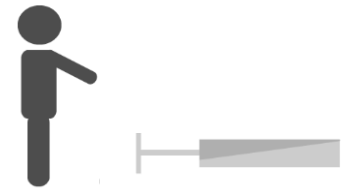

Do not lay down the K27 LITE Lite.



Do not carry alone a K27 LITE Lite.

The K27 LITE Lite must not be moved if it is connected electrically.



Do not unpack the K27 LITE Lite in the truck.

DO

Do not unload a K27 LITE Lite of a truck without forklift.



We must therefore respect a period of acclimatization of two hours after unpacking before starting the K27 LITE Lite.



An authorized and trained person by Acrelec or its partners must perform unpacking operations.







Unpack it in the presence of an Operations Manager.

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com




3.3 UNPACKING INSTRUCTION

Each K27 LITE Lite is composed (version AIO):

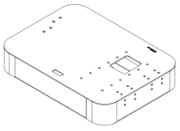


Reference	Designation	Quantity
BODY & KBOX WITH HINGE ***(PF22018-3-3-3 c/c 3)***		1
		1
INTEGRATED PRINTER FOOT KIT (KI22011001)		1
FOOT COVER KIT (KI22011002)		1
AIO CEILING POLE COVER KIT (KI22011021)		1
K27 LITE EXTENSION KIT (KI22011012)		1

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

Each K27 LITE Lite (configuration STD) is composed:

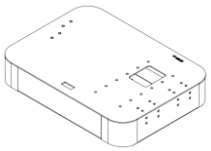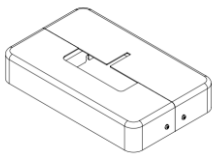Reference	Designation	Quantity
BODY & KBOX WITH HINGE ***(PF22018-3-3-3 c/c 3)***		1
		1
CEILING POLE KIT (KI22011006)		1
CEILING POLE COVER KIT (KI22011005)		1
K27 LITE EXTENSION KIT (KI22011012)		1
TELESCOPIC CEILING POLE (STD) (KI22011016)		1
FOOT COVER (KI22011015)		1

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

STD FOOT KIT (KI22011014)		1
KIT CASING PRINTER STD (KI22011017)		1
BRACKET PRINTER KIT (KI22011020)		1
WALL MOUNTED SUPPORT KIT (KI22011019)		1

During the unpacking operation, install the K27 LITE Lite on the ground ensuring that risks of scratches are avoided.
The use of a cutter is forbidden during this operation.
An electrical screwdriver is required to remove the packaging.

All packaging must be recycled.


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

3.4 MOVING / HANDLING THE KIOSK

Following recommendation in the restaurant have to be carefully followed.

- A single person must never move the K27 LITE Lite.
- **2 persons:** the K27 LITE Lite can be moved in a single block if the configuration of the restaurant allows it.
- Never move the K27 LITE Lite if it's assembly with the column or if it is not disconnected.

Caution: If the K27 LITE Lite was placed on its ground fixations, be sure to raise it up before sliding it (may break fastening systems).

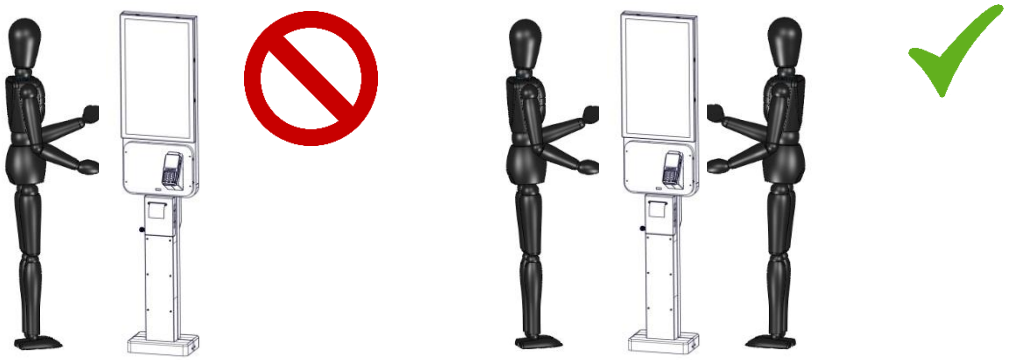

For information: Weight of simple K27 LITE Lite: 58 Kg

4 MEANS FOR INTERVENTION

4.1 NUMBER OF TECHNICIANS / NUMBER OF DAYS

At least 2 people, and about 2 hours/ K27 LITE Lite

4.2 TOOLS NEEDED



Spanner



Flat and cross headed screwdriver



Allen wrench set



Percussion + drill bit



Saw



Cutter



Level



Laser



Power supply Extender

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

5 MOUNTING STEPS CONFIGURATION ON THE FOOT AIO

5.1 WARNING / SAFETY

Prior to any manipulation of the devices, shut off the main power supply using only Building main circuit breaker.

- The use of personal protective equipment (PPE) is mandatory to install the kiosk. In particular, kiosk handling requires safety footwear.
- Before any handling, please protect the foot with Kraft paper to avoid any scratch.
- Remove the protection paper only when the foot cover is installed.

5.2 SUMMARY OF STEPS

Step 1: Fix the hardware ***if necessary***

Step 2: Define and validate the kiosk final position in the restaurant with the customer.

- Mark the fixation positions of the foot
- Drill the fixation holes
- Fix the kiosk on the ground

Step 3: Fix the ceiling pole ***if necessary***

Step 4: Connect the K27 LITE Lite and finalize the kiosk installation

5.2.1 FIXATION OF THE HARDWARE

5.2.1.1 Printer

Step 1: Check the printer parts



Step 2: Open the door using the key



Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

Step 3: Put the paper roll in the printer





Step 4: Place the printer in the foot



Step 5: Fix the printer flange using 1 washer C M M08 + 1 screw CHC M08x025



Step 6: Connect the printer cables (power and data)



Step 7: Fix the printer rear cover using 4 plastic rivets





Step 8: Pass the printer paper through the slot and close the door using the key






Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


5.2.2 SCREEN

5.2.2.1 Screen 27p


Step 1: Check the screen parts.

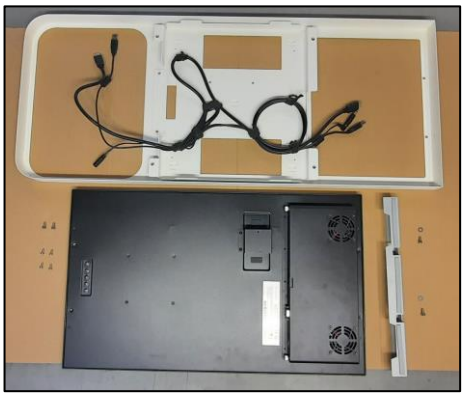

Step 2: Place the screen support on the screen.

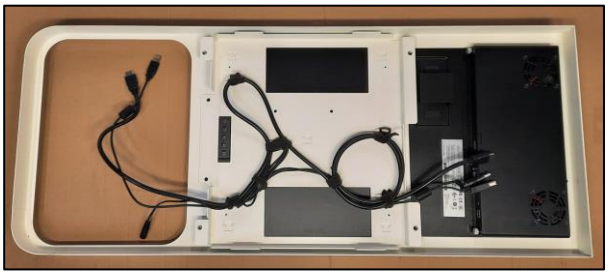

Step 3: Fix the screen on the support screen using 2 screws BHC M05x008 + 4 screws CBC M04x010.

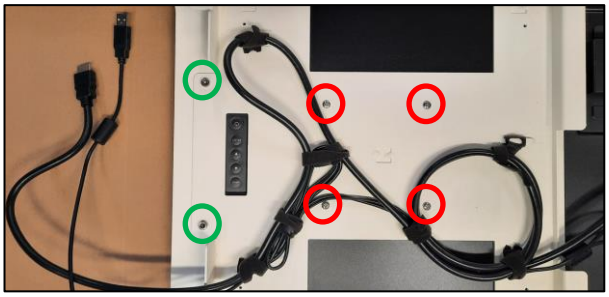


Step 4: Connect screen cables (display/power/touch).



Step 5: Fix the screen support on the kiosk using 4 washers C M M06 + 4 screws CHC M06x025 and 2 screw CBC M04 X 010.


Step 6: Place the caps on the back plate of the K27 LITE Lite.

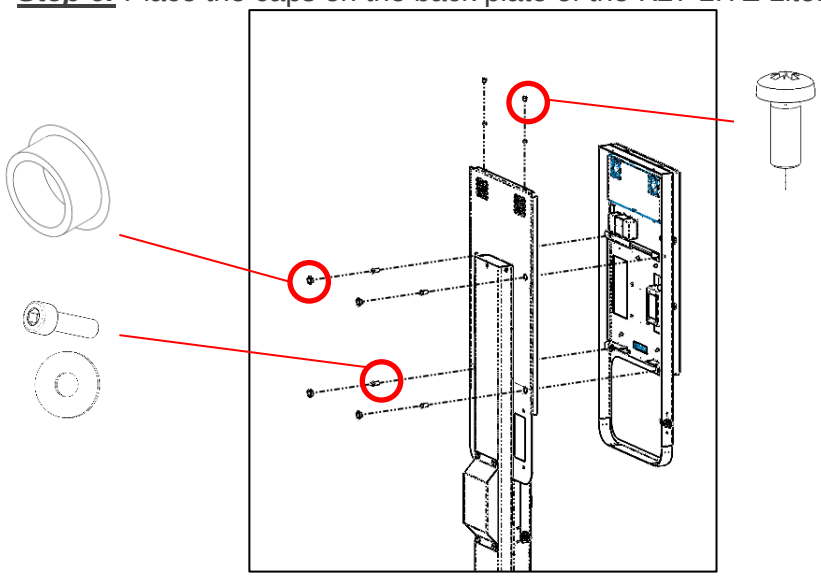


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

5.2.3 PC (K-BOX)

Step 1: Assemble the PC on the support with 4 CBC M03 screws and 4 M03 washers.

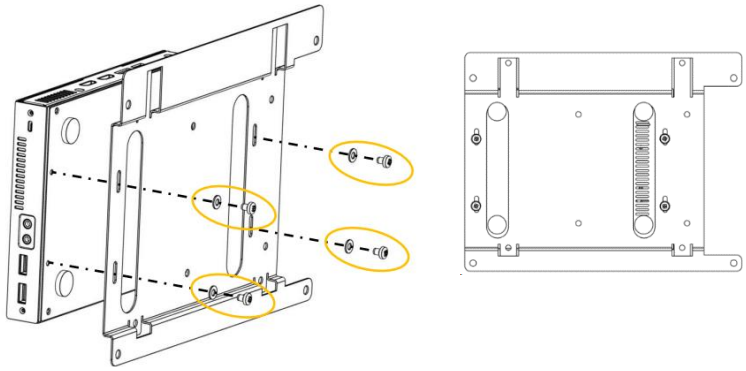


Step 2 : Fix the support + PC assembly to the K-BOX with 4 M04 flange nuts.

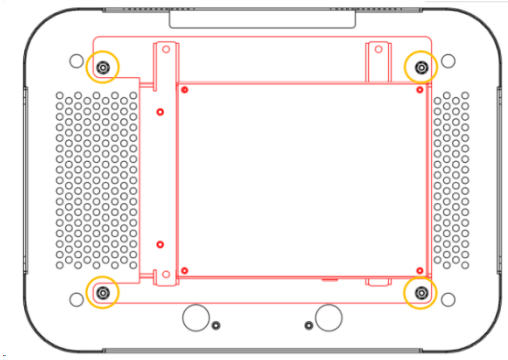


Step 3: Connect the scanner USB cable to the PC.





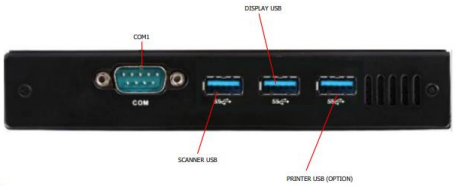


Step 4: Fix the K-BOX to the rear structure with 4 M06 flange nuts.

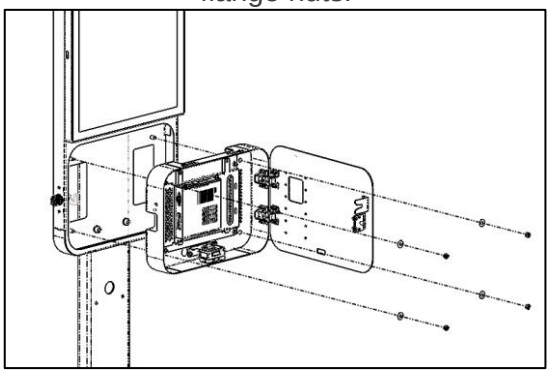


Step 5: Connect screen cables to the PC.



HDMI

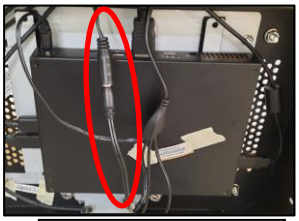


Jack (Power)

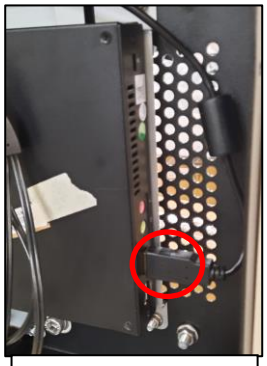

USB (Touch)

Step 6: Close the flap KBOX

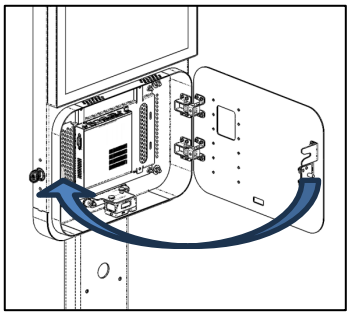


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

5.2.4 DEFINE THE LOCATION AND FIX THE K27 LITE LITE


Position of the K27 LITE Lite

- In case of cables exiting the K27 LITE Lite from the top (ceiling cables), place the ceiling kit in the dedicated location:

Ceiling kit position

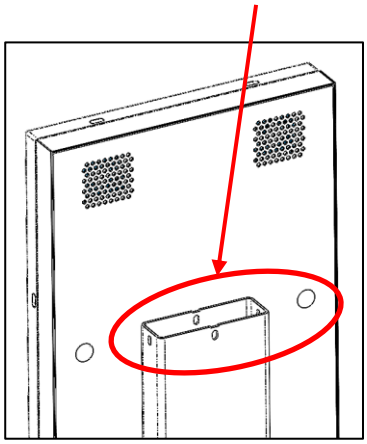


Ceiling kit fixed on the K27

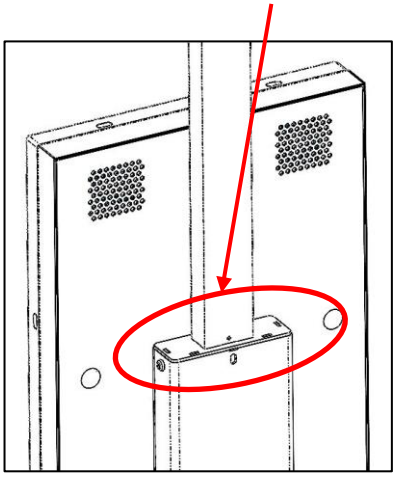

- Make sure (should be done during visit requirements) that there is no obstruction in the ceiling to fix the pole

Warning **if the ceiling is not removable, it will not be possible to position the grommet and move the K27 LITE Lite to make several placement tests.**

- When installing the ceiling pole, refer to the prerequisites documentation but also the dimensions given below

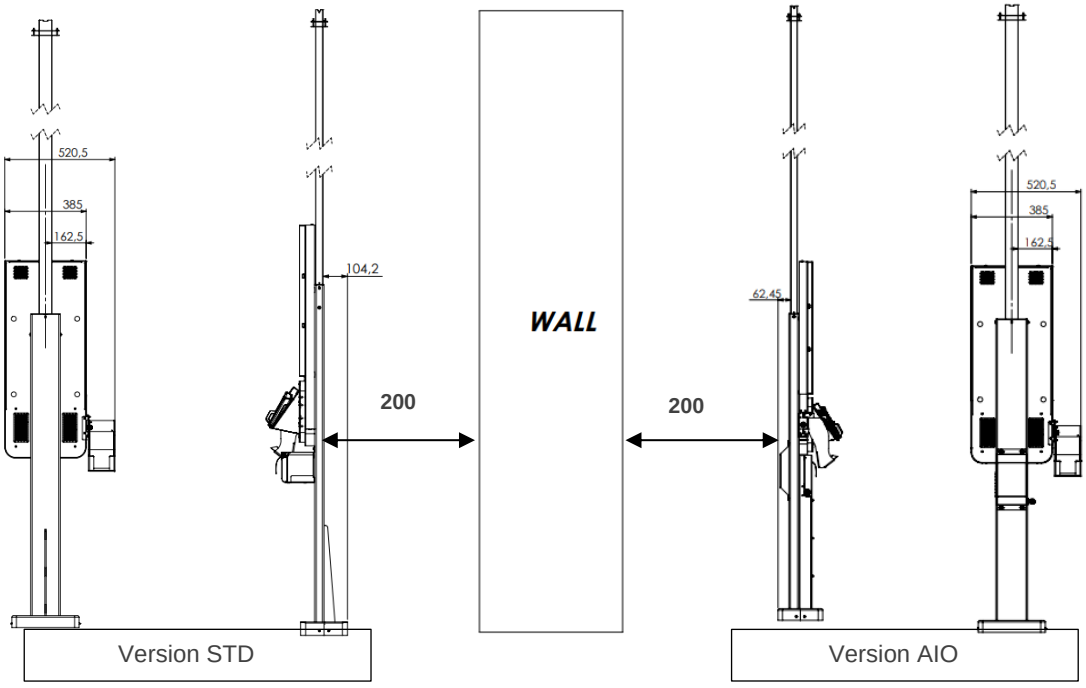

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


- In this case use a laser positioned in the center of the top and pointed toward the ceiling in order to validate the future location of the grommet.



- Then, check with the client that K27 LITE Lite are properly positioned and oriented.

Ground / ceiling marking

Step 1: Using a pencil, locate the 3 fixation holes as well as the contour of the footplate

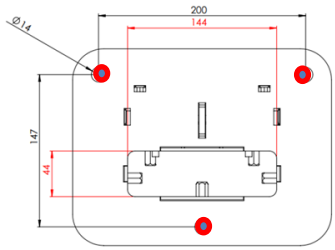


Step 2: Define the ceiling kit cover position and mark it



Step 3: Cut the ceiling (or tiles) using a saw




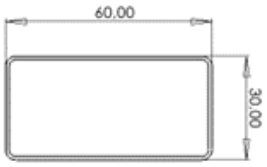


If the ceiling is removable, you can remove the slab for convenience

Drilling fixation holes


Step 1: Drill the ground

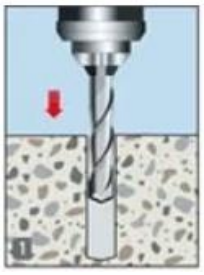

Step 2: Place dowels in the right position

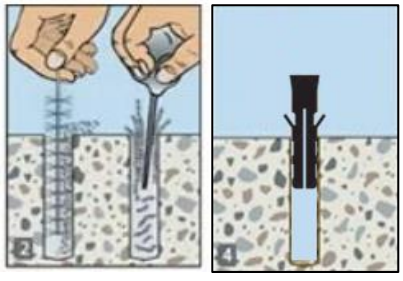

Step 3: Sink dowels using a hammer

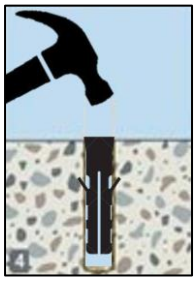

The drilling diameter and depth to fix the screws are Ø14 x 80 for VI010901M10L080

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


Fixing the K27 LITE Lite

Step 1: Bring back the K27 LITE Lite on his final position




In case of a cabling through the floor, do the wiring before fixing the K27 LITE Lite


Step 2: Tighten the 3 washers M10 + 3 screws M10

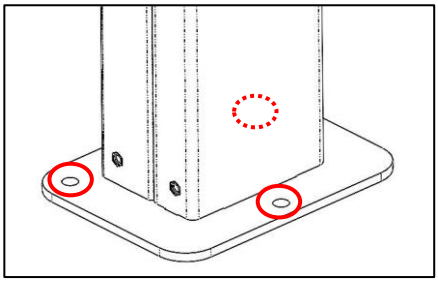


Step 3: Fix 2 foot cover support on the foot using 4 screws H M08x020

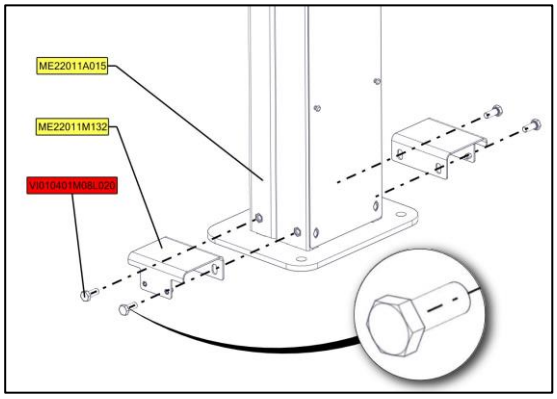

Step 4: Place 2 foot cover

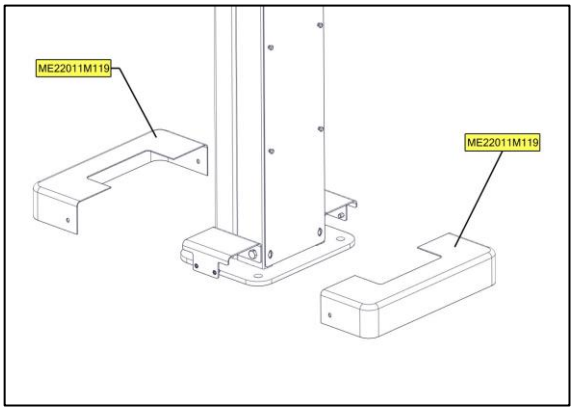

Step 5: Fix 2 foot cover on these supports using 4 screws CBC M04 X 010

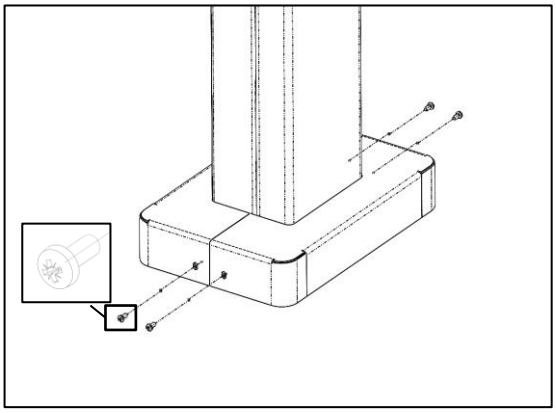

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

5.2.5 CEILING POLE


Description

3 wires need to be connected:

- 2 x Network cable (RJ45)
- Power cable

Ceiling wiring


- In case of a "ceiling" installation, network cables and power cables will be introduced from the top via the ceiling kit.

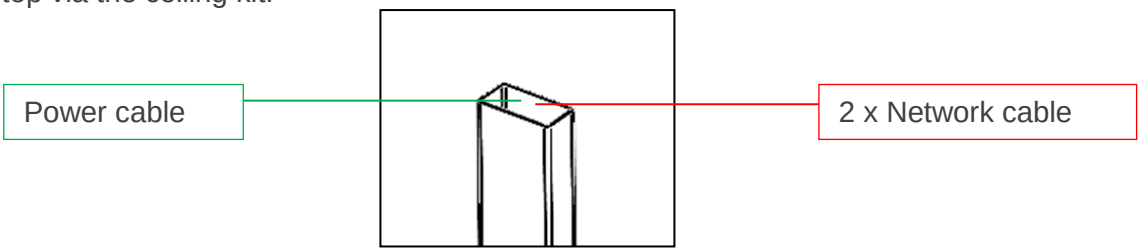


Cables must fit into the ceiling kit (from the ceiling directly into the kiosk).
A needle will be used to facilitate the introduction.

Ceiling pole fixation:


Step 1: Fix the ceiling pole using 3 screws CBC M06x012

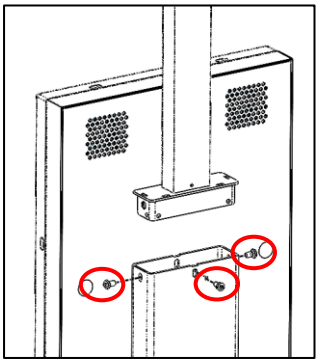

Step 2: Fix ceiling plates together using 4 flanged nuts M04

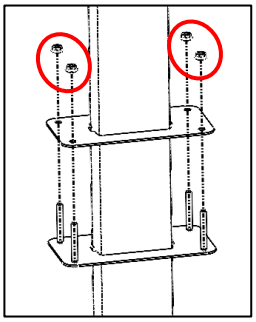

Step 2: Screw the ceiling plate to the ceiling.

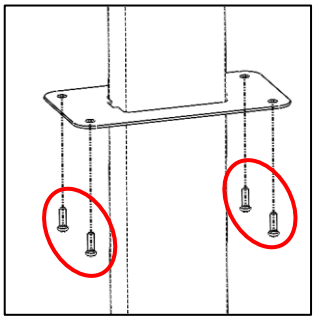


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

5.2.6 CONNECT THE K27 LITE LITE AND FINALIZE INSTALLATION


Ground wiring

- Introduce the cables into the foot as below:

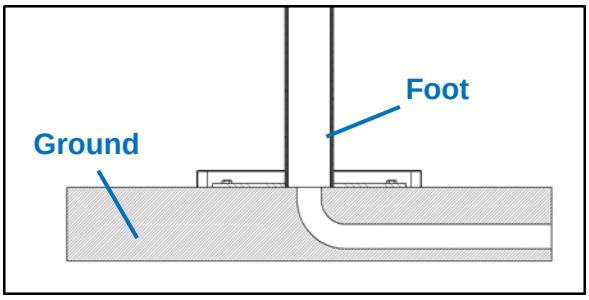


Ceiling wiring

- Introduce the cables into the pole as below:

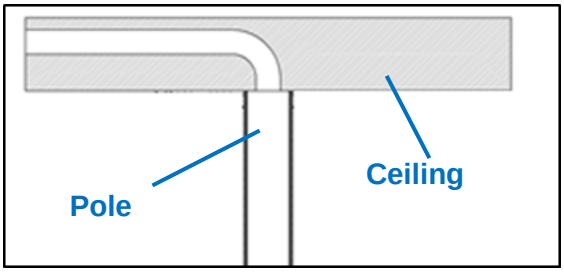

- The installer must pass the power supply cable until power cable on the foot (top of the foot for ceiling configuration and printer opening for ground configuration) and network cable at the PC:



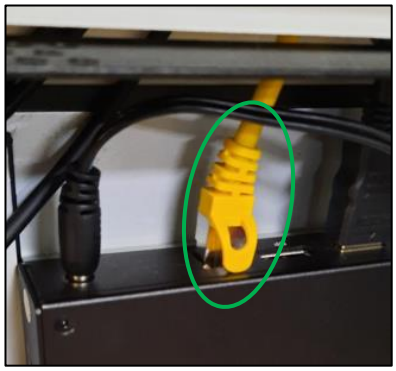



Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


Scanner setting and test:

CARTE TEST SCANNER

CARTE TEST SCANNER

Disable Decoding Illumination
(0)

- Put the silicone seal around the foot

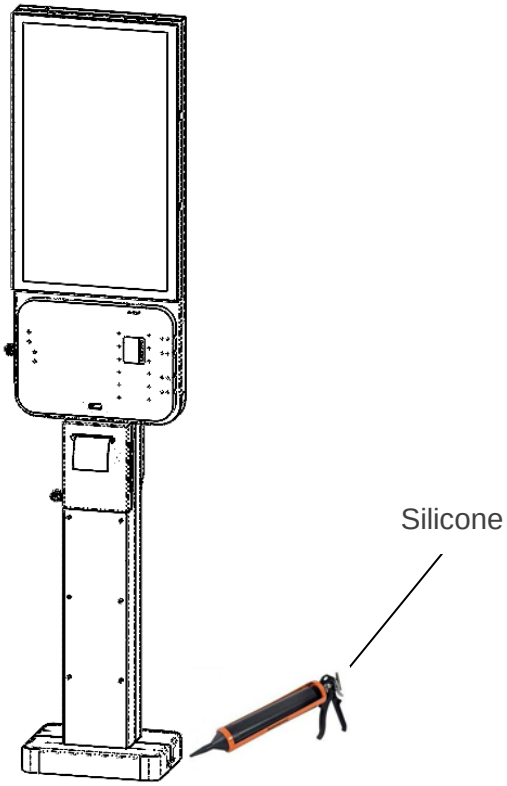

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

6 MOUNTING STEPS STD FOOT CONFIGURATION

6.1 WARNING / SAFETY

Prior to any manipulation of the devices, shut off the main power supply using only Building main circuit breaker.

- The use of personal protective equipment (PPE) is mandatory to install the kiosk. In particular, kiosk handling requires safety footwear.
- Before any handling, please protect the foot with Kraft paper to avoid any scratch.
- Remove the protection paper only when the foot cover is installed.

6.2 SUMMARY OF STEPS

Step 1: Fix the hardware ***if necessary***

Step 2: Define and validate the kiosk final position in the restaurant with the customer.

- Mark the fixation positions of the foot
- Drill the fixation holes
- Fix the kiosk on the ground

Step 3: Fix the ceiling pole ***if necessary***


Step 4: Connect the K27 LITE Lite and finalize the kiosk installation

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

6.3 STANDARD VERSION


6.3.1 SUPPORT SCREEN

Step 1 : Fix the back structure on the foot with 6 CHC screw and 6 washers M08

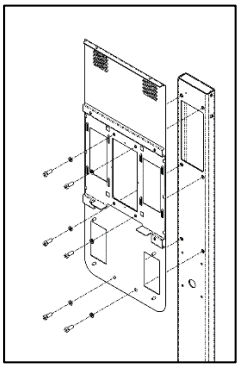


Step 2 : Stick 4 self-gripping tapes on the back of each 24V and 12V power supply



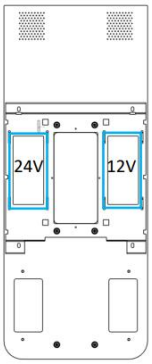

Step 3:


- Secure the power supply cables with 4 Velcro tapes
- Pass the Y power cable through the central opening
- Connect the Y cable to the power supplies
- Bring the end of the cable out through the top of the foot

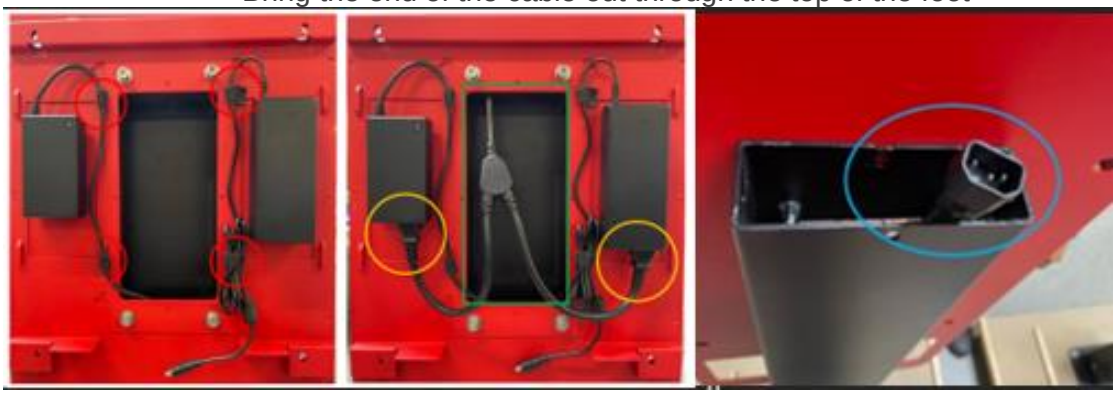


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

6.3.2 SCREEN 27P


Step 1: Check the screen parts.

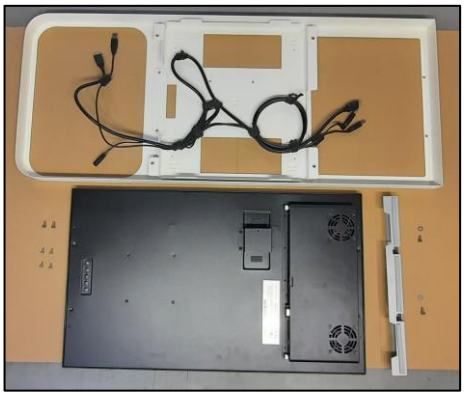


Step 2: Place the screen support on the screen.

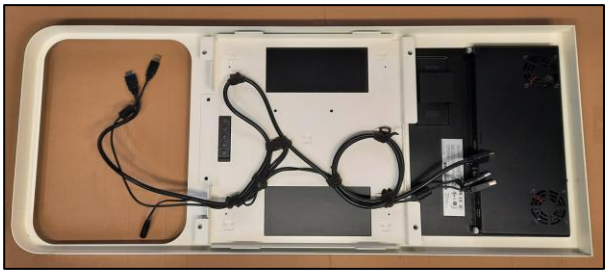

Step 3: Fix the screen on the support screen using 2 screws BHC M05x008 + 4 screws CBC M04x010.

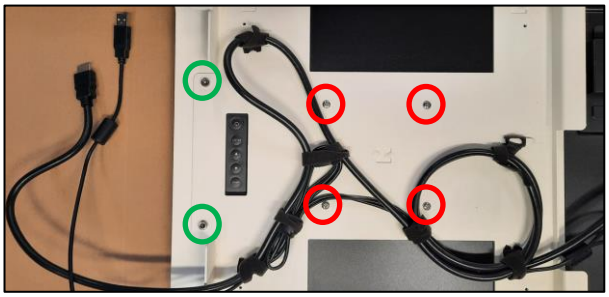


Step 4: Connect screen cables (display/power/touch).

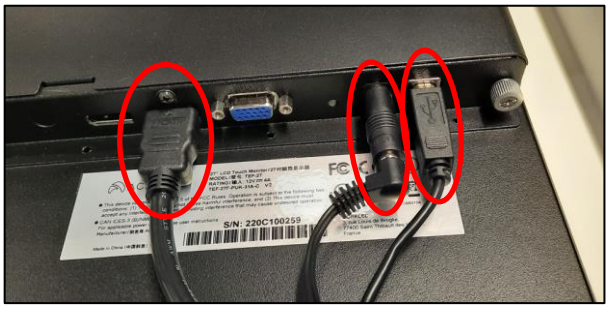

Step 5: Fix the screen support on the kiosk using 4 washers C M M06 + 4 screws CHC M06x025 and 2 screw CBC M04 X 010.


Step 6: Place the caps on the back plate of the K27 LITE Lite.

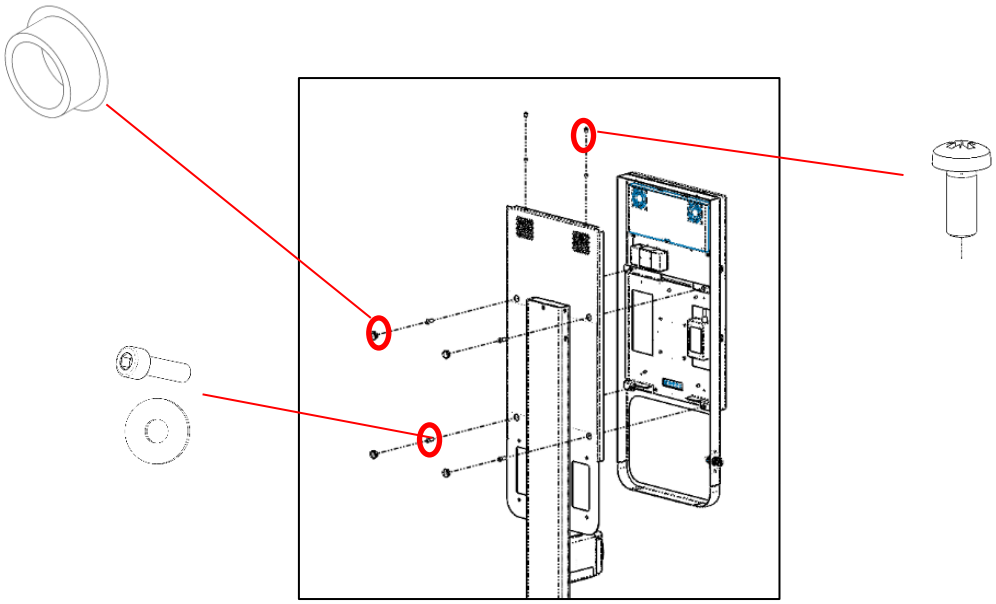


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

6.3.3 PC (K-BOX)

Step 1: Assemble the PC on the support with 4 CBC M03 screws and 4 M03 washers.

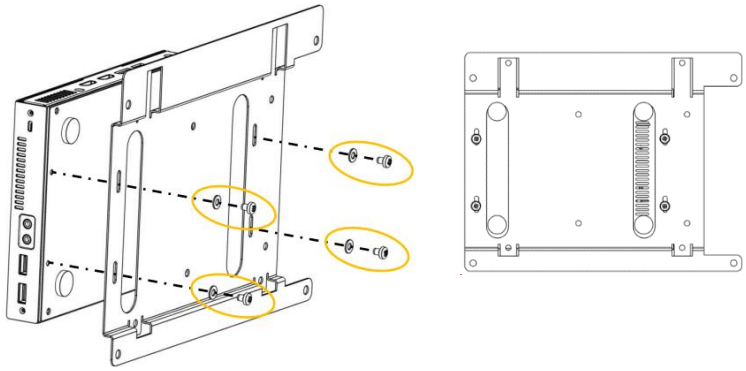


Step 2 : Fix the support + PC assembly to the K-BOX with 4 M04 flange nuts.

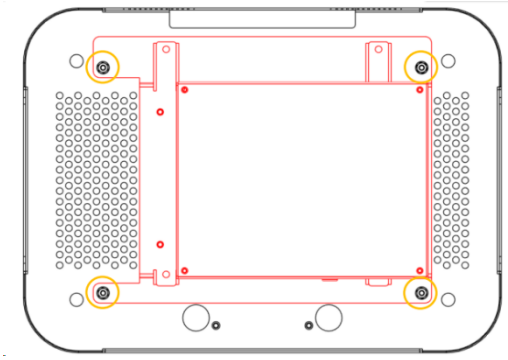


Step 3: Connect the scanner USB cable to the PC.





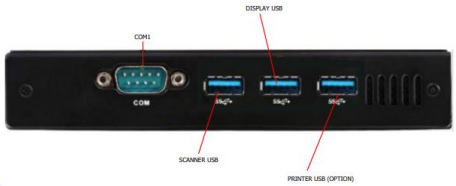


Step 4: Fix the K-BOX to the rear structure with 4 M06 flange nuts.

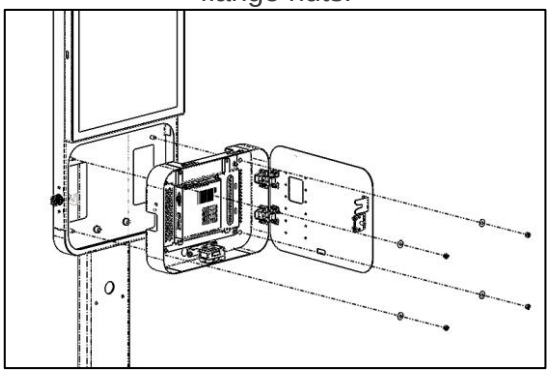


Step 5: Connect screen cables to the PC.



HDMI

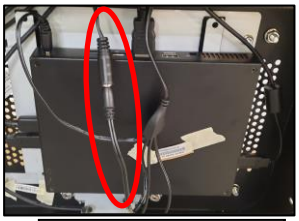


Jack (Power)

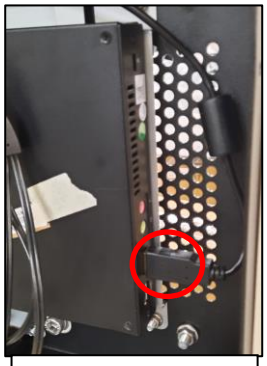

USB (Touch)

Step 6: Close the flap KBOX

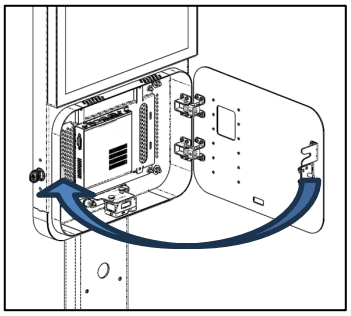


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


6.3.4 PRINTER

6.3.4.1 Printer box


Step 1: Open the door KBOX

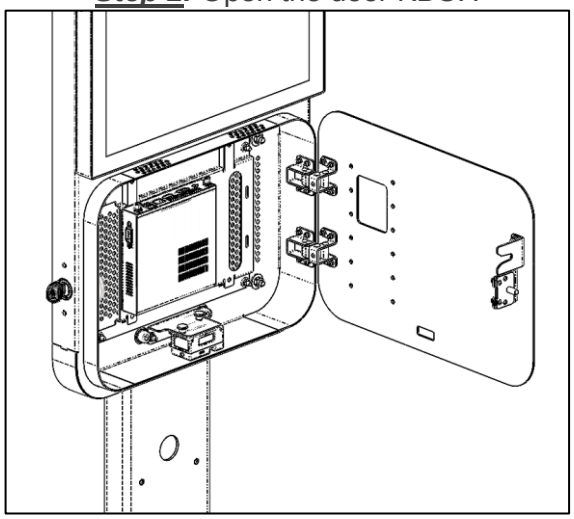


Step 2 : Pass the connection cables as illustrated below then secure the printer box using 4 CBC M04 X 012 screws & C L M04 washers.

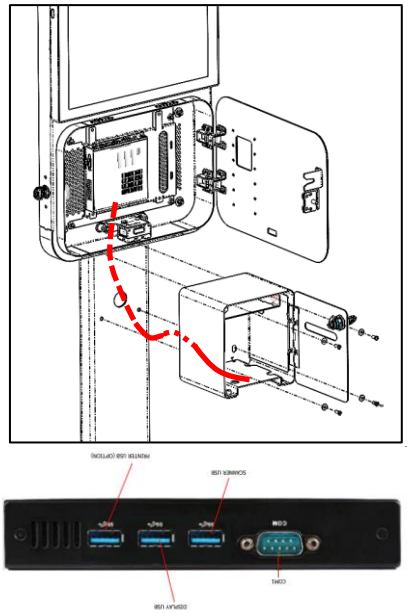


Step 3: Connect the printer cables (power and data)

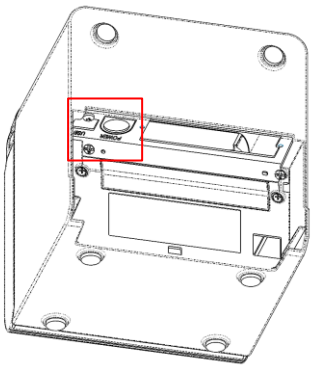

Step 4: Slightly unscrew the brake nuts M04 and knurled screw M04 in order to allow some freedom to the flange and the lock stop in order to place the printer.

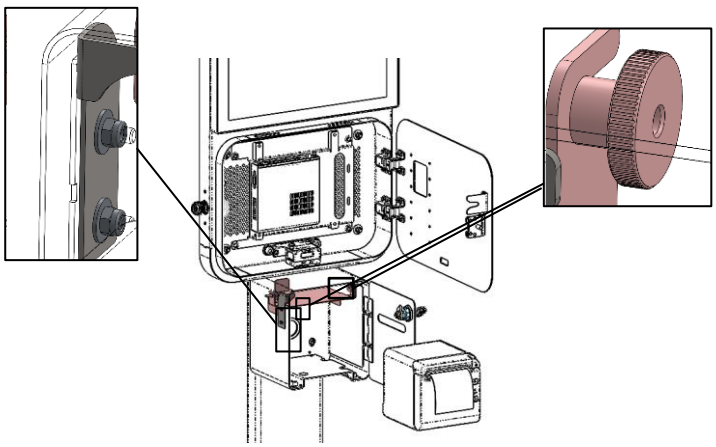


Step 5: *Close the door*

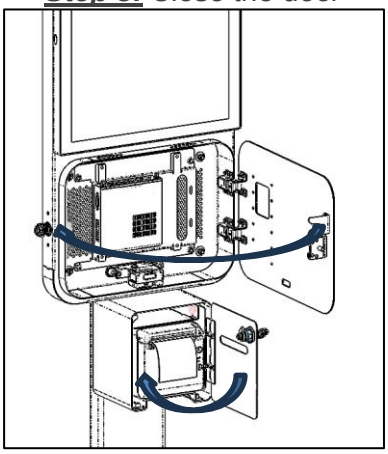


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

6.3.4.2 Printer bracket


Step 1: Remove the support cover unscrew 4 screws CBC M04 X 010

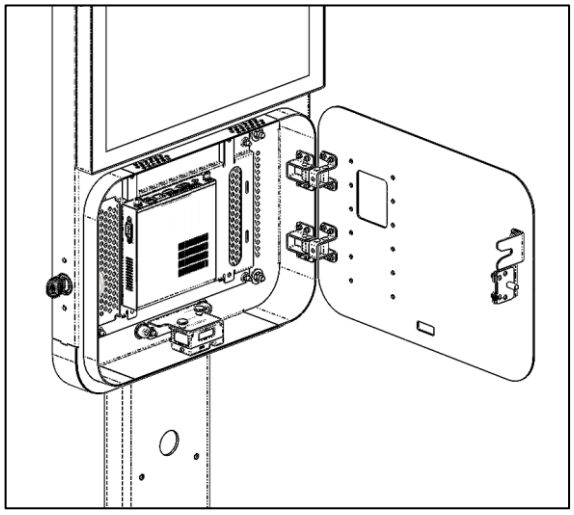


Step 2: Fix the lower part of the printer support by passing the cables and using 2 using 2 screws CBC M04 X 012 and 2 washers C L M04

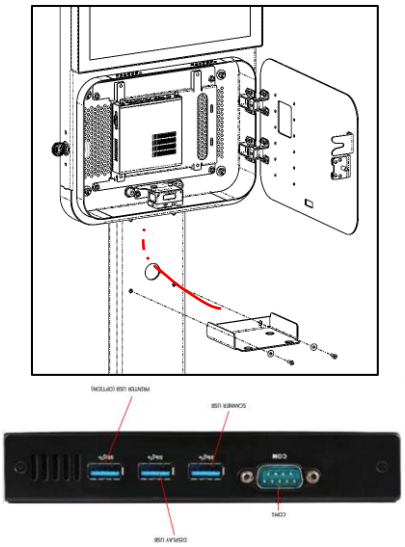


Step 3: Connect the printer cables (power and data)

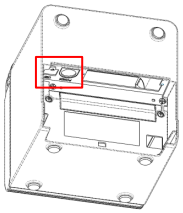


Step 4: Place the printer on the support.

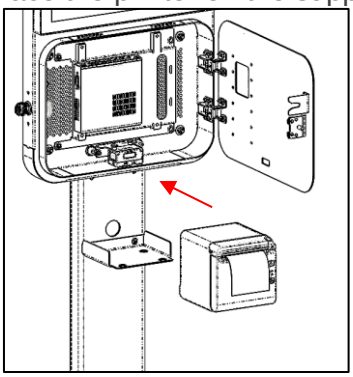

Step 5: Fix the bride on the foot using 2 screws CBC M04 X 012 and 2 washers C L M04

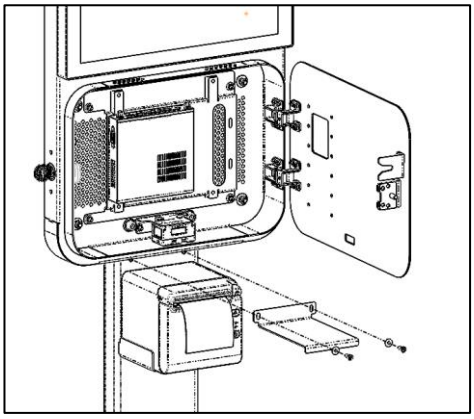


Step 6: close the door

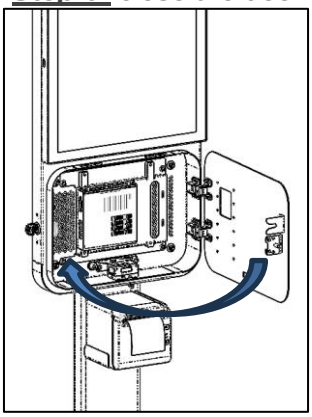


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

6.3.5 FOOT COVER

Step 1: Fix 2-foot cover support on the foot using 4 H screws M08x020

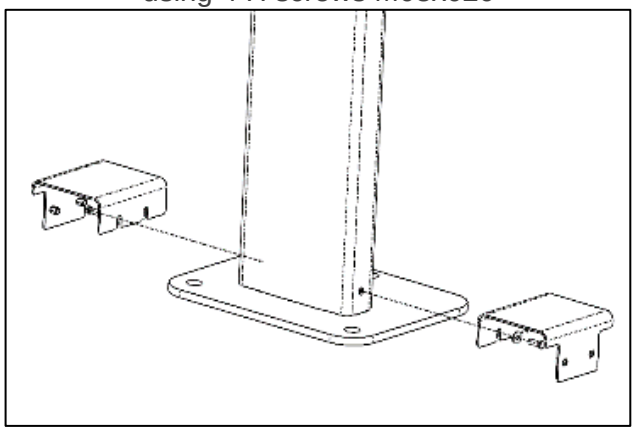

Step 2: Place 2-foot cover and fix 2-foot cover on these supports using 4 screw CBC M04 X 010

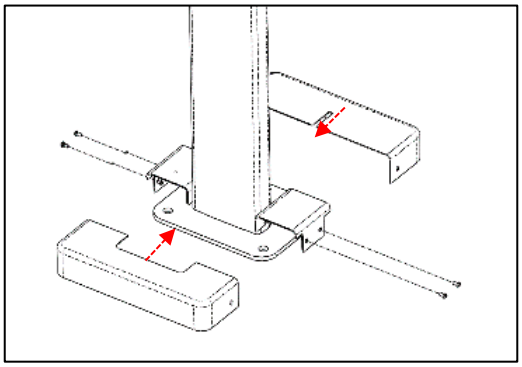

6.4 CEILING POLE


Description

3 wires need to be connected:

- 2 x Network cable (RJ45)
- Power cable

Ceiling wiring

- In case of a "ceiling" installation, network cables and power cables will be introduced from the top via the ceiling kit.

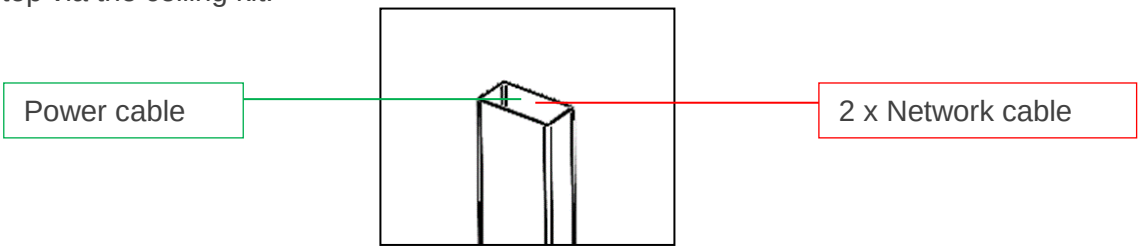


Cables must fit into the ceiling kit (from the ceiling directly into the kiosk).
A needle will be used to facilitate the introduction.


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

Ceiling pole fixation:


Step 1: Fix the ceiling pole using 3 screws CBC M06x012

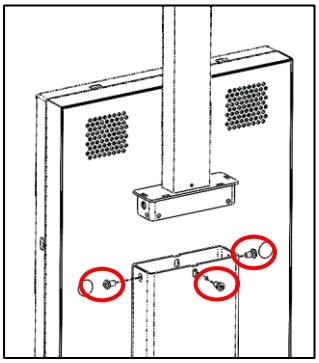

Step 2: Fix ceiling plates together using 4 flanged nuts M04

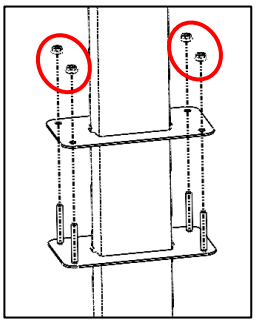

Step 2: Screw the ceiling plate to the ceiling.

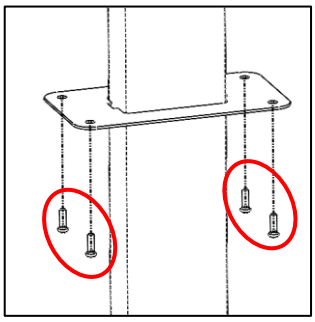


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

6.5 CONNECT THE K27 LITE LITE AND FINALIZE INSTALLATION


Ground wiring

- Introduce the cables into the foot as below:

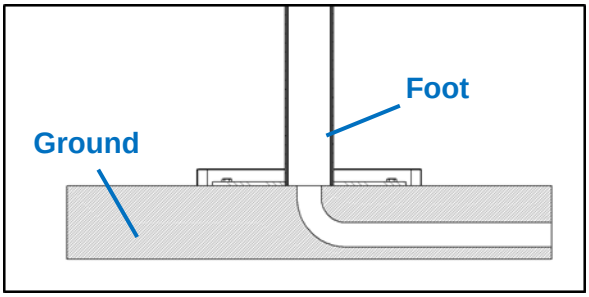


Ceiling wiring


- Introduce the cables into the pole as below:

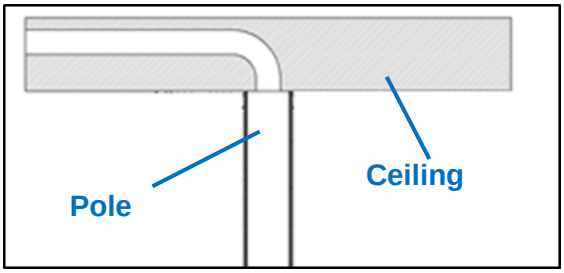

- The installer must pass the power supply cable until power cable on the foot (top of the foot for ceiling configuration and printer opening for ground configuration) and network cable at the PC:



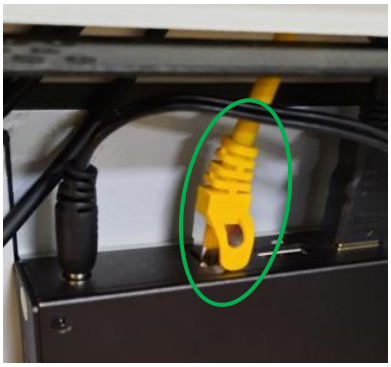

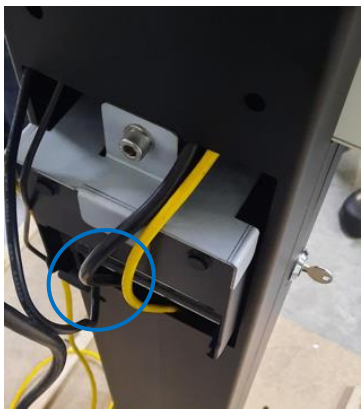

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


6.6 SCANNER SETTING AND TEST:

CARTE TEST SCANNER

CARTE TEST SCANNER

Disable Decoding Illumination
(0)

- Put the silicone seal around the foot

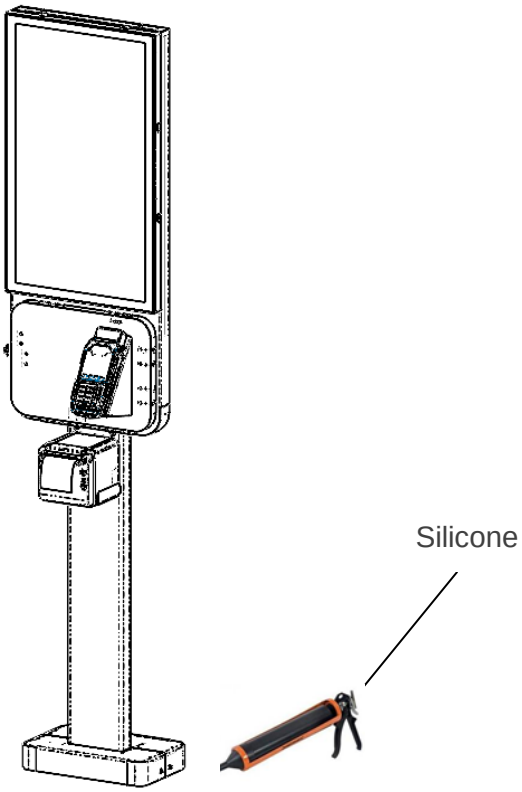

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

7 MOUNTING WALL MOUNTED CONFIGURATION

7.1 PRE-REQUISITES:

- **The wall and fixations (expandable screws, …) must be able to withstanding a load of 100 Kg**
- **Specific screws have to be provided locally by the local installer based on the specifications of the wall (Wood, concrete, etc…)**
- **Ensure to create an opening on the wall to run cabling from the wall to the kiosk.**

7.2 WARNING / SAFETY

- The use of personal protective equipment (PPE) is mandatory to install the kiosk. In particular, kiosk handling requires safety footwear.

7.3 SUMMARY OF STEPS

Step 1: Mark the fixation positions of the foot
Drill the fixation holes.
Fix the kiosk on the ground.

Step 2: Fix the ceiling pole ***if necessary.***

Step 3: Connect the kiosk and finalize the kiosk installation.

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


7.3.1 WALL MARKING

Step 1: Place the support on the wall and mark the holes fixation.

Step 2: Define and validate the K27 Lite position with the customer.




- Make sure the K27 LITE is positioned at the appropriate height from the ground. Refer to the below pre-requisites measurements. Use a pencil to mark the location of the 4 holes. You can use the wall mounted support as a pattern to mark the holes.

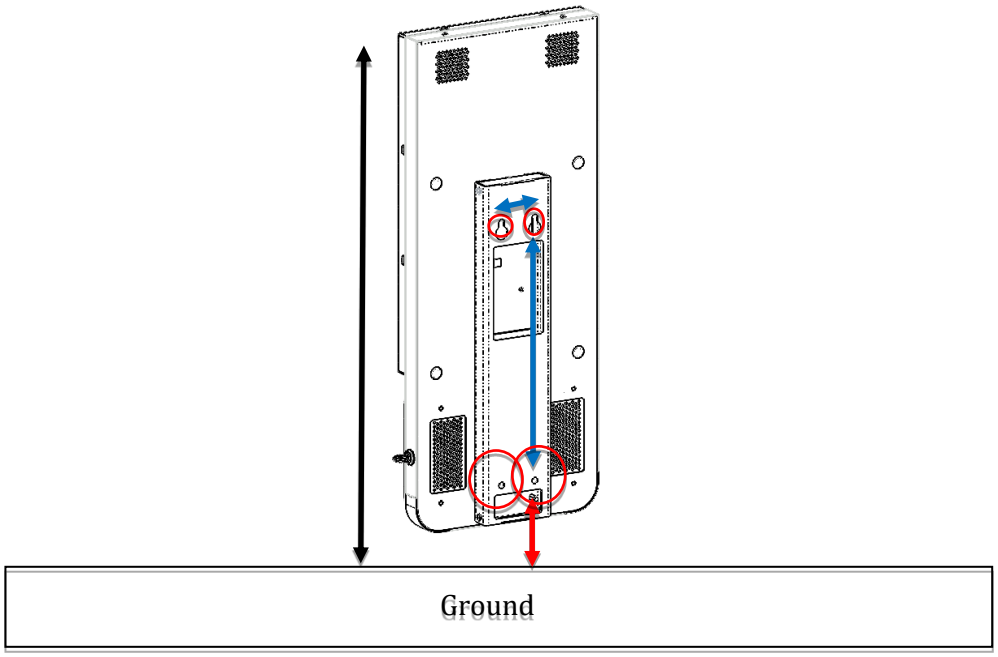


7.3.2 DRILLING THE WALL

- Make sure that cables are able to be ran to the desired location before drilling the wall.

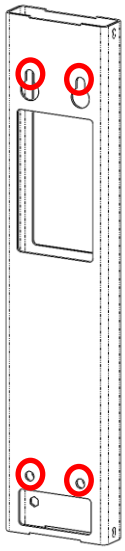


Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


Step 1: Drill the wall

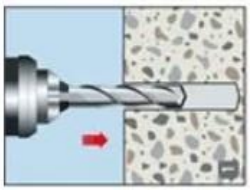


Step 2: Place dowels in the right position

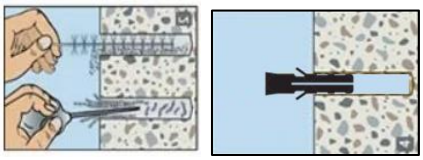


Step 3: Sink dowels using a hammer.

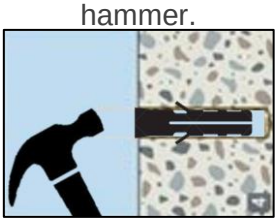


Step 4: For the tube dedicated to the body: screw in the 2 top screws, to make a “hook”

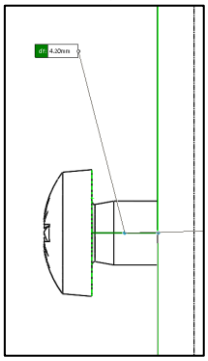


Step 5: Hang the body tube on these 2 screws through the “keyholes”, the tube is now in place.



Step 6: Finish screwing the 2 top screws and also screw the 2 bottom screws of the body tube in order to hold the tube in position



Step 7: We attach the rear plate of the body to the tube which is fixed to the wall: the 6 screws circled below are to be screwed

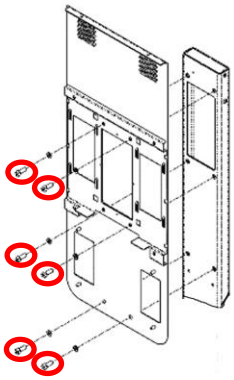


Step 8: For assembly of the screen support and cabbage refer to step **(6.3.1 - Screen support)**
Step 9: For the assembly of the Kbox (PC + Scanner) follow both step (**6.3.2 PC – Kbox)** + **(6.3.3 Kbox Scanner)**
Step 10: To assemble the screen, refer to step **(6.3.4 Screen 27p)**

Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com


7.3.3 PRINTER

7.3.3.1 Printer support


Step 1: Open the door

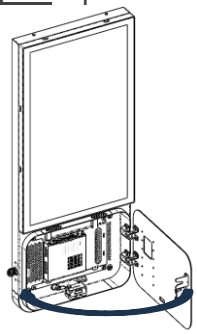


Step 2: We attach the printer wall mount to the wall, directly via the 4 dedicated points.

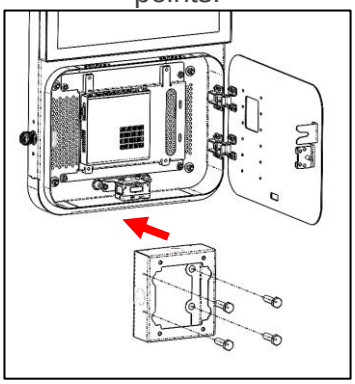


Step 3: Fix the lower part of the printer support by passing the cables and using **2** CBC screws **M04 X 012** and **2** washers **M04**.

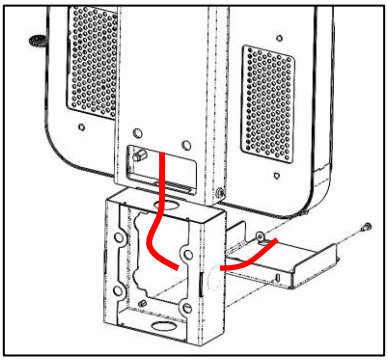


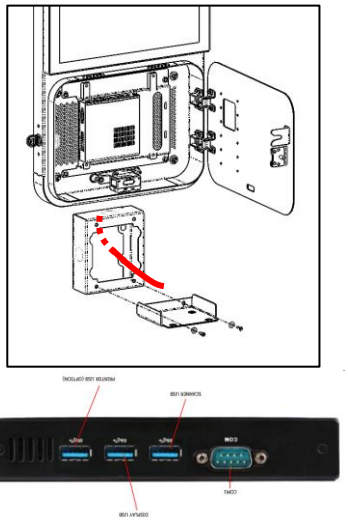


Step 4: Connect the printer cables (power and data)

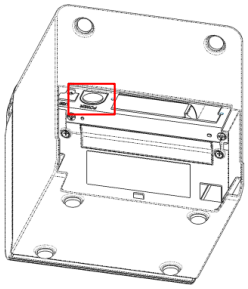


Step 5: Place the printer on the support.

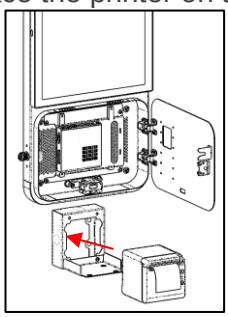

Step 6: Fix the bracket on the foot using **2** CBC screws **M04 X 012** and **2** washers **M04.**

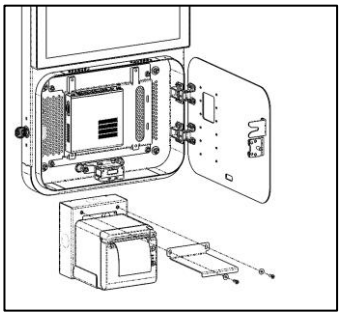

Step 7: Close the door



Acrelec is a trademark of AKSOR - 3 Rue Louis de Broglie – 77400 St Thibaut des Vignes – France - www.acrelec.com

8 POWER & SETUP

Once the K27 LITE Lite are installed, and connected to the client network and to power network, check that all settings are functional and that all devices work.

Verify that all settings, scanner and PC, are functional and that all devices work.

Refer to the setting guide if necessary.

9 ANNEXES

9.1 INSTALLATION REPORT

The end of the installation is leading to a report, available in the project documentation.

This document is a check-list that describes the list of the performed actions, with acceptance criteria if necessary.
This report must be signed by the customer.

10 COPYRIGHTS

© 2024, AKSOR – All rights reserved

No part of this publication may be reproduced, photocopied, stored on a retrieval system, or transmitted without the express prior written consent of the publisher.

Information in this document is subject to change without notice. Acrelec shall not be liable for errors contained herein.

AKSOR SAS
3 rue Louis de Broglie
77400 St-Thibault des Vignes
France