### ENGR 2541 - Mechanics of Materials

### Ethan Anthony

### January 6, 2025

### CONTENTS

1	Typ	pes of Stress
	1.1	Axial Stress
		1.1.1 Overview
		1.1.2 Analyzing Axial Stress
		1.1.3 Stress Points
	1.2	Shearing Stress
		1.2.1 Overview
		1.2.2 Single and Double Shear
		1.2.3 Bearing Stress
	1.3	Stress on an Oblique Plane
<b>2</b>	Des	sign Considerations
_	2.1	Determining the Strength of Materials
	2.2	Factor of Safety
3		formation
	3.1	Normal Strain
	3.2	Stress Strain Diagrams
	3.3	True vs. Engineering Stress and Strain
	3.4	Hooke's Law and the Modulus of Elasticity
	3.5	Repeated Loadings and Fatigue
	3.6	Static Indeterminacy
	3.7	Poisson's Ratio
	3.8	Stress Concentrations
	3.9	Thermal Strain
4	Tor	sion 18
	4.1	Introducing New Values
	4.2	Overview of Torsion
		4.2.1 Torsion
		4.2.2 Angle of Twist
		4.2.3 Polar Moment of Inertia
		4.2.4 Shear Strain
		4.2.5 Shear Stress
	4.3	Multiple Torsions

4.4	Brittle vs. Ductile	22
4.5	Torsional Stiffness	22
4.6	Statically Indeterminate Torsion	22
4.7	Power and Rotation Speed	25
4.8	Stress Concentrations	24

### 1 Types of Stress

Mechanics of materials provides a means to analyze the effects of stresses and deformations. Statics covered finding a balance of forces, including internal forces such as shear, bending, and tension/compression. Finding these internal forces is imperative to be able to determine the integrity of a structure. In addition to the internal forces, the integrity of a structure is also partially determined by the dimensions and materials of that structure.

### 1.1 Axial Stress

### 1.1.1 Overview

Axial Stress 1.1

Internal stress experienced by a member due to forces applied along its axis. Specifically, stress is a force per area, where the area is the cross section normal to the axis.

In the analysis of a rod, for example, the ability for that rod to withstand the internal forces (its structural integrity) is determined by the cross-sectional area and the material of the rod.



Figure 1: Axial force is the resultant of distributed elementary forces

### 1.1.2 Analyzing Axial Stress

In Figure 1, the *stress* being experiences by the member is the **force per unit area**, denoted by the Greek letter sigma  $(\sigma)$ .

## $\frac{\textbf{Axial Stress}}{\textbf{Stress can be calculated by dividing the total axial force by the cross-sectional area:}}$ $\sigma = \frac{P}{A}$

This formula gives the *average* axial stress over the cross section of a member. Although in reality the distribution of the stress throughout the member varies, stress can be assumed to be *uniform* throughout the cross section.



Figure 2: Tensile vs. Compressive Force

By convention, a positive force indicates **tensile stress** while a negative force indicates **compressive** stress.

The cross section, as seen in Figure 3, is perpendicular to the axial forces. The corresponding stress in the member in described as axial/normal stress.

Thus, the formula of  $\sigma = \frac{P}{A}$  gives the normal stress of an member under axial loading.

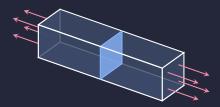


Figure 3: Normal Stress

### 1.1.3 STRESS POINTS

The formula of  $\sigma = \frac{P}{A}$  is only useful for averages or ranges. This can calculate the average value of the stress over the entire cross section. However, what about calculating at specific points?

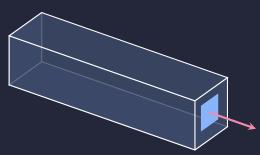


Figure 4: Stress Points

In Figure 4, to find the stress of the highlighted area, the working equation can still be applied, just now with a smaller area. To find the stress at a single point, rather than just a smaller area, stress must be calculated as the area approaches zero.

### Stress at a Single Point $\sigma = \lim_{\Delta A \to 0} \frac{\Delta F}{\Delta A}$ 1.2


### 1.2 Shearing Stress

### 1.2.1 OVERVIEW


In Section 1.1, the forces creating stress acted perpendicular to the face being analyzed (see Figure 3). This created axial stress. In the case of transverse forces acting parallel to the face, shearing stress is created.




Internal stresses caused by transverse forces acting parallel to a plane.

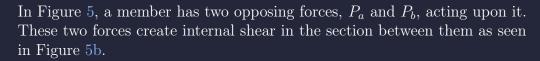

By analyzing the section at C in the member, it can be seen that the internal force created by the two forces in the section is equal to  $P_b$ . This resultant force is called a **shear force** (P). Dividing P by the area (A) results in the **average shearing stress** in the section.

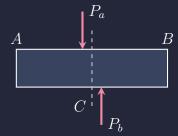

(a) Opposing Forces Creating Shear

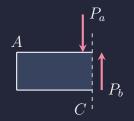

(b) Opposing Forces Creating Shear Figure 5: Shear Stress

$$\frac{\text{Average Shearing Stress}}{\tau_{avg} = \frac{P}{A}}$$

The average shearing stress cannot be assumed to be uniform throughout the section. Though not the full story, the shearing stress is generally distributed throughout the section such that it is zero at the surface and greater than the average near the center.

### 1.2.2 SINGLE AND DOUBLE SHEAR

The member in Figure 5 is said to be in **single shear** because the shear stress is entirely on a single plane. If forces were to be applied to a member as in Figure 6, there are now two sections and thus the member is said to be in **double shear**.

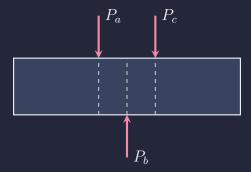


Figure 6: Double Shear

In a case of double shear, the shearing force is divided in half between the planes one between  $P_a$  and  $P_b$ , and one between  $P_b$  and  $P_c$ . Thus, to find the shear stress on either of these planes, only half the force will be used.

Double Shear	
$ au=rac{P}{2A}$	1.4

Since there are two faces of shear stress, they will add together to  $\frac{P}{A}$ .

### 1.2.3 Bearing Stress

Often, rather than singular forces creating axial stress, the surfaces of multiple objects will apply distributed forces to each other, thus creating **bearing stress**.

### Bearing Stress 1.3

Similar to axial stress, bearing stress is the result of two members interfacing with each other and applying force along an axis.

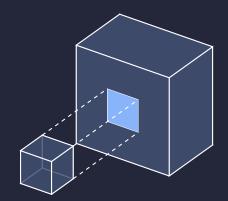


Figure 7: Bearing Shear

In Figure 7, two objects are applying reciprocal forces to each other. Throughout the area the two objects interface over, the distribution

of the force is not even. So, in practice, the average nominal value of the stress ( $\sigma_b$ ) called the **bearing** stress is used.

This value is obtained by dividing the load P by the area of the surface of contact.

## $\frac{\text{Bearing Stress}}{\sigma_b = \frac{P}{A} = \frac{P}{td}}$

### 1.3 Stress on an Oblique Plane

Thus far, only stresses perpendicular and parallel to planes have been considered. However, what if an object such as the one in Figure 8 were to be considered where the plane is at an angle?



Figure 8: Oblique Plane

In this situation, the "axial" force applied to the member is no longer just an axial force. There is a component of the force perpendicular to the plane just as there is one parallel. This can be seen in Figure 9, where the axial stress to the plane is purple and the **shear stress** to the plane is yellow.



Figure 9: Components of the Applied Force

This begins to illustrate the idea that shear and axial stresses aren't very different, and largely differ based on the perspective they are analyzed from.

To calculate the stresses created by the forces exerted on this member, it's just a matter of calculating the vector components of the force and using them where appropriate.

### 2 Design Considerations

Determining the stresses in a body, in and of itself, serves no purpose. However, these methods of analysis can be used to inform design decisions and create sturdy structures and machines. An important family of information to an engineer is how a certain material will behave under various kinds of loads.

### 2.1 Determining the Strength of Materials

Properties, such as the **ultimate load**, of materials can be empirically tested by pushing that material to its limits and taking measurements. To find the ultimate load, a member is put under tensile stress until it cannot go any further.

Ultimate Load 2.1

The largest axial force that may be applied to a material before it breaks, deforms, or begins to carry less load. Ultimate load is denoted by  $P_U$ .

Since axial stress is uniformly distributed, the ultimate load divided by the cross-sectional area of the member gives the **ultimate normal stress** of the material.

### Ultimate Normal Stress

$$\sigma_U = \frac{P_U}{A}$$

2.1

2.2

Also called the *Ultimate Strength in Tension*, this measures the maximum axial stress a material can undergo before failing.

Other tests can be performed to determine the **ultimate shearing stress** of a material. The same idea as prior is applied, however this time the load is applied is shear rather than axially.

### Ultimate Shearing Stress

$$\tau_U = \frac{P_U}{A}$$

Also called the *Ultimate Strength in Shear*, this measures the maximum shear stress a material can undergo before failing.

### 2.2 Factor of Safety

Though a material can theoretically sustain stresses up to its ultimate load, in practice this is not the case. Since loads are unpredictable and vary, the maximum load a component is designed to sustain should only be a percentage of its ultimate load. This concept is reflected in the idea of a **factor of safety**.

### Factor of Safety

$$Factor\ of\ Safety = F.S. = \frac{ultimate\ load}{allowable\ load} = \frac{ultimate\ stress}{allowable\ stress}$$

2.3

The factor of safety is calculated by finding the ratio between the ultimate load/stress and the allowable load/stress.

The relationship between the F.S. as calculated by loads vs. stresses only holds up when a linear relationship exists between the load and the stress. However, most materials experience non-linear a relationship between these two values as the material approaches its ultimate load.

The F.S. to use in a design is a subjective choice, but is based on many factors such as:

- 1. Variations that may occur in the properties of the member
- 2. The number of loadings expected during the life of the structure or machine
- 3. The type of loadings planned for in the design or that may occur in the future
- 4. The type of failure (brittle and ductile materials will fail differently)
- 5. Uncertainty due to methods of analysis
- 6. Deterioration that may occur in the future because of poor maintenance or unpreventable natural causes
- 7. The importance of a given member in the integrity of the entire structure

### 3 Deformation

### 3.1 Normal Strain

When studying the mechanics of materials, analyzing them entirely in static equilibrium would yield little to no information about how a material changes when ample load is applied. Consider the beam in Figure 10. After having endured an axial load, the beam deforms be elongating.

In this case, the elongation undergone by the beam is considered the **strain** endured by the beam. In other situations, strain can look different, such as the bending or compression of a material.

Strain 3.1

Deformation experienced by an object as the result of stresses exceeding the materials ability to maintain shape.

In the case of Figure 10, the strain is specifically **normal strain**.



Strain specifically relating to axial/normal stress. It is specifically defined as the *deformation per unit length*. Normal strain is denoted by the Greek letter epsilon  $(\epsilon)$ .


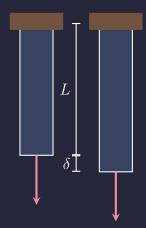


Figure 10: Deformation Due to Axial Stress

Since normal strain is the deformation per unit length, to find the value of  $\epsilon$ , one must divide the deformation by the *original* length of the member.

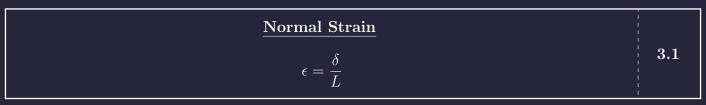

Though indirectly caused by an axial load, the factors in determining the amount of normal strain experienced by a material are: the materials inherent properties and the axial stress on the member.

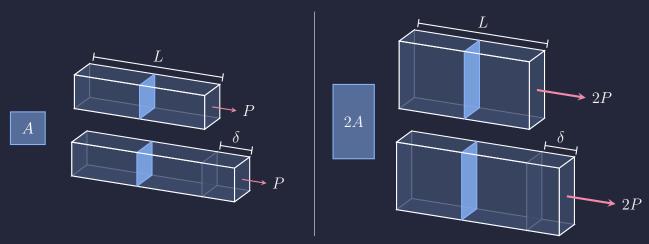


Figure 11: Strain For Two Rods of Different Cross Sections

Assuming the same material, two members of different dimensions, but undergoing the same stress, will strain the same amount. In Figure 11, this exact situation is visualized. Since stress is just a ratio of force to area, a member double the area experiencing an axial load double of another member will strain the same.

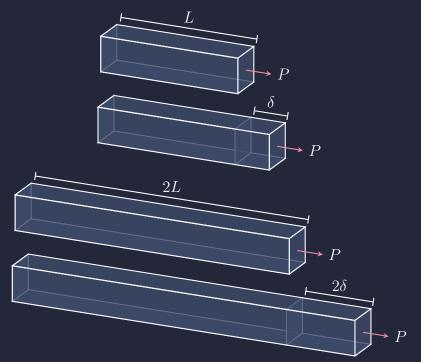


Figure 12: Strain For Two Rods of Different Lengths

Similarly, since strain is a ratio between the original length and the final length, a body double the length of another will experience the same strain assuming all else is the same. See Figure 12.

Strain so far has only been considered for uniform bodies: the same material, same cross-section, etc, and only for members loaded axially on their ends. What happens when these conditions aren't met? Conveniently, strain can be added for subsections of a member, and summed together to find the total strain:

 $\delta = \sum_{i} \frac{P_i L_i}{A_i E_i}$ 

### 3.2 STRESS STRAIN DIAGRAMS

Having seen that strain is independent of the dimensions of a material, and rather depends on the stress experienced by the material, it follows that plotting strain as a function of stress would result in a diagram generally applicable to a specific material. This curve, called a **stress-strain diagram** characterizes the properties of a material.

Though all materials behave differently when examined through a stress-strain diagram, there are two broad categories of materials: brittle and ductile.

**Ductile materials** are able to yield without necessarily failing entirely. Their elongation initially increases linearly with stress until a some value  $\sigma_Y$  where suddenly undergoes a large deformation with a relatively small increase in stress.

### Measuring Ductility

$$\text{Percent Elongation} = 100 \cdot \frac{\text{Initial Length - Length at Failure}}{\text{Initial Length}} = 100 \cdot \frac{L_B - L_0}{L_0}$$

3.2

$$\text{Percent Reduction in Area} = 100 \cdot \frac{\text{Initial Area} - \text{Area at Failure}}{\text{Initial Area}} = 100 \cdot \frac{A_0 - A_B}{A_0}$$

Brittle materials, on the other hand, experience a very small amount of yield, after which they tend to fail suddenly. There is a distinct lack of necking in brittle materials.

### 3.3 True vs. Engineering Stress and Strain

When an object undergoes elongation, the cross sectional area of that object will change. Thus introduces a question: should the original or current cross-section be used as the area when calculating stress? Rather than having an answer, there are just two types of stress which each reflect one of the options: **engineering stress** and **true stress**.

### True vs. Engineering Stress

3.3

**Engineering stress** is stress experienced by an object calculated using the original cross-section of the body.

$$\sigma_e = \frac{P}{A_{initial}}$$

True stress is stress as calculated by using the current cross-section of the body.

$$\sigma_t = \frac{P}{A_{current}}$$

A similar situation occurs when measuring the *strain* of a body. Using the formula for strain as introduced in 3.1 produces the **engineering strain** experienced by a body. However, if rather than measuring a single value for the length and deformation of the body, one were to subdivide the body into several subsections and measure the deformation for each subsection, something closer to the **true strain** would be produced. This is seen in Figure 13b.

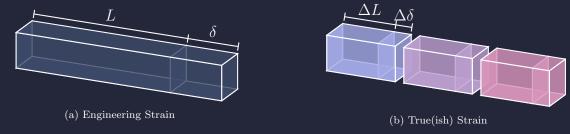


Figure 13: Engineering vs. True Strain

Taking this subdividing to its limit, the **True Strain** will be a perfectly continuous measurement of the change in deformation over some change in length:

$$\epsilon_{true} = \int_{L_0}^{L} \frac{dL}{L} = \ln \frac{L}{L_0}$$

### 3.4 Hooke's Law and the Modulus of Elasticity

Generally, structures are designed to keep any deformations within the linear portion of the stress-strain diagram. Given that some body is kept within that range, the stress  $(\sigma)$  is directly proportional to the strain  $(\epsilon)$ :

$$\sigma = E\epsilon$$

Where E is the **modulus of elasticity** of the material.

### Modulus of Elasticity

3.4

An inherent value to a material that reflects the proportionality between the stress and strain experienced by a body.

This linear relationship, governed by a constant coefficient (E) is known as **Hooke's Law**. This law only applies until the material reaches its **proportional limit**.

### **Proportional Limit**

3.5

The upper bound of the range over which Hooke's Law applies to some material.

### 3.5 Repeated Loadings and Fatigue

So far, only single instances of loading have been considered for the materials. What happens after thousands, or millions, of loads have been repeatedly applied to a material? In these cases, the material is said to have undergone **fatigue**.

### Fatigue

3.6

The result of many repeated loadings, fatigue is a general term for the effect that these repeated loadings have on a material.

Failures due to fatigue are generally more brittle than they are ductile. Since fatigue not only increases the chances of a material failing, but also makes it such that there is less of a yield period, it is imperative to consider fatigue when designing structures and machines that are expected to support time-varying loads.

To measure the fatigue of a material, a stress to loading curve can be made. This measures the number of repeated loads required to cause failure at different load-sizes for a given material. A generic one can be seen in Figure 14, illustrating the typical shape of such a curve.

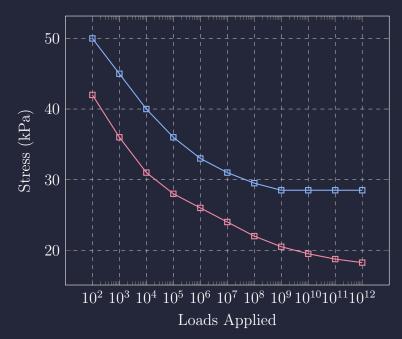


Figure 14: Stress to Loading Curve

The flat part at the end of the blue material in Figure 14 marks the **endurance limit** of the material. This is where, regardless of the number of time a load is applied, the material will never fail. Any force value below the endurance limit on the y-axis (stress) will never cause a material to fail.

However, for non-ferrous materials, there is no endurance limit. Rather, the curve just continues to go down. This is seen in the red curve in Figure 14. This behavior is caused by microscopic failure after each consecutive loading, eventually compounding into total failure.

### 3.6 STATIC INDETERMINACY

Thus far, only objects in static equilibrium have been considered. However, situations in which statics alone can't determine internal forces are very common. In such cases, the geometry must be used alongside equilibrium equations. These cases are referred to as **statically indeterminate**.

### Static Indeterminate 3.7

Statically indeterminate structures are those which have reactions and internal forces that cannot be found through statics alone, and thus must derive results based on the material composition of the structure.

Consider the structure on Figure 15. In this body, there is a force being axially applied, but not at the ends of the structure. It is known that the structure is in static equilibrium:

$$R_A + R_B = P$$

However, there are two unknowns in this equation:  $R_A$  and  $R_B$ . In order to solve for these unknowns, it is necessary, then, to use a compatibility equation. However, before understanding that, it is important to understand the **Principal of Superposition**.

### Principal of Superposition

3.8

In materials governed by Hooke's Law, the deformation of a structure is equal to the deformation of any number of arbitrary sections of that structure:

$$\delta_{total} = \sum_{n}^{N} \delta_{n}$$



Figure 15: Basic Example

By the principal of superposition, one is able to decompose a structure into component parts, solve for the deformation in each part, then sum the deformations to find the total deformation of the structure.

Applying the Principal of Superposition, it is possible to relate the deformation of the structure based on the constraints. This process results in a compatibility equation.

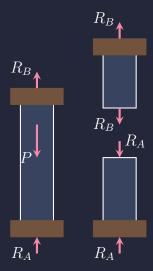


Figure 16: Sections of Figure 15

Decomposing the structure (as seen in Figure 16), the deformation of each individual component can be analyzed independently, and then be compared through a **compatibility equation** to determine the true values of each portion:

$$\delta_{top} + \delta_{bottom} = 0$$

This can then be expanded out to:

$$\frac{P_t L_t}{A_t E_t} = \frac{P_b L_b}{A_b E_b}$$

Assuming the same material throughout as well as the same cross-section, this can be taken further by canceling out the area (A) and the modulus of elasticity (E) of each side, resulting in:

$$P_t L_t = P_b L_b$$
$$\frac{L_t}{L_b} \cdot P_t = P_b$$

In situations like these, it can be clearly seen that the load on each component is directly proportional to the length of that component.

### 3.7 Poisson's Ratio

In all engineering materials, the relationship between the elongation of body due to axial stress is directly proportional to contraction in any transverse direction. This relationship is codified with a constant that relates the contraction with the elongation, this constant being a given material's **Poisson's Ratio**.

$$\frac{\text{Poisson's Ratio}}{\nu = -\frac{\text{lateral strain}}{\text{axial strain}} = -\frac{\epsilon_y}{\epsilon_x}}$$

### 3.8 Stress Concentrations

Consider Figure 17. Due to the discontinuity in the center, the stress is distributed differently than normal. Considering the location with the smallest cross section (the exact center), the stress is distributed closer to the center of the discontinuity.

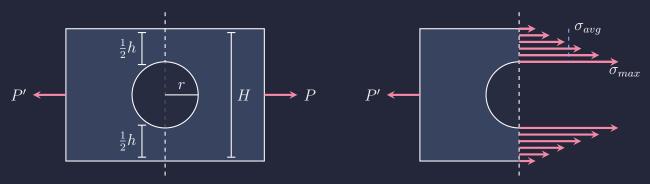


Figure 17: Stress Distribution Near Discontinuity

Through rigorous experimentation, it's been determined that analyzing these structures can be done solely based on the geometry of the discontinuities. The main concern of this analysis is to find whether the allowable stress will be exceeded. Since the maximum stress ( $\sigma_{max}$ ) will be at the narrowest cross-section, only this cross section needs to be analyzed.

To complete this analysis, an engineer must find the average stress in the narrowest cross-section:

$$\sigma_{avg} = \frac{P}{A}$$

and the ratio between the average and maximum stress at that cross-section:

$$K = \frac{\sigma_{max}}{\sigma_{avq}}$$

This ratio is referred to as the **stress concentration factor**. As claimed earlier, this stress concentration factor can be computed based on solely the geometry of the discontinuity. More specifically, there exist repositories of information on how to plot the ratio of the radius and min height  $(\frac{r}{h})$  and the ratio between the max and min heights  $(\frac{H}{h})$ 

### 3.9 THERMAL STRAIN

When changes in shape due to changes in temperature occur, new stresses are created due to these thermal deformations. Generally, these are somewhat small. However, with large bodies or large changes in temperature these thermal strains create large enough stresses to cause a material to rupture.

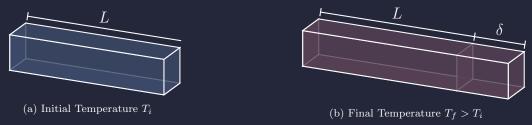


Figure 18: Expansions Due to Increased Temperature

Thermal Strain				
$\epsilon_{thermal} = \alpha \cdot \Delta T$				3.4
	$\alpha = \text{coefficient of thermal expansion}$	$\Delta T = \text{change in temperature}$		

Notice that there is no stress associated with the thermal strain. The strain is directly caused by the change in temperature of the material as well as the material's inherent properties.

Similar to the axial elongation, the change in length of a body can be defined by multiplying the thermal strain  $(\epsilon_T)$  by the original length of the member (L).






Figure 19: Constrained Body

These two formulas model the thermal strain/thermal expansion undergone by unconstrained bodies. However, how do constrained bodies (such as the one in Figure 19) react to changes in temperature?

In these situations, a **thermal stress** is induced into this bar. This thermal stress can be calculated in a similar way to statically indeterminate structures (Subsection 3.6).

The deformation due to the thermal expansion and the deformation due to the constraints can be summed to the total deformation experienced. In the example of Figure 19, since the total deformation

is zero, the compatibility equation is:

$$\begin{split} \delta_{thermal} + \delta_{constraint} &= 0 \\ \alpha \cdot \Delta T \cdot L &= -\delta_C \\ \alpha \cdot \Delta T \cdot L &= -\frac{P_C L}{AE} \end{split}$$

Then using the values known about the member and its composition, the force applied by the constraints can be found, leading directly to then being able to solve for the stress. This compatibility equation can be seen in steps in Figure 20.





Figure 20: Constrained Thermal Expansion

### 4 Torsion

### 4.1 Introducing New Values

Before covering concepts, there are several new values, each with its own notation. Referring to Figure 21, all these new values are labeled, and are as follows:

Value	Symbol	Axial Counterpart
Torque	T	Force $(P)$
Distance From Center	ho	Force $(P)$
Radius	C	Force $(P)$
Angle of Twist	$\phi$	Force $(P)$
Length of Rotation	a	Force $(P)$

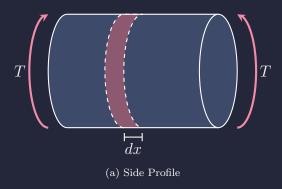

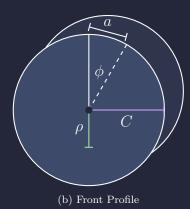


Figure 21: Circular Shaft in Torsion

Another important value is the angle formed by the line connecting two points some distance  $\rho$  from the center in each face of the shaft. This is the **shear strain** ( $\gamma$ ) experienced by the body. In Figure 22, this angle can be seen between the points n, m, and m'.

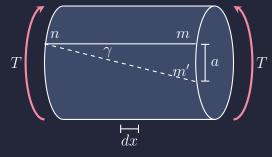


Figure 22: Shear Strain

### 4.2 Overview of Torsion

### 4.2.1 Torsion

Torsion 4.1

The twisting of an object caused by a moment acting about the object's longitudinal (long) axis.

The "force" that creates the moment around the axis is referred to as torque  $(\tau)$ . When a shaft, such as the one if Figure 21 is put into torsion, each cross section to rotate relative to the others. However, the face of each cross section remains plane, which means that the cross sections remain flat and undistorted.

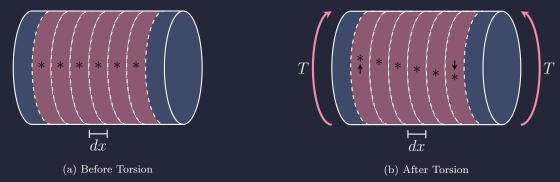
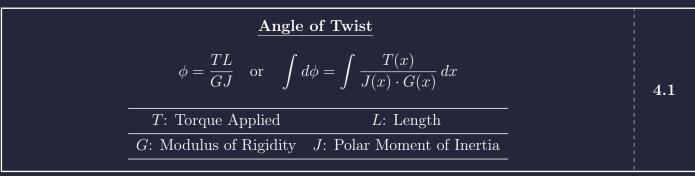
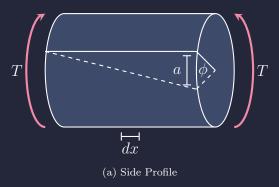


Figure 23: Shaft in Torsion

### 4.2.2 Angle of Twist

In Figure 24, the angle of twist  $(\phi)$  is shown. The angle of twist refers to the angle between an initial point m, the center of the face, and the distorted point m'. The angle of twist can be calculated as:





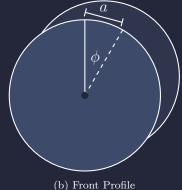



Figure 24: Angle of Twist

### 4.2.3 Polar Moment of Inertia

The polar moment of inertia of an object is a property of an object that described its resistance to torsion. This is a value based on the geometry of the body.



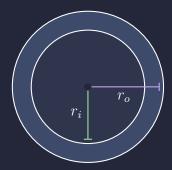


Figure 25: Geometry of a Cylinder

### 4.2.4 SHEAR STRAIN


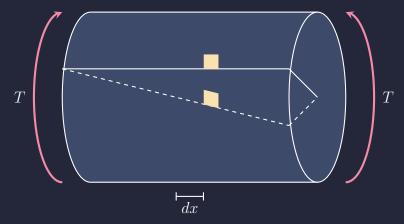


Figure 26: Front Profile

When an object undergoes shear strain one can imagine a grid across the surface of the cylinder. Each square in the grid will undergo a deformation. However, as has been said in Subsubsection 4.2.1, the circular shaft maintains it's cross-section faces' geometry intact. So, each square in the grid will have to maintain the same side lengths:

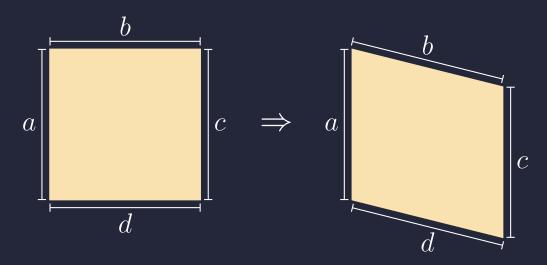

The strain caused by this can be calculated in terms of the angle of twist (4.2.2) and either the outer radius of the bar (C) or some inner radius  $(\rho)$ :

Shear Strain	
$\gamma = rac{C\phi}{L}   ext{or}  \gamma = rac{ ho\phi}{L}$	4.3

### 4.2.5 SHEAR STRESS

To calculate the shear strain, consider Figure 27.

# $\frac{\text{Shear Stress}}{T = \int_0^r \tau \rho \, dA}$ $= \frac{\tau}{\rho} \int_0^r \rho^2 \, dA$ $= \frac{\tau}{\rho} \left( \frac{\pi}{2} \left( r_0^4 - r_i^4 \right) \right)$ $= \frac{\tau}{\rho} J$ $\tau = \frac{T\rho}{J} \quad \text{or} \quad \tau = G \cdot \gamma$


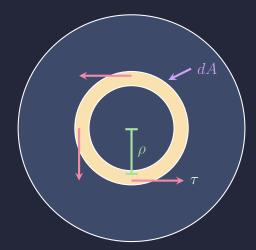


Figure 27: Calculating Shear Stress

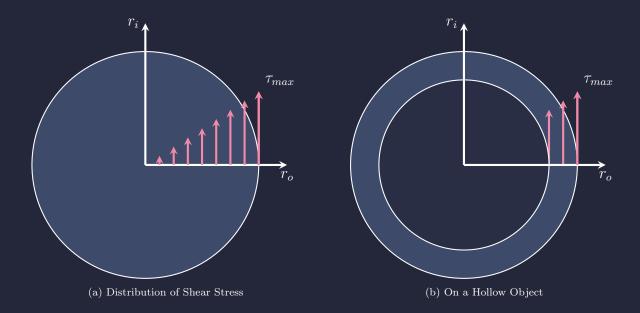

The Shear stress is down the radius of the face of the body linearly. In Figure 28b, a hollow object is experiencing shear strain. Since it is hollow, it is more efficient at holding the shear strain.

### 4.3 Multiple Torsions

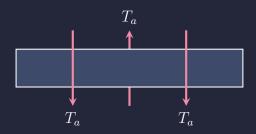


Figure 29: Multiple Torques

Consider the member in Figure 29 experiencing multiple torques simultaneously. Very similarly to previous techniques used in statics to find internal forces. The shear stress and strain can be found in any region bounded by two torques (on the ends, there would be no stress or strain). Supposing that:

$$T_b > T_a > T_c$$

Then it could be found that region with the greatest shear and stress would be between  $T_b$  and  $T_a$ .

A diagram displaying the internal torque as a function of x would look like that in Figure 30.



Figure 30: Internal Torque Diagram

### 4.4 Brittle vs. Ductile


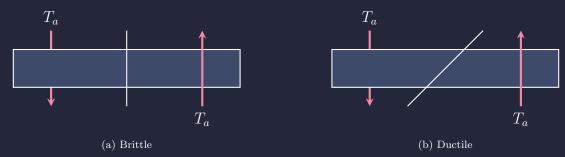


Figure 31: Brittle vs. Ductile

The brittle material in Figure 31a will fail at a 45° angle from the longitudinal axis. This is due to the brittle material tend to fail in tension, thus failing along the place of maximum tension. Conversely, the material in Figure 31b is duetile and will then fail along the plane of maximum shear.

### 4.5 Torsional Stiffness

Similar to how an axial member will have a stiffness that helps in solving statically indeterminate problems, so too do members have torsional stiffnesses (k).



### 4.6 Statically Indeterminate Torsion

Just as there were situations in Subsection 3.6 where the internal forces, and in turn the stresses and shears, couldn't be solved through statics alone, there are also situations in which the internal torsion cannot be solved through statics alone. In such cases, it is necessary to analyze the geometry of the problem to solve for internal torsion.

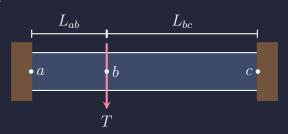


Figure 32: Statically Indeterminate Torsion

Consider Figure 32. There is a beam fixed on each end to two supports. Furthermore, there is a torque applied  $\frac{1}{3}$  of the way down the beam such that  $L_{ab} = \frac{1}{2}L_{bc}$ .

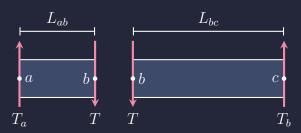


Figure 33: Free Body Diagram

The member in Figure 32 can be translated into a free body diagram as shown in Figure 33 where each component of the beam is considered individually. However, this would result in an equation with two unknowns, thus showing this situation as statically indeterminate:

$$T_a + T_b = T$$

So, how should a statically indeterminate torsion problem be approached? First, it must be noticed that, since both ends are fixed in place, then the total angle of twist  $(\phi_t)$  should be zero.

$$\phi_t = 0$$

An analogous process to Subsection 3.6 can be applied in which the shear of each component can be calculated individually to find the total angle of twist.

$$\phi_t = \sum_{n=1}^{N} \phi_n$$

Thus:

$$\phi_t = 0 = \phi_{ab} + \phi_{bc}$$

$$= \frac{T_{ab}L_{ab}}{G_{ab}J_{ab}} + \frac{T_{bc}L_{bc}}{G_{bc}J_{bc}}$$

$$-\frac{T_{ab}L_{ab}}{G_{ab}J_{ab}} = \frac{T_{bc}L_{bc}}{G_{bc}J_{bc}}$$

From here, different situations will give different unknowns and thus different values to solve for. In the current example, the only difference between the two sections is their lengths, and so:

$$-\frac{T_{ab}L_{ab}}{GJ} = \frac{T_{bc}L_{bc}}{GJ}$$
$$-T_{ab}L_{ab} = T_{bc}L_{bc}$$
$$-\frac{L_{ab}}{L_{bc}} \cdot T_{ab} = T_{bc}$$

It can then be seen that the key to solving these statically indeterminate situations is to finding the ratio between the two torques based on the summation of the angles of rotation.

### 4.7 Power and Rotation Speed

For shafts that are designed to be rotated, there is obviously going to be a torque of some kind applied to the shaft to achieve that rotation. When designing these parts, it's important that the torque applied doesn't create shear beyond what is deemed acceptable in the specific context.

To determine the amount of torque generated by the power (P) applied at a certain frequency (f) to a shaft:

### Torque Generated by Power and Frequency

$$T = \frac{P}{2\pi \cdot f}$$

4.6

Once this torque has been calculated, the engineer can use other methods and formulas from Section 4 to calculate the allowable power, frequency, etc., for the specific situation.

### 4.8 Stress Concentrations