FRYERS

DAILY/QUARTERLY

SUPPLIES:


KAY® QSR Heavy Duty Degreaser


Hi-Temp Multi-Use Tool Head with Multi-Use Pad and Detail Brush


Apron


Heat-Resistant Gloves



Face Shield


Clean, Sanitizer-Soaked Towels


Other supplies needed:
McDonald's-approved fryer cleanser
Heat-Resistant Pail
Stainless Steel Pitcher
Clean Paper Towels

IMPORTANT: Wear heat-resistant gloves, apron and protective face shield. This procedure can be used with all fryer models.

BEFORE CLEANING

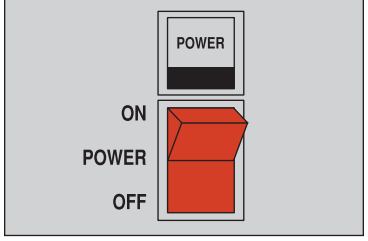


- Turn fryer OFF
- Put on personal protective equipment (PPE)—heat-resistant gloves, apron and face shield

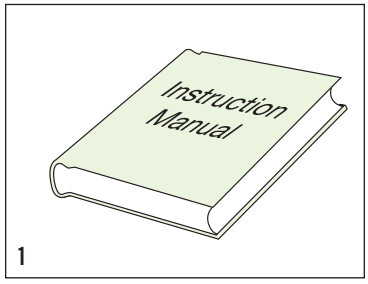


- Follow manufacturer's instructions for draining and filtering fryer shortening

  NOTE: See equipment-specific PM manual for more details


FRYER VATS—Daily

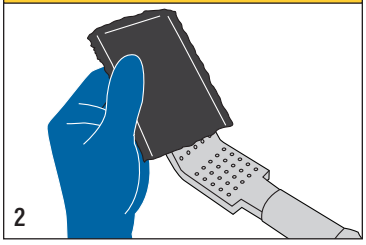

- Attach pad to Hi-Temp Pad Holder and moisten with shortening

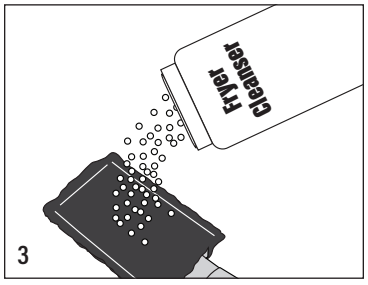


- While filtering oil, sprinkle fryer cleanser on pad; scrub interior surfaces of vat

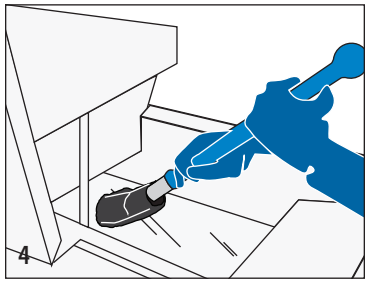


- Use Hi-Temp Pad Holder to clean interior vat surfaces and cooking zones; tool can be used to remove heavy build up from surfaces

  NOTE: Gently scrub heating elements and coils

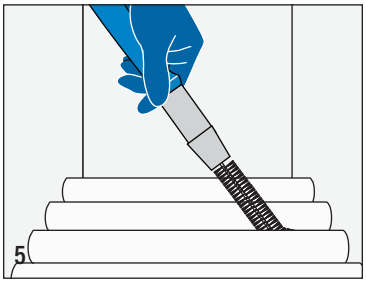

- Use Hi-Temp Detail Brush to scrub hard-to-reach areas such as burner tubes and heating element coils, bottom of fry vats and removing soils from rotating hub

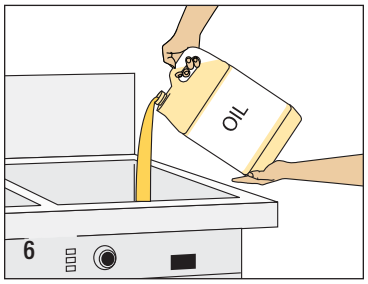

- Thoroughly rinse fry vat with shortening; follow computer prompts to thoroughly rinse vat
- Refill with shortening according to manufacturer's recommendations

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA


CUSTOMER SERVICE 800.529.5458

92212305.09 MCD US 2995/8009/0726 ©2026 Ecolab USA Inc. All rights reserved.


FRYERS (CONTINUED)

DAILY/QUARTERLY


FILTER PANS—Daily

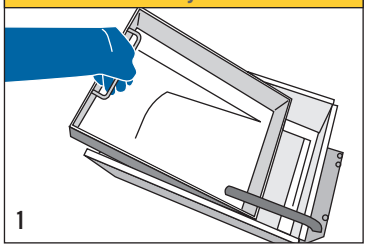

- Pull out filter drain pan
- Remove drain pan cover, crumb basket, filter pad retaining ring, filter pad and bottom filter screen; discard filter pad

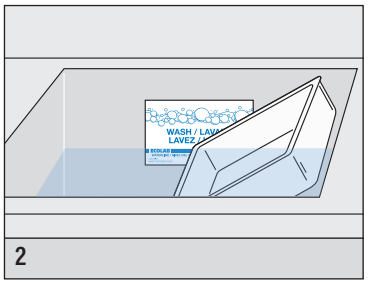


- Wash all items at 3-compartment sink; rinse thoroughly under warm (85—105°F) running water

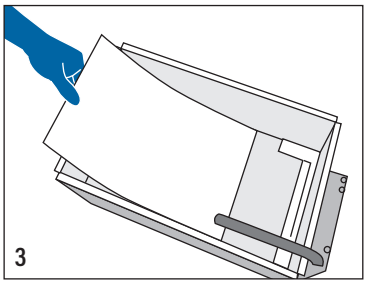

- Place a new filter pad in drain pan; reassemble filter drain pan and resume use

  NOTE: Drain pan should be dry before placing a new filter pad inside

BOIL OUT—Quarterly

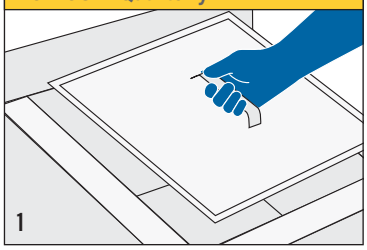


- Cover adjoining fryers
- Due to heat, put on personal protective equipment (PPE)—heat-resistant gloves, apron and face shield
- Put fryer in DEEP CLEAN/BOIL-OUT mode according to manufacturer's instructions




- Remove and discard oil from vat
- Return empty filter pan to fryer


  NOTE: See equipment-specific PM manual for more details

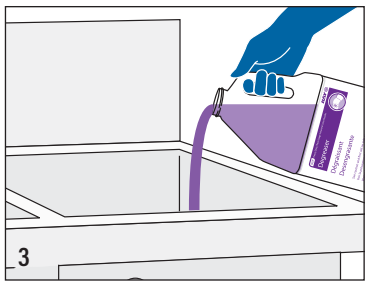


- Full Vats: Pour 2/3 of 1 gal. (3.8 L) bottle of full-strength Degreaser into empty vat
- Half Vats: Pour 1/3 of 1 gal. (3.8 L) bottle of full strength Degreaser into empty vat
- Fill fryer with hot (110—120°F) water to 1 inch (2.5 cm) above oil fill line

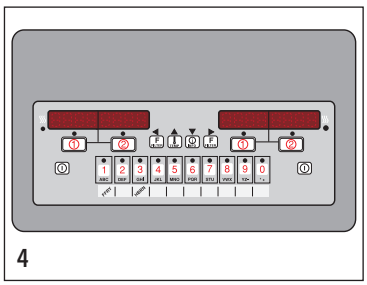

- Use fryer controller to start BOIL-OUT cycle
- Allow to run 60 minutes

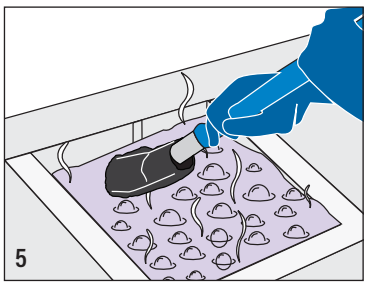

- Frequently dip Hi-Temp Pad Holder into Solution; gently brush area above Solution level to remove soil from upper portion of vat

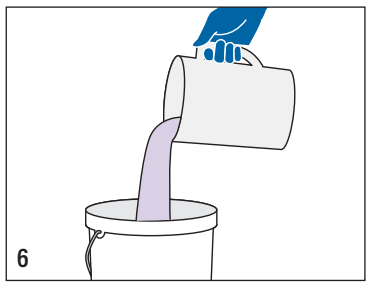

- After cleaning is complete, use a 1/2 gal. stainless steel pitcher to transfer cleaning Solution from vat to a heat-resistant pail


ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA
CUSTOMER SERVICE 800.529.5458

92212305.09 MCD US 29915/6009/0726 ©2026 Ecolab USA Inc. All rights reserved.


FRYERS (CONTINUED)

DAILY/QUARTERLY


BOIL OUT—Quarterly (continued)

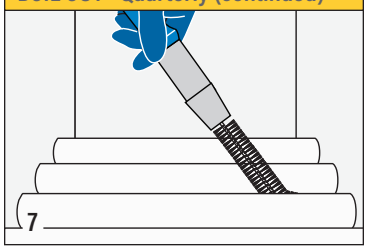


- Use Hi-Temp Detail Brush to scrub hard-to-reach areas such as: burner tubes and heating element coils, bottom of fry vats and removing soils from rotating hub

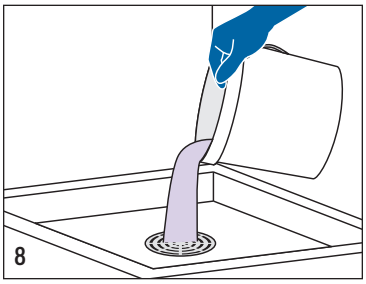


- When only a small amount of cleaning Solution remains in vat, drain into filter pan
- Discard Solution from pail and filter pan at mop sink

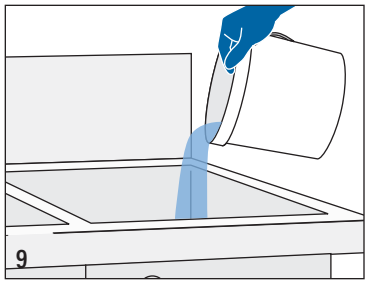


- Return filter pan to fryer
- Rinse the vat with warm (85—105°F) water and allow to drain into filter pan; discard Solution or liquids in filter pan as necessary; do not allow water to fill filter pan more than 2 in. from top
- Repeat rinse cycle at least 3 times

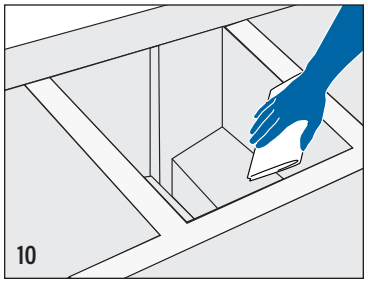


- Once rinsing is complete, use clean paper towels to thoroughly dry interior of vat

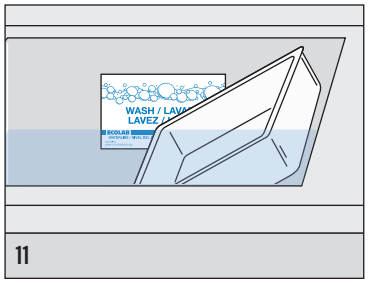

- Wash, rinse and sanitize filter pan at 3-compartment sink
- Dry thoroughly with clean paper towels
- Store filter pan

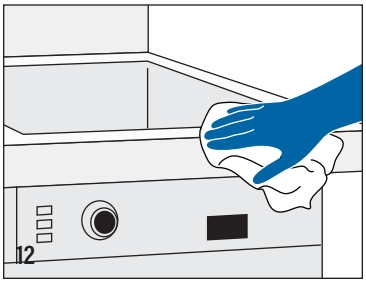


- Spray a clean sanitizer-soaked towel with Degreaser Solution
- Wipe exterior of fryer; discard towel into soiled towel bucket after use

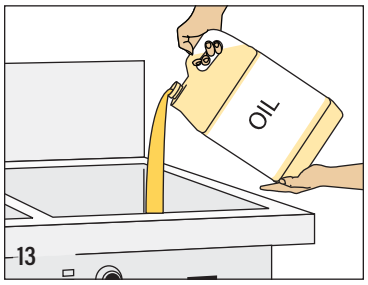

- Refill vat with fresh oil
- Bring oil to cooking temperature

NOTE: Ensure fryer vat is thoroughly dry before filling with fresh oil

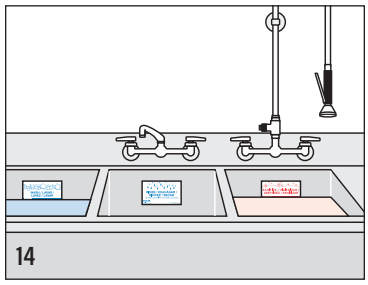

- Wash, rinse and sanitize utensils, tools, face shield and apron at 3-compartment sink
- Allow to air dry; store

NOTE: Thoroughly wash, rinse and sanitize gloves; refer to manufacturer's instructions for proper glove cleaning

NOTE: After use, once Hi-Temp Pad has cooled, remove and rinse thoroughly with water; flip pad over and replace on tool for next fryer cleaning; discard pad when visibly worn

92212305.09 MCD US 2995/8009/0726 ©2026 Ecolab USA Inc. All rights reserved.