SUNDAE TOPPING PUMPS

DAILY AT CLOSE/BI-WEEKLY OR IF CONTAMINATION OCCURS

SUPPLIES:



KAY® SolidSense™ All-Purpose Super Concentrate (APSC)




KAY® SolidSense™ Sanitizer




Clean, Sanitizer-Soaked Towel

Other supplies needed:
3 Clean Containers
Sundae Topping Pump Brushes

DAILY AT CLOSE OR END OF DAY

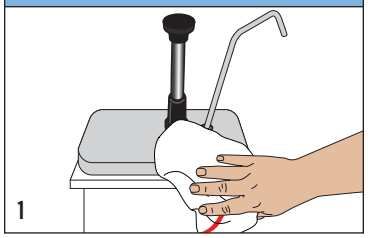


- Wipe exterior of pump nozzle with a clean, sanitizer-soaked towel to remove topping buildup

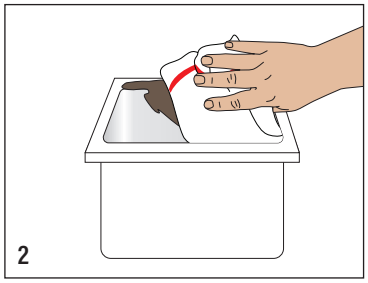


- Clean up topping spills on pump and inside container with a clean, sanitizer-soaked towel


EVERY 14 DAYS (BI-WEEKLY) OR IF CONTAMINATION OCCURS

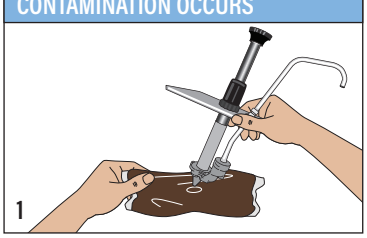


- Remove pump from topping bag
- Cover topping pouch opening to prevent spills; set topping pouch aside while cleaning

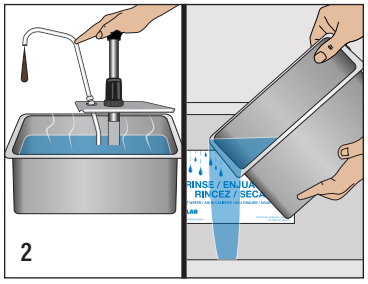


- Take pump to 3-compartment sink
- Fill a small clean container with **hot** water; place lower end of pump into water
- Pump out remaining topping from pump
- Discard water from container

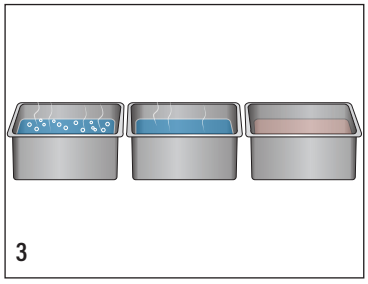


- Prepare Solutions for cleaning at the 3-compartment sink; gather 3 small clean containers
- Fill container 1 with **hot** (110-120° F) APSC Solution
- Fill container 2 with **hot** (110-120° F) water
- Fill container 3 with Sanitizer Solution

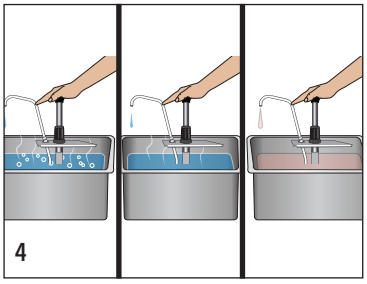

- Take pump to 3 prepared containers
- Place lower end of pump into **hot** APSC Solution; pump until Solution comes through discharge tube (spout) several times
- Continue the same process with the **hot** water and then the Sanitizer Solution
- Discard Solutions from containers

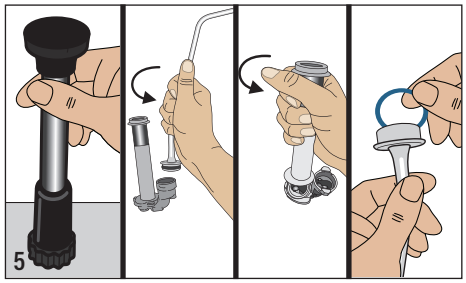

- Disassemble the topping pump in the following order:
  1. Remove seal assembly from bottom of plunger
  2. Remove plunger and lid
  3. Remove cylinder and discharge tube
  4. Remove gasket and o-ring

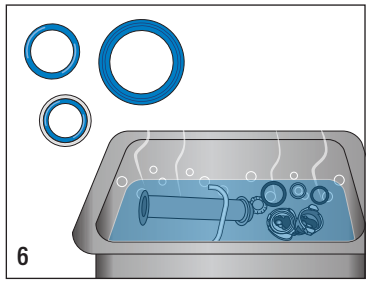

- Repeat step 3 and prepare 3 small containers of APSC Solution, rinse water and Sanitizer Solution
- Place parts into container of **hot** APSC Solution to clean


ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458


58508.02 MCD US 58508/8002/1025 ©2025 Ecolab USA Inc. All rights reserved.

SUNDAE TOPPING PUMPS (CONTINUED)


DAILY AT CLOSE/BI-WEEKLY OR IF CONTAMINATION OCCURS

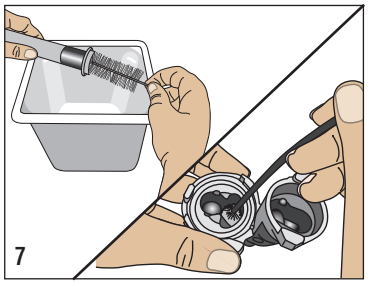


- Clean parts with the supplied topping pump brushes; make sure to scrub inside the discharge tube and other small areas with the brush

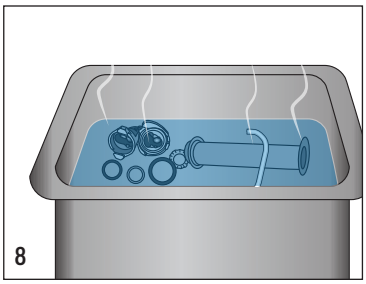


- Place parts into the container of **hot** water to rinse

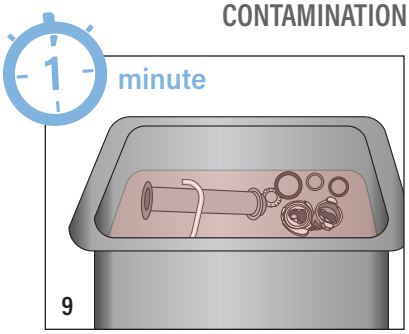


- Place parts into container of Sanitizer Solution; let sit for 1 minute to sanitize
- Remove parts from Sanitizer Solution and allow to air dry completely

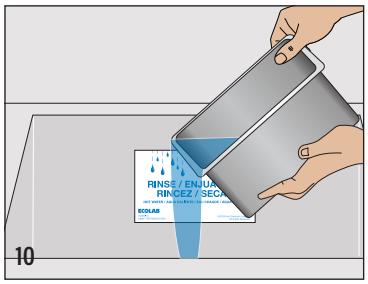

- Discard Solutions from containers
- Wash, rinse and sanitize containers
- Allow to air dry

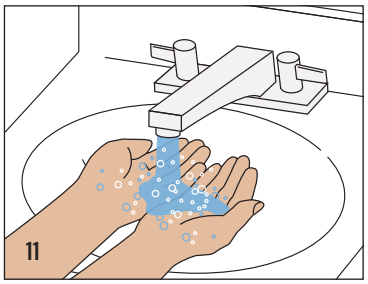

- Wash hands

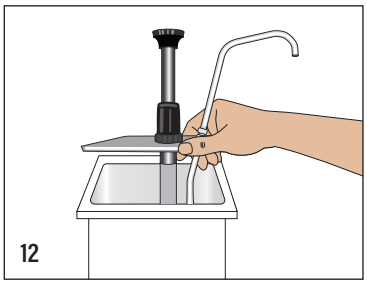

- Reassemble parts
- Reattach topping pouch

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458

58508.02 MCD US 58508/8002/1025 ©2025 Ecolab USA Inc. All rights reserved.