OVENS— CONVECTION

DAILY/WEEKLY

SUPPLIES:



KAY® QSR Heat-Activated Equipment Cleaner (HAEC)



Heat-Resistant Gloves



Hi-Temp Multi-Use Tool Head and Multi-Use Pad




Clean, Sanitizer-Soaked Grill Cloths




KAY® NO-SCRATCH™ Pads

Other supplies needed:
Small Wares Cleaning Brush


IMPORTANT: This procedure can be used with all oven models.
BEST PRACTICE TIP—When using your clean grill cloth, fold four times and use all sides of the cloth prior to discarding into the soiled towel bucket.

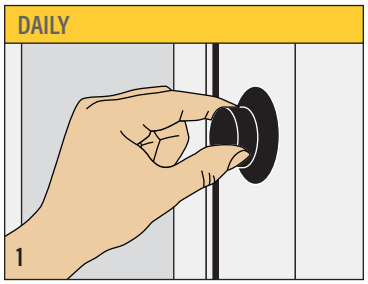

- Turn oven OFF

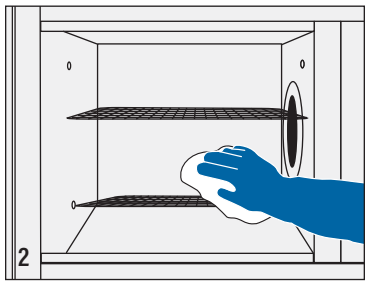


- Put on heat-resistant gloves
- Wipe down interior of oven with a clean sanitizer-soaked grill cloth
- Discard grill cloth into soiled towel bucket after use

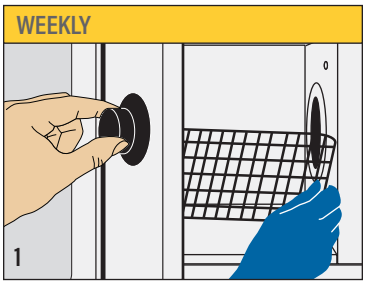

- Turn oven OFF and allow to **cool** to 250-300°F
- While racks and supports are still **hot**, use heat-resistant gloves to remove them from oven; take to 3-compartment sink
- Clean oven while **hot**
  NOTE: Oven and fan must both be OFF during cleaning



- Spray a clean sanitizer-soaked grill cloth with Equipment Cleaner and wipe onto racks and supports
- Repeat until all areas of racks and supports are fully covered with Cleaner

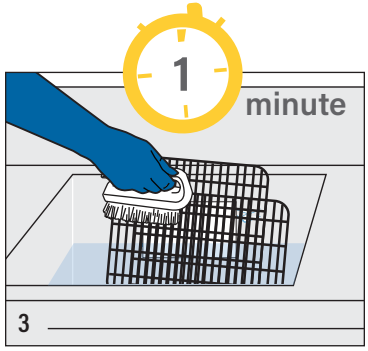

- Scrub oven racks and supports using the small wares cleaning brush or a NO-SCRATCH Pad
- Rinse with clean, **lukewarm** (85-105°F) water; sanitize for a minimum of one minute in fresh **lukewarm** Sanitizer Solution
- Allow racks and supports to air dry



- While oven is still **hot** (250-300°F), spray interior with Cleaner; ensuring full product coverage on interior surface, including oven door
  NOTE: Always avoid spraying product directly into fan area


ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458


5967102 MKD US 59671/8002/1025 ©2025 Ecolab USA Inc. All rights reserved.

OVENS—CONVECTION (CONTINUED)


DAILY/WEEKLY

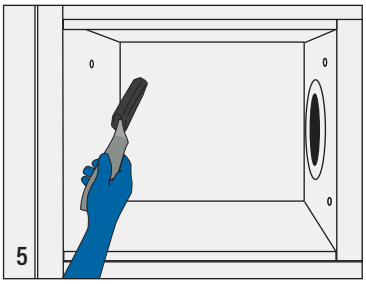


- Immediately after spraying, use tool to spread Cleaner until interior oven walls are fully coated

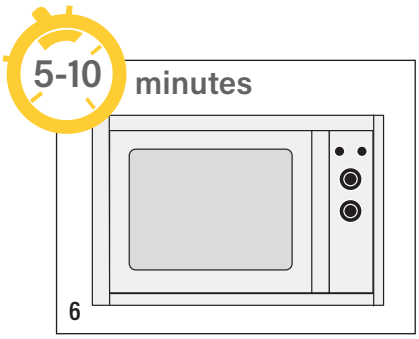


- Close oven door and allow product to sit for 5-10 minutes

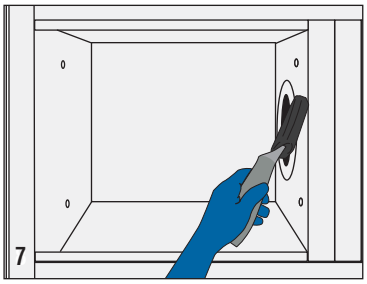

- Open door; scrub oven interior with tool, using water to loosen soils when needed

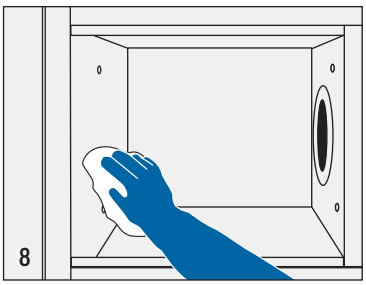

- Rinse with a clean sanitizer-soaked towel; repeat rinsing until all Cleaner residue is removed
- Discard soiled towel into soiled towel bucket after use
- Allow to air dry

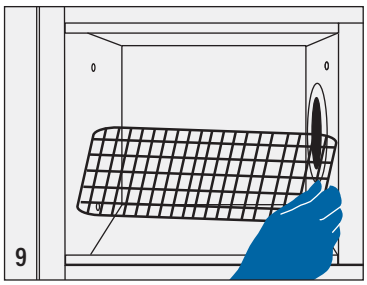

- Return clean sanitized racks and supports to oven
- Turn oven ON

NOTE: Always wash, rinse and sanitize gloves after use

5967102 MKD US 59671/8002/1025 ©2025 Ecolab USA Inc. All rights reserved.

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA