WAREWASH MACHINE—KAY® QSR XL-RW



DAILY

SUPPLIES:



KAY® SolidSense™ Machine Warewash Detergent



KAY® QSR TSC Rinse Additive



ECOLAB® Esteem® Sani-NC



KAY® Liquid Delimer



KAY® Rapid Multi Surface Disinfectant Cleaner Solution



KAY® Specialty Cleaner & Polish




Chlorine Test Strips




Clean Sanitizer-Soaked Towels

IMPORTANT: Ask your Territory Representative how to properly delime your machine.


SET-UP

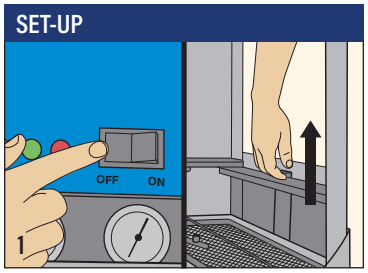


- Ensure machine is OFF and drained
- If needed, lift drain lever to drain machine completely
- Lower lever after machine is drained

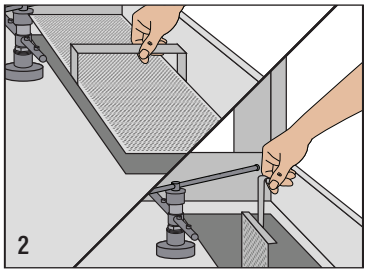


- Check that machine is clean and drain opening is clear
- Ensure drain stopper and screens are in place and wash and rinse arms spin freely

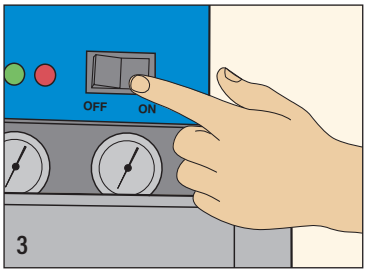

- Turn machine ON; machine will be ready for operation in approximately 10-12 minutes
  NOTE: Ensure drain lever is lowered
  NOTE: Proper wash temperature is at least 120°F

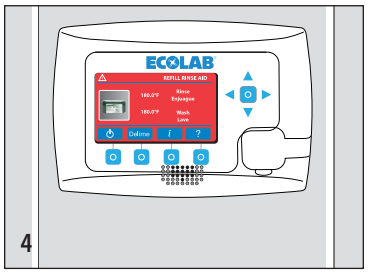


- When display indicates, refill products: Detergent, Rinse Additive and Sanitizer
- Press check mark to confirm product has been replaced

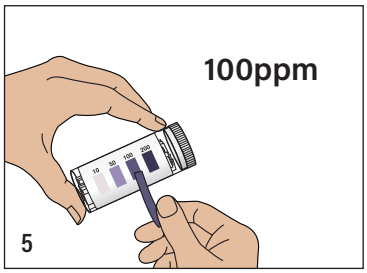


- Daily, after first cycle, check chlorine sanitizer concentration level is at 100ppm
- Touch a Test Strip to any wet surface inside the machine


MACHINE OPERATION / WAREWASHING

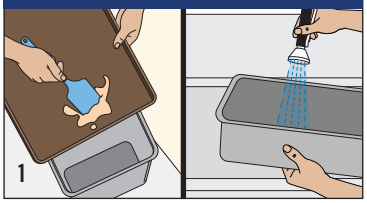

- Hand scrape wares
- Pre-rinse wares to make sure they are as clean as possible before putting into machine

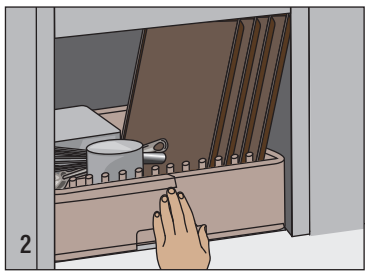

- Load rack with wares
  NOTE: Follow proper racking procedure
- Load rack into machine

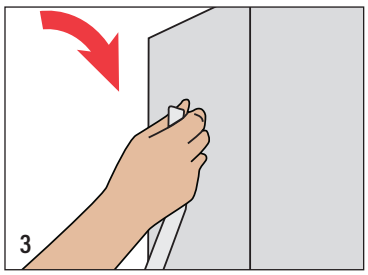

- Shut door; machine will automatically begin cycle
  NOTE: Ensure cycle has completed fully before opening door



- Open door and remove rack when cycle is complete
  NOTE: Wares will be **hot**! Allow sufficient time to cool before handling wares

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458


60203.03 MCD US 60203/6003/1025 ©2025 Ecolab USA Inc. All rights reserved.

WAREWASH MACHINE—KAY® QSR XL-RW (CONTINUED)




DAILY

WAREWASH RACKING PROCEDURE

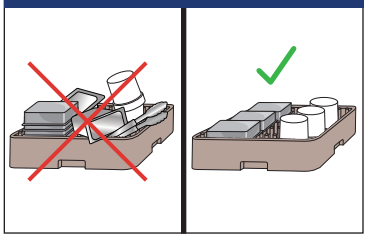


- **INCORRECT** racking procedure; DO NOT nest smallwares
- **CORRECT** racking procedure; bottom of rack should be open for proper cleaning

UHC RACKING PROCEDURE

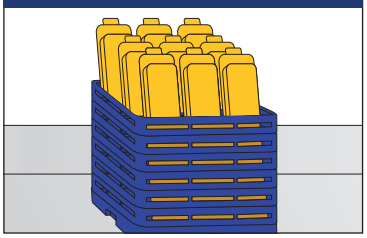


- Add **ONE** UHC tray in each slot
- Wash a maximum of 9 UHC trays per cycle
- Allow wares to fully air dry before storing


CLEAN-UP

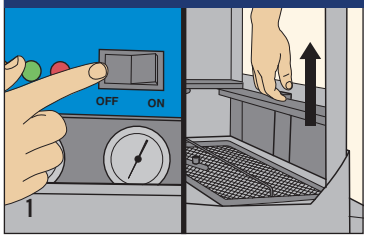


- Press power button to turn machine OFF
- Lift drain lever to drain machine completely

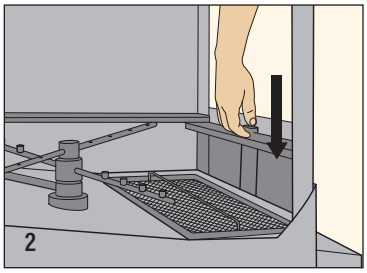

- Ensure machine is drained and replace/lower drain lever

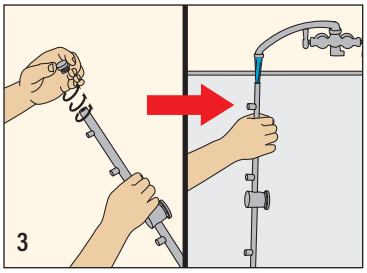


- Remove both top and bottom wash arms and top and bottom rinse arms
- Remove caps, then flush with water
- Clean nozzles with brush or paper clip, and reassemble
- Reinstall wash and rinse arms, and ensure they spin freely

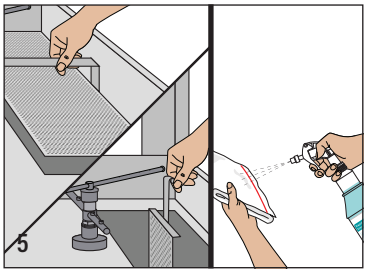


- Remove and clean both screens; place screens back into machine
- Wipe outside of machine with clean, sanitizer soaked towel and Rapid MSDC Solution
- Polish outside of machine with clean paper towel sprayed with Specialty Cleaner and Polish

MONTHLY DELIMING (as needed)

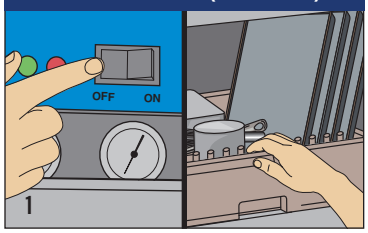


NOTE: Delime more frequently as needed

- Power machine OFF; open machine door and remove all wares

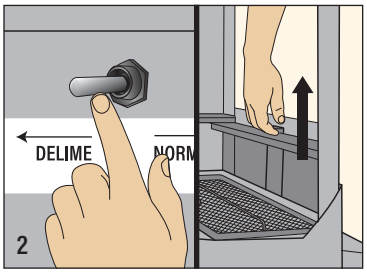


- With doors still up, locate DELIME switch on back of machine control head and switch to "DELIME" Position
- Lift drain lever and drain machine completely
- Return drain lever to original position

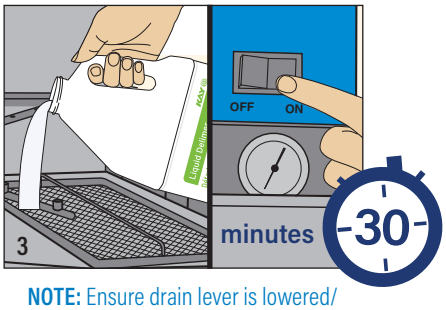

NOTE: Ensure drain lever is lowered/closed before adding Delimer

- Pour 1 gallon of Delimer product into machine
- Close door and turn power ON; allow machine to run for 30 minutes to delime

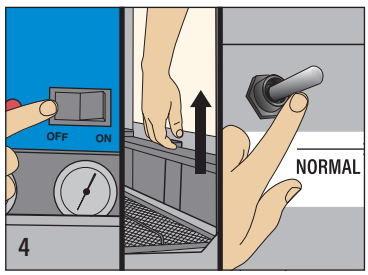

- After 30 minutes turn power OFF
- Place DELIME switch to "NORMAL" position; open door and lift drain lever to drain machine

NOTE: Lower drain lever when machine is fully drained

- Close door and turn machine ON; machine will refill

ECOLAB®
Kay Chemical Company
8300 Capital Drive
Greensboro, NC 27409-9790, USA

CUSTOMER SERVICE 800.529.5458

60203.03 MCD US 60203/8003/1025 ©2025 Ecolab USA Inc. All rights reserved.