
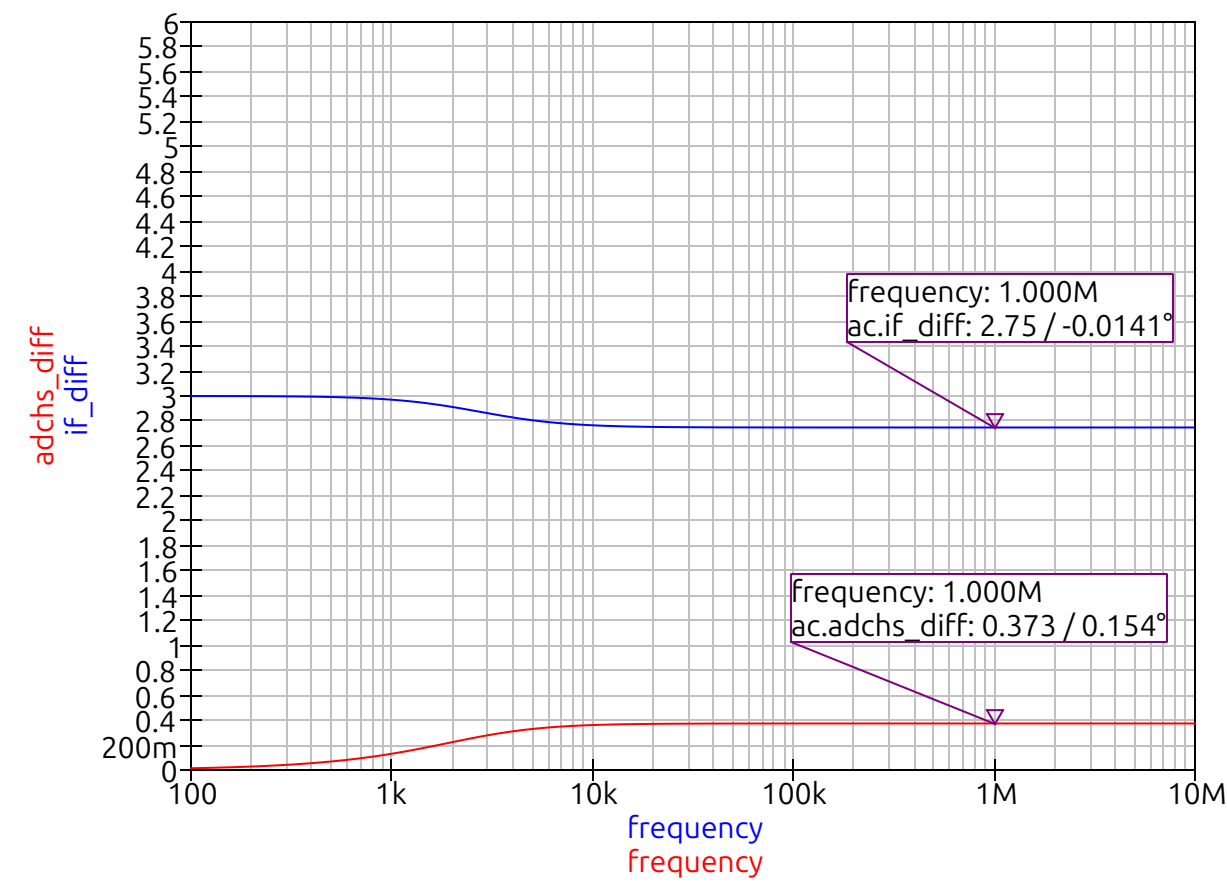


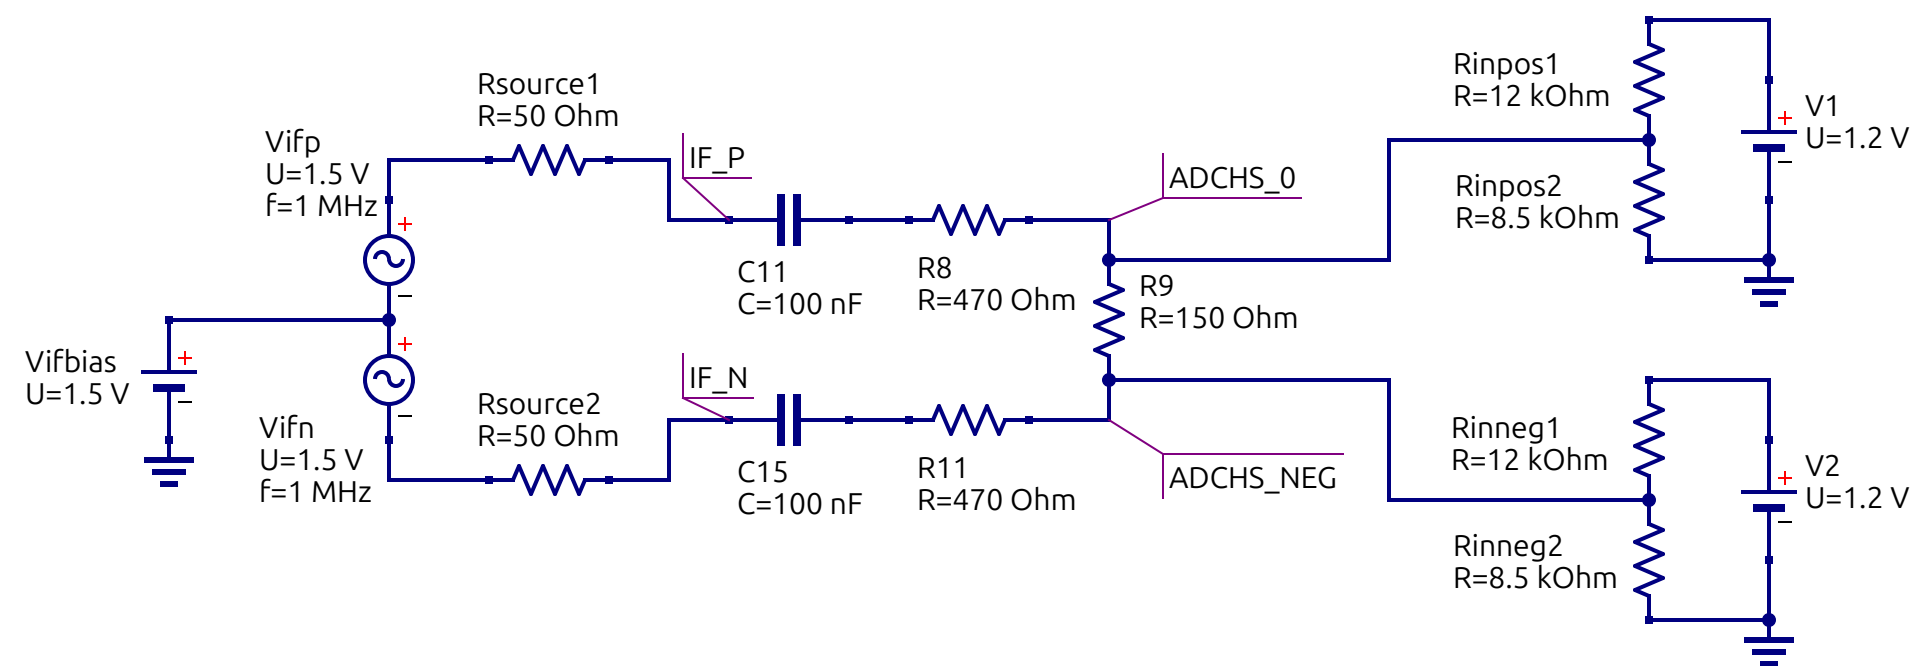

Nutmeg
Simulation=ALL
ADCHS_diff=v(ADCHS_0) - v(ADCHS_NEG)
IF_diff=v(IF_P) - v(IF_N)

dc simulation

DC1

ac simulation

AC1
Type=log
Start=0.1 kHz
Stop=10 MHz
Points=200

transient simulation

TR1
Type=lin
Start=0
Stop=0.01 ms

