

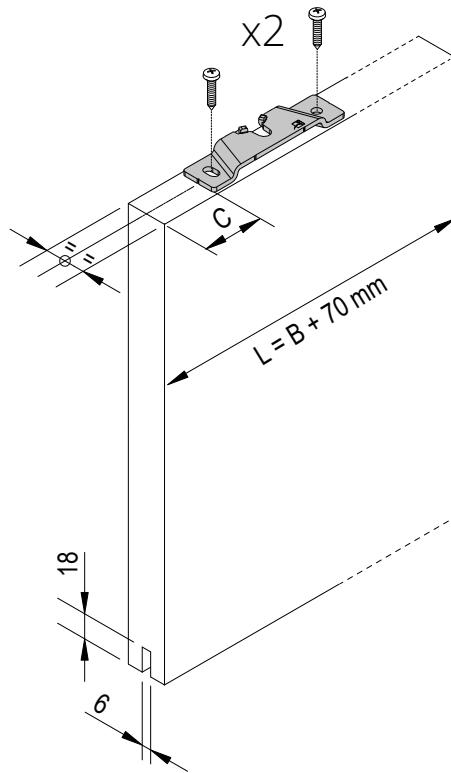



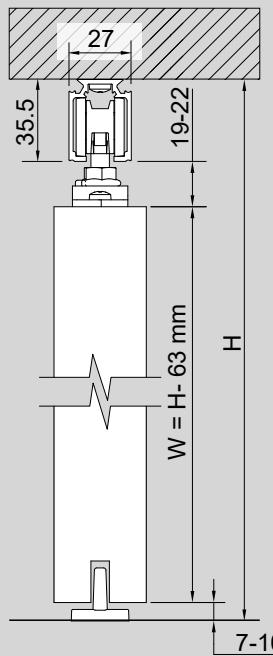


$24 \text{ mm} \leq E \leq 40 \text{ mm}$

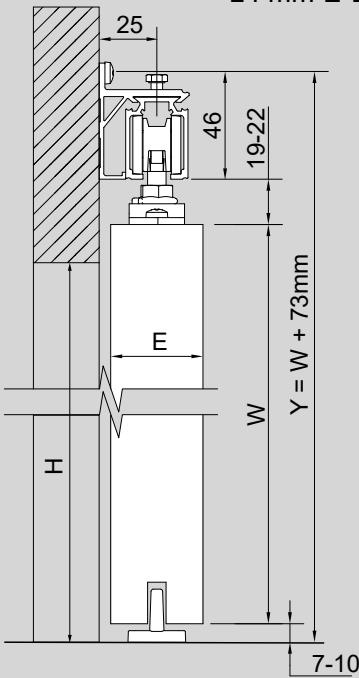


Réf. Kit Set nb / Art.-Nr.	B (mm)	L (mm)	R (mm)
<b>SAF10-80-195</b>	$655 < B < 925$	$730 < L < 1000$	R = $(2 \times L) - 50$
<b>SAF10-80-300</b>	$925 < B < 1445$	$1000 < L < 1520$	
<b>13108/600</b>	$1455 \leq B < 2945$	$1520 < L < 3020$	

Butée / Stop / Stopper	C (mm)
<b>11213</b>	30
<b>11213S40 / 11213S80</b>	75
<b>M65S / M66S / M67S</b>	10

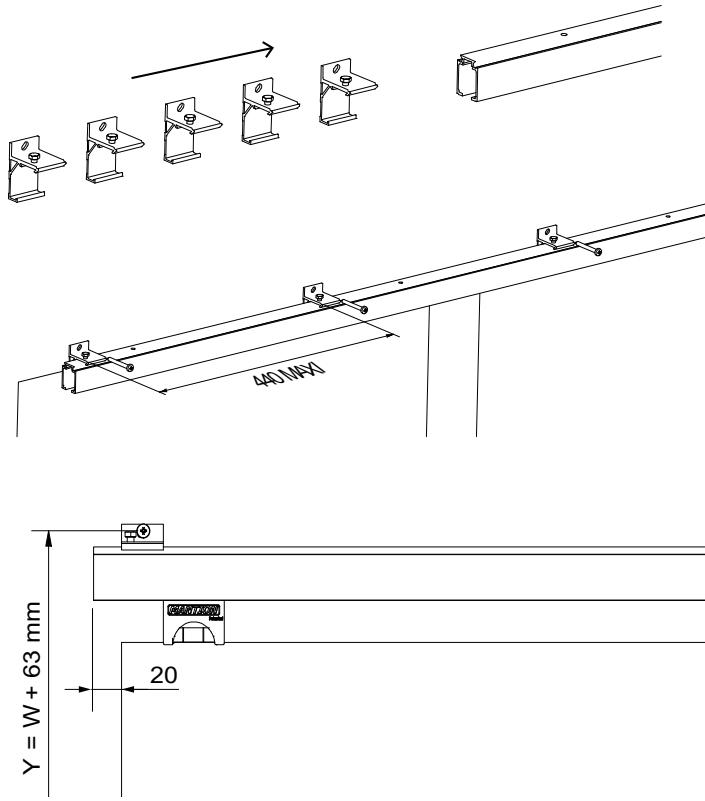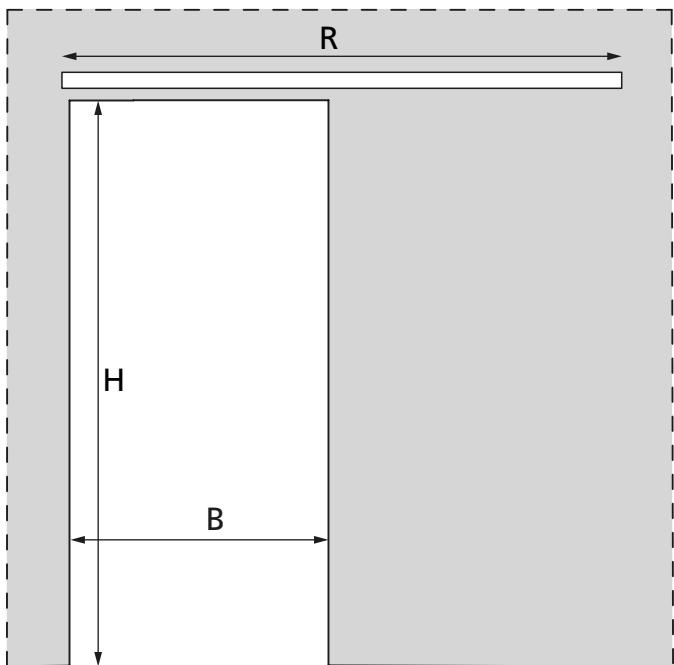




INSTRUCTIONS DE MONTAGE  
MONTAGEANLEITUNG  
INSTRUCTIONS FOR ASSEMBLY  
INSTRUCCIONES DE MONTAJE

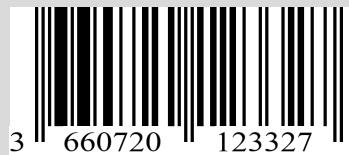

SAF®

10-80KG

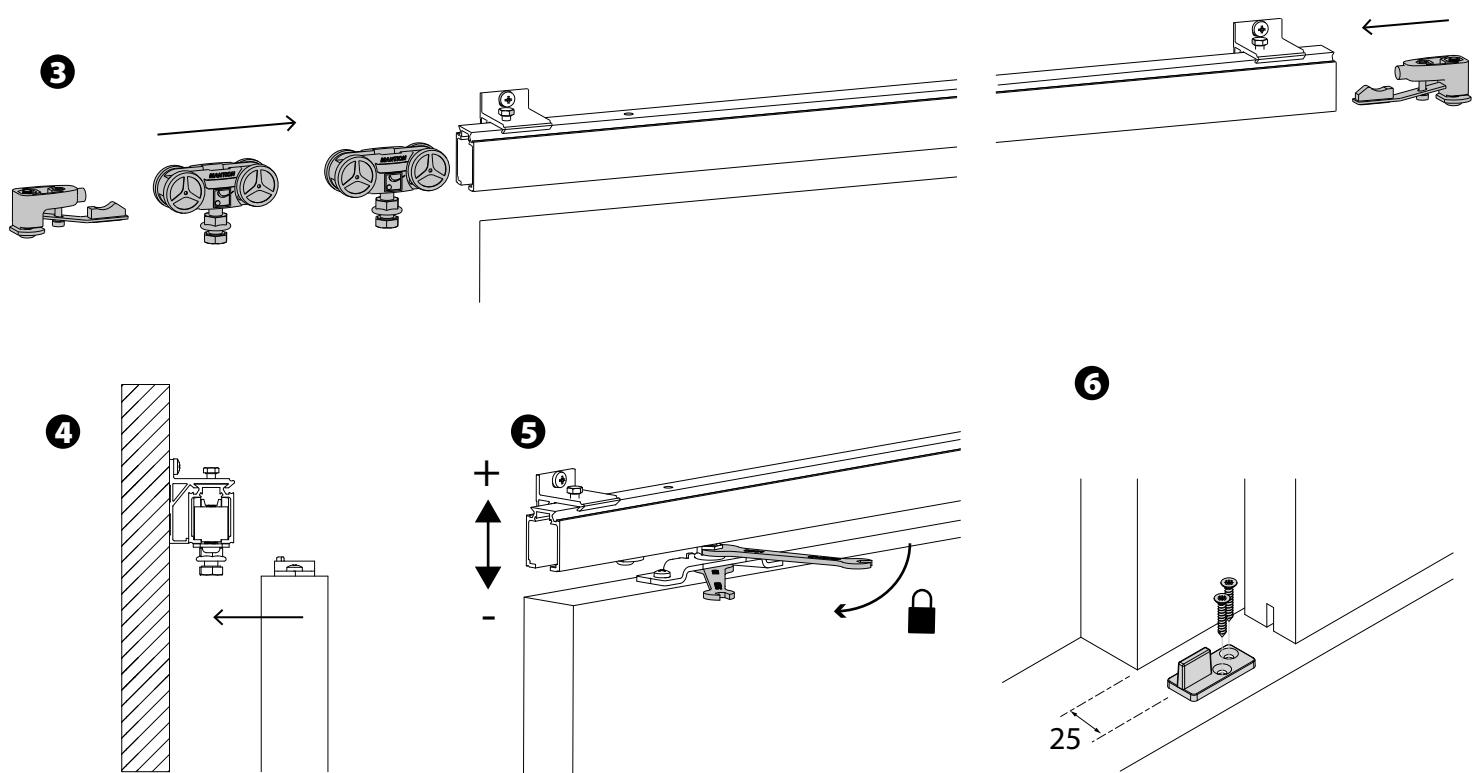

#### OPTIONS :

