Computational Aircraft Prototype Syntheses

Training Session 11
Data Transfer: Loosely-Coupled Aeroelasticity
ESP v1.18

Marshall Galbraith   **Bob Haimes**
galbramc@mit.edu   haimes@mit.edu
Massachusetts Institute of Technology

John F. Dannenhoffer, III
jfdannen@syr.edu
Syracuse University

- Loosely coupled analysis

- capsBound object and the capsBound attribute
  - capsVertexSet objects
  - capsDataSet objects

- Loosely coupled one-way modal aeroelastic analysis

- Loosely coupled two-way iterative aeroelastic analysis

- Couple two independent analysis tools
- Aeroelastic analysis
  - CFD to compute pressures
  - FEM to compute displacements
- Typically disparate tools
  - Mesh resolution
  - Data representation (cell vs. node center)
- CAPS data transfer reconciles differences
- Examples:
  - One-way coupling: Astros Modal $\rightarrow$ Fun3D
  - Two-way coupling: Astros Static $\leftrightarrow$ SU2

capsBound object and attribute

- `capsBound` is a logical grouping of BRep Objects
  - Represent the same entity, e.g. "outer surface of the wing"
- Bound is used by CAPS framework to facilitate data transfer
  - Defined by the `capsBound` attribute
- Same `capsBound` attribute applied to "coincident" bodies defines connection
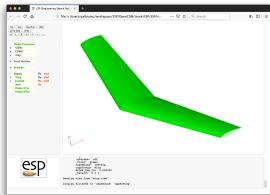
ESP/wing3.csm Structures `capsBound`
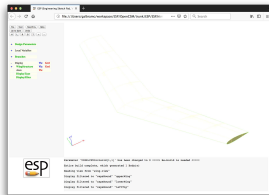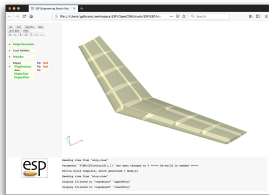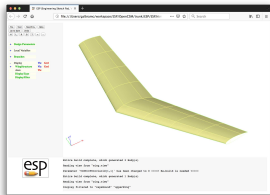
`ATTRIBUTE capsBound $upperWing`
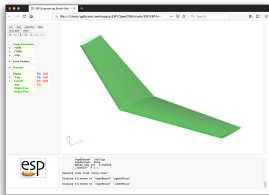
`ATTRIBUTE capsBound $lowerWing`

`ATTRIBUTE capsBound $leftTip`

capsBound object and attribute

- `capsBound` is a logical grouping of BRep Objects
  - Represent the same entity, e.g. "outer surface of the wing"
- Bound is used by CAPS framework to facilitate data transfer
  - Defined by the `capsBound` attribute
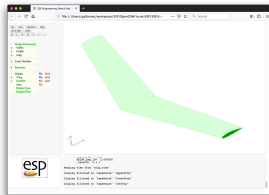- Same `capsBound` attribute applied to "coincident" bodies defines connection

ESP/wing3.csm CFD Inviscid `capsBound`
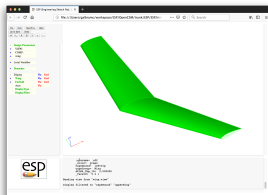

ATTRIBUTE capsBound $upperWing

ATTRIBUTE capsBound $lowerWing

ATTRIBUTE capsBound $leftTip

- **capsVertexSet** is a discrete **capsBound**

capsBound   capsVertexSet
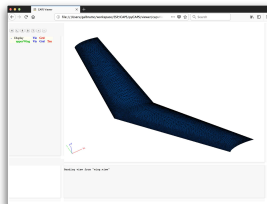
Aerodynamic
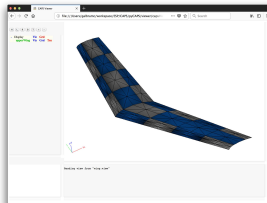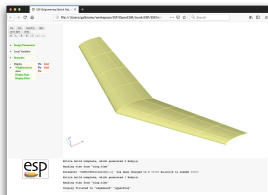
Structures

- capsVertexSet is a discrete capsBound

- If capsBound Faces have same underlying surface, then the native UVs are used to match the points between capsVertexSets
- If not the triangulations are reparameterized with a single UV representation
- If barycentric coordinates are found for each vertex in a capsVertexSet to the other(s). This allows for straight interpolation using the solver's spatial discretization scheme (as provided in the AIM)

capsDataSet

- Discrete data associated with a `capsVertexSet`
  - Pressure
  - Temperature
  - Displacements
- Flexible data structure
  - Node centered data
  - Cell centered data
  - Higher-order nodal basis functions

Data Transfer: Interpolate vs. Conservative

- Data transferred between different `capsVertexSet`
  - Pressure from aero to structures `capsVertexSet`
  - Displacements from structures to aero `capsVertexSet`
- Transfer via interpolation:
  - Interpolation, does not insure integrated values match between `capsVertexSets` – important for a convergent inner loop
- Conservative transfer:
  - Conservative data transfers ensure integrated quantities match by slightly adjusting (weighting) the interpolation.

- Loosely coupled analysis

- capsBound object and the capsBound attribute
  - capsVertexSet objects
  - capsDataSet objects

- Loosely coupled one-way modal aeroelastic analysis

- Loosely coupled two-way iterative aeroelastic analysis

- Compute EigenVectors with Astros
- Transfer EigenVectors to Fun3D for aeroelastic calculation

session11/aeroelastic_Modal_Fun3D_Astros.py

- Load aflr4AIM
- Load aflr3AIM
- Load fun3dAIM
- Load egadsTessAIM
- Load astrosAIM

- Create capsBound data transfers
- Generate meshes
- Fill capsVertexSet
- Execute ASTROS
- Transfer EigenVectors from ASTROS to Fun3D
- Execute Fun3D

Modal Data Transfer: Create Transfer

- variableName: Variable names
- aimSrc: AIM names to transfer data from (source)
- aimDest: AIM names receiving data (destination)
- transferMethod: Interpolate or Conserve
- capsBound: Name of the `capsBound` attribute on the bodies
- Builds dictionary myProblem.dataBound[bound]

session11/aeroelastic_Modal_Fun3D_Astros.py

```python
# Create an array of EigenVector names
numEigenVector = 3
eigenVector = []
for i in range(numEigenVector):
    eigenVector.append("EigenVector_" + str(i+1))

# Create the capsBounds for data transfer
transfers = ["upperWing", "lowerWing", "leftTip", "riteTip"]
for bound in transfers:
    myProblem.createDataTransfer(variableName   = eigenVector,
                                 aimSrc         = [astros.aimName]*numEigenVector,
                                 aimDest        = [fun3d.aimName]*numEigenVector,
                                 transferMethod = ["Conserve"]*numEigenVector,
                                 capsBound      = bound)
```

- Generate meshes with pre/post Analsys
- Populate vertex sets

session11/aeroelastic_Modal_Fun3D_Astros.py

```
# Run AIM pre/post-analysis to generate the meshes
for aim in [aflr4.aimName, aflr3.aimName, tess.aimName]:
    myProblem.analysis[aim].preAnalysis()
    myProblem.analysis[aim].postAnalysis()

#-------------------------------------------------------------------------------#

# Populate vertex sets in the bounds after the mesh generation is copleted
for bound in transfers:
    myProblem.dataBound[bound].fillVertexSets()
```

Modal Data Transfer: Execution

- Execute Astros
- Transfer each EigenVector for each `capsBound`

session11/aeroelastic_Modal_Fun3D_Astros.py

```python
#Execute the dataTransfer
print ("\nExecuting dataTransfer ......")
for bound in transfers:
    for eigenName in eigenVector:
        myProblem.dataBound[bound].executeTransfer(eigenName)
```

- Execute Fun3D

- Loosely coupled analysis

- `capsBound` object and the `capsBound` attribute
  - `capsVertexSet` objects
  - `capsDataSet` objects

- Loosely coupled one-way modal aeroelastic analysis

- Loosely coupled two-way iterative aeroelastic analysis

Example of Iterative Data Transfer

- Compute pressures with SU2
- Compute displacements with ASTROS
- Displace CFD mesh, and compute pressures with SU2

session11/aeroelastic_Iterative_SU2_Astros.py

- Load aflr4AIM
- Load aflr3AIM
- Load su2AIM
- Load egadsTessAIM
- Load astrosAIM

- Create `capsBound` data transfers
- Generate meshes
- Fill `capsVertexSet`
- Iterate
    - Transfer displacements from ASTROS to SU2
    - Execute SU2
    - Transfer pressure from SU2 to ASTROS
    - Execute ASTROS

- Interleave AIM names in aimSrc and aimDest
- Initial value applied to Displacement to start iterations

session11/aeroelastic_Iterative_SU2_Astros.py

```
# Create the data transfer connections
transfers = ["upperWing", "lowerWing", "leftTip", "riteTip"]
for bound in transfers:
    myProblem.createDataTransfer(variableName  = ["Pressure", "Displacement"],
                                 aimSrc        = [su2.aimName, astros.aimName],
                                 aimDest       = [astros.aimName, su2.aimName],
                                 transferMethod = ["Conserve", "Interpolate"],
                                 initValueDest  = [None, (0,0,0)],
                                 capsBound      = bound )
```

- Generating mesh and capsVertexSet

- Start iterations

session11/aeroelastic_Iterative_SU2_Astros.py

```python
# Aeroelastic iteration loop
for iter in range(numTransferIteration):

    #Execute the dataTransfer of displacements to su2
    #initValueDest is used on the first iteration
    print ("\n\nExecuting dataTransfer \"Displacement\"......")
    for bound in transfers:
        myProblem.dataBound[bound].executeTransfer("Displacement")
```

- Execute SU2

```python
    #Execute the dataTransfer of Pressure to astros
    print ("\n\nExecuting dataTransfer \"Pressure\"......")
    for bound in transfers:
        myProblem.dataBound[bound].executeTransfer("Pressure")
```

- Execute ASTROS