

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-20 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power


MIDI

Spare

Reserved


Normalled

Not normalled

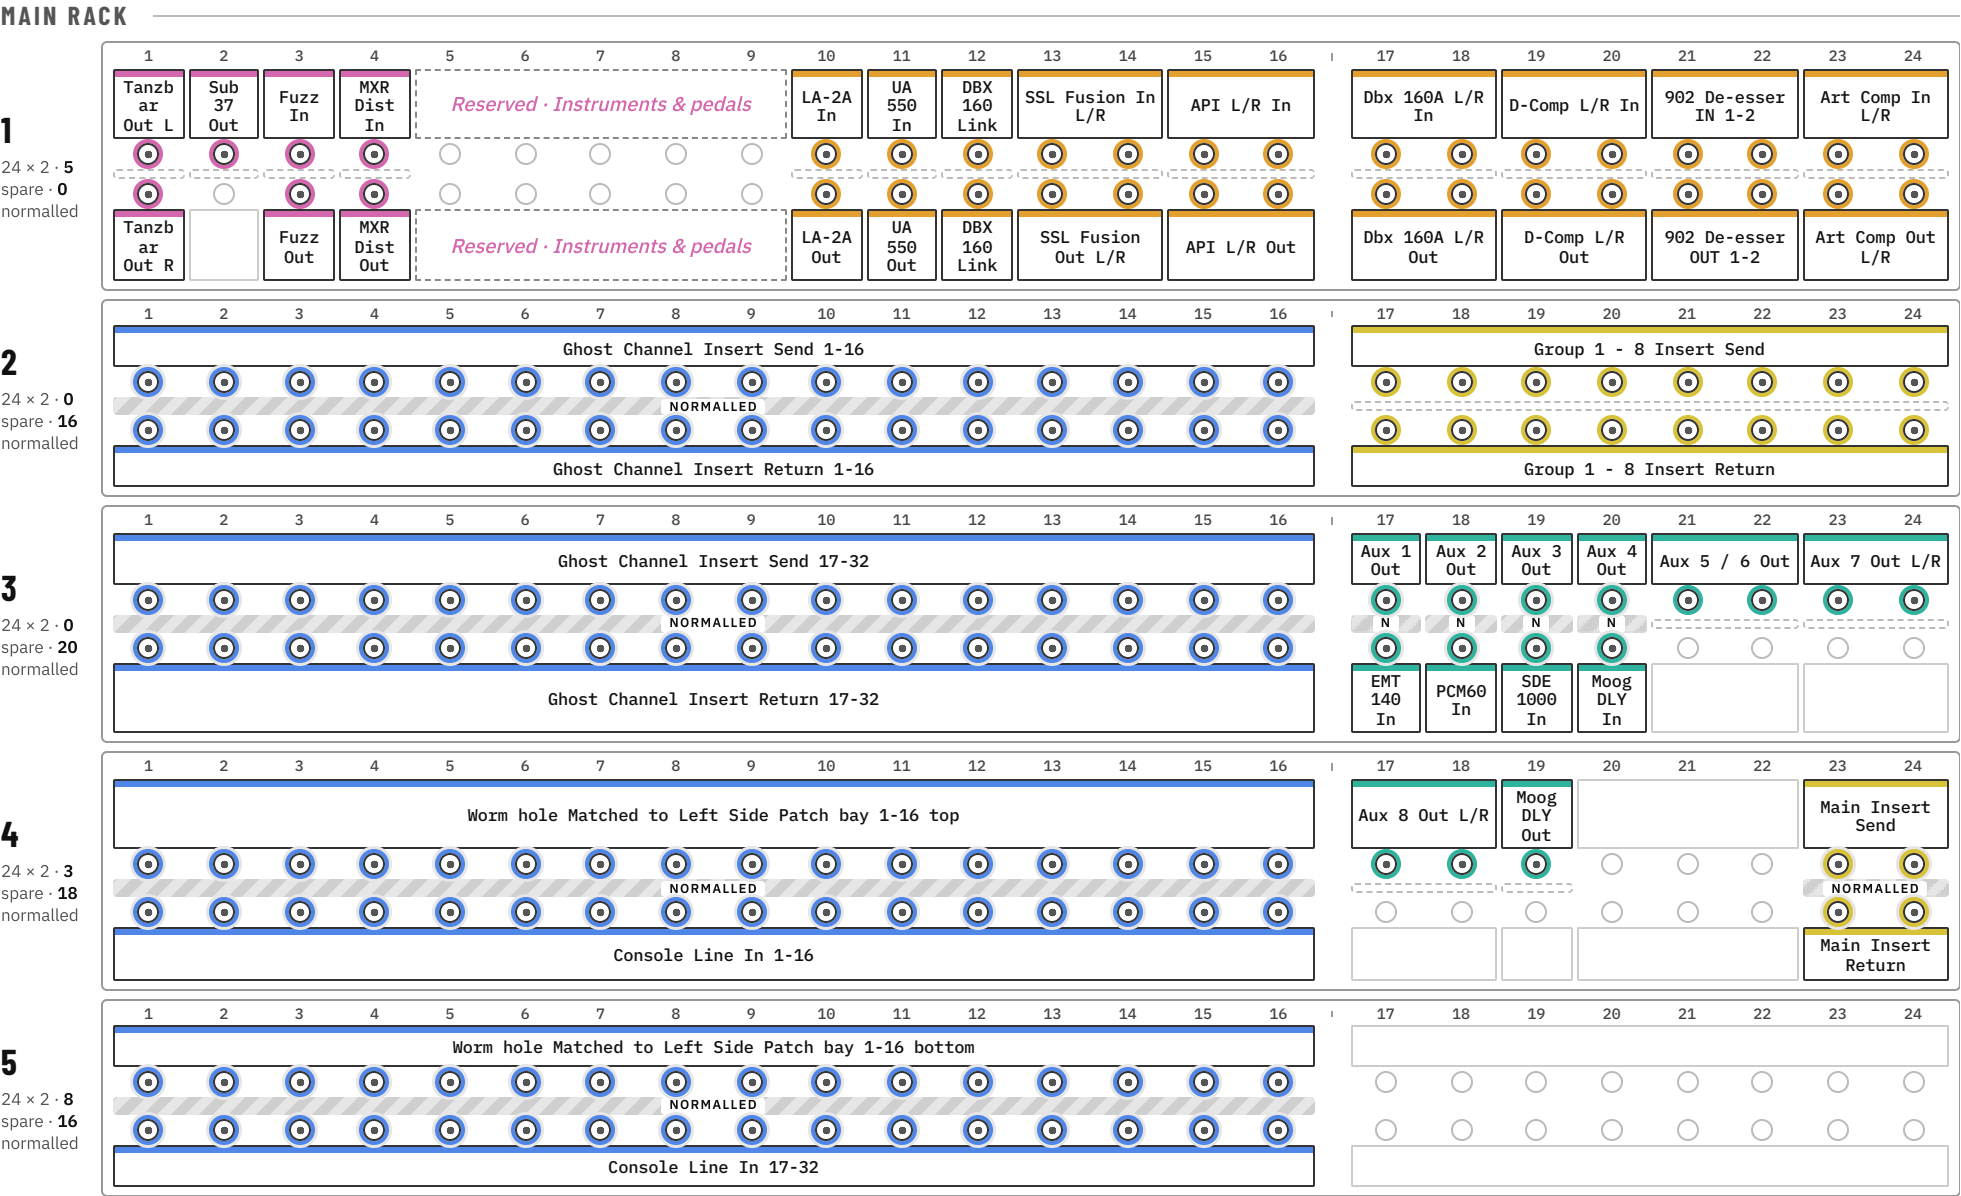


6

24 × 2 · 8
spare · 16
normalised

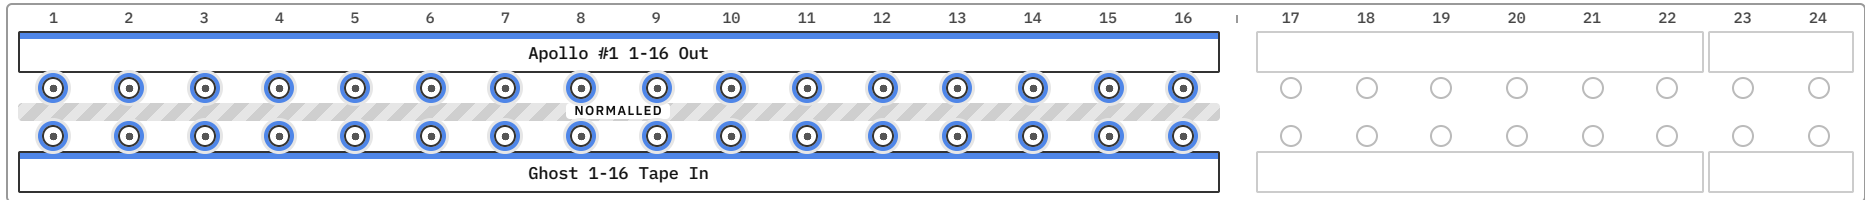


7

24 × 2 · 0
spare · 22
normalised

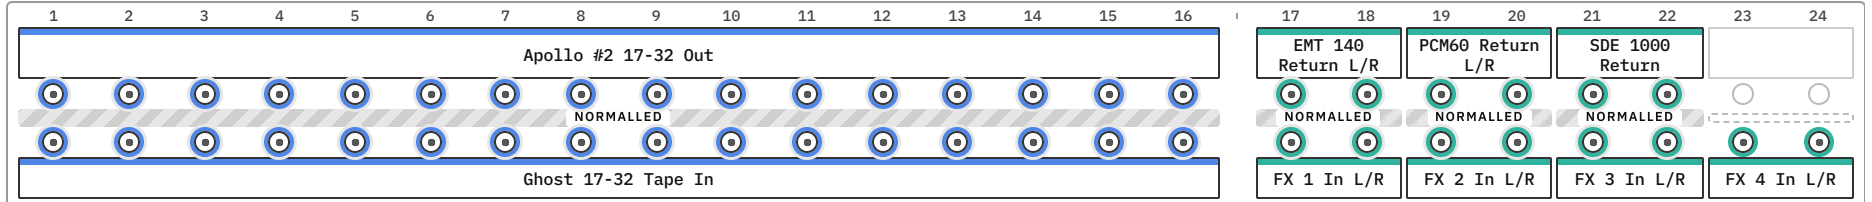


8

24 × 2 · 0
spare · 24
normalised

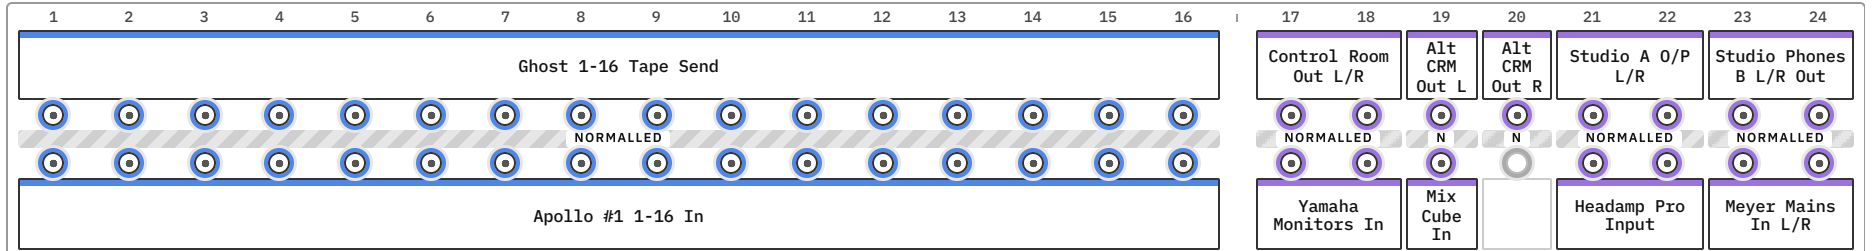


9

24 × 2 · 0
spare · 22
normalised

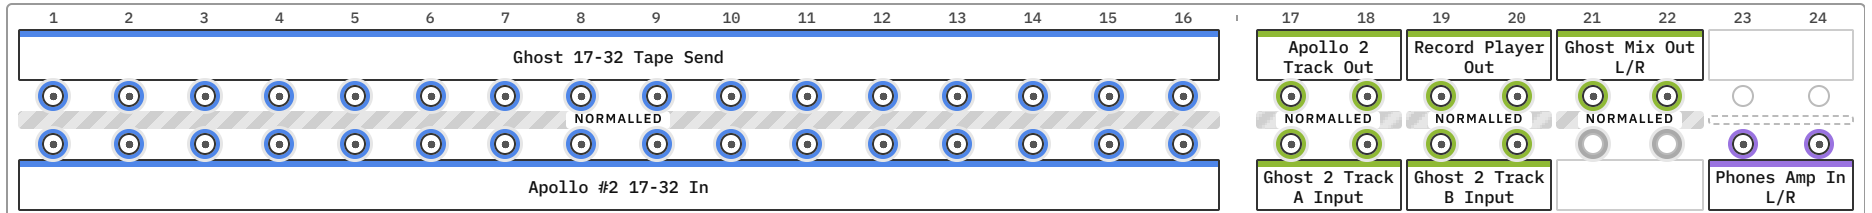

10


24 × 2 · 2
spare · 0
normalised

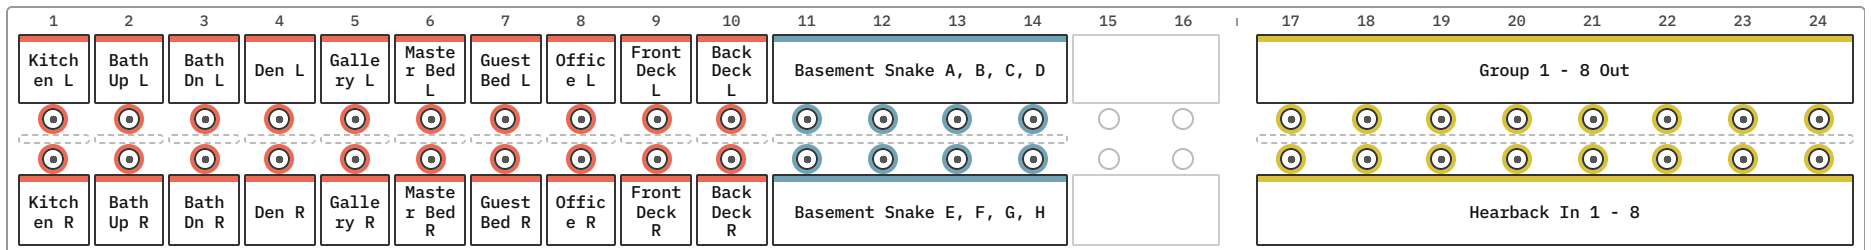

AMP RACK

11 AMP RACK


24 × 2 · 16 spare · 8 normalled

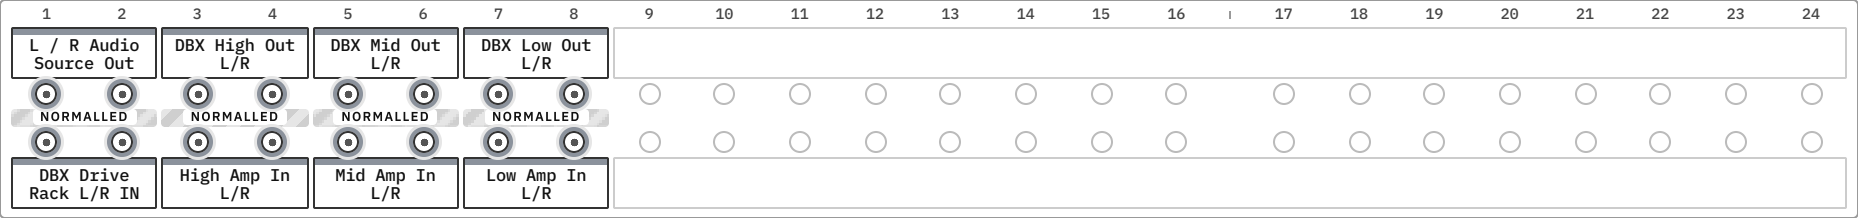

ETHERNET

ETHERNET


Single row · 2 spare

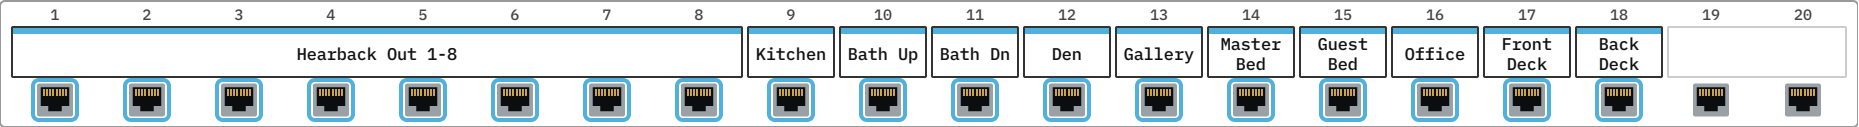

MIDI

MIDI


Single row · 0 spare

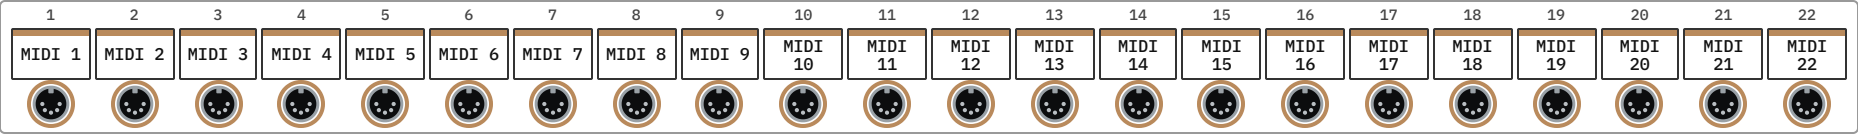

POWER SWITCHES

POWER SWITCHES

Single row · 0 spare

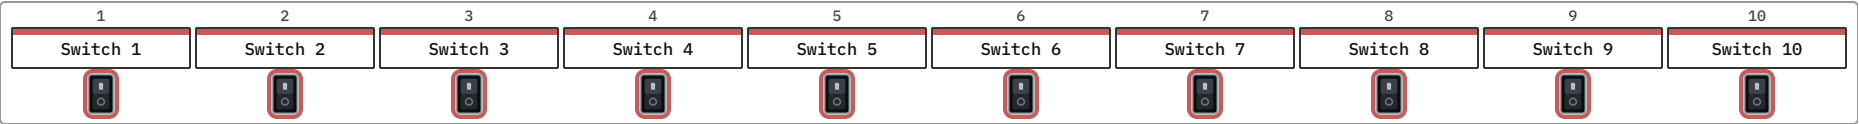

Moving the Patch Bay Units

Move whole units instead of re-setting normalising channel by channel. With the moves below you flip **6** normalising cards; keeping every unit in its old position would mean flipping **59**. Units already in the right place are marked "Already in place"; where units are mounted now comes from `installed_units` in `config.py`. Units only move within their own rack, and spare ports don't count.

Reading a card: **normalised** (standard) has the grey jack on the **front bottom** row; **not normalised** (turned) has the grey jack on the **rear top** row. "Check" means the old layout had that port unused, so its card position was never recorded. Look at it before mounting the unit.

0 of 9 done

POSITION		UNIT TO PUT THERE	NORMALLING CARDS TO FLIP	
☐	Bay 1 Main rack	Unit from old bay 9 not mounted · old layout: Main Insert Send	Ports 1–2 → not normalised	Check ports 10–16, 18 are not normalised
☐	Bay 2 Main rack	Unit from old bay 4 now at bay 3 · old layout: Apollo #2 17-32 Out	No cards to flip	
☐	Bay 3 Main rack	Unit from old bay 6 not mounted · old layout: Ghost 17-32 Tape Send	Ports 19–20 → normalised	Check ports 23 are not normalised
☐	Bay 4 Main rack	Unit from old bay 1 now at bay 5 · old layout: Worm hole Matched to Left Side Patch bay 1-16 top	No cards to flip	
☐	Bay 5 Main rack	Unit from old bay 7 now at bay 8 · old layout: Ghost Channel Insert Send 1-16	No cards to flip	
☐	Bay 6 Main rack	Unit from old bay 8 now at bay 9 · old layout: Ghost Channel Insert Send 17-32	No cards to flip	
–	Bay 7 Main rack	Already in place now at bay 7 · old layout: Apollo #1 1-16 Out	No cards to flip	
☐	Bay 8 Main rack	Unit from old bay 2 now at bay 6 · old layout: Worm hole Matched to Left Side Patch bay 1-16 bottom	No cards to flip	
☐	Bay 9 Main rack	Unit from old bay 5 not mounted · old layout: Ghost 1-16 Tape Send	Ports 23–24 → not normalised	
☐	Bay 10 Main rack	Already in place now at bay 10 · old layout: Kitchen L	Check ports 11–14 are not normalised	
–	Bay 11-amp-rack Amp rack	Already in place now at bay 11-amp-rack · old layout: L / R Audio Source Out	No cards to flip	

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER
U2	SWITCH PANEL Patch bay: Power Switches · 1-10
U3	APOLLO 16 #1 Replacing both Apollos with one 1U unit Patch bay: Bay 6 · 1-16, Bay 8 · 1-16
U4	APOLLO 16 #2 Replacing both Apollos with one 1U unit Patch bay: Bay 7 · 1-16, Bay 9 · 1-16
U5	API 2500 COMPRESSOR Patch bay: Bay 1 · 15-16
U6-7	D-COMP Patch bay: Bay 1 · 19-20
U8	DBX 902 DE-ESSER ×2 Patch bay: Bay 1 · 21-22
U9	LEXICON PCM 60 REVERB Patch bay: Bay 3 · 18, Bay 7 · 19-20
U10	SDE 1000 DELAY Patch bay: Bay 3 · 19, Bay 7 · 21-22
U11-12	DBX 160 COMPRESSORS Patch bay: Bay 1 · 12, 17-18
U13	EMT REVERB REMOTE Could move
U14	HEADPHONE AMP Could move Patch bay: Bay 9 · 23-24
U15	MIDI PATCH BAY Patch bay: Midi · 1-22
U16-17	COMPUTER SHELF
U18	EMPTY ? U18 not listed - empty?
U19-20	SOUNDCRAFT GHOST POWER SUPPLY Could move

OPEN QUESTIONS

- Midi, port 1

Channel labels needed for all 22 MIDI jacks
- Power Switches, port 1

Label what each of the 10 power switches turns on