

STUDIO CARQUINEZ PATCH BAY

Front view, top of rack first. Left 16 ports: console buckets. Right 8: outboard, FX, monitoring. Generated 2026-09-23 from config.py.

Console core

Room sends

Tie lines

Outboard

Instruments & pedals

Aux sends & FX

Monitoring

2-track

Groups & mix bus

Amp rack

Network

Power

MIDI

Spare

Reserved

Rear not plugged in yet

Normalled

Not normalled

MAIN RACK

1

24 x 2
5 spare
0 normalled
0/37 rear plu

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Tanzb ar Out L	Sub 37 Out	Fuzz In	MXR Dist In	Reserved · Instruments & pedals					LA-2A In	UA 550 In	DBX 160 Link	SSL Fusion In L/R	API L/R In			Dbx 160A L/R In	D-Comp L/R In		902 De-esser IN 1-2		Art Comp In L/R		
Tanzb ar Out R		Fuzz Out	MXR Dist Out	Reserved · Instruments & pedals					LA-2A Out	UA 550 Out	DBX 160 Link	SSL Fusion Out L/R	API L/R Out			Dbx 160A L/R Out	D-Comp L/R Out		902 De-esser OUT 1-2		Art Comp Out L/R		

2

24 x 2
0 spare
16 normalled
0/48 rear plu

Ghost Channel Insert Send 1-16																Group 1 - 8 Insert Send							
NORMALLED																NORMALLED							
Ghost Channel Insert Return 1-16																Group 1 - 8 Insert Return							

3

24 x 2
0 spare
24 normalled
0/44 rear plu

Ghost Channel Insert Send 17-32																Aux 1 Out								Aux 2 Out		Aux 3 Out		Aux 4 Out		Aux 5 / 6 Out		Aux 7 Out L/R	
NORMALLED																N		N		N		N		NORMALLED		NORMALLED							
Ghost Channel Insert Return 17-32																EMT 140 In		PCM60 In		SDE 1000 In		Moog DLY In											

4

24 x 2
3 spare
18 normalled
0/39 rear plu

Worm hole Matched to Left Side Patch bay 1-16 top																Aux 8 Out L/R		Moog DLY Out						Main Insert Send	
NORMALLED																NORMALLED		NORMALLED		NORMALLED		NORMALLED			
Console Line In 1-16																								Main Insert Return	

5

24 x 2
8 spare
16 normalled
0/32 rear plu

Worm hole Matched to Left Side Patch bay 1-16 bottom																							
NORMALLED																							
Console Line In 17-32																							



6

24 x 2

8 spare

16 normalled

0/32 rear plu

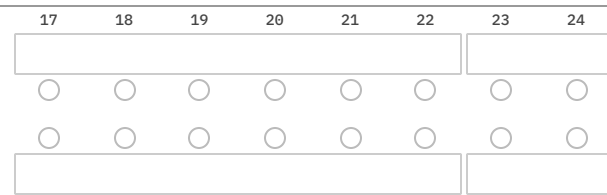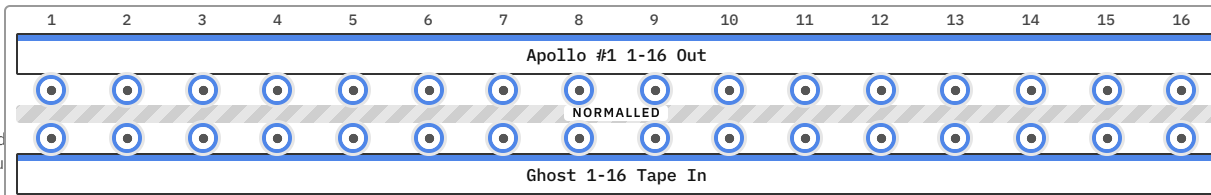



7

24 x 2

0 spare

22 normalled

0/46 rear plu

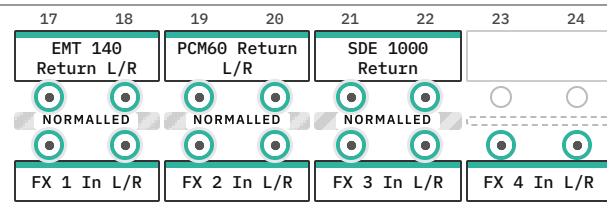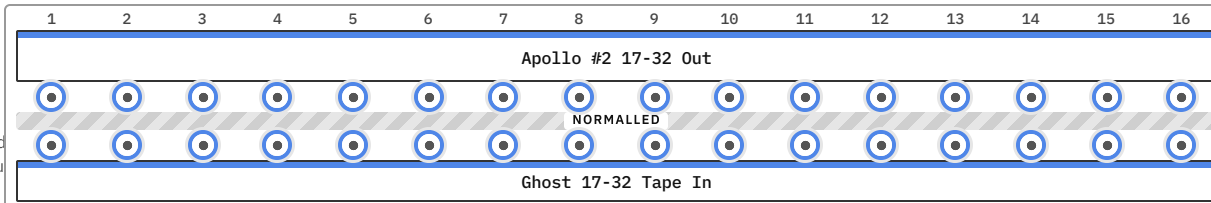



8

24 x 2

0 spare

24 normalled

0/47 rear plu

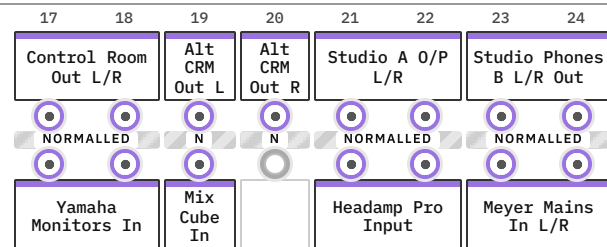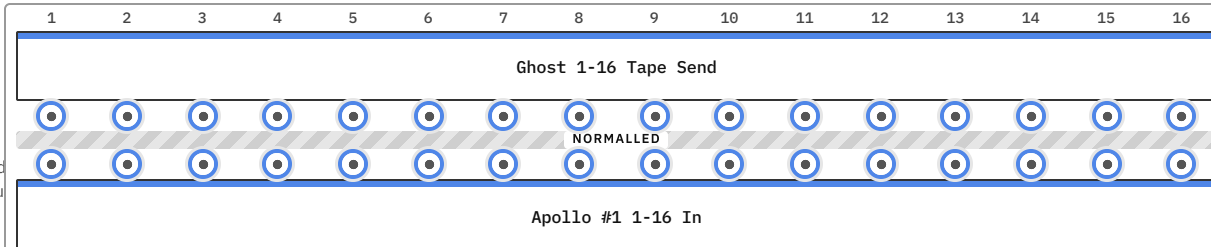



9

24 x 2

0 spare

22 normalled

0/44 rear plu

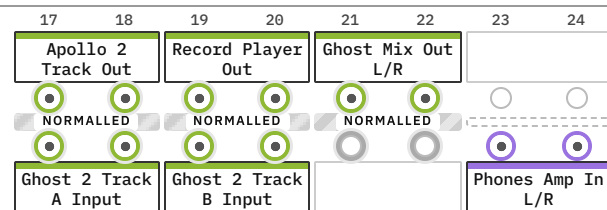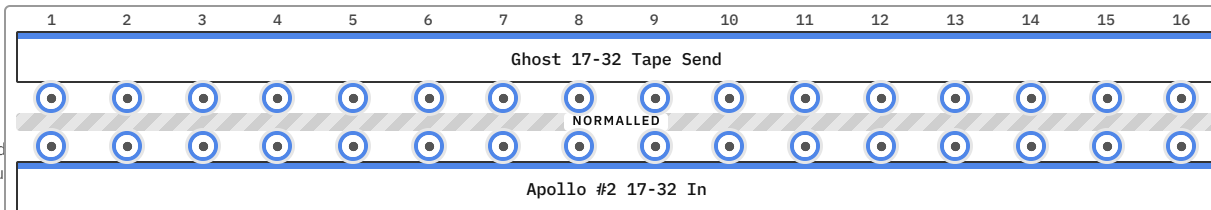



10

24 x 2

3 spare

0 normalled


0/42 rear plu

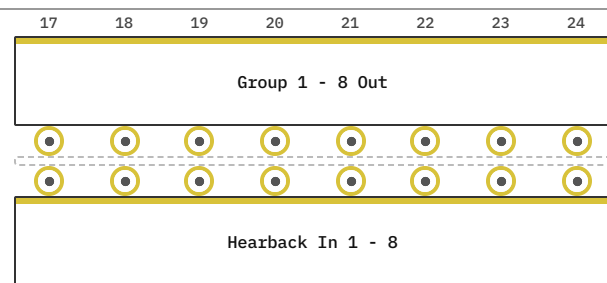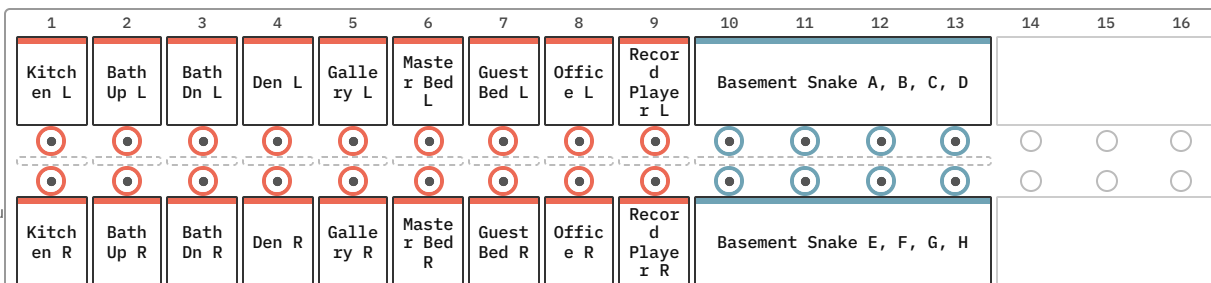

AMP RACK

11 AMP RACK


24 x 2
16 spare
8 normalled
0/16 rear plug

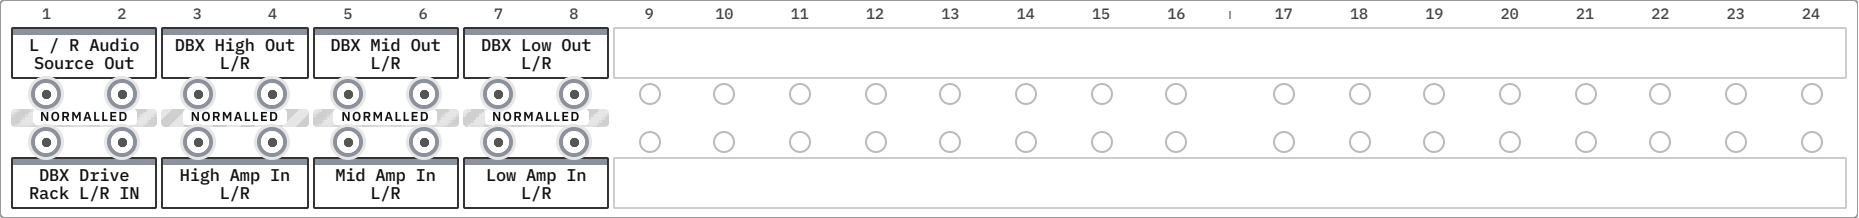

ETHERNET

ETHERNET


Single row
1 spare
0/8 rear plug

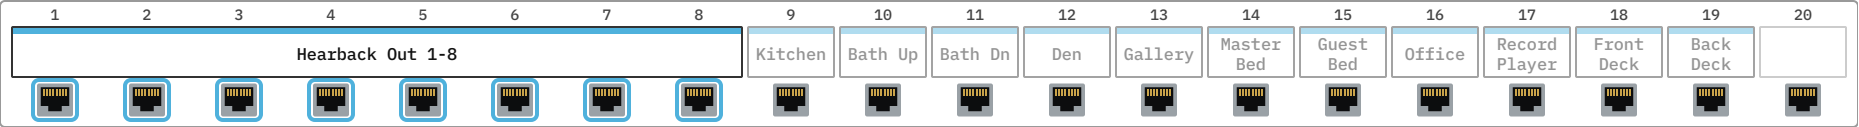

MIDI

MIDI


Not in use
Single row
0 spare
0/22 rear plug

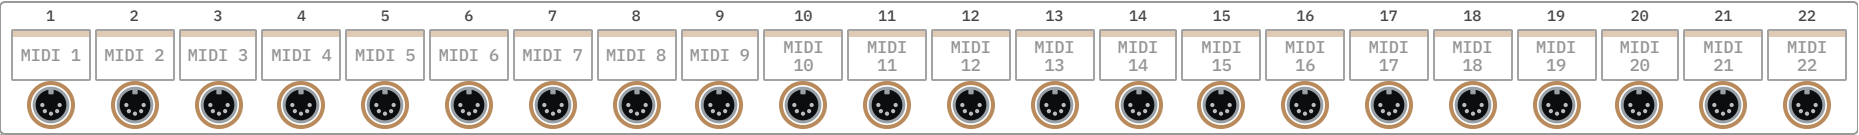

POWER SWITCHES

POWER SWITCHES

Single row
1 spare
0/9 rear plug

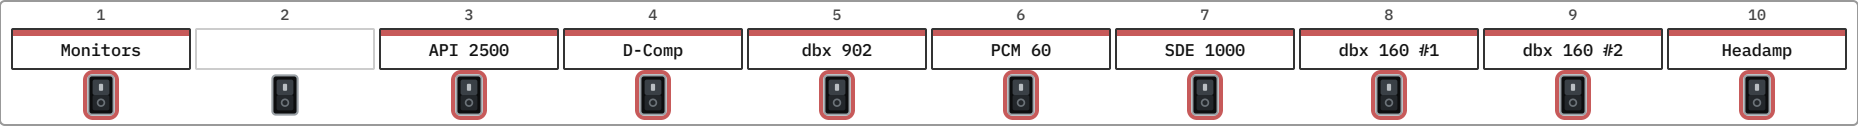

RACK 1 · EQUIPMENT (20U)

U1	POWER CONDITIONER	
U2	SWITCH PANEL	Not on the patch bay
U3	APOLLO 16 #1	Replacing both Apollos with one 1U unitPatch bay: Bay 6 · 1–16, Bay 8 · 1–16
U4	APOLLO 16 #2	Replacing both Apollos with one 1U unitPatch bay: Bay 7 · 1–16, Bay 9 · 1–16
U5	API 2500 COMPRESSOR	Patch bay: Bay 1 · 15–16, Power Switches · 3
U6–7	D-COMP	Patch bay: Bay 1 · 19–20, Power Switches · 4
U8	DBX 902 DE-ESSER ×2	Patch bay: Bay 1 · 21–22, Power Switches · 5
U9	LEXICON PCM 60 REVERB	Patch bay: Bay 3 · 18, Bay 7 · 19–20, Power Switches · 6
U10	SDE 1000 DELAY	Patch bay: Bay 3 · 19, Bay 7 · 21–22, Power Switches · 7
U11–12	DBX 160 COMPRESSORS	Patch bay: Bay 1 · 12, 17–18, Power Switches · 8–9
U13	EMT REVERB REMOTE	Could move
U14	HEADPHONE AMP	Could movePatch bay: Bay 9 · 23–24
U15	HEADPHONE POWER SUPPLY	
U16	MIDI PATCH BAY	Patch bay: <u>Midi</u> · 1–22
U17	HEARBACK UNIT	Patch bay: Bay 10 · 17–24, Ethernet · 1–8
U18	ETHERNET PATCH BAY	Patch bay: <u>Ethernet</u> · 1–20
U19–20	SOUNDCRAFT GHOST POWER SUPPLY	

OPEN QUESTIONS

CABLE PULLS TO EACH ROOM

Two XLR sends, one XLR return and one Cat5 per room. Each cable takes three steps: pull it, then finish the room end and the rack end (solder for XLR, terminate for Cat5) — **132** steps in all. The destination is where the cable lands at the rack.

KITCHEN0/12

PULLROOMRACK

Send L XLR

Bay 10 · port 1 top

Send R XLR

Bay 10 · port 1 bottom

Return XLR

XLR patch bay (not built yet)

Network CAT5

Ethernet · jack 9

Notes...

BATH UP0/12

PULLROOMRACK

Send L XLR

Bay 10 · port 2 top

Send R XLR

Bay 10 · port 2 bottom

Return XLR

XLR patch bay (not built yet)

Network CAT5

Ethernet · jack 10

Notes...

BATH DN0/12

PULLROOMRACK

Send L XLR

Bay 10 · port 3 top

Send R XLR

Bay 10 · port 3 bottom

Return XLR

XLR patch bay (not built yet)

Network CAT5

Ethernet · jack 11

Notes...

DEN0/12

PULLROOMRACK

Send L XLR

Bay 10 · port 4 top

Send R XLR

Bay 10 · port 4 bottom

Return XLR

XLR patch bay (not built yet)

Network CAT5

Ethernet · jack 12

Notes...

GALLERY0/12

PULLROOMRACK

Send L XLR

Bay 10 · port 5 top

Send R XLR

Bay 10 · port 5 bottom

Return XLR

XLR patch bay (not built yet)

Network CAT5

Ethernet · jack 13

Notes...

MASTER BED0/12

PULLROOMRACK

Send L XLR

Bay 10 · port 6 top

Send R XLR

Bay 10 · port 6 bottom

Return XLR

XLR patch bay (not built yet)

Network CAT5

Ethernet · jack 14

Notes...

GUEST BED0/12

PULLROOMRACK

Send L XLR

Bay 10 · port 7 top

Send R XLR

Bay 10 · port 7 bottom

Return XLR

XLR patch bay (not built yet)

Network CAT5

Ethernet · jack 15

Notes...

OFFICE0/12

PULLROOMRACK

Send L XLR

Bay 10 · port 8 top

Send R XLR

Bay 10 · port 8 bottom

Return XLR

XLR patch bay (not built yet)

Network CAT5

Ethernet · jack 16

Notes...

RECORD PLAYER

0/12

PULL ROOMRACK

Send L

XLR

☐☐☐

Bay 10 · port 9 top

Send R

XLR

☐☐☐

Bay 10 · port 9 bottom

Return

XLR

☐☐☐

XLR patch bay (not built yet)

Network

CAT5

☐☐☐

Ethernet · jack 17

Notes...

FRONT DECK

0/6

PULL ROOMRACK

Speaker

SPEAKER

☐☐☐

Amp out to the speaker - not on a patch bay

Network

CAT5

☐☐☐

Ethernet · jack 18

Notes...

BACK DECK

0/6

PULL ROOMRACK

Speaker

SPEAKER

☐☐☐

Amp out to the speaker - not on a patch bay

Network

CAT5

☐☐☐

Ethernet · jack 19

Notes...

GARAGE (G1) · EMT PLATE

0/12

PULL ROOMRACK

Send

XLR

☐☐☐

Bay 3 · port 17 bottom

Return L

XLR

☐☐☐

Bay 7 · port 17–18 top

Return R

XLR

☐☐☐

Bay 7 · port 17–18 top

Motor control

7-PIN

☐☐☐

EMT remote, Rack 1 U13 - two XLR cables make the 7-pin run

Notes...

MIDI HOOKUPS

0 of 11 connected

INSTRUMENT		PORT	PRIORITY	MIDI PATCH BAY
☐	Moog Sub 37	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Waldorf Streichfett	MIDI In	Required	Not assigned
		MIDI Out	Low priority	Not assigned
☐	MFB Tanzbar	MIDI In	Required	Not assigned
		Check which MIDI ports it has	Low priority	Not assigned
☐	Sim n Tonic	MIDI In	Required	Not assigned
		Check which MIDI ports it has		
☐	Oberheim OB-X8	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned
☐	Oberheim OB-6	MIDI In	Required	Not assigned
		MIDI Out	Required	Not assigned