

1,在代码中中例化SPI Flash,
将必要的数据线连到IO

```
module top
(
    input    wire    cs_n,
    input    wire    cclk,
    input    wire    mosi,
    output   wire    miso
);

wire        wp_n;
wire        hold_n;
assign wp_n = 1'b1;
assign hold_n = 1'b1;


EF2_PHY_INTFLASH    flash_inst
(
    .mosi_io0    (mosi    ),
    .miso_io1    (miso    ),
    .wp_n_io2    (wp_n    ),
    .hold_n_io3  (hold_n  ),
    .cclk        (cclk    ),
    .cs_n        (cs_n    )
);

endmodule
```

2,获取SPI flash管理权限

Process->Properties中修改

Persist = 0

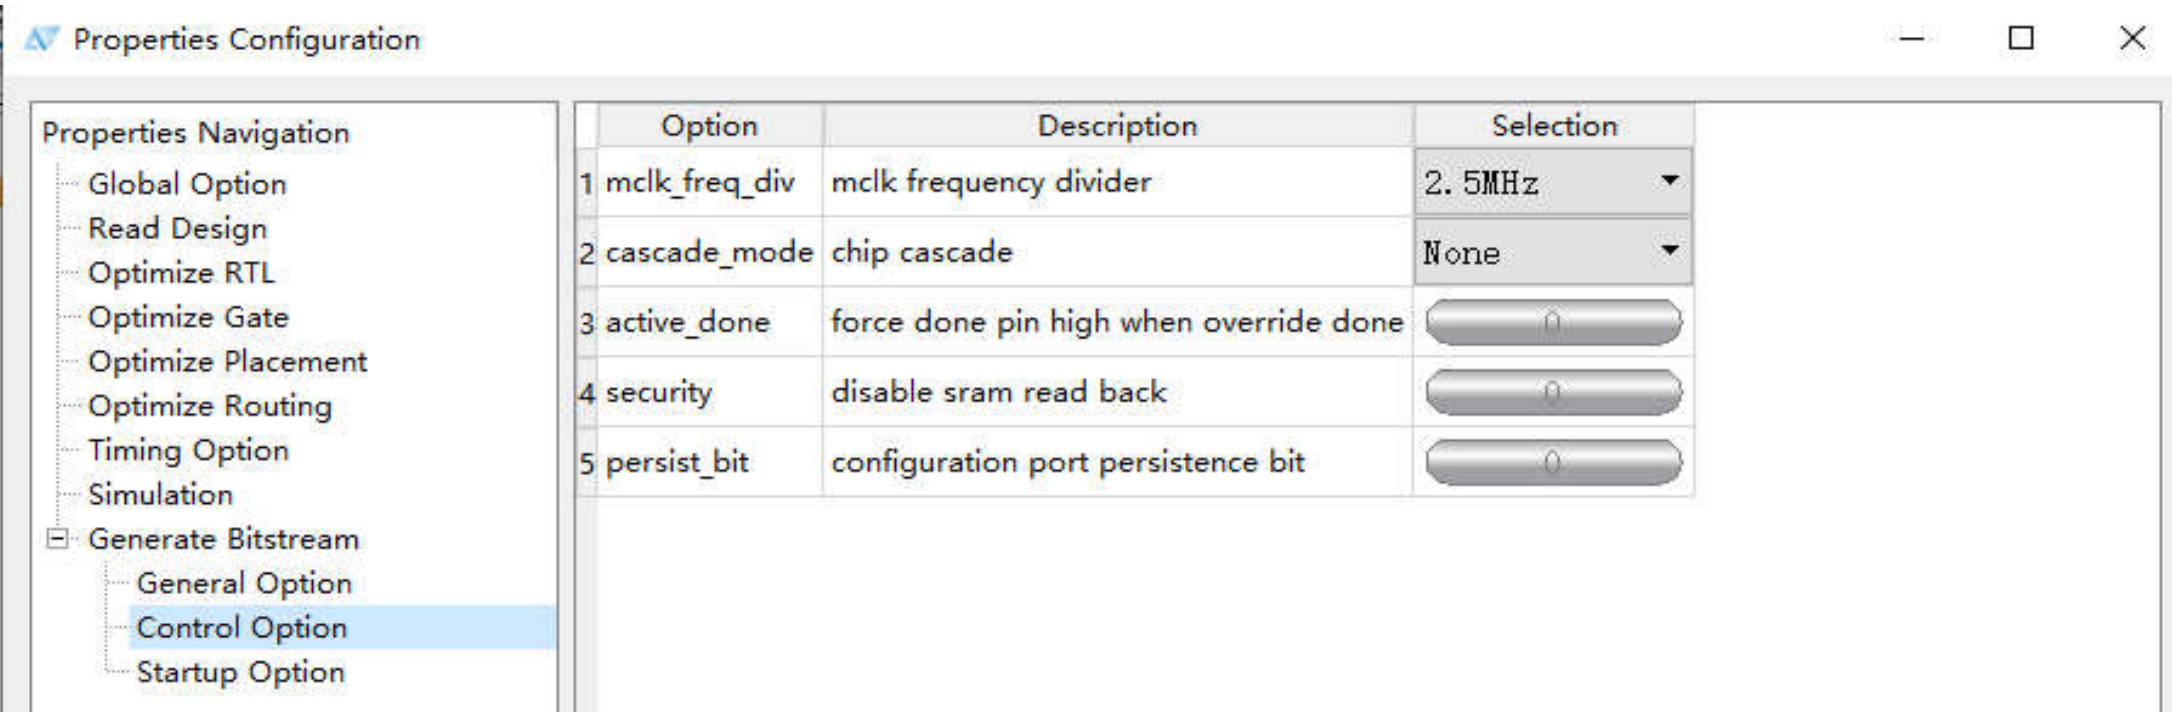

3,生成Bin文件.

由CPU控制SPI接口写入Bin文件.

Properties Configuration

Properties Navigation

- Global Option
- Read Design
- Optimize RTL
- Optimize Gate
- Optimize Placement
- Optimize Routing
- Timing Option
- Simulation
- ☒ Generate Bitstream
 - General Option
 - Control Option
 - Startup Option

Option	Description	Selection
1 version	bit file version (hex)	00
2 bin	create binary configuration file and rbf file	ON
3 time_info	show date/time info in bit file	ON
4 gen_mask	generate mask file for verify FPGA	OFF
5 data_ram		select file
6 instruct_ram		select file
7 header	offline program commands(16 Bytes hex)	OFF