ETAS RTA-BSW v12.7.0

Common Stack Reference Guide

www.etas.com

Copyright

The data in this document may not be altered or amended without special notification from ETAS GmbH. ETAS GmbH undertakes no further obligation in relation to this document. The software described in it can only be used if the customer is in possession of a general license agreement or single license. Using and copying is only allowed in concurrence with the specifications stipulated in the contract.

Under no circumstances may any part of this document be copied, reproduced, transmitted, stored in a retrieval system or translated into another language without the express written permission of ETAS GmbH.

© Copyright 2025 ETAS GmbH, Stuttgart

The names and designations used in this document are trademarks or brands belonging to the respective owners.

ETAS RTA-BSW 12.7.0 - Common Stack Reference Guide R01 EN – 05.2025

Contents

1 Bfx Library . . . 8
1.1 Introduction . . . 8
1.2 Supported Features . . . 8
1.3 Extensions . . . 8
1.4 Limitations . . . 39
1.5 Exclusions . . . 39
1.6 Deviations . . . 39
1.7 API Definition . . . 39
1.8 Configuration Advice . . . 44
1.9 Integration Advice . . . 45
1.10 Hardware Requirements . . . 46
2 Compiler Abstraction . . . 47
2.1 Introduction . . . 47
2.2 Supported Features . . . 47
2.3 Extensions . . . 48
2.4 Limitations . . . 50
2.5 Exclusions . . . 50
2.6 Deviations . . . 50
2.7 API Definition . . . 50
2.8 Configuration Advice . . . 51
2.9 Integration Advice . . . 51
2.10 Hardware Requirements . . . 52
3 ComStack Module . . . 53
3.1 Introduction . . . 53
3.2 Supported Features . . . 53
3.3 Extensions . . . 53
3.4 Limitations . . . 54
3.5 Exclusions . . . 54
3.6 Deviations . . . 54
3.7 API Definition . . . 54
3.8 Configuration Advice . . . 54
3.9 Integration Advice . . . 55
3.10 Hardware Requirements . . . 55

4 Crc Library . . . 56
4.1 Introduction . . . 56
4.2 Supported Features . . . 56
4.3 Extensions . . . 57
4.4 Limitations . . . 61
4.5 Exclusions . . . 61
4.6 Deviations . . . 62
4.7 API Definition . . . 65
4.8 Configuration Advice . . . 66
4.9 Integration Advice . . . 66
4.10 Hardware Requirements . . . 66
5 Efx Library . . . 67
5.1 Introduction . . . 67
5.2 Supported Features . . . 67
5.3 Extensions . . . 67
5.4 Limitations . . . 133
5.5 Exclusions . . . 133
5.6 Deviations . . . 133
5.7 API Definition . . . 134
5.8 Configuration Advice . . . 146
5.9 Integration Advice . . . 147
5.10 Hardware Requirements . . . 148
6 Ifl Library . . . 149
6.1 Introduction . . . 149
6.2 Supported Features . . . 149
6.3 Extensions . . . 149
6.4 Limitations . . . 153
6.5 Exclusions . . . 154
6.6 Deviations . . . 154
6.7 API Definition . . . 154
6.8 Configuration Advice . . . 155
6.9 Integration Advice . . . 156
6.10 Hardware Requirements . . . 157
7 Ifx Library . . . 158

7.1 Introduction . . . 158
7.2 Supported Features . . . 158
7.3 Extensions . . . 158
7.4 Limitations . . . 220
7.5 Exclusions . . . 221
7.6 Deviations . . . 221
7.7 API Definition . . . 221
7.8 Configuration Advice . . . 228
7.9 Integration Advice . . . 229
7.10 Hardware Requirements . . . 229
8 Mfl Library . . . 230
8.1 Introduction . . . 230
8.2 Supported Features . . . 230
8.3 Extensions . . . 231
8.4 Limitations . . . 265
8.5 Exclusions . . . 265
8.6 Deviations . . . 265
8.7 API Definition . . . 265
8.8 Configuration Advice . . . 272
8.9 Integration Advice . . . 273
8.10 Hardware Requirements . . . 274
9 Mfx Library . . . 275
9.1 Introduction . . . 275
9.2 Supported Features . . . 275
9.3 Extensions . . . 276
9.4 Limitations . . . 441
9.5 Exclusions . . . 441
9.6 Deviations . . . 441
9.7 API Definition . . . 441
9.8 Configuration Advice . . . 458
9.9 Integration Advice . . . 459
9.10 Hardware Requirements . . . 460
10 Platform Module . . . 461
10.1 Introduction . . . 461

10.2 Supported Features . . . 461
10.3 Extensions . . . 462
10.4 Limitations . . . 469
10.5 Exclusions . . . 469
10.6 Deviations . . . 470
10.7 API Definition . . . 470
10.8 Configuration Advice . . . 470
10.9 Integration Advice . . . 470
10.10 Hardware Requirements . . . 471
11 rba_ArxmlGen Module . . . 472
11.1 Introduction . . . 472
11.2 Supported Features . . . 473
11.3 Extensions . . . 474
11.4 Limitations . . . 535
11.5 Exclusions . . . 535
11.6 Deviations . . . 535
11.7 API Definition . . . 535
11.8 Configuration Advice . . . 536
11.9 Integration Advice . . . 539
11.10 Hardware Requirements . . . 540
12 rba_DiagLib . . . 541
12.1 Introduction . . . 541
12.2 Supported Features . . . 541
12.3 Extensions . . . 541
12.4 Limitations . . . 541
12.5 Exclusions . . . 542
12.6 Deviations . . . 542
12.7 API Definition . . . 542
12.8 Configuration Advice . . . 542
12.9 Integration Advice . . . 542
12.10 Hardware Requirements . . . 543
13 Standard Module . . . 544
13.1 Introduction . . . 544
13.2 Supported Features . . . 544

13.3 Extensions 544
13.4 Limitations 545
13.5 Exclusions 545
13.6 Deviations 545
13.7 API Definition 545
13.8 Configuration Advice 545
13.9 Integration Advice 545
13.10 Hardware Requirements 546
14 rba_BswSrv Module 547
14.1 Introduction 547
14.2 Supported Features 547
14.3 Extensions 547
14.4 Limitations 553
14.5 Exclusions 554
14.6 Deviations 554
14.7 API Definition 554
14.8 Configuration Advice 554
14.9 Integration Advice 554
14.10 Hardware Requirements 555
15 Glossary 556

1 Bfx Library

Module name	Bfx
Package	COMMON
AUTOSAR Module ID	205
AUTOSAR Version	22-11

1.1 Introduction

The Bfx library provides routines that can be used for fixed-point BIT operations.

Module Configuration

This module is not currently supported by the RTA-BSW Configuration Generator (ConfGen) and must be manually configured.

1.2 Supported Features

- API to provide BIT handling functionality dedicated to fixed-point arithmetic routines.
- All bit functions are re-entrant and can handle several simultaneous requests from the application.

For Further information please refer to the specification of Bit Handling Routines AUTOSAR_SWS_BFXLibrary.pdf

1.3 Extensions

1.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

1.3.1.1 Bfx

Short Name	Bfx
Long Name	Bit Handling Library
Description	Bit Handling Library
Multiplicity	0..1
Default Value	-
Type	ECUC-MODULE-DEF

1.3.1.2 Bfx/BfxGeneral

Short Name	BfxGeneral
Long Name	General settings for Bfx

Description	General settings for Bfx with selections for used controller and activation of GetVersionInfo interface
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

1.3.1.3 Bfx/BfxGeneral/BfxRbAssemblyOptimization

Short Name	BfxRbAssemblyOptimization
Long Name	Select whether to enable or disable assembly optimization
Description	If BfxRbAssemblyOptimization is chosen as “True”, the assembly optimization is enabled. If BfxRbAssembly Optimization is chosen as “False”, the assembly optimization is disabled. Note: This new configuration parameter, “BfxRbAssemblyOptimization” is only specific to PS-EC and is not configurable by other projects.
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

1.3.1.4 Bfx/BfxGeneral/Bfx_VersionInfoAPI

Short Name	Bfx_VersionInfoAPI
Long Name	Configuration parameter for activation of Bfx_GetVersionInfo function.
Description	If BfxVersionInfoAPI is set to “ON”, the function BfxGetVersionInfo shall return the version information of the Bfx library. If BfxVersionInfoAPI is set to “OFF”, the Bfx library shall not provide the function Bfx_GetVersionInfo
Multiplicity	1..1
Default Value	-
Enumeration Literals	ON, OFF
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.5 Bfx/BfxRbMemoryLocations

Short Name	BfxRbMemoryLocations
Long Name	Memory locations
Description	Choose memory location settings for each single service
Multiplicity	1..1
Default Value	-

Type	ECUC-PARAM-CONF-CONTAINER-DEF

1.3.1.6 Bfx/BfxRbMemoryLocations/bfxRbMemLocClrBitMasku16u16

Short Name	bfxRbMemLocClrBitMasku16u16
Long Name	Bfx_ClrBitMask_u16u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.7 Bfx/BfxRbMemoryLocations/bfxRbMemLocClrBitMasku32u32

Short Name	bfxRbMemLocClrBitMasku32u32
Long Name	Bfx_ClrBitMask_u32u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.8 Bfx/BfxRbMemoryLocations/bfxRbMemLocClrBitMasku64u64

Short Name	bfxRbMemLocClrBitMasku64u64
Long Name	Bfx_ClrBitMask_u64u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.9 Bfx/BfxRbMemoryLocations/bfxRbMemLocClrBitMasku8u8

Short Name	bfxRbMemLocClrBitMasku8u8
Long Name	Bfx_ClrBitMask_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.10 Bfx/BfxRbMemoryLocations/bfxRbMemLocClrBitu16u8

Short Name	bfxRbMemLocClrBitu16u8
Long Name	Bfx_ClrBit_u16u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.11 Bfx/BfxRbMemoryLocations/bfxRbMemLocClrBitu32u8

Short Name	bfxRbMemLocClrBitu32u8
Long Name	Bfx_ClrBit_u32u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.12 Bfx/BfxRbMemoryLocations/bfxRbMemLocClrBitu64u8

Short Name	bfxRbMemLocClrBitu64u8
Long Name	Bfx_ClrBit_u64u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.13 Bfx/BfxRbMemoryLocations/bfxRbMemLocClrBitu8u8

Short Name	bfxRbMemLocClrBitu8u8
Long Name	Bfx_ClrBit_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.14 Bfx/BfxRbMemoryLocations/bfxRbMemLocCopyBitu16u8u16u8

Short Name	bfxRbMemLocCopyBitu16u8u16u8
Long Name	Bfx_CopyBit_u16u8u16u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.15 Bfx/BfxRbMemoryLocations/bfxRbMemLocCopyBitu32u8u32u8

Short Name	bfxRbMemLocCopyBitu32u8u32u8
Long Name	Bfx_CopyBit_u32u8u32u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.16 Bfx/BfxRbMemoryLocations/bfxRbMemLocCopyBitu64u8u64u8

Short Name	bfxRbMemLocCopyBitu64u8u64u8
Long Name	Bfx_CopyBit_u64u8u64u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.17 Bfx/BfxRbMemoryLocations/bfxRbMemLocCopyBitu8u8u8u8

Short Name	bfxRbMemLocCopyBitu8u8u8u8
Long Name	Bfx_CopyBit_u8u8u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.18 Bfx/BfxRbMemoryLocations/bfxRbMemLocCountLeadingOnesu16

Short Name	bfxRbMemLocCountLeadingOnesu16
Long Name	Bfx_CountLeadingOnes_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	0..1
Default Value	INLINE
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.19 Bfx/BfxRbMemoryLocations/bfxRbMemLocCountLeadingOnesu32

Short Name	bfxRbMemLocCountLeadingOnesu32
Long Name	Bfx_CountLeadingOnes_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	0..1
Default Value	INLINE
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.20 Bfx/BfxRbMemoryLocations/bfxRbMemLocCountLeadingOnesu64

Short Name	bfxRbMemLocCountLeadingOnesu64
Long Name	Bfx_CountLeadingOnes_u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	0..1
Default Value	INLINE
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.21 Bfx/BfxRbMemoryLocations/bfxRbMemLocCountLeadingOnesu8

Short Name	bfxRbMemLocCountLeadingOnesu8
Long Name	Bfx_CountLeadingOnes_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	0..1
Default Value	INLINE
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.22 Bfx/BfxRbMemoryLocations/bfxRbMemLocCountLeadingZerosu16

Short Name	bfxRbMemLocCountLeadingZerosu16
Long Name	Bfx_CountLeadingZeros_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	0..1
Default Value	INLINE
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.23 Bfx/BfxRbMemoryLocations/bfxRbMemLocCountLeadingZero-su32

Short Name	bfxRbMemLocCountLeadingZerosu32
Long Name	Bfx_CountLeadingZeros_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	0..1
Default Value	INLINE
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.24 Bfx/BfxRbMemoryLocations/bfxRbMemLocCountLeadingZero-

su64bfxRbMemLocCountLeadingZerosu64

Short Name	bfxRbMemLocCountLeadingZerosu64
Long Name	Bfx_CountLeadingZeros_u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	0..1
Default Value	INLINE
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.25 Bfx/BfxRbMemoryLocations/bfxRbMemLocCountLeadingZerosu8

Short Name	bfxRbMemLocCountLeadingZerosu8
Long Name	Bfx_CountLeadingZeros_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	0..1
Default Value	INLINE
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.26 Bfx/BfxRbMemoryLocations/bfxRbMemLocGetBitsu16u8u8u16

Short Name	bfxRbMemLocGetBitsu16u8u8u16
Long Name	Bfx_GetBits_u16u8u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.27 Bfx/BfxRbMemoryLocations/bfxRbMemLocGetBitsu32u8u8u32

Short Name	bfxRbMemLocGetBitsu32u8u8u32

Long Name	Bfx_GetBits_u32u8u8_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.28 Bfx/BfxRbMemoryLocations/bfxRbMemLocGetBitsu64u8u8u64

Short Name	bfxRbMemLocGetBitsu64u8u8u64
Long Name	Bfx_GetBits_u64u8u8_u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.29 Bfx/BfxRbMemoryLocations/bfxRbMemLocGetBitsu8u8u8u8

Short Name	bfxRbMemLocGetBitsu8u8u8u8
Long Name	Bfx_GetBits_u8u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.30 Bfx/BfxRbMemoryLocations/bfxRbMemLocGetBitu16u8u8

Short Name	bfxRbMemLocGetBitu16u8u8
Long Name	Bfx_GetBit_u16u8_u8

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.31 Bfx/BfxRbMemoryLocations/bfxRbMemLocGetBitu32u8u8

Short Name	bfxRbMemLocGetBitu32u8u8
Long Name	Bfx_GetBit_u32u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.32 Bfx/BfxRbMemoryLocations/bfxRbMemLocGetBitu64u8u8

Short Name	bfxRbMemLocGetBitu64u8u8
Long Name	Bfx_GetBit_u64u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.33 Bfx/BfxRbMemoryLocations/bfxRbMemLocGetBitu8u8u8

Short Name	bfxRbMemLocGetBitu8u8u8
Long Name	Bfx_GetBit_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.34 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitsMasku16u16u16

Short Name	bfxRbMemLocPutBitsMasku16u16u16
Long Name	Bfx_PutBitsMask_u16u16u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.35 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitsMasku32u32u32

Short Name	bfxRbMemLocPutBitsMasku32u32u32
Long Name	Bfx_PutBitsMask_u32u32u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.36 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBits-Masku64u64u64

Short Name	bfxRbMemLocPutBitsMasku64u64u64
Long Name	Bfx_PutBitsMask_u64u64u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.37 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitsMasku8u8u8

Short Name	bfxRbMemLocPutBitsMasku8u8u8
Long Name	Bfx_PutBitsMask_u8u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.38 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitsu16u8u8u16

Short Name	bfxRbMemLocPutBitsu16u8u8u16
Long Name	Bfx_PutBits_u16u8u8u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.39 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitsu32u8u8u32

Short Name	bfxRbMemLocPutBitsu32u8u8u32
Long Name	Bfx_PutBits_u32u8u8u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.40 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitsu64u8u8u64

Short Name	bfxRbMemLocPutBitsu64u8u8u64
Long Name	Bfx_PutBits_u64u8u8u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.41 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitsu8u8u8u8

Short Name	bfxRbMemLocPutBitsu8u8u8u8
Long Name	Bfx_PutBits_u8u8u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.42 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitu16u8u8

Short Name	bfxRbMemLocPutBitu16u8u8
Long Name	Bfx_PutBit_u16u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.43 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitu32u8u8

Short Name	bfxRbMemLocPutBitu32u8u8
Long Name	Bfx_PutBit_u32u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.44 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitu64u8u8

Short Name	bfxRbMemLocPutBitu64u8u8
Long Name	Bfx_PutBit_u64u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.45 Bfx/BfxRbMemoryLocations/bfxRbMemLocPutBitu8u8u8

Short Name	bfxRbMemLocPutBitu8u8u8
Long Name	Bfx_PutBit_u8u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.46 Bfx/BfxRbMemoryLocations/bfxRbMemLocRotBitLtu16u8

Short Name	bfxRbMemLocRotBitLtu16u8
Long Name	Bfx_RotBitLt_u16u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.47 Bfx/BfxRbMemoryLocations/bfxRbMemLocRotBitLtu32u8

Short Name	bfxRbMemLocRotBitLtu32u8
Long Name	Bfx_RotBitLt_u32u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.48 Bfx/BfxRbMemoryLocations/bfxRbMemLocRotBitLtu64u8

Short Name	bfxRbMemLocRotBitLtu64u8
Long Name	Bfx_RotBitLt_u64u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.49 Bfx/BfxRbMemoryLocations/bfxRbMemLocRotBitLtu8u8

Short Name	bfxRbMemLocRotBitLtu8u8
Long Name	Bfx_RotBitLt_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.50 Bfx/BfxRbMemoryLocations/bfxRbMemLocRotBitRtu16u8

Short Name	bfxRbMemLocRotBitRtu16u8
Long Name	Bfx_RotBitRt_u16u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.51 Bfx/BfxRbMemoryLocations/bfxRbMemLocRotBitRtu32u8

Short Name	bfxRbMemLocRotBitRtu32u8
Long Name	Bfx_RotBitRt_u32u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.52 Bfx/BfxRbMemoryLocations/bfxRbMemLocRotBitRtu64u8

Short Name	bfxRbMemLocRotBitRtu64u8
Long Name	Bfx_RotBitRt_u64u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.53 Bfx/BfxRbMemoryLocations/bfxRbMemLocRotBitRtu8u8

Short Name	bfxRbMemLocRotBitRtu8u8
Long Name	Bfx_RotBitRt_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.54 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitMasku16u16

Short Name	bfxRbMemLocSetBitMasku16u16
Long Name	Bfx_SetBitMask_u16u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.55 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitMasku32u32

Short Name	bfxRbMemLocSetBitMasku32u32
Long Name	Bfx_SetBitMask_u32u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.56 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitMasku64u64

Short Name	bfxRbMemLocSetBitMasku64u64
Long Name	Bfx_SetBitMask_u64u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.57 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitMasku8u8

Short Name	bfxRbMemLocSetBitMasku8u8
Long Name	Bfx_SetBitMask_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.58 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitsu16u8u8u8

Short Name	bfxRbMemLocSetBitsu16u8u8u8
Long Name	Bfx_SetBits_u16u8u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.59 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitsu32u8u8u8

Short Name	bfxRbMemLocSetBitsu32u8u8u8
Long Name	Bfx_SetBits_u32u8u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.60 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitsu64u8u8u8

Short Name	bfxRbMemLocSetBitsu64u8u8u8
Long Name	Bfx_SetBits_u64u8u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.61 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitsu8u8u8u8

Short Name	bfxRbMemLocSetBitsu8u8u8u8
Long Name	Bfx_SetBits_u8u8u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.62 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitu16u8

Short Name	bfxRbMemLocSetBitu16u8
Long Name	Bfx_SetBit_u16u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.63 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitu32u8

Short Name	bfxRbMemLocSetBitu32u8
Long Name	Bfx_SetBit_u32u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.64 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitu64u8

Short Name	bfxRbMemLocSetBitu64u8
Long Name	Bfx_SetBit_u64u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.65 Bfx/BfxRbMemoryLocations/bfxRbMemLocSetBitu8u8

Short Name	bfxRbMemLocSetBitu8u8
Long Name	Bfx_SetBit_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.66 Bfx/BfxRbMemoryLocations/bfxRbMemLocShiftBitLtu16u8

Short Name	bfxRbMemLocShiftBitLtu16u8
Long Name	Bfx_ShiftBitLt_u16u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.67 Bfx/BfxRbMemoryLocations/bfxRbMemLocShiftBitLtu32u8

Short Name	bfxRbMemLocShiftBitLtu32u8
Long Name	Bfx_ShiftBitLt_u32u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.68 Bfx/BfxRbMemoryLocations/bfxRbMemLocShiftBitLtu64u8

Short Name	bfxRbMemLocShiftBitLtu64u8
Long Name	Bfx_ShiftBitLt_u64u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.69 Bfx/BfxRbMemoryLocations/bfxRbMemLocShiftBitLtu8u8

Short Name	bfxRbMemLocShiftBitLtu8u8
Long Name	Bfx_ShiftBitLt_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.70 Bfx/BfxRbMemoryLocations/bfxRbMemLocShiftBitRtu16u8

Short Name	bfxRbMemLocShiftBitRtu16u8
Long Name	Bfx_ShiftBitRt_u16u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.71 Bfx/BfxRbMemoryLocations/bfxRbMemLocShiftBitRtu32u8

Short Name	bfxRbMemLocShiftBitRtu32u8
Long Name	Bfx_ShiftBitRt_u32u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.72 Bfx/BfxRbMemoryLocations/bfxRbMemLocShiftBitRtu64u8

Short Name	bfxRbMemLocShiftBitRtu64u8
Long Name	Bfx_ShiftBitRt_u64u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.73 Bfx/BfxRbMemoryLocations/bfxRbMemLocShiftBitRtu8u8

Short Name	bfxRbMemLocShiftBitRtu8u8
Long Name	Bfx_ShiftBitRt_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.74 Bfx/BfxRbMemoryLocations/bfxRbMemLocToggleBitMasku16u16

Short Name	bfxRbMemLocToggleBitMasku16u16
Long Name	Bfx_ToggleBitMask_u16u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.75 Bfx/BfxRbMemoryLocations/bfxRbMemLocToggleBitMasku32u32

Short Name	bfxRbMemLocToggleBitMasku32u32
Long Name	Bfx_ToggleBitMask_u32u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.76 Bfx/BfxRbMemoryLocations/bfxRbMemLocToggleBitMasku64u64

Short Name	bfxRbMemLocToggleBitMasku64u64
Long Name	Bfx_ToggleBitMask_u64u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.77 Bfx/BfxRbMemoryLocations/bfxRbMemLocToggleBitMasku8u8

Short Name	bfxRbMemLocToggleBitMasku8u8
Long Name	Bfx_ToggleBitMask_u8u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.78 Bfx/BfxRbMemoryLocations/bfxRbMemLocToggleBitsu16

Short Name	bfxRbMemLocToggleBitsu16
Long Name	Bfx_ToggleBits_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.79 Bfx/BfxRbMemoryLocations/bfxRbMemLocToggleBitsu32

Short Name	bfxRbMemLocToggleBitsu32
Long Name	Bfx_ToggleBits_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.80 Bfx/BfxRbMemoryLocations/bfxRbMemLocToggleBitsu64

Short Name	bfxRbMemLocToggleBitsu64
Long Name	Bfx_ToggleBits_u64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.81 Bfx/BfxRbMemoryLocations/bfxRbMemLocToggleBitsu8

Short Name	bfxRbMemLocToggleBitsu8
Long Name	Bfx_ToggleBits_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.82 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstBitLnMasku16u16u8

Short Name	bfxRbMemLocTstBitLnMasku16u16u8
Long Name	Bfx_TstBitLnMask_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.83 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstBitLnMasku32u32u8

Short Name	bfxRbMemLocTstBitLnMasku32u32u8
Long Name	Bfx_TstBitLnMask_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.84 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstBitLn-Masku64u64u8

Short Name	bfxRbMemLocTstBitLnMasku64u64u8
Long Name	Bfx_TstBitLnMask_u64u64_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.85 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstBitLnMasku8u8u8

Short Name	bfxRbMemLocTstBitLnMasku8u8u8
Long Name	Bfx_TstBitLnMask_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.86 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstBitMasku16u16u8

Short Name	bfxRbMemLocTstBitMasku16u16u8
Long Name	Bfx_TstBitMask_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.87 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstBitMasku32u32u8

Short Name	bfxRbMemLocTstBitMasku32u32u8
Long Name	Bfx_TstBitMask_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.88 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstBitMasku64u64u8

Short Name	bfxRbMemLocTstBitMasku64u64u8
Long Name	Bfx_TstBitMask_u64u64_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.89 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstBitMasku8u8u8

Short Name	bfxRbMemLocTstBitMasku8u8u8
Long Name	Bfx_TstBitMask_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.90 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstParityEvenu16u8

Short Name	bfxRbMemLocTstParityEvenu16u8
Long Name	Bfx_TstParityEven_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.91 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstParityEvenu32u8

Short Name	bfxRbMemLocTstParityEvenu32u8
Long Name	Bfx_TstParityEven_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.92 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstParityEvenu64u8

Short Name	bfxRbMemLocTstParityEvenu64u8
Long Name	Bfx_TstParityEven_u64_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.1.93 Bfx/BfxRbMemoryLocations/bfxRbMemLocTstParityEvenu8u8

Short Name	bfxRbMemLocTstParityEvenu8u8
Long Name	Bfx_TstParityEven_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

1.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR

v22-11

- There are no additional API defined in this version.

1.4 Limitations

The following features are not supported for version v12.7.0.

- There are no known limitations in this version.

1.5 Exclusions

The following features from AR v22-11 are not supported in version v12.7.0.

API functions not currently implemented:

- `Bfx_ShiftBitSat`
- `Bfx_CountLeadingOnes`
- `Bfx_CountLeadingSigns`
- `Bfx_CountLeadingZeros`

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

1.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

1.7 API Definition

List of supported APIs:

Bfx_GetVersionInfo

Returns the version information of this library.

Bfx_SetBit_<TypeMn>u8

Sets the logical status of input data as 1 at the requested bit position.

Implementation:

- `Bfx_SetBit_u16u8`
- `Bfx_SetBit_u32u8`
- `Bfx_SetBit_u8u8`
- `Bfx_SetBit_u64u8`

Bfx_ClrBit_<TypeMn>u8

Clears the logical status of the input data to 0 at the requested bit position.

Implementation:

- `Bfx_ClrBit_u16u8`
- `Bfx_ClrBit_u32u8`
- `Bfx_ClrBit_u8u8`
- `Bfx_ClrBit_u64u8`

Bfx_GetBit_<InTypeMn>u8_u8

Returns the logical status of the input data for the requested bit position.

Implementation:

- `Bfx_GetBit_u16u8_u8`
- `Bfx_GetBit_u32u8_u8`
- `Bfx_GetBit_u8u8_u8`
- `Bfx_GetBit_u64u8_u8`

Bfx_SetBits_<TypeMn>u8u8u8

Sets the input data as 1 or 0 as per Status value, starting from BitStartPn, for the length BitLn.

Implementation:

- `Bfx_SetBits_u16u8u8u8`
- `Bfx_SetBits_u32u8u8u8`
- `Bfx_SetBits_u8u8u8u8`
- `Bfx_SetBits_u64u8u8u8`

Bfx_GetBits_<TypeMn>u8u8_<TypeMn>

Returns the Bits of the input data starting from BitStartPn, for the length of BitLn.

Implementation:

- `Bfx_GetBits_u16u8u8_u16`
- `Bfx_GetBits_u32u8u8_u32`
- `Bfx_GetBits_u8u8u8_u8`
- `Bfx_GetBits_u64u8u8_u64`

Bfx_SetBitMask_<TypeMn><TypeMn>

Sets the data to logical status 1 as per the corresponding Mask bits when set to value 1 and remaining bits will retain their original values.

Implementation:

- `Bfx_SetBitMask_u16u16`
- `Bfx_SetBitMask_u32u32`

- `Bfx_SetBitMask_u8u8`
- `Bfx_SetBitMask_u64u64`

Bfx_ClrBitMask_<TypeMn><TypeMn>

Clears the logical status to 0 for the input data for all the bit positions as per the mask.

Implementation:

- `Bfx_ClrBitMask_u16u16`
- `Bfx_ClrBitMask_u32u32`
- `Bfx_ClrBitMask_u8u8`
- `Bfx_ClrBitMask_u64u64`

Bfx_TstBitMask_<InTypeMn><InTypeMn>_u8

Returns TRUE if all bits defined in Mask value are set in the input Data value, otherwise returns FALSE.

Implementation:

- `Bfx_TstBitMask_u16u16_u8`
- `Bfx_TstBitMask_u32u32_u8`
- `Bfx_TstBitMask_u8u8_u8`
- `Bfx_TstBitMask_u64u64_u8`

Bfx_TstBitLnMask_<InTypeMn><InTypeMn>_u8

Returns TRUE if at least one bit is set as per the mask, otherwise returns FALSE.

Implementation:

- `Bfx_TstBitLnMask_u16u16_u8`
- `Bfx_TstBitLnMask_u32u32_u8`
- `Bfx_TstBitLnMask_u8u8_u8`
- `Bfx_TstBitLnMask_u64u64_u8`

Bfx_TstParityEven_<InTypeMn>_u8

Returns TRUE if the number of bits is set to 1, otherwise returns FALSE.

Implementation:

- `Bfx_TstParityEven_u16_u8`
- `Bfx_TstParityEven_u32_u8`
- `Bfx_TstParityEven_u8_u8`
- `Bfx_TstParityEven_u64_u8`

Bfx_ToggleBits_<TypeMn>

Toggles all the bits of data (1's Complement Data).

Implementation:

- `Bfx_ToggleBits_u16`
- `Bfx_ToggleBits_u32`
- `Bfx_ToggleBits_u8`
- `Bfx_ToggleBits_u64`

Bfx_ToggleBitMask_<TypeMn><TypeMn>

Toggles the bits of data when the corresponding bit of the mask is enabled and set to 1.

Implementation:

- `Bfx_ToggleBitMask_u16u16`
- `Bfx_ToggleBitMask_u32u32`
- `Bfx_ToggleBitMask_u8u8`
- `Bfx_ToggleBitMask_u64u64`

Bfx_ShiftBitRt_<TypeMn>u8

Shifts data to the right by ShiftCnt, the most significant bit is replaced by a 0 bit and the least significant bit is discarded for every single bit shift cycle.

Implementation:

- `Bfx_ShiftBitRt_u16u8`
- `Bfx_ShiftBitRt_u32u8`
- `Bfx_ShiftBitRt_u8u8`
- `Bfx_ShiftBitRt_u64u8`

Bfx_ShiftBitLt_<TypeMn>u8

Shifts data to the left by ShiftCnt, the least significant bit is replaced by a 0 bit, and the most significant bit is discarded for every single bit shift cycle.

Implementation:

- `Bfx_ShiftBitLt_u16u8`
- `Bfx_ShiftBitLt_u32u8`
- `Bfx_ShiftBitLt_u8u8`
- `Bfx_ShiftBitLt_u64u8`

Bfx_RotBitRt_<TypeMn>u8

Rotates data to the right by ShiftCnt, the least significant bit is rotated to the most significant bit location for every single bit shift cycle.

Implementation:

- `Bfx_RotBitRt_u16u8`

- `Bfx_RotBitRt_u32u8`
- `Bfx_RotBitRt_u8u8`
- `Bfx_RotBitRt_u64u8`

Bfx_RotBitLt_<TypeMn>u8

Rotates data to the left by ShiftCnt, the most significant bit is rotated to the least significant bit location for every single bit shift cycle.

Implementation:

- `Bfx_RotBitLt_u16u8`
- `Bfx_RotBitLt_u32u8`
- `Bfx_RotBitLt_u8u8`
- `Bfx_RotBitLt_u64u8`

Bfx_CopyBit_<TypeMn>u8<TypeMn>u8

Copies a bit from source data from bit position to destination data at bit position.

Implementation:

- `Bfx_CopyBit_u16u8u16u8`
- `Bfx_CopyBit_u32u8u32u8`
- `Bfx_CopyBit_u8u8u8u8`
- `Bfx_CopyBit_u64u8u64u8`

Bfx_PutBits_<TypeMn>u8u8<TypeMn>

Puts bits defined in Pattern to the input Data from the specified bit position.

Implementation:

- `Bfx_PutBits_u16u8u8u16`
- `Bfx_PutBits_u32u8u8u32`
- `Bfx_PutBits_u8u8u8u8`
- `Bfx_PutBits_u64u8u8u64`

Bfx_PutBitsMask_<TypeMn><TypeMn><TypeMn>

Puts all bits defined in Pattern, and for which the corresponding Mask bit is set to 1 in the input Data.

Implementation:

- `Bfx_PutBitsMask_u16u16u16`
- `Bfx_PutBitsMask_u32u32u32`
- `Bfx_PutBitsMask_u8u8u8`
- `Bfx_PutBitsMask_u64u64u64`

Bfx_PutBit_<TypeMn>u8u8

Updates the bit specified by BitPn of input data as 1 or 0, as per Status value.

Implementation:

- `Bfx_PutBit_u16u8u8`
- `Bfx_PutBit_u32u8u8`
- `Bfx_PutBit_u8u8u8`
- `Bfx_PutBit_u64u8u8`

Bfx_CountLeadingOnes_<TypeMn>

Counts the number of consecutive ones in the data, starting with the most significant bit and returning the result.

Implementation:

- `uint8 Bfx_CountLeadingOnes_u8`
- `uint8 Bfx_CountLeadingOnes_u16`
- `uint8 Bfx_CountLeadingOnes_u32`
- `uint8 Bfx_CountLeadingOnes_u64`

Bfx_CountLeadingZeros_<TypeMn>

Counts the number of consecutive zeros in the data, starting with the most significant bit and returning the result.

Implementation:

- `uint8 Bfx_CountLeadingZeros_u8`
- `uint8 Bfx_CountLeadingZeros_u16`
- `uint8 Bfx_CountLeadingZeros_u32`
- `uint8 Bfx_CountLeadingZeros_u64`

For further information please refer to the AUTOSAR specification of Bit Handling routines AUTOSAR_SWS_BFXLibrary.pdf

1.8 Configuration Advice

This section contains configuration advice for the Bfx module.

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the “Configuration Generation” section of the RTA-CAR User Guide.

1.8.1 Additional Configuration Parameters

The following three extension parameters must be configured in Bfx_EcucValues.arxml when the Bfx module is used:

1.8.1.1 Bfx_VersionInfoAPI

The Bfx_GetVersionInfo function can be enabled or disabled based on the configuration of the Bfx_VersionInfoAPI parameter.

On	The Bfx library shall provide the function Bfx_GetVersionInfo which provides the version information of the Bfx library.
Off	The Bfx library shall not provide the function Bfx_GetVersionInfo.

1.8.1.2 BfxRbMemoryLocations

This parameter provides the option to configure the Memory Location of a specific service.

NORMAL	Configured in Normal flash.
SLOW	Configured in Slow flash.
FAST	Configured in Fast flash.
INLINE	The function is made inline.

1.8.1.3 BfxRbAssemblyOptimization

TRUE	The assembly optimization is enabled.
FALSE	The assembly optimization is disabled.

NOTE

`BfxRbAssemblyOptimization` is only specific to PS-EC and is not configurable by other projects. Its default value is FALSE.

1.9 Integration Advice

Include “Bfx.h” where required by application software.

1.9.1 Init Functions

The Bfx Library does not require an initialization phase. A library function may be called at the very first step of ECU initialization (e.g. even by the OS or EcuM), and so the library must be ready to accept this call.

1.9.2 DeInit Functions

The Bfx library does not require a shutdown operation phase.

1.9.3 Scheduled Functions

Bfx has no periodic functions.

1.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Bfx module does not use any exclusive OS resources.

1.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

2 Compiler Abstraction

Module name	Compiler
Package	COMMON
AUTOSAR Module ID	198
AUTOSAR Version	22-11

2.1 Introduction

The RTA-BSW Compiler module provides macros for the AUTOSAR Compiler Abstraction.

Compiler does not interact with any other RTA-BSW modules, although the output files generated from it are used in several other modules and components.

Module Configuration

This module does not have configuration parameters.

2.2 Supported Features

The Compiler module supports macros for the AUTOSAR Compiler Abstraction concept.

The ECU Configuration mechanism is used, and the Compiler module creates the files Compiler.h and Compiler_Cfg.h.

2.2.1 #Defines

The following #defines are provided in the generated header and ARXML files.

General Definitions	- INLINE - LOCAL_INLINE
Function Definitions	- FUNC - FUNC_P2CONST - FUNC_P2VAR
Pointer Definitions	- P2VAR - P2CONST - CONSTP2VAR - CONSTP2CONST - P2FUNC - CONSTP2FUNCT
Constant Definitions	- CONST

Variable Definitions	- VAR

2.2.2 RTA-BSW Specific Macros

The following macros, which are specific to the RTA-BSW implementation of the Compiler module, are provided in Compiler_Cfg.h:

2.2.2.1 COMPILER_RB_PARAMUNUSED

This macro is used to flag unused parameters and suppress the respective compiler warning by changing the variable to type VOID. Note that when applying this macro to a volatile variable, the compiler might produce a read access from that variable (which may have a side effect).

2.2.2.2 COMPILER_RB_NORETURN

This macro is used to flag non-returning functions to facilitate compiler optimization. It is implemented using the noreturn attribute of GNUC (v2.5 or higher).

2.2.2.3 COMPILER_RB_ASSERT_GLOBAL

This macro is used to perform global compile-time assertion checking. It is implemented via an array declaration. This macro must be provided with both a condition to be checked at compile time and a respective message which is reflected in the array name (i.e. Compiler_Rb_AssertGlobal_##msg) to be provided. If the provided condition evaluates to FALSE, a negative size array is defined, which will result in a compile-time error.

2.2.2.4 COMPILER_RB_ASSERT_LOCAL

This macro is used to perform local compile-time assertion checking. It is implemented via an array declaration. This macro must be provided with both a condition to be checked at compile-time and a respective message which is reflected in the array name (i.e. Compiler_Rb_AssertLocal_##msg). If the provided condition evaluates to FALSE, a negative size array is defined, which will result in a compile-time error.

2.3 Extensions

2.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

2.3.1.1 Compiler

Short Name	Compiler
Long Name	Central Elements: Compiler
Description	Central Elements: Compiler

Multiplicity	1..1
Default Value	-
Type	ECUC-MODULE-DEF

2.3.1.2 Compiler/CompilerRbSettings

Short Name	CompilerRbSettings
Long Name	Configuration settings for CUCEL Central Elements module: Compiler
Description	Configuration settings for CUCEL Central Elements module: Compiler
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

2.3.1.3 Compiler/CompilerRbSettings/CompilerRbCompilerAbstraction

Short Name	CompilerRbCompilerAbstraction
Long Name	Configuration parameter for activation of the compiler abstraction feature.
Description	If CompilerRbCompilerAbstraction is set to “ACTIVATE”, the compiler abstraction macros (FUNC, VAR, …) will be activated. That means that the macro parameters “memclass” and “prtclass” are used and therefore in the header “Compiler_Cfg.h” the #defines have to be set to module-specific values. If “DEACTIVATE” is chosen the compiler abstraction macros are deactivated and the header “Compiler_Cfg.h” must not be instrumented during integration.
Multiplicity	1..1
Default Value	-
Enumeration Literals	ACTIVATE, DEACTIVATE
Type	ECUC-ENUMERATION-PARAM-DEF

2.3.1.4 Compiler/CompilerRbSettings/CompilerRbInlineDefinition

Short Name	CompilerRbInlineDefinition
Long Name	Configuration parameter to define the native declaration of the definition of an inline function INLINE
Description	Specify the native declaration which is used by the compiler to define an inline function (e.g. inline, __inline, __inline_)
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

2.3.1.5 Compiler/CompilerRbSettings/CompilerRbLocalInlineDefinition

Short Name	CompilerRbLocalInlineDefinition
Long Name	Configuration parameter to define the native declaration of the definition of the local inline function LOCAL_INLINE
Description	Specify the native declaration which is used by the compiler to define a local inline function (e.g. static inline __attribute__ ((always_inline)))
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

2.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

2.4 Limitations

- There are no known limitations in this version.

2.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

2.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

2.7 API Definition

The Compiler module does not include an API.

2.8 Configuration Advice

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

2.8.1 Activating Compiler Abstraction

The CompilerRbCompilerAbstraction configuration parameter (in Compiler/CompilerRbSettings/) activates the Compiler Abstraction feature.

- If CompilerRbCompilerAbstraction is set to "ACTIVATE", the Compiler Abstraction macros (e.g. FUNC, VAR etc) will be activated, which means that the "memclass" and "prtclass" macro parameters are used, and the Compiler_Cfg.h header has to be adapted by setting #defines for all the required memclass and ptrclass macros. The #defines have to be set to module-specific values.
- If CompilerRbCompilerAbstraction is set to "DEACTIVATE", the Compiler Abstraction macros are deactivated and the header "Compiler_Cfg.h" does not require any changes.

2.9 Integration Advice

2.9.1 Init Functions

No specific handling neccessary.

2.9.2 DeInit Functions

No specific handling neccessary.

2.9.3 Scheduled Functions

There are no scheduled functions.

2.9.3.1 Using Compiler Abstraction

Please be aware of the following points when using the Compiler Abstraction macros in the respective BSW modules:

- In the parameter list of the macro, no further Compiler Abstraction macros should be nested. Instead, use a previously defined type as return type, or use FUNC_P2CONST/FUNC_P2VAR.
- C forbids the use of the far/near keywords on function local variables (auto-variables), so when using macros to allocate a pointer on stack, the

memclass-parameter must be set to AUTOMATIC.

2.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Compiler module does not use any exclusive OS resources.

2.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

3 ComStack Module

Module name	ComStack
Package	COMMON
AUTOSAR Module ID	196
AUTOSAR Version	22-11

3.1 Introduction

The ComStack module provides centrally defined elements (e.g. types and symbols), which are specified by AUTOSAR, and which are used within the Communication stack.

The ComStack module generates central header (ComStack_Types.h) and ARXML (ComStack_Types.arxml) files for the communication stack. These files contain all the types that are used across several modules within the Communication stack of the basic software.

WARNING

The ComStack module should not be confused with the Communication stack (Com). The ComStack module only provides the central files that are used by the Communication stack.

Module Configuration

This module does not have configuration parameters.

3.2 Supported Features

The ComStack module supports types and symbols from the AR v22-11 specification.

Based on the configuration of the EcuC module, the following files are generated by the RTA-BSW Code Generator:

- ComStack_Types.h
- ComStack_Types.arxml
- ComStack_Cfg.h

3.3 Extensions

3.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

- No known extension parameters are defined in this version.

3.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

3.4 Limitations

- There are no known limitations in this version.

3.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

3.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

3.7 API Definition

This module does not expose a public API.

For further information please refer to AUTOSAR_SWS_CommunicationStack-Types.pdf

3.8 Configuration Advice

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

The following are configuration hints and advice:

- `PduIdTypeEnum` and `PduLengthTypeEnum` in the EcuC module must always be configured. The recommended value is "uint16".
- `EcuCRbArRelease` in the EcuC module must be configured as "AR45_Rev0".

3.9 Integration Advice

3.9.1 Init Functions

Not applicable

3.9.2 DeInit Functions

Not applicable

3.9.3 Scheduled Functions

Not applicable

3.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The ComStack module does not use any exclusive OS resources.

3.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

4 Crc Library

Module name	Crc
Package	COMMON
AUTOSAR Module ID	201
AUTOSAR Version	22-11

4.1 Introduction

The CRC Library (Crc) provides synchronous re-entrant routines that can be used to calculate 8/16/32/64-bit CRCs of data, where the data is provided in a single call or over several calls to the routines. See the Supported Features section for a list of all currently supported routines.

Three methods for calculation are supported:

1. Table based calculation, with fast execution but larger RAM consumption.
2. Runtime calculation, with slower execution but smaller RAM consumption.
3. Hardware-supported calculation, with the fastest execution.

Module Configuration

This module is not currently supported by the RTA-BSW Configuration Generator (ConfGen) and must be manually configured.

4.2 Supported Features

4.2.1 Supported Routines

The CRC library contains the following routines for CRC calculation:

- CRC8 SAEJ1850 referred to as SAE-J1850 8-bit CRC
- CRC8 0x2F polynomial
- CRC16 referred to as CCITT-FALSE 16-bit CRC
- CRC32 referred to as IEEE 802.3 Ethernet 32-bit CRC
- CRC32P4 referred to as 32-bit CRC with 0x1F4ACFB13 polynomial
- CRC64 referred to as ECMA 64-bit CRC

All routines are re-entrant and can be used by multiple applications at the same time. All routines are directly callable from the ASW when the CRC library resides on the same core as the ASW.

4.2.2 Hardware-Supported Calculation

The hardware-supported implementation is currently available for the following microcontrollers:

- RH850_R1X
- RH850_P1XD3

- RH850_P1XD4
- RH850_P1XD5
- RH850_P1XD5EDV2
- IFX_DEV2_40NM
- IFX_DEV3_40NM
- IFX_DEV4_40NM
- IFX_DEV4_65NM
- IFX_DEV5_40NM
- ST_DEV3_40NM
- ST_DEV5_28NM
- ST_CHORUS_4MC1
- ST_CHORUS_2MC1
- ST_CHORUS_1MC1
- NXP_S32G2
- ST_DEV5_28_P6
- ST_DEV5_28_P7
- ST_DEV3_28_P3

4.3 Extensions

4.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

4.3.1.1 Crc/CrcGM

Short Name	CrcGM
Long Name	Crc GM Specific configurations
Description	GM Specific configurations of component Crc. The preferred crc polynomials and calculation methods shall be configured here.
Multiplicity	0..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

4.3.1.2 Crc/CrcGM/Crc8GM

Short Name	Crc8GM
Long Name	enable Crc8 GM calculation

Description	Enables / disables CRC 8-bit GM calculation methods. If Crc8 GM calculation is enabled the Crc8 GM calculation method must be selected.
Multiplicity	1..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

4.3.1.3 Crc/CrcGM/Crc8GMMode

Short Name	Crc8GMMode
Long Name	Crc8 GM calculation method
Description	Switch to select one of the available CRC 8-bit calculation methods. If Crc8 calculation is enabled the Crc8 calculation method must be selected here. If Crc8 calculation is disabled the Crc8 calculation method can be deleted.
Multiplicity	0..1
Default Value	CRC_8_GM_RUNTIME
Enumeration Literals	CRC_8_GM_RUNTIME, CRC_8_GM_TABLE
Type	ECUC-ENUMERATION-PARAM-DEF

4.3.1.4 Crc/CrcGeneral/Crc16

Short Name	Crc16
Long Name	enable Crc16 calculation
Description	Enables / disables CRC 16-bit (CCITT) calculation methods. If Crc16 calculation is enabled the Crc16 calculation method must be selected.
Multiplicity	1..1
Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

4.3.1.5 Crc/CrcGeneral/Crc32

Short Name	Crc32
Long Name	enable Crc32 calculation
Description	Enables / disables CRC 32-bit (IEEE-802.3 CRC32 Ethernet Standard) calculation methods. If Crc32 calculation is enabled the Crc32 calculation method must be selected.
Multiplicity	1..1
Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

4.3.1.6 Crc/CrcGeneral/Crc32P4

Short Name	Crc32P4
Long Name	enable Crc32P4 calculation
Description	Enables / disables CRC 32-bit for E2E Profile 4 (32-bit 0xF4ACFB13 polynomial CRC calculation) calculation methods. If Crc32P4 calculation is enabled the Crc32P4 calculation method must be selected.
Multiplicity	1..1
Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

4.3.1.7 Crc/CrcGeneral/Crc64

Short Name	Crc64
Long Name	enable Crc64 calculation
Description	Enables / disables CRC 64-bit (ECMA) calculation methods. If Crc64 calculation is enabled the Crc64 calculation method must be selected.
Multiplicity	1..1
Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

4.3.1.8 Crc/CrcGeneral/Crc8

Short Name	Crc8
Long Name	enable Crc8 calculation
Description	Enables / disables CRC 8-bit (SAE J1850) calculation methods. If Crc8 calculation is enabled the Crc8 calculation method must be selected.
Multiplicity	1..1
Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

4.3.1.9 Crc/CrcGeneral/Crc8H2F

Short Name	Crc8H2F
Long Name	enable Crc8H2F calculation
Description	Enables / disables CRC 8-bit (2Fh polynomial) calculation methods. If CRC8H2F calculation is enabled the Crc8H2F calculation method must be selected.
Multiplicity	1..1

Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

4.3.1.10 Crc/CrcGeneral/CrcRbHardware

Short Name	CrcRbHardware
Long Name	Crc Hardware
Description	Switch to select one of the available Hardware.
Multiplicity	0..1
Default Value	CRC_HW_UNKNOWN
Enumeration Literals	CRC_HW_UNKNOWN, CRC_HW_RH850_R1X, CRC_HW_RH850_P1XD3, CRC_HW_RH850_P1XD4, CRC_HW_RH850_P1XD5, CRC_HW_RH850_P1XD5EDV2, CRC_HW_ST_CHORUS_4MC1, CRC_HW_ST_CHORUS_2MC1, CRC_HW_ST_CHORUS_1MC1, CRC_HW_IFX_DEV2_40NM, CRC_HW_IFX_DEV3_40NM, CRC_HW_IFX_DEV4_40NM, CRC_HW_IFX_DEV5_40NM, CRC_HW_IFX_DEV4_65NM, CRC_HW_ST_DEV3_40NM, CRC_HW_ST_DEV5_28NM, CRC_HW_ST_DEV5_28_P6, CRC_HW_ST_DEV5_28_P7, CRC_HW_ST_DEV3_28_P3, CRC_HW_NXP_S32G2
Type	ECUC-ENUMERATION-PARAM-DEF

4.3.1.11 Crc/CrcGeneral/CrcVersionInfoApi

Short Name	CrcVersionInfoApi
Long Name	enable Crc version info
Description	Enables / disables Crc version information.
Multiplicity	1..1
Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

4.3.1.12 Crc/CrcRbRevision

Short Name	CrcRbRevision
Long Name	Crc Autosar 4.0 revision

Description	The Autosar 4.0 revision of the CRC calculations can be selected here. Currently Revision_1 and Revision_2 are supported. If Revision_1 is configured then it's meaning is CRC calculations are supported for AR4.0.1 and Previous Autosar version and if Revision_2 is configured it's meaning is CRC calculations are supported for AR 4.0.2 and greater than this Autosar version. The selection is mandatory.
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

4.3.1.13 Crc/CrcRbRevision/CrcRbRev

Short Name	CrcRbRev
Long Name	Autosar 4.0 Revision
Description	Selection of Autosar 4.0 revision of CRC module. If Revision_2 is configured then all CRC calculation relevant API will have following behaviour : 1. There is an additional parameter Crc_IsFirstCall 2. The function has different start value and different XOR values (changed from 0x00 to OxFF). If Revision_1 is configured then all CRC calculation relevant API will have following behaviour : 1. There is no parameter Crc_IsFirstCall 2. The function has only start value.
Multiplicity	0..1
Default Value	Revision_2
Enumeration Literals	Revision_1, Revision_2
Type	ECUC-ENUMERATION-PARAM-DEF

4.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

4.4 Limitations

The following features are not supported for version v12.7.0.

- There are no known limitations in this version.

4.5 Exclusions

The following features from AR v22-11 are not supported in version v12.7.0.

API functions not currently implemented:

- `Crc_CalculateCRC16ARC`

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- Crc/CrcGeneral/Crc16ARCMode

4.6 Deviations

4.6.1 Configuration Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

4.6.1.1 Crc/CrcGeneral

[RTA-BSW] Description	General configurations of component Crc. The preferred crc polynomials and calculation methods shall be configured here.
[AUTOSAR] Description	General configuration of CRC module

4.6.1.2 Crc/CrcGeneral/Crc16Mode

[RTA-BSW] Description	Switch to select one of the available CRC 16-bit (CCITT) calculation methods. If Crc16 calculation is enabled the Crc16 calculation method must be selected here. The Crc16 calculation on hardware is supported for - RH850/R1x, RH850/P1x, CRC_HW_IFX_DEV2_40NM, CRC_HW_IFX_DEV3_40NM, CRC_HW_IFX_DEV4_40NM, CRC_HW_IFX_DEV5_40NM, CRC_HW_ST_CHORUS_4MC1, CRC_HW_ST_CHORUS_2MC1, CRC_HW_ST_CHORUS_1MC1, CRC_HW_ST_DEV5_28NM, CRC_HW_NXP_S32G2, CRC_HW_ST_DEV5_28_P6, CRC_HW_ST_DEV5_28_P7, CRC_HW_ST_DEV3_28_P3. If Crc16 calculation is disabled the Crc16 calculation method can be deleted. CRC_16_HARDWARE_16BIT_DATA_PTR option is to be selected if Api is to support 16bit Data pointer. This is only supported for RH850/P1x.
[AUTOSAR] Description	Switch to select one of the available CRC 16-bit (CCITT) calculation methods
[RTA-BSW] Enumeration Literals	CRC_16_RUNTIME, CRC_16_TABLE, CRC_16_HARDWARE, CRC_16_HARDWARE_16BIT_DATA_PTR
[AUTOSAR] Enumeration Literals	CRC_16_HARDWARE, CRC_16_RUNTIME, CRC_16_TABLE
[ADDED] Default Value	CRC_16_TABLE

4.6.1.3 Crc/CrcGeneral/Crc32Mode

[RTA-BSW] Description	Switch to select one of the available CRC 32-bit (IEEE-802.3 CRC32 Ethernet Standard) calculation methods. If CRC32 calculation is enabled the CRC32 calculation method must be selected here. The CRC32 calculation on hardware is supported for - RH850/R1x, RH850/P1x, CRC_HW_ST_CHORUS_4MC1, CRC_HW_ST_CHORUS_2MC1, CRC_HW_ST_CHORUS_1MC1, CRC_HW_IFX_DEV4_40NM, CRC_HW_IFX_DEV2_40NM, CRC_HW_IFX_DEV3_40NM, CRC_HW_IFX_DEV5_40NM, CRC_HW_ST_DEV3_40NM, CRC_HW_IFX_DEV4_65NM, CRC_HW_ST_DEV5_28NM, CRC_HW_NXP_S32G2, CRC_HW_ST_DEV5_28_P6, CRC_HW_ST_DEV5_28_P7, CRC_HW_ST_DEV3_28_P3. If CRC32 calculation is disabled the Crc32 calculation method can be deleted.
[AUTOSAR] Description	Switch to select one of the available CRC 32-bit (IEEE-802.3 CRC32 Ethernet Standard) calculation methods
[RTA-BSW] Enumeration Literals	CRC_32_RUNTIME, CRC_32_TABLE, CRC_32_HARDWARE
[AUTOSAR] Enumeration Literals	CRC_32_HARDWARE, CRC_32_RUNTIME, CRC_32_TABLE
[ADDED] Default Value	CRC_32_TABLE

4.6.1.4 Crc/CrcGeneral/Crc32P4Mode

[RTA-BSW] Description	Switch to select one of the available CRC 32-bit for E2E Profile 4 (32-bit 0xF4ACFB13 polynomial CRC calculation) calculation methods. If CRC32P4 calculation is enabled the CRC32P4 calculation method must be selected here. The CRC32 calculation on hardware is only supported for - CRC_HW_IFX_DEV4_40NM, CRC_HW_IFX_DEV2_40NM, CRC_HW_IFX_DEV3_40NM, CRC_HW_IFX_DEV5_40NM. If CRC32 calculation is disabled the Crc32 calculation method can be deleted.
[AUTOSAR] Description	Switch to select one of the available CRC 32-bit E2E Profile 4 calculation methods.
[RTA-BSW] Enumeration Literals	CRC_32P4_RUNTIME, CRC_32P4_TABLE, CRC_32P4_HARDWARE
[AUTOSAR] Enumeration Literals	CRC_32P4_HARDWARE, CRC_32P4_RUNTIME, CRC_32P4_TABLE
[ADDED] Default Value	CRC_32P4_TABLE

4.6.1.5 Crc/CrcGeneral/Crc64Mode

[RTA-BSW] Description	Switch to select one of the available CRC 64-bit (EMCA) calculation methods. If CRC64 calculation is enabled the CRC64 calculation method must be selected here. The CRC64 calculation on hardware is currently not supported. If CRC64 calculation is disabled the Crc64 calculation method can be deleted.
[AUTOSAR] Description	Switch to select one of the available CRC 64-bit calculation methods.
[RTA-BSW] Enumeration Literals	CRC_64_RUNTIME, CRC_64_TABLE
[AUTOSAR] Enumeration Literals	CRC_64_HARDWARE, CRC_64_RUNTIME, CRC_64_TABLE
[ADDED] Default Value	CRC_64_TABLE

4.6.1.6 Crc/CrcGeneral/Crc8H2FMode

[RTA-BSW] Description	Switch to select one of the available Crc 8-bit (2Fh polynomial) calculation methods. If Crc8H2F calculation is enabled the Crc8h2F calculation method must be selected here. The CRC8H2F calculation on hardware is only supported for RH850/P1x, CRC_HW_ST_CHORUS_4MC1, CRC_HW_ST_CHORUS_2MC1, CRC_HW_ST_CHORUS_1MC1, CRC_HW_ST_DEV5_28NM, CRC_HW_NXP_S32G2, CRC_HW_ST_DEV5_28_P6,CRC_HW_ST_DEV5_28_P7,CRC_HW_ST_DEV3_28_P3. If Crc8H2F calculation is disabled the calculation method can be deleted.
[AUTOSAR] Description	Switch to select one of the available CRC 8-bit (2Fh polynomial) calculation methods
[RTA-BSW] Enumeration Literals	CRC_8H2F_RUNTIME, CRC_8H2F_TABLE, CRC_8H2F_HARDWARE
[AUTOSAR] Enumeration Literals	CRC_8H2F_HARDWARE, CRC_8H2F_RUNTIME, CRC_8H2F_TABLE
[ADDED] Default Value	CRC_8H2F_TABLE

4.6.1.7 Crc/CrcGeneral/Crc8Mode

[RTA-BSW] Description	Switch to select one of the available CRC 8-bit (SAE J1850) calculation methods. If Crc8 calculation is enabled the Crc8 calculation method must be selected here. The CRC8 calculation on hardware is only supported for - RH850/P1x, CRC_HW_IFX_DEV2_40NM, CRC_HW_IFX_DEV3_40NM, CRC_HW_IFX_DEV4_40NM, CRC_HW_IFX_DEV5_40NM, CRC_HW_ST_CHORUS_4MC1, CRC_HW_ST_CHORUS_2MC1, CRC_HW_ST_CHORUS_1MC1, CRC_HW_ST_DEV5_28NM, CRC_HW_NXP_S32G2, CRC_HW_ST_DEV5_28_P6, CRC_HW_ST_DEV5_28_P7, CRC_HW_ST_DEV3_28_P3. If Crc8 calculation is disabled the Crc8 calculation method can be deleted.
[AUTOSAR] Description	Switch to select one of the available CRC 8-bit (SAE J1850) calculation methods
[RTA-BSW] Enumeration Literals	CRC_8_RUNTIME, CRC_8_TABLE, CRC_8_HARDWARE
[AUTOSAR] Enumeration Literals	CRC_8_HARDWARE, CRC_8_RUNTIME, CRC_8_TABLE
[ADDED] Default Value	CRC_8_TABLE

4.7 API Definition

List of supported APIs

`Crc_CalculateCRC8`	8-bit SAE J1850 CRC Calculation
`Crc_CalculateCRC8H2F`	8-bit 0x2F polynomial CRC Calculation
`Crc_CalculateCRC16`	16-bit CCITT-FALSE CRC16
`Crc_CalculateCRC32`	32-bit Ethernet CRC Calculation
`Crc_CalculateCRC64`	64-bit ECMA CRC Calculation
`Crc_CalculateCRC32P4`	32-bit 0xF4ACFB13 polynomial CRC Calculation
`Crc_GetVersionInfo`	Version Information of this module

For further information, please refer to the specification of CRC Routines AUTOSAR_SWS_CRCLibrary.pdf

4.8 Configuration Advice

NOTE

Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

- The required CRC algorithms and implementations need to be appropriately enabled.

4.9 Integration Advice

Include "Crc.h" where required by application software.

4.9.1 Init Functions

No Init is required.

4.9.2 DeInit Functions

No DeInit is required.

4.9.3 Scheduled Functions

There are no scheduled functions.

4.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Crc module does not use any exclusive OS resources.

4.10 Hardware Requirements

Table 4.23.Crc Hardware Requirements

Support	Usage
FLASH	2248 bytes
RAM	0 bytes

Usage calculated based on a sample configuration.

5 Efx Library

Module name	Efx
Package	COMMON
AUTOSAR Module ID	208
AUTOSAR Version	22-11

5.1 Introduction

The Efx library provides re-entrant routines that can be used for Extended Mathematical functions for fixed-point values.

Module Configuration

This module is not currently supported by the RTA-BSW Configuration Generator (ConfGen) and must be manually configured.

5.2 Supported Features

- APIs to provide extended mathematical functions for fixed-point values.
- All functions are re-entrant and can handle several simultaneous requests from the application.
- Efx APIs can be called directly from BSW modules or SWC (no port definition is required).

For further information please refer to the specification of Extended Fixed Point Mathematical Routines AUTOSAR_SWS_EFXLibrary.pdf

5.3 Extensions

5.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

5.3.1.1 Efx

Short Name	Efx
Long Name	Extended Fixed Point Library
Description	Extended Fixed Point Library
Multiplicity	0..1
Default Value	-
Type	ECUC-MODULE-DEF

5.3.1.2 Efx/EfxGeneral

Short Name	EfxGeneral

Long Name	General settings for Efx
Description	General settings for Efx with selections for used controller and activation of GetVersionInfo interface
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

5.3.1.3 Efx/EfxGeneral/EfxRbAssemblyOptimization

Short Name	EfxRbAssemblyOptimization
Long Name	Select whether to enable or disable assembly optimization
Description	If EfxRbAssemblyOptimization is chosen as "True", the assembly optimization is enabled. If EfxRbAssembly Optimization is chosen as "False", the assembly optimization is disabled. Note: This new configuration parameter, "EfxRbAssemblyOptimization" is only specific to PS-EC and is not configurable by other projects.
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

5.3.1.4 Efx/EfxGeneral/Efx_VersionInfoAPI

Short Name	Efx_VersionInfoAPI
Long Name	Configuration parameter for activation of Efx_GetVersionInfo function.
Description	If EfxVersionInfoAPI is set to "ON", the function EfxGetVersionInfo shall return the version information of the Efx library. If EfxVersionInfoAPI is set to "OFF", the Efx library shall not provide the function Efx_GetVersionInfo
Multiplicity	1..1
Default Value	-
Enumeration Literals	ON, OFF
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.5 Efx/EfxRbMemoryLocations

Short Name	EfxRbMemoryLocations
Long Name	Memory locations
Description	Choose memory location settings for each single service
Multiplicity	1..1

Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

5.3.1.6 Efx/EfxRbMemoryLocations/efxRbMemLocAdds64s32s64

Short Name	efxRbMemLocAdds64s32s64
Long Name	Efx_Add_s64s32_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.7 Efx/EfxRbMemoryLocations/efxRbMemLocAdds64s64s64

Short Name	efxRbMemLocAdds64s64s64
Long Name	Efx_Add_s64s64_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.8 Efx/EfxRbMemoryLocations/efxRbMemLocAdds64u32s64

Short Name	efxRbMemLocAdds64u32s64
Long Name	Efx_Add_s64u32_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.9 Efx/EfxRbMemoryLocations/efxRbMemLocArcCoss16u16

Short Name	efxRbMemLocArcCoss16u16
Long Name	Efx_ArcCos_s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.10 Efx/EfxRbMemoryLocations/efxRbMemLocArcCoss32u32

Short Name	efxRbMemLocArcCoss32u32
Long Name	Efx_ArcCos_s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.11 Efx/EfxRbMemoryLocations/efxRbMemLocArcCoss8u8

Short Name	efxRbMemLocArcCoss8u8
Long Name	Efx_ArcCos_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.12 Efx/EfxRbMemoryLocations/efxRbMemLocArcSins16s16

Short Name	efxRbMemLocArcSins16s16
Long Name	Efx_ArcSin_s16_s16

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.13 Efx/EfxRbMemoryLocations/efxRbMemLocArcSins32s32

Short Name	efxRbMemLocArcSins32s32
Long Name	Efx_ArcSin_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.14 Efx/EfxRbMemoryLocations/efxRbMemLocArcSins8s8

Short Name	efxRbMemLocArcSins8s8
Long Name	Efx_ArcSin_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.15 Efx/EfxRbMemoryLocations/efxRbMemLocArrayAverages16s16

Short Name	efxRbMemLocArrayAverages16s16
Long Name	Efx_Array_Average_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.16 Efx/EfxRbMemoryLocations/efxRbMemLocArrayAverages32s32

Short Name	efxRbMemLocArrayAverages32s32
Long Name	Efx_Array_Average_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.17 Efx/EfxRbMemoryLocations/efxRbMemLocAverages32s32

Short Name	efxRbMemLocAverages32s32
Long Name	Efx_Average_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.18 Efx/EfxRbMemoryLocations/efxRbMemLocCalcTeQApps32

Short Name	efxRbMemLocCalcTeQApps32
Long Name	Efx_CalcTeQApp_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.19 Efx/EfxRbMemoryLocations/efxRbMemLocCalcTeQs32

Short Name	efxRbMemLocCalcTeQs32
Long Name	Efx_CalcTeQ_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.20 Efx/EfxRbMemoryLocations/efxRbMemLocCasts64s32

Short Name	efxRbMemLocCasts64s32
Long Name	Efx_Cast_s64_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.21 Efx/EfxRbMemoryLocations/efxRbMemLocCasts64u32

Short Name	efxRbMemLocCasts64u32
Long Name	Efx_Cast_s64_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.22 Efx/EfxRbMemoryLocations/efxRbMemLocCastu32s64

Short Name	efxRbMemLocCastu32s64
Long Name	Efx_Cast_u32_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.23 Efx/EfxRbMemoryLocations/efxRbMemLocCoss16s16

Short Name	efxRbMemLocCoss16s16
Long Name	Efx_Cos_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.24 Efx/EfxRbMemoryLocations/efxRbMemLocCoss32s32

Short Name	efxRbMemLocCoss32s32
Long Name	Efx_Cos_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.25 Efx/EfxRbMemoryLocations/efxRbMemLocCoss8s8

Short Name	efxRbMemLocCoss8s8

Long Name	Efx_Cos_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.26 Efx/EfxRbMemoryLocations/efxRbMemLocCounterSetu16

Short Name	efxRbMemLocCounterSetu16
Long Name	Efx_CounterSet_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.27 Efx/EfxRbMemoryLocations/efxRbMemLocCounterSetu32

Short Name	efxRbMemLocCounterSetu32
Long Name	Efx_CounterSet_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.28 Efx/EfxRbMemoryLocations/efxRbMemLocCounterSetu8

Short Name	efxRbMemLocCounterSetu8
Long Name	Efx_CounterSet_u8

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.29 Efx/EfxRbMemoryLocations/efxRbMemLocCounteru16u16

Short Name	efxRbMemLocCounteru16u16
Long Name	Efx_Counter_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.30 Efx/EfxRbMemoryLocations/efxRbMemLocCounteru32u32

Short Name	efxRbMemLocCounteru32u32
Long Name	Efx_Counter_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.31 Efx/EfxRbMemoryLocations/efxRbMemLocCounteru8u8

Short Name	efxRbMemLocCounteru8u8
Long Name	Efx_Counter_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.32 Efx/EfxRbMemoryLocations/efxRbMemLocCtrlSetLimits

Short Name	efxRbMemLocCtrlSetLimits
Long Name	Efx_CtrlSetLimits
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.33 Efx/EfxRbMemoryLocations/efxRbMemLocDT1Typ1Calc

Short Name	efxRbMemLocDT1Typ1Calc
Long Name	Efx_DT1Typ1Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.34 Efx/EfxRbMemoryLocations/efxRbMemLocDT1Typ1Outs16

Short Name	efxRbMemLocDT1Typ1Outs16
Long Name	Efx_DT1Typ1Out_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.35 Efx/EfxRbMemoryLocations/efxRbMemLocDT1Typ1Outs8

Short Name	efxRbMemLocDT1Typ1Outs8
Long Name	Efx_DT1Typ1Out_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.36 Efx/EfxRbMemoryLocations/efxRbMemLocDT1Typ1SetState

Short Name	efxRbMemLocDT1Typ1SetState
Long Name	Efx_DT1Typ1SetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.37 Efx/EfxRbMemoryLocations/efxRbMemLocDT1Typ2Calc

Short Name	efxRbMemLocDT1Typ2Calc
Long Name	Efx_DT1Typ2Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.38 Efx/EfxRbMemoryLocations/efxRbMemLocDT1Typ2Outs16

Short Name	efxRbMemLocDT1Typ2Outs16
Long Name	Efx_DT1Typ2Out_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.39 Efx/EfxRbMemoryLocations/efxRbMemLocDT1Typ2Outs8

Short Name	efxRbMemLocDT1Typ2Outs8
Long Name	Efx_DT1Typ2Out_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.40 Efx/EfxRbMemoryLocations/efxRbMemLocDT1Typ2SetState

Short Name	efxRbMemLocDT1Typ2SetState
Long Name	Efx_DT1Typ2SetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.41 Efx/EfxRbMemoryLocations/efxRbMemLocDeadTimes16s16

Short Name	efxRbMemLocDeadTimes16s16
Long Name	Efx_DeadTime_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.42 Efx/EfxRbMemoryLocations/efxRbMemLocDebounceInit

Short Name	efxRbMemLocDebounceInit
Long Name	Efx_DebounceInit
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.43 Efx/EfxRbMemoryLocations/efxRbMemLocDebounceSetParam

Short Name	efxRbMemLocDebounceSetParam
Long Name	Efx_DebounceSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.44 Efx/EfxRbMemoryLocations/efxRbMemLocDebounceu8u8

Short Name	efxRbMemLocDebounceu8u8

Long Name	Efx_Debounce_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.45 Efx/EfxRbMemoryLocations/efxRbMemLocDivs64s32s32

Short Name	efxRbMemLocDivs64s32s32
Long Name	Efx_Div_s64s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.46 Efx/EfxRbMemoryLocations/efxRbMemLocDivs64s32s64

Short Name	efxRbMemLocDivs64s32s64
Long Name	Efx_Div_s64s32_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.47 Efx/EfxRbMemoryLocations/efxRbMemLocDivs64s32u32

Short Name	efxRbMemLocDivs64s32u32
Long Name	Efx_Div_s64s32_u32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.48 Efx/EfxRbMemoryLocations/efxRbMemLocDivs64u32s32

Short Name	efxRbMemLocDivs64u32s32
Long Name	Efx_Div_s64u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.49 Efx/EfxRbMemoryLocations/efxRbMemLocDivs64u32s64

Short Name	efxRbMemLocDivs64u32s64
Long Name	Efx_Div_s64u32_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.50 Efx/EfxRbMemoryLocations/efxRbMemLocDivs64u32u32

Short Name	efxRbMemLocDivs64u32u32
Long Name	Efx_Div_s64u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.51 Efx/EfxRbMemoryLocations/efxRbMemLocEdgeBipolu8u8

Short Name	efxRbMemLocEdgeBipolu8u8
Long Name	Efx_EdgeBipol_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.52 Efx/EfxRbMemoryLocations/efxRbMemLocEdgeFallingu8u8

Short Name	efxRbMemLocEdgeFallingu8u8
Long Name	Efx_EdgeFalling_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.53 Efx/EfxRbMemoryLocations/efxRbMemLocEdgeRisingu8u8

Short Name	efxRbMemLocEdgeRisingu8u8
Long Name	Efx_EdgeRising_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.54 Efx/EfxRbMemoryLocations/efxRbMemLocExps32s32

Short Name	efxRbMemLocExps32s32
Long Name	Efx_Exp_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.55 Efx/EfxRbMemoryLocations/efxRbMemLocGts64s32u8

Short Name	efxRbMemLocGts64s32u8
Long Name	Efx_Gt_s64s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.56 Efx/EfxRbMemoryLocations/efxRbMemLocGts64u32u8

Short Name	efxRbMemLocGts64u32u8
Long Name	Efx_Gt_s64u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.57 Efx/EfxRbMemoryLocations/efxRbMemLocHpFilters16s32

Short Name	efxRbMemLocHpFilters16s32
Long Name	Efx_HpFilter_s16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.58 Efx/EfxRbMemoryLocations/efxRbMemLocHpFilters8s16

Short Name	efxRbMemLocHpFilters8s16
Long Name	Efx_HpFilter_s8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.59 Efx/EfxRbMemoryLocations/efxRbMemLocHpFilteru16s32

Short Name	efxRbMemLocHpFilteru16s32
Long Name	Efx_HpFilter_u16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.60 Efx/EfxRbMemoryLocations/efxRbMemLocHpFilteru8s16

Short Name	efxRbMemLocHpFilteru8s16
Long Name	Efx_HpFilter_u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.61 Efx/EfxRbMemoryLocations/efxRbMemLocHypotu16u16u16

Short Name	efxRbMemLocHypotu16u16u16
Long Name	Efx_Hypot_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.62 Efx/EfxRbMemoryLocations/efxRbMemLocHypotu32u32u32

Short Name	efxRbMemLocHypotu32u32u32
Long Name	Efx_Hypot_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.63 Efx/EfxRbMemoryLocations/efxRbMemLocHypotu8u8u8

Short Name	efxRbMemLocHypotu8u8u8
Long Name	Efx_Hypot_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.64 Efx/EfxRbMemoryLocations/efxRbMemLocHystCenter-HalfDeltas16u8

Short Name	efxRbMemLocHystCenterHalfDeltas16u8
Long Name	Efx_HystCenterHalfDelta_s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.65 Efx/EfxRbMemoryLocations/efxRbMemLocHystCenter-HalfDeltas32u8

Short Name	efxRbMemLocHystCenterHalfDeltas32u8
Long Name	Efx_HystCenterHalfDelta_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.66 Efx/EfxRbMemoryLocations/efxRbMemLocHystCenter-HalfDeltas8u8

Short Name	efxRbMemLocHystCenterHalfDeltas8u8
Long Name	Efx_HystCenterHalfDelta_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.67 Efx/EfxRbMemoryLocations/efxRbMemLocHystCenter-HalfDeltau16u8

Short Name	efxRbMemLocHystCenterHalfDeltau16u8
Long Name	Efx_HystCenterHalfDelta_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.68 Efx/EfxRbMemoryLocations/efxRbMemLocHystCenter-HalfDeltau32u8

Short Name	efxRbMemLocHystCenterHalfDeltau32u8
Long Name	Efx_HystCenterHalfDelta_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.69 Efx/EfxRbMemoryLocations/efxRbMemLocHystCenter-HalfDeltau8u8

Short Name	efxRbMemLocHystCenterHalfDeltau8u8
Long Name	Efx_HystCenterHalfDelta_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.70 Efx/EfxRbMemoryLocations/efxRbMemLocHystDeltaRights16u8

Short Name	efxRbMemLocHystDeltaRights16u8
Long Name	Efx_HystDeltaRight_s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.71 Efx/EfxRbMemoryLocations/efxRbMemLocHystDeltaRights32u8

Short Name	efxRbMemLocHystDeltaRights32u8
Long Name	Efx_HystDeltaRight_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.72 Efx/EfxRbMemoryLocations/efxRbMemLocHystDeltaRights8u8

Short Name	efxRbMemLocHystDeltaRights8u8
Long Name	Efx_HystDeltaRight_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.73 Efx/EfxRbMemoryLocations/efxRbMemLocHystDeltaRightu16u8

Short Name	efxRbMemLocHystDeltaRightu16u8
Long Name	Efx_HystDeltaRight_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.74 Efx/EfxRbMemoryLocations/efxRbMemLocHystDeltaRightu32u8

Short Name	efxRbMemLocHystDeltaRightu32u8
Long Name	Efx_HystDeltaRight_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.75 Efx/EfxRbMemoryLocations/efxRbMemLocHystDeltaRightu8u8

Short Name	efxRbMemLocHystDeltaRightu8u8
Long Name	Efx_HystDeltaRight_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.76 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftDeltas16u8

Short Name	efxRbMemLocHystLeftDeltas16u8
Long Name	Efx_HystLeftDelta_s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.77 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftDeltas32u8

Short Name	efxRbMemLocHystLeftDeltas32u8
Long Name	Efx_HystLeftDelta_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.78 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftDeltas8u8

Short Name	efxRbMemLocHystLeftDeltas8u8
Long Name	Efx_HystLeftDelta_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.79 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftDeltau16u8

Short Name	efxRbMemLocHystLeftDeltau16u8
Long Name	Efx_HystLeftDelta_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.80 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftDeltau32u8

Short Name	efxRbMemLocHystLeftDeltau32u8
Long Name	Efx_HystLeftDelta_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.81 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftDeltau8u8

Short Name	efxRbMemLocHystLeftDeltau8u8
Long Name	Efx_HystLeftDelta_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.82 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftRights16u8

Short Name	efxRbMemLocHystLeftRights16u8
Long Name	Efx_HystLeftRight_s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.83 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftRights32u8

Short Name	efxRbMemLocHystLeftRights32u8
Long Name	Efx_HystLeftRight_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.84 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftRights8u8

Short Name	efxRbMemLocHystLeftRights8u8
Long Name	Efx_HystLeftRight_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.85 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftRightu16u8

Short Name	efxRbMemLocHystLeftRightu16u8
Long Name	Efx_HystLeftRight_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.86 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftRightu32u8

Short Name	efxRbMemLocHystLeftRightu32u8
Long Name	Efx_HystLeftRight_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.87 Efx/EfxRbMemoryLocations/efxRbMemLocHystLeftRightu8u8

Short Name	efxRbMemLocHystLeftRightu8u8
Long Name	Efx_HystLeftRight_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.88 Efx/EfxRbMemoryLocations/efxRbMemLocHysteresiss16s16

Short Name	efxRbMemLocHysteresiss16s16
Long Name	Efx_Hysteresis_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.89 Efx/EfxRbMemoryLocations/efxRbMemLocHysteresiss32s32

Short Name	efxRbMemLocHysteresiss32s32
Long Name	Efx_Hysteresis_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.90 Efx/EfxRbMemoryLocations/efxRbMemLocHysteresiss8s8

Short Name	efxRbMemLocHysteresiss8s8
Long Name	Efx_Hysteresis_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.91 Efx/EfxRbMemoryLocations/efxRbMemLocHysteresisu16u16

Short Name	efxRbMemLocHysteresisu16u16
Long Name	Efx_Hysteresis_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.92 Efx/EfxRbMemoryLocations/efxRbMemLocHysteresisu32u32

Short Name	efxRbMemLocHysteresisu32u32
Long Name	Efx_Hysteresis_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.93 Efx/EfxRbMemoryLocations/efxRbMemLocHysteresisu8u8

Short Name	efxRbMemLocHysteresisu8u8
Long Name	Efx_Hysteresis_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.94 Efx/EfxRbMemoryLocations/efxRbMemLoclCalc

Short Name	efxRbMemLoclCalc
Long Name	Efx_ICalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.95 Efx/EfxRbMemoryLocations/efxRbMemLoclLimCalc

Short Name	efxRbMemLoclLimCalc
Long Name	Efx_ILimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.96 Efx/EfxRbMemoryLocations/efxRbMemLoclOuts16

Short Name	efxRbMemLoclOuts16

Long Name	Efx_lOut_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.97 Efx/EfxRbMemoryLocations/efxRbMemLoclOuts8

Short Name	efxRbMemLoclOuts8
Long Name	Efx_lOut_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.98 Efx/EfxRbMemoryLocations/efxRbMemLoclSetState

Short Name	efxRbMemLoclSetState
Long Name	Efx_lSetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.99 Efx/EfxRbMemoryLocations/efxRbMemLocIntervalCloseds32u8

Short Name	efxRbMemLocIntervalCloseds32u8
Long Name	Efx_IntervalClosed_s32_u8

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.100 Efx/EfxRbMemoryLocations/efxRbMemLocIntervalClosedu32u8

Short Name	efxRbMemLocIntervalClosedu32u8
Long Name	Efx_IntervalClosed_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.101 Efx/EfxRbMemoryLocations/efxRbMemLocIntervalLeftOpens32u8

Short Name	efxRbMemLocIntervalLeftOpens32u8
Long Name	Efx_IntervalLeftOpen_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.102 Efx/EfxRbMemoryLocations/efxRbMemLocIntervalLeftOpenu32u8

Short Name	efxRbMemLocIntervalLeftOpenu32u8
Long Name	Efx_IntervalLeftOpen_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.103 Efx/EfxRbMemoryLocations/efxRbMemLocIntervalOpens32u8

Short Name	efxRbMemLocIntervalOpens32u8
Long Name	Efx_IntervalOpen_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.104 Efx/EfxRbMemoryLocations/efxRbMemLocIntervalOpenu32u8

Short Name	efxRbMemLocIntervalOpenu32u8
Long Name	Efx_IntervalOpen_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.105 Efx/EfxRbMemoryLocations/efxRbMemLocIntervalRightOpen-s32u8

Short Name	efxRbMemLocIntervalRightOpens32u8
Long Name	Efx_IntervalRightOpen_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.106 Efx/EfxRbMemoryLocations/efxRbMemLocInterval-RightOpenu32u8

Short Name	efxRbMemLocIntervalRightOpenu32u8
Long Name	Efx_IntervalRightOpen_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.107 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1s16s16s16s16

Short Name	efxRbMemLocLpFilterFac1s16s16s16s16
Long Name	Efx_LpFilterFac1_s16s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.108 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1s16s16u16s16

Short Name	efxRbMemLocLpFilterFac1s16s16u16s16
Long Name	Efx_LpFilterFac1_s16s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.109 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1s32s16u16s32

Short Name	efxRbMemLocLpFilterFac1s32s16u16s32
Long Name	Efx_LpFilterFac1_s32s16u16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.110 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1s32s32u16s32

Short Name	efxRbMemLocLpFilterFac1s32s32u16s32
Long Name	Efx_LpFilterFac1_s32s32u16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.111 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1u16u16s16u16

Short Name	efxRbMemLocLpFilterFac1u16u16s16u16
Long Name	Efx_LpFilterFac1_u16u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.112 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1u16u16u16u16

Short Name	efxRbMemLocLpFilterFac1u16u16u16u16
Long Name	Efx_LpFilterFac1_u16u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.113 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1u32u16u16u32

Short Name	efxRbMemLocLpFilterFac1u32u16u16u32
Long Name	Efx_LpFilterFac1_u32u16u16_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.114 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1u32u32u16u32

Short Name	efxRbMemLocLpFilterFac1u32u32u16u32
Long Name	Efx_LpFilterFac1_u32u32u16_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.115 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilter-Fac1u32u32u32u32

Short Name	efxRbMemLocLpFilterFac1u32u32u32u32
Long Name	Efx_LpFilterFac1_u32u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.116 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilterFac1u8u8u8u8

Short Name	efxRbMemLocLpFilterFac1u8u8u8u8
Long Name	Efx_LpFilterFac1_u8u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.117 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilters32s32

Short Name	efxRbMemLocLpFilters32s32
Long Name	Efx_LpFilter_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.118 Efx/EfxRbMemoryLocations/efxRbMemLocLpFilteru32u32

Short Name	efxRbMemLocLpFilteru32u32
Long Name	Efx_LpFilter_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.119 Efx/EfxRbMemoryLocations/efxRbMemLocMedianSorts16s16

Short Name	efxRbMemLocMedianSorts16s16
Long Name	Efx_MedianSort_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.120 Efx/EfxRbMemoryLocations/efxRbMemLocMedianSorts32s32

Short Name	efxRbMemLocMedianSorts32s32
Long Name	Efx_MedianSort_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.121 Efx/EfxRbMemoryLocations/efxRbMemLocMedianSorts8s8

Short Name	efxRbMemLocMedianSorts8s8
Long Name	Efx_MedianSort_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.122 Efx/EfxRbMemoryLocations/efxRbMemLocMedianSortu16u16

Short Name	efxRbMemLocMedianSortu16u16
Long Name	Efx_MedianSort_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.123 Efx/EfxRbMemoryLocations/efxRbMemLocMedianSortu32u32

Short Name	efxRbMemLocMedianSortu32u32
Long Name	Efx_MedianSort_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.124 Efx/EfxRbMemoryLocations/efxRbMemLocMedianSortu8u8

Short Name	efxRbMemLocMedianSortu8u8
Long Name	Efx_MedianSort_u8_u8

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.125 Efx/EfxRbMemoryLocations/efxRbMemLocMovingAverages16s16

Short Name	efxRbMemLocMovingAverages16s16
Long Name	Efx_MovingAverage_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.126 Efx/EfxRbMemoryLocations/efxRbMemLocMovingAverages32s32

Short Name	efxRbMemLocMovingAverages32s32
Long Name	Efx_MovingAverage_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.127 Efx/EfxRbMemoryLocations/efxRbMemLocMuls64s32s64

Short Name	efxRbMemLocMuls64s32s64
Long Name	Efx_Mul_s64s32_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.128 Efx/EfxRbMemoryLocations/efxRbMemLocMuls64s64s64

Short Name	efxRbMemLocMuls64s64s64
Long Name	Efx_Mul_s64s64_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.129 Efx/EfxRbMemoryLocations/efxRbMemLocMuls64u32s64

Short Name	efxRbMemLocMuls64u32s64
Long Name	Efx_Mul_s64u32_s64
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.130 Efx/EfxRbMemoryLocations/efxRbMemLocPCalc

Short Name	efxRbMemLocPCalc
Long Name	Efx_PCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.131 Efx/EfxRbMemoryLocations/efxRbMemLocPDCalc

Short Name	efxRbMemLocPDCalc
Long Name	Efx_PDCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.132 Efx/EfxRbMemoryLocations/efxRbMemLocPDOuts16

Short Name	efxRbMemLocPDOuts16
Long Name	Efx_PDOut_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.133 Efx/EfxRbMemoryLocations/efxRbMemLocPDOuts8

Short Name	efxRbMemLocPDOuts8
Long Name	Efx_PDOut_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.134 Efx/EfxRbMemoryLocations/efxRbMemLocPDSetParam

Short Name	efxRbMemLocPDSetParam
Long Name	Efx_PDSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.135 Efx/EfxRbMemoryLocations/efxRbMemLocPDSetState

Short Name	efxRbMemLocPDSetState
Long Name	Efx_PDSetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.136 Efx/EfxRbMemoryLocations/efxRbMemLocPIDOuts16

Short Name	efxRbMemLocPIDOuts16
Long Name	Efx_PIDOut_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.137 Efx/EfxRbMemoryLocations/efxRbMemLocPIDOuts8

Short Name	efxRbMemLocPIDOuts8
Long Name	Efx_PIDOut_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.138 Efx/EfxRbMemoryLocations/efxRbMemLocPIDSetParam

Short Name	efxRbMemLocPIDSetParam
Long Name	Efx_PIDSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.139 Efx/EfxRbMemoryLocations/efxRbMemLocPIDSetState

Short Name	efxRbMemLocPIDSetState
Long Name	Efx_PIDSetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.140 Efx/EfxRbMemoryLocations/efxRbMemLocPIDTyp1Calc

Short Name	efxRbMemLocPIDTyp1Calc
Long Name	Efx_PIDTyp1Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.141 Efx/EfxRbMemoryLocations/efxRbMemLocPIDTyp1LimCalc

Short Name	efxRbMemLocPIDTyp1LimCalc
Long Name	Efx_PIDTyp1LimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.142 Efx/EfxRbMemoryLocations/efxRbMemLocPIDTyp2Calc

Short Name	efxRbMemLocPIDTyp2Calc
Long Name	Efx_PIDTyp2Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.143 Efx/EfxRbMemoryLocations/efxRbMemLocPIDTyp2LimCalc

Short Name	efxRbMemLocPIDTyp2LimCalc
Long Name	Efx_PIDTyp2LimCalc

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.144 Efx/EfxRbMemoryLocations/efxRbMemLocPlOuts16

Short Name	efxRbMemLocPlOuts16
Long Name	Efx_PlOut_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.145 Efx/EfxRbMemoryLocations/efxRbMemLocPlOuts8

Short Name	efxRbMemLocPlOuts8
Long Name	Efx_PlOut_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.146 Efx/EfxRbMemoryLocations/efxRbMemLocPlSetParam

Short Name	efxRbMemLocPlSetParam
Long Name	Efx_PlSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.147 Efx/EfxRbMemoryLocations/efxRbMemLocPlSetState

Short Name	efxRbMemLocPlSetState
Long Name	Efx_PlSetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.148 Efx/EfxRbMemoryLocations/efxRbMemLocPlTyp1Calc

Short Name	efxRbMemLocPlTyp1Calc
Long Name	Efx_PlTyp1Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.149 Efx/EfxRbMemoryLocations/efxRbMemLocPlTyp1LimCalc

Short Name	efxRbMemLocPlTyp1LimCalc
Long Name	Efx_PlTyp1LimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW

Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.150 Efx/EfxRbMemoryLocations/efxRbMemLocPITyp2Calc

Short Name	efxRbMemLocPITyp2Calc
Long Name	Efx_PITyp2Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.151 Efx/EfxRbMemoryLocations/efxRbMemLocPITyp2LimCalc

Short Name	efxRbMemLocPITyp2LimCalc
Long Name	Efx_PITyp2LimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.152 Efx/EfxRbMemoryLocations/efxRbMemLocPOuts16

Short Name	efxRbMemLocPOuts16
Long Name	Efx_POut_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.153 Efx/EfxRbMemoryLocations/efxRbMemLocPOuts8

Short Name	efxRbMemLocPOuts8
Long Name	Efx_POut_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.154 Efx/EfxRbMemoryLocations/efxRbMemLocPSetState

Short Name	efxRbMemLocPSetState
Long Name	Efx_PSetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.155 Efx/EfxRbMemoryLocations/efxRbMemLocPT1Calc

Short Name	efxRbMemLocPT1Calc
Long Name	Efx_PT1Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.156 Efx/EfxRbMemoryLocations/efxRbMemLocPT1Outs16

Short Name	efxRbMemLocPT1Outs16

Long Name	Efx_PT1Out_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.157 Efx/EfxRbMemoryLocations/efxRbMemLocPT1Outs8

Short Name	efxRbMemLocPT1Outs8
Long Name	Efx_PT1Out_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.158 Efx/EfxRbMemoryLocations/efxRbMemLocPT1SetState

Short Name	efxRbMemLocPT1SetState
Long Name	Efx_PT1SetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.159 Efx/EfxRbMemoryLocations/efxRbMemLocPT1Typ1Calc

Short Name	efxRbMemLocPT1Typ1Calc
Long Name	Efx_PT1Typ1Calc

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.160 Efx/EfxRbMemoryLocations/efxRbMemLocRSFlipFlop

Short Name	efxRbMemLocRSFlipFlop
Long Name	Efx_RSFlipFlop
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.161 Efx/EfxRbMemoryLocations/efxRbMemLocRampCalc

Short Name	efxRbMemLocRampCalc
Long Name	Efx_RampCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.162 Efx/EfxRbMemoryLocations/efxRbMemLocRampCalcJump

Short Name	efxRbMemLocRampCalcJump
Long Name	Efx_RampCalcJump
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.163 Efx/EfxRbMemoryLocations/efxRbMemLocRampCalcSwitch

Short Name	efxRbMemLocRampCalcSwitch
Long Name	Efx_RampCalcSwitch
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.164 Efx/EfxRbMemoryLocations/efxRbMemLocRampCheckActivity

Short Name	efxRbMemLocRampCheckActivity
Long Name	Efx_RampCheckActivity
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.165 Efx/EfxRbMemoryLocations/efxRbMemLocRampGetSwitchPos

Short Name	efxRbMemLocRampGetSwitchPos
Long Name	Efx_RampGetSwitchPos
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.166 Efx/EfxRbMemoryLocations/efxRbMemLocRampInitState

Short Name	efxRbMemLocRampInitState
Long Name	Efx_RampInitState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.167 Efx/EfxRbMemoryLocations/efxRbMemLocRampOuts32

Short Name	efxRbMemLocRampOuts32
Long Name	Efx_RampOut_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.168 Efx/EfxRbMemoryLocations/efxRbMemLocRampSetParam

Short Name	efxRbMemLocRampSetParam
Long Name	Efx_RampSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.169 Efx/EfxRbMemoryLocations/efxRbMemLocSins16s16

Short Name	efxRbMemLocSins16s16
Long Name	Efx_Sin_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.170 Efx/EfxRbMemoryLocations/efxRbMemLocSins32s32

Short Name	efxRbMemLocSins32s32
Long Name	Efx_Sin_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.171 Efx/EfxRbMemoryLocations/efxRbMemLocSins8s8

Short Name	efxRbMemLocSins8s8
Long Name	Efx_Sin_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.172 Efx/EfxRbMemoryLocations/efxRbMemLocSlewRates16

Short Name	efxRbMemLocSlewRates16

Long Name	Efx_SlewRate_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.173 Efx/EfxRbMemoryLocations/efxRbMemLocSlewRates32

Short Name	efxRbMemLocSlewRates32
Long Name	Efx_SlewRate_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.174 Efx/EfxRbMemoryLocations/efxRbMemLocSlewRateu16

Short Name	efxRbMemLocSlewRateu16
Long Name	Efx_SlewRate_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.175 Efx/EfxRbMemoryLocations/efxRbMemLocSlewRateu32

Short Name	efxRbMemLocSlewRateu32
Long Name	Efx_SlewRate_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.176 Efx/EfxRbMemoryLocations/efxRbMemLocSortAscends16

Short Name	efxRbMemLocSortAscends16
Long Name	Efx_SortAscend_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.177 Efx/EfxRbMemoryLocations/efxRbMemLocSortAscends32

Short Name	efxRbMemLocSortAscends32
Long Name	Efx_SortAscend_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.178 Efx/EfxRbMemoryLocations/efxRbMemLocSortAscends8

Short Name	efxRbMemLocSortAscends8
Long Name	Efx_SortAscend_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.179 Efx/EfxRbMemoryLocations/efxRbMemLocSortAscendu16

Short Name	efxRbMemLocSortAscendu16
Long Name	Efx_SortAscend_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.180 Efx/EfxRbMemoryLocations/efxRbMemLocSortAscendu32

Short Name	efxRbMemLocSortAscendu32
Long Name	Efx_SortAscend_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.181 Efx/EfxRbMemoryLocations/efxRbMemLocSortAscendu8

Short Name	efxRbMemLocSortAscendu8
Long Name	Efx_SortAscend_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.182 Efx/EfxRbMemoryLocations/efxRbMemLocSortDescends16

Short Name	efxRbMemLocSortDescends16
Long Name	Efx_SortDescend_s16

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.183 Efx/EfxRbMemoryLocations/efxRbMemLocSortDescends32

Short Name	efxRbMemLocSortDescends32
Long Name	Efx_SortDescend_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.184 Efx/EfxRbMemoryLocations/efxRbMemLocSortDescends8

Short Name	efxRbMemLocSortDescends8
Long Name	Efx_SortDescend_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.185 Efx/EfxRbMemoryLocations/efxRbMemLocSortDescendu16

Short Name	efxRbMemLocSortDescendu16
Long Name	Efx_SortDescend_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.186 Efx/EfxRbMemoryLocations/efxRbMemLocSortDescendu32

Short Name	efxRbMemLocSortDescendu32
Long Name	Efx_SortDescend_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.187 Efx/EfxRbMemoryLocations/efxRbMemLocSortDescendu8

Short Name	efxRbMemLocSortDescendu8
Long Name	Efx_SortDescend_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.188 Efx/EfxRbMemoryLocations/efxRbMemLocSqrtu16u16

Short Name	efxRbMemLocSqrtu16u16
Long Name	Efx_Sqrt_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.189 Efx/EfxRbMemoryLocations/efxRbMemLocSqrtu32u32

Short Name	efxRbMemLocSqrtu32u32
Long Name	Efx_Sqrt_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.190 Efx/EfxRbMemoryLocations/efxRbMemLocSqrtu8u8

Short Name	efxRbMemLocSqrtu8u8
Long Name	Efx_Sqrt_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.191 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters16s8

Short Name	efxRbMemLocTypeLimiters16s8
Long Name	Efx_TypeLimiter_s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.192 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters16u16

Short Name	efxRbMemLocTypeLimiters16u16

Long Name	Efx_TypeLimiter_s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.193 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters16u8

Short Name	efxRbMemLocTypeLimiters16u8
Long Name	Efx_TypeLimiter_s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.194 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters32s16

Short Name	efxRbMemLocTypeLimiters32s16
Long Name	Efx_TypeLimiter_s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.195 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters32s8

Short Name	efxRbMemLocTypeLimiters32s8
Long Name	Efx_TypeLimiter_s32_s8

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.196 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters32u16

Short Name	efxRbMemLocTypeLimiters32u16
Long Name	Efx_TypeLimiter_s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.197 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters32u32

Short Name	efxRbMemLocTypeLimiters32u32
Long Name	Efx_TypeLimiter_s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.198 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters32u8

Short Name	efxRbMemLocTypeLimiters32u8
Long Name	Efx_TypeLimiter_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.199 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiters8u8

Short Name	efxRbMemLocTypeLimiters8u8
Long Name	Efx_TypeLimiter_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.200 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru16s16

Short Name	efxRbMemLocTypeLimiteru16s16
Long Name	Efx_TypeLimiter_u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.201 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru16s8

Short Name	efxRbMemLocTypeLimiteru16s8
Long Name	Efx_TypeLimiter_u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.202 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru16u8

Short Name	efxRbMemLocTypeLimiteru16u8
Long Name	Efx_TypeLimiter_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.203 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru32s16

Short Name	efxRbMemLocTypeLimiteru32s16
Long Name	Efx_TypeLimiter_u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.204 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru32s32

Short Name	efxRbMemLocTypeLimiteru32s32
Long Name	Efx_TypeLimiter_u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.205 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru32s8

Short Name	efxRbMemLocTypeLimiteru32s8
Long Name	Efx_TypeLimiter_u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.206 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru32u16

Short Name	efxRbMemLocTypeLimiteru32u16
Long Name	Efx_TypeLimiter_u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.207 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru32u8

Short Name	efxRbMemLocTypeLimiteru32u8
Long Name	Efx_TypeLimiter_u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.1.208 Efx/EfxRbMemoryLocations/efxRbMemLocTypeLimiteru8s8

Short Name	efxRbMemLocTypeLimiteru8s8
Long Name	Efx_TypeLimiter_u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

5.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

5.4 Limitations

The following features are not supported for version v12.7.0.

- For the Efx_ParamRamp_Type structure, the resolution of the slope (SlopePos_u32 and SlopeNeg_u32) is undefined in AUTOSAR 4.2.2, but in AUTOSAR 4.3.0 the resolution is specified as “1/2^16.”. The current RTA-BSW implementation of the Efx module already includes this resolution.
- For the Efx_Debounce_u8_u8 function, the return type is specified as “uint8” in AUTOSAR 4.2.2, but in AUTOSAR 4.3.1 the return type is specified as “boolean”. The current RTA-BSW implementation of the Efx module already includes this return type.
- Efx_SortAscend and Efx_SortDescend have only been tested with the maximum array size of 1000.

5.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

5.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

5.7 API Definition

List of supported API

Efx_GetVersionInfo

Returns the version information of this library

Efx_LpFilterFac1_<InTypeMn><InTypeMn><InTypeMn>_<OutTypeMn>

Computes the output of a first order low-pass filter

Implementation:

- `Efx_LpFilterFac1_s16s16s16_s16`
- `Efx_LpFilterFac1_s16s16u16_s16`
- `Efx_LpFilterFac1_s32s16u16_s32`
- `Efx_LpFilterFac1_s32s32u16_s32`
- `Efx_LpFilterFac1_u16u16s16_u16`
- `Efx_LpFilterFac1_u16u16u16_u16`
- `Efx_LpFilterFac1_u32u16u16_u32`
- `Efx_LpFilterFac1_u32u32u16_u32`
- `Efx_LpFilterFac1_u32u32u32_u32`
- `Efx_LpFilterFac1_u8u8u8_u8`

Efx_LpFilter_<InTypeMn>_<OutTypeMn>

Computes the first one order discrete filter

Implementation:

- `Efx_LpFilter_s32_s32`
- `Efx_LpFilter_u32_u32`

Efx_HpFilter

Computes the output of a first order high-Pass filter

Implementation:

- `Efx_HpFilter_u8_s16`
- `Efx_HpFilter_s8_s16`
- `Efx_HpFilter_u16_s32`
- `Efx_HpFilter_s16_s32`

Efx_PCalc

Computes differential equation

Efx_PSetstate

Sets the internal state variables of a P element

Efx_POut_<OutTypeMn>

Returns P controller output value

Implementation:

- `Efx_POut_s16`
- `Efx_POut_s8`

Efx_PT1Calc

Computes PT1 controller output value using equation:

```
Yn = exp(-dT/T1) * Yn-1+ K(1 - exp(-dT/T1)) * Xn-1
```

Efx_PT1Setstate

Initialises internal state variables of a PT1 element

Efx_CalcTeQ_s32

Calculates time equivalent factor

Efx_CalcTeQApp_s32

Calculates time equivalent factor

Efx_PT1Out_<OutTypeMn>

Returns PT1 controller output value

Implementation:

- `Efx_PT1Out_s16`
- `Efx_PT1Out_s8`

Efx_DT1Typ1Calc

Computes DT1 controller output value using differential equation:

```
Yn = exp(-dT/T1) * Yn-1+ K * (1- exp(-dT/T1)) * ((Xn-1 - Xn-2) / dT)
```

Efx_DT1Typ2Calc

Computes DT1 controller output value using differential equation:

```
Yn = exp(-dT/T1) * Yn-1+ K * (1- exp(-dT/T1)) * ((Xn - Xn-1) / dT)
```

Efx_DT1Typ1Setstate

Initialises internal state variables of a DT1 element

Efx_DT1Typ2Setstate

Initialises internal state variables of a DT1 element

Efx_DT1Typ1Out_<OutTypeMn>

Returns DT1 controller output value

Implementation:

- `Efx_DT1Typ1Out_s16`
- `Efx_DT1Typ1Out_s8`

Efx_DT1Typ2Out_<OutTypeMn>

Returns DT1 controller output value

Implementation:

- `Efx_DT1Typ2Out_s16`
- `Efx_DT1Typ2Out_s8`

Efx_PDCalc

Computes proportional plus derivative controller output value using differential equation:

```
Yn = K(1+Tv/dT) * Xn - K(Tv/dT) * Xn-1
```

Efx_PDSetstate

Initialises internal state variables of a PD element

Efx_PDSetParam

Sets the parameter structure of a PD element

Efx_PDOut_<OutTypeMn>

Returns PD controller output value

Implementation:

- `Efx_PDOut_s16`
- `Efx_PDOut_s8`

Efx_ICalc

Computes I controller output value using differential equation:

```
Yn = Yn-1 + K * dT * Xn-1
```

Efx_ILimCalc

Computes DT1 controller output value using differential equation:

```
Yn = Yn-1 + K * dT * Xn-1
```

Efx_CtrlSetLimits

Update limit structure

Efx_ISetstate

Initialises internal state variables of an I element

Efx_IOut_<OutTypeMn>

Returns I controller output value

Implementation:

- `Efx_IOut_s16`
- `Efx_IOut_s8`

Efx_PITyp1Calc

Computes Proportional plus integral controller (implicit type) output value using

differential equation:

```
Yn = Yn-1+ K * Xn - K * (1 - dT/Tn) * Xn-1
```

Efx_PITyp1LimCalc

Computes Proportional plus integral controller (implicit type) output value using differential equation:

```
Yn = Yn-1+ K * Xn - K * (1 - dT/Tn) * Xn-1
```

Efx_PITyp2Calc

Computes Proportional plus integral controller (explicit type) output value using differential equation:

```
Yn = Yn-1 + K * (1 + dT/Tn) * Xn - K * Xn-1
```

Efx_PITyp2LimCalc

Computes Proportional plus integral controller (explicit type) output value using differential equation:

```
Yn = Yn-1 + K * (1 + dT/Tn) * Xn - K * Xn-1
```

Efx_PISetstate

Initialises internal state variables of a PI element

Efx_PISetParam

Sets the parameter structure of a PI element

Efx_PIOut_<OutTypeMn>

Returns PI controller output value

Implementation:

- `Efx_PIOut_s16`
- `Efx_PIOut_s8`

Efx_PIDTyp1Calc

Computes Proportional plus integral plus derivative controller (implicit type) output value using differential equation:

```
Yn = Yn-1+ K * (1 + Tv/dT) * Xn- K *(1 - dT/Tn + 2Tv/dT) * Xn-1 + K
* (Tv/dT) * Xn-2
```

Efx_PIDTyp1LimCalc

Computes Proportional plus integral plus derivative controller (implicit type) output value using differential equation:

```
Yn = Yn-1+ K * (1 + Tv/dT) * Xn- K *(1 - dT/Tn + 2Tv/dT) * Xn-1 + K
* (Tv/dT) * Xn-2
```

Efx_PIDTyp2Calc

Computes Proportional plus integral plus derivative controller (explicit type) output value using differential equation:

```
Yn = Yn-1 + K * (1 + dT/Tn+ Tv/dT) * Xn- K *(1 + 2Tv/dT) * Xn-1+ K *
(Tv/dT) * Xn-2
```

Efx_PIDTyp2LimCalc

Computes Proportional plus integral plus derivative controller (explicit type) output value using differential equation:

```
Yn = Yn-1 + K * (1 + dT/Tn+ Tv/dT) * Xn- K *(1 + 2Tv/dT) * Xn-1+ K *
(Tv/dT) * Xn-2
```

Efx_PIDSetstate

Initialises internal state variables of a PID element

Efx_PIDSetParam

Sets the parameter structure of a PID element

Efx_PIDOut_<OutTypeMn>

Returns PID controller output value

Implementation:

- `Efx_PIDOut_s16`
- `Efx_PIDOut_s8`

Efx_Sqrt

Computes the square root of a value

Implementation:

- `Efx_Sqrt_u32_u32`
- `Efx_Sqrt_u16_u16`
- `Efx_Sqrt_u8_u8`

Efx_Exp_s32_s32

Returns exponential value of an input value

Efx_Average_s32_s32

Returns average value

Efx_Array_Average_<InTypeMn>_<OutTypeMn>

Returns average value of an array

Implementation:

- `Efx_Array_Average_s16_s16`
- `Efx_Array_Average_s32_s32`

Efx_MovingAverage_<InTypeMn>_<OutTypeMn>

Returns sliding average value of n - 1 last subsequent values of an array plus one new value

Implementation:

- `Efx_MovingAverage_s16_s16`
- `Efx_MovingAverage_s32_s32`

Efx_Hypot

Computes the length of a vector

Implementation:

- `Efx_Hypot_u32u32_u32`
- `Efx_Hypot_u16u16_u16`
- `Efx_Hypot_u8u8_u8`

Efx_Sin

Computes the sine of an angle

Implementation:

- `Efx_Sin_s32_s32`
- `Efx_Sin_s16_s16`
- `Efx_Sin_s8_s8`

Efx_Cos

Computes the cosine of an angle

Implementation:

- `Efx_Cos_s32_s32`
- `Efx_Cos_s16_s16`
- `Efx_Cos_s8_s8`

Efx_ArcSin

Computes the inverse sine of a value

Implementation:

- `Efx_ArcSin_s32_s32`
- `Efx_ArcSin_s16_s16`
- `Efx_ArcSin_s8_s8`

Efx_ArcCos

Computes the inverse cosine of a value

Implementation:

- `Efx_ArcCos_s32_u32`
- `Efx_ArcCos_s16_u16`
- `Efx_ArcCos_s8_u8`

Efx_SlewRate_<InTypeMn>

Limits the increase and the decrease of the Input entry by using tunable slopes

Implementation:

- `Efx_SlewRate_s16`
- `Efx_SlewRate_s32`
- `Efx_SlewRate_u16`
- `Efx_SlewRate_u32`

Efx_RampCalc

The ramp output value increases or decreases a value with `slope * dT_s32` depending if `(State_cpst->State_s32 < X_s32)` or `(State_cpst->State_s32 > X_s32)`

Efx_RampInitState

Initializes the state, direction and switch parameters for the ramp

Efx_RampSetParam

Sets the slope parameter for the ramp provided by the structure Efx_ParamRamp_Type

Efx_RampOut_s32

Returns the internal state of the ramp element

Efx_RampCalcJump

Works in addition to main ramp function Efx_RampCalc to provide a faster adaption to target value

Efx_RampCalcSwitch

Switches between two target values for a ramp service based on a Switch parameter

Efx_RampGetSwitchPos

Gets the current switch position of ramp switch function

Efx_RampCheckActivity

Checks the status of the ramp and Returns TRUE if the ramp is active, otherwise it Returns FALSE

Efx_Hysteresis_<InTypeMn>_<OutTypeMn>

Estimates the output of the hysteresis

Implementation:

- `Efx_Hysteresis_u8_u8`
- `Efx_Hysteresis_u16_u16`
- `Efx_Hysteresis_u32_u32`
- `Efx_Hysteresis_s8_s8`
- `Efx_Hysteresis_s16_s16`
- `Efx_Hysteresis_s32_s32`

Efx_HystCenterHalfDelta_<InTypeMn>_<OutTypeMn>

Hysteresis with center and left and right side halfDelta switching point

Implementation:

- `Efx_HystCenterHalfDelta_s16_u8`
- `Efx_HystCenterHalfDelta_s32_u8`
- `Efx_HystCenterHalfDelta_s8_u8`
- `Efx_HystCenterHalfDelta_u16_u8`
- `Efx_HystCenterHalfDelta_u32_u8`
- `Efx_HystCenterHalfDelta_u8_u8`

Efx_HystLeftRight_<InTypeMn>_<OutTypeMn>

Hysteresis with left and right switching point

Implementation:

- `Efx_HystLeftRight_s16_u8`
- `Efx_HystLeftRight_s32_u8`
- `Efx_HystLeftRight_s8_u8`
- `Efx_HystLeftRight_u16_u8`
- `Efx_HystLeftRight_u32_u8`
- `Efx_HystLeftRight_u8_u8`

Efx_HystDeltaRight_<InTypeMn>_<OutTypeMn>

Hysteresis with right switching point and delta to left switching point

Implementation:

- `Efx_HystDeltaRight_s16_u8`
- `Efx_HystDeltaRight_s32_u8`
- `Efx_HystDeltaRight_s8_u8`
- `Efx_HystDeltaRight_u16_u8`
- `Efx_HystDeltaRight_u32_u8`
- `Efx_HystDeltaRight_u8_u8`

Efx_HystLeftDelta_<InTypeMn>_<OutTypeMn>

Hysteresis with left switching point and delta to right switching point

Implementation:

- `Efx_HystLeftDelta_s16_u8`
- `Efx_HystLeftDelta_s32_u8`
- `Efx_HystLeftDelta_s8_u8`
- `Efx_HystLeftDelta_u16_u8`
- `Efx_HystLeftDelta_u32_u8`

- `Efx_HystLeftDelta_u8_u8`

Efx_DeadTime_s16_s16

Returns input value with specified delay time. Data buffer stores input samples using ring buffer algorithm

Efx_Debounce_u8_u8

Debounces a digital input signal and Returns the state of the signal as a boolean value

Efx_DebounceInit

Stops the debouncing timer

Efx_DebounceSetParam

Sets timing parameters, time for high to low transition and time for low to high for debouncing

Efx_SortAscend_<InTypeMn>

Sorting algorithm modifies the given input array and rearranges data in ascending order

Implementation:

- `Efx_SortAscend_s16`
- `Efx_SortAscend_s32`
- `Efx_SortAscend_s8`
- `Efx_SortAscend_u16`
- `Efx_SortAscend_u32`
- `Efx_SortAscend_u8`

Efx_SortDescend_<InTypeMn>

Sorting algorithm modifies the given input array and rearranges data in descending order

Implementation:

- `Efx_SortDescend_s16`
- `Efx_SortDescend_s32`
- `Efx_SortDescend_s8`
- `Efx_SortDescend_u16`
- `Efx_SortDescend_u32`
- `Efx_SortDescend_u8`

Efx_MedianSort_<InTypeMn>_<OutTypeMn>

Sorts an array and returns its median value

Implementation:

- `Efx_MedianSort_s16_s16`

- `Efx_MedianSort_s32_s32`
- `Efx_MedianSort_s8_s8`
- `Efx_MedianSort_u16_u16`
- `Efx_MedianSort_u32_u32`
- `Efx_MedianSort_u8_u8`

Efx_EdgeBipol_u8_u8

Detects whether a signal has changed since the last call and Returns TRUE, otherwise returns FALSE

Efx_EdgeFalling_u8_u8

Returns TRUE when the signal has a falling edge, i.e. the signal was TRUE at the last call and FALSE at the actual call of this routine

Efx_EdgeRising_u8_u8

Returns TRUE when the signal has a rising edge, i.e. the signal was FALSE at the last call and TRUE at the actual call of this routine

Efx_IntervalClosed_<InTypeMn>_<OutTypeMn>

Compares a value 'InpVal' with lower and upper limit 'MinVal' and 'MaxVal' respectively

Implementation:

- `Efx_IntervalClosed_s32_u8`
- `Efx_IntervalClosed_u32_u8`

Efx_IntervalOpen_<InTypeMn>_<OutTypeMn>

Compares a value 'InpVal' with lower and upper limit 'MinVal' and 'MaxVal' respectively

Implementation:

- `Efx_IntervalOpen_s32_u8`
- `Efx_IntervalOpen_u32_u8`

Efx_IntervalLeftOpen_<InTypeMn>_<OutTypeMn>

Compares a value 'InpVal' with lower and upper limit 'MinVal' and 'MaxVal' respectively

Implementation:

- `Efx_IntervalLeftOpen_s32_u8`
- `Efx_IntervalLeftOpen_u32_u8`

Efx_IntervalRightOpen_<InTypeMn>_<OutTypeMn>

Compares a value 'InpVal' with lower and upper limit 'MinVal' and 'MaxVal' respectively

Implementation:

- `Efx_IntervalRightOpen_s32_u8`
- `Efx_IntervalRightOpen_u32_u8`

Efx_CounterSet_<InTypeMn>

The CounterSet routines initialise counter value with `initial value * CounterVal = Val`

Implementation:

- `Efx_CounterSet_u16`
- `Efx_CounterSet_u32`
- `Efx_CounterSet_u8`

Efx_Counter_<InTypeMn>_<OutTypeMn>

The counter routines increments the value of the parameter CounterVal by 1

Implementation:

- `Efx_Counter_u16_u16`
- `Efx_Counter_u32_u32`
- `Efx_Counter_u8_u8`

Efx_RSFlipFlop

RS flip flop can be set and reset via input Switches R_Val and S_Val

Efx_TypeLimiter_<InTypeMn>_<OutTypeMn>

Limiter routine

Implementation:

- `Efx_TypeLimiter_s16_s8`
- `Efx_TypeLimiter_s16_u16`
- `Efx_TypeLimiter_s16_u8`
- `Efx_TypeLimiter_s32_s16`
- `Efx_TypeLimiter_s32_s8`
- `Efx_TypeLimiter_s32_u16`
- `Efx_TypeLimiter_s32_u32`
- `Efx_TypeLimiter_s32_u8`
- `Efx_TypeLimiter_s8_u8`
- `Efx_TypeLimiter_u16_s16`
- `Efx_TypeLimiter_u16_s8`
- `Efx_TypeLimiter_u16_u8`
- `Efx_TypeLimiter_u32_s16`
- `Efx_TypeLimiter_u32_s32`

- `Efx_TypeLimiter_u32_s8`
- `Efx_TypeLimiter_u32_u16`
- `Efx_TypeLimiter_u32_u8`
- `Efx_TypeLimiter_u8_s8`

Efx_Cast_<InTypeMn>_<OutTypeMn>

Converts value of entry type in the value in the output type

Implementation:

- `Efx_Cast_s64_s32`
- `Efx_Cast_s64_u32`
- `Efx_Cast_u32_s64`

Efx_Add_<InTypeMn><InTypeMn>_<OutTypeMn>

Makes an addition between the two arguments

Implementation:

- `Efx_Add_s64s32_s64`
- `Efx_Add_s64s64_s64`
- `Efx_Add_s64u32_s64`

Efx_Mul_<InTypeMn><InTypeMn>_<OutTypeMn>

Makes a multiplication between the two arguments

Implementation:

- `Efx_Mul_s64s32_s64`
- `Efx_Mul_s64s64_s64`
- `Efx_Mul_s64u32_s64`

Efx_Div_<InTypeMn><InTypeMn>_<OutTypeMn>

Makes a division between the two arguments

Implementation:

- `Efx_Div_s64s32_s32`
- `Efx_Div_s64s32_s64`
- `Efx_Div_s64s32_u32`
- `Efx_Div_s64u32_s32`
- `Efx_Div_s64u32_s64`
- `Efx_Div_s64u32_u32`

Efx_Gt_<InTypeMn><InTypeMn>_<OutTypeMn>

Makes a comparison between the two arguments

Implementation:

- `Efx_Gt_s64s32_u8`
- `Efx_Gt_s64u32_u8`

For Further information please refer to the AUTOSAR specification of Extended Fixed-Point routines AUTOSAR_SWS_EFXLibrary.pdf

5.8 Configuration Advice

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

5.8.1 Additional Configuration Parameters

The following extension parameters should be configured as described below when the Efx module is used within a project.

5.8.1.1 EFX_AUTOSAR_VERSION

EFX_AUTOSAR_VERSION is a non-mandatory configurable parameter which allows for the AUTOSAR version to be selected. The selection value can be either EFX_AR45 or EFX_AR42, with the default configuration set to EFX_AR45.

Based on that configurable parameter value selection below service functionality varies.

- Efx_Arccos_s16_u16
- Efx_Arccos_s32_u32
- Efx_Arccos_s8_u8
- Efx_Arcsin_s16_s16
- Efx_Arcsin_s32_s32
- Efx_Arcsin_s8_s8
- Efx_Cos_s8_s8
- Efx_Sin_s8_s8

Please refer to the respective specification of Efx module for further information.

The following three extension parameters must be configured in Efx_EcucValues.arxml when the Efx module is used:

5.8.1.2 Efx_VersionInfoAPI

The Efx_GetVersionInfo function can be enabled or disabled based on the config-

urationof the Efx_VersionInfoAPI parameter.

On	The Efx library shall provide the function Efx_GetVersionInfo which provides the version information of the Efx library.
Off	The Efx library shall not provide the function Efx_GetVersionInfo.

5.8.1.3 EfxRbMemoryLocations

This parameter provides the option to configure the Memory Location of a specific service.

NORMAL	Configured in Normal flash.
SLOW	Configured in Slow flash.
FAST	Configured in Fast flash.
INLINE	The function is made inline.

5.8.1.4 EfxRbAssemblyOptimization

TRUE	The assembly optimization is enabled.
FALSE	The assembly optimization is disabled.

NOTE

`EfxRbAssemblyOptimization` is only specific to PS-EC and is not configurable by other projects. Its default value is FALSE.

5.9 Integration Advice

The include file “Efx.h” provides all public function prototypes and types defined by the Efx library specification. You need to include the “Efx.h” file wherever required by application software.

5.9.1 Init Functions

The Efx library does not require an initialization phase. A library function may be called at the very first step of ECU initialization (e.g. even by the OS or EcuM), and so the library must be ready to accept this call.

5.9.2 DeInit Functions

The Efx library does not require a shutdown operation phase.

5.9.3 Scheduled Functions

Efx has no periodic functions.

5.9.4 Mfx Dependency

A project that utilizes Efx must also include the Mfx module.

5.9.5 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Efx module does not use any exclusive OS resources.

5.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

6 Ifl Library

Module name	Ifl
Package	COMMON
AUTOSAR Module ID	209
AUTOSAR Version	22-11

6.1 Introduction

The Ifl Library provides re-entrant routines that can be used for Floating Point Interpolation.

Module Configuration

This module is not currently supported by the RTA-BSW Configuration Generator (ConfGen) and must be manually configured.

6.2 Supported Features

- APIs to provide functions for floating-point interpolation.
- All functions are re-entrant and can handle several simultaneous requests from the application.

For further information please refer to the AUTOSAR specification of Floating Point Interpolation Routines (AUTOSAR_SWS_IFLLibrary.pdf).

6.3 Extensions

6.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

6.3.1.1 Ifl

Short Name	Ifl
Long Name	Floating Point Interpolation Library
Description	Floating Point Interpolation Library
Multiplicity	0..1
Default Value	-
Type	ECUC-MODULE-DEF

6.3.1.2 Ifl/IflGeneral

Short Name	IflGeneral
Long Name	General settings for Ifl

Description	General settings for Ifl with selections for used controller and activation of GetVersionInfo interface
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

6.3.1.3 Ifl/IflGeneral/IflRbAssemblyOptimization

Short Name	IflRbAssemblyOptimization
Long Name	Select whether to enable or disable assembly optimization
Description	If IflRbAssemblyOptimization is chosen as “True”, the assembly optimization is enabled. If IflRbAssembly Optimization is chosen as “False”, the assembly optimization is disabled. Note: This new configuration parameter, “IflRbAssemblyOptimization” is only specific to PS-EC and is not configurable by other projects.
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

6.3.1.4 Ifl/IflGeneral/IflRbMemCopy

Short Name	IflRbMemCopy
Long Name	Select whether to use 64-bit memory copy function from rba_BswSrv or Ifl
Description	If IflRbMemCopy is chosen as “BswSrv_MemCopy”, then the memory copy function from rba_BswSrv.h will be used which will support for compilers other than Hightec.If IflRbbswsrv is chosen as “Ifl_MemCopy”, then the memory copy function from Ifl will be used which will support Hightec compiler only
Multiplicity	0..1
Default Value	Ifl_MemCopy
Enumeration Literals	Ifl_MemCopy, BswSrv_MemCopy
Type	ECUC-ENUMERATION-PARAM-DEF

6.3.1.5 Ifl/IflGeneral/Ifl_ASAM_VersionUsed

Short Name	Ifl_ASAM_VersionUsed

Long Name	Configuration parameter for selection of ASAM version used.
Description	If Ifl_ASAM_VersionUsed is set to "IFL_ASAM_VERSION_1_6", Address Recalculation function call for Interpolation Maps/Curves services shall support downscaling/resizing for ASAM 1.6 in the Ifl library. If Ifl_ASAM_VersionUsed is set to "IFL_ASAM_VERSION_1_7", Normal function call for Interpolation Maps/Curves services shall support for ASAM 1.7 in the Ifl library
Multiplicity	1..1
Default Value	IFL_ASAM_VERSION_1_7
Enumeration Literals	IFL_ASAM_VERSION_1_6, IFL_ASAM_VERSION_1_7
Type	ECUC-ENUMERATION-PARAM-DEF

6.3.1.6 Ifl/IflGeneral/Ifl_VersionInfoAPI

Short Name	Ifl_VersionInfoAPI
Long Name	Configuration parameter for activation of Ifl_GetVersionInfo function.
Description	If IflVersionInfoAPI is set to "ON", the function IflGetVersionInfo shall return the version information of the Ifl library. If IflVersionInfoAPI is set to "OFF", the Ifl library shall not provide the function Ifl_GetVersionInfo
Multiplicity	1..1
Default Value	-
Enumeration Literals	ON, OFF
Type	ECUC-ENUMERATION-PARAM-DEF

6.3.1.7 Ifl/IflRbMemoryLocations

Short Name	IflRbMemoryLocations
Long Name	Memory locations
Description	Choose memory location settings for each single service
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

6.3.1.8 Ifl/IflRbMemoryLocations/iflRbMemLocDPSearchf32

Short Name	iflRbMemLocDPSearchf32
Long Name	Ifl_DPSearch_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

6.3.1.9 Ifl/IflRbMemoryLocations/iflRbMemLocIntIpoCurf32f32

Short Name	iflRbMemLocIntIpoCurf32f32
Long Name	Ifl_IntIpoCur_f32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

6.3.1.10 Ifl/IflRbMemoryLocations/iflRbMemLocIntIpoMapf32f32f32

Short Name	iflRbMemLocIntIpoMapf32f32f32
Long Name	Ifl_IntIpoMap_f32f32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

6.3.1.11 Ifl/IflRbMemoryLocations/iflRbMemLocInterpolatef32

Short Name	iflRbMemLocInterpolatef32
Long Name	Ifl_Interpolate_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

6.3.1.12 Ifl/IflRbMemoryLocations/iflRbMemLocIpoCurf32

Short Name	iflRbMemLocIpoCurf32
Long Name	Ifl_IpoCur_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

6.3.1.13 Ifl/IflRbMemoryLocations/iflRbMemLocIpoMapf32

Short Name	iflRbMemLocIpoMapf32
Long Name	Ifl_IpoMap_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

6.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

6.4 Limitations

The following limitations exist for version v12.7.0:

6.4.1 General Limitations

- The array size (N value) should not exceed 127 for X_array and Val_array for Interpolation services.
- If the X_array values are near to infinity, there is a possibility that the intermediate calculation for index made in Ifl_DPSearch_f32 could give incorrect results, although this scenario is not a common use case.

- Due to floating point arithmetic behavior based on step size, in some special cases, there is a possibility of the ratio value being 1 (i.e. instead of less than 1).

6.4.2 Ifl_IpoMap atomicity

The 64-bit values referenced by the dpResultX and dpResultY parameters are copied to temporary storage before use. These copies are atomic, assuming appropriate compiler and hardware support. Use the IflRbMemCopy parameter to specify the method for copying the values atomically.

However, because dpResultX and dpResultY are copied separately, there is no guarantee of atomicity between the two copies. The results may be incorrect if either value is modified between copies.

6.5 Exclusions

he following features from AR v22-11 are not supported in version v12.7.0.

API functions not currently implemented:

- `Ifl_IpoCub_f32`
- `Ifl_IpoCur_<InTypeMn>_f32`
- `Ifl_IpoMap_<InTypeMn>_f32`
- `Ifl_IpoCub_<InTypeMn>_f32`

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

6.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

6.7 API Definition

Table 6.15.IFL Supported API functions

`Ifl_GetVersionInfo`	Returns the version information of this library
`Ifl_DPSearch_f32`	Searches the position of input Xin within the given distribution array X_array, and returns index and ratio necessary for interpolation
`Ifl_IpoCur_f32`	Based on searched index and ratio information, calculates and returns interpolation for curve
`Ifl_IpoMap_f32`	Based on searched indices and ratios information using the Ifl_DPSearch_f32 routine, calculates and returns the interpolation result for map

`Ifl_Interpolate_f32`	Returns the result of the linear interpolation (Result)
`Ifl_IntIpoCur_f32_f32`	Calculates interpolation of a curve at position Xin
`Ifl_IntIpoMap_f32f32_f32`	Calculates Interpolation of a map at position X and Y

For Further information please refer to the AUTOSAR specification of Floating Point Interpolation routines AUTOSAR_SWS_IFLLibrary.pdf

6.8 Configuration Advice

NOTE

Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

6.8.1 Additional Configuration Parameters

The following extension parameters should be configured as described below when the Ifl module is used within a project.

6.8.2 Additional Configuration Parameters

The following four extension parameters must be configured in Ifl_EcucValues.arxml when the Ifl module is used:

6.8.2.1 Ifl_VersionInfoAPI

The Ifl_GetVersionInfo function can be enabled or disabled based on the configuration of the Ifl_VersionInfoAPI parameter.

On	The Ifl library shall provide the function Ifl_GetVersionInfo which provides the version information of the Ifl library.
Off	The Ifl library shall not provide the function Ifl_GetVersionInfo.

6.8.2.2 IflRbMemoryLocations

This parameter provides the option to configure the Memory Location of a specific service.

NORMAL	Configured in Normal flash.
SLOW	Configured in Slow flash.
FAST	Configured in Fast flash.
INLINE	The function is made inline.

6.8.2.3 IflRbMemCopy

This parameter provides the following options.

Default Value: Ifl_MemCopy

BswSrv_MemCopy	A 64-bit memory copy function from rba_BswSrv to achieve atomic read/write operation during accessing of both Index and Ratio elements from Ifl_DPResultF32_Type
Ifl_MemCopy	Internal memory copy function in Ifl to perform the read/write operation during accessing of both Index and Ratio elements from Ifl_DPResultF32_Type. In this case, the atomicity of read/write access is not guaranteed.

Additional Details:

- If IflRbMemCopy is chosen as BswSrv_MemCopy, then the memory copy function from rba_BswSrv.h will be used, this will provide atomic read/write operation support during accessing of both Index and Ratio elements from Ifl_DPResultF32_Type for different compilers and controllers.
- If IflRbMemCopy is chosen as Ifl_MemCopy, then the memory copy function from Ifl will be used. Therefore the 64-bit atomic read/write access is not guaranteed while accessing of both Index and Ratio elements from Ifl_DPResultF32_Type.

Note: If IflRbMemCopy is configured as BswSrv_MemCopy, the 64-bit atomic read/write feature needs to be ensured with the correct configurations as per the documentation from rba_BswSrv regarding the details of supported compilers and controllers.

6.8.2.4 IflRbAssemblyOptimization

TRUE	The assembly optimization is enabled.
FALSE	The assembly optimization is disabled.

NOTE

`IflRbAssemblyOptimization` is only specific to PS-EC and is not configurable by other projects. Its default value is FALSE.

6.9 Integration Advice

The include file “Ifl.h” provides all public function prototypes and types defined by the Ifl library specification. You need to include the “Ifl.h” file wherever required by application software.

6.9.1 Init Functions

The Ifl library does not require an initialization phase. A library function may be

called at the very first step of ECU initialization (e.g. even by the OS or EcuM), and so the library must be ready to accept this call.

6.9.2 DeInit Functions

No DeInit is required.

6.9.3 Scheduled Functions

Ifl has no periodic functions.

6.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Ifl module does not use any exclusive OS resources.

6.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

7 Ifx Library

Module name	Ifx Library
Package	COMMON
AUTOSAR Module ID	213
AUTOSAR Version	22-11

7.1 Introduction

The Ifx Library provides re-entrant routines that can be used for Fixed Point Interpolation.

Module Configuration

This module is not currently supported by the RTA-BSW Configuration Generator (ConfGen) and must be manually configured.

7.2 Supported Features

- APIs to provide functions for fixed-point interpolation.
- All functions are re-entrant and can handle several simultaneous requests from the application.

For further information please refer to the AUTOSAR specification of Fixed Point Interpolation Routines (AUTOSAR_SWS_IFXLibrary.pdf).

7.3 Extensions

7.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

7.3.1.1 Ifx

Short Name	Ifx
Long Name	Fixed Point Interpolation Library
Description	Fixed Point Interpolation Library
Multiplicity	0..1
Default Value	-
Type	ECUC-MODULE-DEF

7.3.1.2 Ifx/IfxGeneral

Short Name	IfxGeneral
Long Name	General settings for Ifx

Description	General settings for Ifx with selections for used controller and activation of GetVersionInfo interface
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

7.3.1.3 Ifx/IfxGeneral/IfxRbAssemblyOptimization

Short Name	IfxRbAssemblyOptimization
Long Name	Select whether to enable or disable assembly optimization
Description	If IfxRbAssemblyOptimization is chosen as “True”, the assembly optimization is enabled. If IfxRbAssembly Optimization is chosen as “False”, the assembly optimization is disabled. Note: This new configuration parameter, “IfxRbAssemblyOptimization” is only specific to PS-EC and is not configurable by other projects.
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

7.3.1.4 Ifx/IfxGeneral/Ifx_ASAM_VersionUsed

Short Name	Ifx_ASAM_VersionUsed
Long Name	Configuration parameter for selection of ASAM version used.
Description	If Ifx_ASAM_VersionUsed is set to “IFX_ASAM_VERSION_1_6”, Address Recalculation function call for Interpolation Maps/Curves services shall support downscaling/resizing for ASAM 1.6 in the Ifx library. If Ifx_ASAM_VersionUsed is set to “IFX_ASAM_VERSION_1_7”, Normal function call for Interpolation Maps/Curves services shall support for ASAM 1.7 in the Ifx library
Multiplicity	1..1
Default Value	IFX_ASAM_VERSION_1_7
Enumeration Literals	IFX_ASAM_VERSION_1_6, IFX_ASAM_VERSION_1_7
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.5 Ifx/IfxGeneral/Ifx_VersionInfoAPI

Short Name	Ifx_VersionInfoAPI

Long Name	Configuration parameter for activation of Ifx_GetVersionInfo function.
Description	If IfxVersionInfoAPI is set to “ON”, the function IfxGetVersionInfo shall return the version information of the Ifx library. If IfxVersionInfoAPI is set to “OFF”, the Ifx library shall not provide the function Ifx_GetVersionInfo
Multiplicity	1..1
Default Value	-
Enumeration Literals	ON, OFF
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.6 Ifx/IfxRbMemoryLocations

Short Name	IfxRbMemoryLocations
Long Name	Memory locations
Description	Choose memory location settings for each single service
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

7.3.1.7 Ifx/IfxRbMemoryLocations/ifxRbMemLocDPSearchs16

Short Name	ifxRbMemLocDPSearchs16
Long Name	Ifx_DPSearch_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.8 Ifx/IfxRbMemoryLocations/ifxRbMemLocDPSearchs32

Short Name	ifxRbMemLocDPSearchs32
Long Name	Ifx_DPSearch_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.9 Ifx/IfxRbMemoryLocations/ifxRbMemLocDPSearchs8

Short Name	ifxRbMemLocDPSearchs8
Long Name	Ifx_DPSearch_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.10 Ifx/IfxRbMemoryLocations/ifxRbMemLocDPSearchu16

Short Name	ifxRbMemLocDPSearchu16
Long Name	Ifx_DPSearch_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.11 Ifx/IfxRbMemoryLocations/ifxRbMemLocDPSearchu32

Short Name	ifxRbMemLocDPSearchu32
Long Name	Ifx_DPSearch_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.12 Ifx/IfxRbMemoryLocations/ifxRbMemLocDPSearchu8

Short Name	ifxRbMemLocDPSearchu8
Long Name	Ifx_DPSearch_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.13 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs16s16

Short Name	ifxRbMemLocIntIpoCurs16s16
Long Name	Ifx_IntIpoCur_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.14 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs16s8

Short Name	ifxRbMemLocIntIpoCurs16s8
Long Name	Ifx_IntIpoCur_s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.15 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs16u16

Short Name	ifxRbMemLocIntIpoCurs16u16
Long Name	Ifx_IntIpoCur_s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.16 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs16u8

Short Name	ifxRbMemLocIntIpoCurs16u8
Long Name	Ifx_IntIpoCur_s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.17 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs32s32

Short Name	ifxRbMemLocIntIpoCurs32s32
Long Name	Ifx_IntIpoCur_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.18 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs8s16

Short Name	ifxRbMemLocIntIpoCurs8s16
Long Name	Ifx_IntIpoCur_s8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.19 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs8s8

Short Name	ifxRbMemLocIntIpoCurs8s8
Long Name	Ifx_IntIpoCur_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.20 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs8u16

Short Name	ifxRbMemLocIntIpoCurs8u16
Long Name	Ifx_IntIpoCur_s8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.21 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCurs8u8

Short Name	ifxRbMemLocIntIpoCurs8u8
Long Name	Ifx_IntIpoCur_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.22 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru16s16

Short Name	ifxRbMemLocIntIpoCuru16s16
Long Name	Ifx_IntIpoCur_u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.23 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru16s8

Short Name	ifxRbMemLocIntIpoCuru16s8
Long Name	Ifx_IntIpoCur_u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.24 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru16u16

Short Name	ifxRbMemLocIntIpoCuru16u16
Long Name	Ifx_IntIpoCur_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.25 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru16u8

Short Name	ifxRbMemLocIntIpoCuru16u8
Long Name	Ifx_IntIpoCur_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.26 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru32u32

Short Name	ifxRbMemLocIntIpoCuru32u32
Long Name	Ifx_IntIpoCur_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.27 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru8s16

Short Name	ifxRbMemLocIntIpoCuru8s16
Long Name	Ifx_IntIpoCur_u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.28 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru8s8

Short Name	ifxRbMemLocIntIpoCuru8s8
Long Name	Ifx_IntIpoCur_u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.29 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru8u16

Short Name	ifxRbMemLocIntIpoCuru8u16
Long Name	Ifx_IntIpoCur_u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.30 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoCuru8u8

Short Name	ifxRbMemLocIntIpoCuru8u8
Long Name	Ifx_IntIpoCur_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.31 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixCurs16s16

Short Name	ifxRbMemLocIntIpoFixCurs16s16
Long Name	Ifx_IntIpoFixCur_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.32 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixCurs32s32

Short Name	ifxRbMemLocIntIpoFixCurs32s32
Long Name	Ifx_IntIpoFixCur_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.33 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixCurs8s8

Short Name	ifxRbMemLocIntIpoFixCurs8s8

Long Name	Ifx_IntIpoFixCur_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.34 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixCuru16u16

Short Name	ifxRbMemLocIntIpoFixCuru16u16
Long Name	Ifx_IntIpoFixCur_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.35 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixCuru32u32

Short Name	ifxRbMemLocIntIpoFixCuru32u32
Long Name	Ifx_IntIpoFixCur_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.36 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixCuru8u8

Short Name	ifxRbMemLocIntIpoFixCuru8u8
Long Name	Ifx_IntIpoFixCur_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.37 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixlCurs16s16

Short Name	ifxRbMemLocIntIpoFixlCurs16s16
Long Name	Ifx_IntIpoFixlCur_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.38 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixlCurs32s32

Short Name	ifxRbMemLocIntIpoFixlCurs32s32
Long Name	Ifx_IntIpoFixlCur_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.39 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixlCurs8s8

Short Name	ifxRbMemLocIntIpoFixlCurs8s8
Long Name	Ifx_IntIpoFixlCur_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.40 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixlCuru16u16

Short Name	ifxRbMemLocIntIpoFixlCuru16u16
Long Name	Ifx_IntIpoFixlCur_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.41 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixlCuru32u32

Short Name	ifxRbMemLocIntIpoFixlCuru32u32
Long Name	Ifx_IntIpoFixlCur_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.42 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixlCuru8u8

Short Name	ifxRbMemLocIntIpoFixlCuru8u8
Long Name	Ifx_IntIpoFixlCur_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.43 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixlMaps16s16s16

Short Name	ifxRbMemLocIntIpoFixlMaps16s16s16

Long Name	Ifx_IntIpoFixIMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.44 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixIMaps32s32s32

Short Name	ifxRbMemLocIntIpoFixIMaps32s32s32
Long Name	Ifx_IntIpoFixIMap_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.45 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixIMaps8s8s8

Short Name	ifxRbMemLocIntIpoFixIMaps8s8s8
Long Name	Ifx_IntIpoFixIMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.46 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixIMapu16u16u16

Short Name	ifxRbMemLocIntIpoFixIMapu16u16u16
Long Name	Ifx_IntIpoFixIMap_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.47 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixIMapu32u32u32

Short Name	ifxRbMemLocIntIpoFixIMapu32u32u32
Long Name	Ifx_IntIpoFixIMap_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.48 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixIMapu8u8u8

Short Name	ifxRbMemLocIntIpoFixIMapu8u8u8
Long Name	Ifx_IntIpoFixIMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.49 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixMaps16s16s16

Short Name	ifxRbMemLocIntIpoFixMaps16s16s16
Long Name	Ifx_IntIpoFixMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.50 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixMaps32s32s32

Short Name	ifxRbMemLocIntIpoFixMaps32s32s32
Long Name	Ifx_IntIpoFixMap_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.51 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixMaps8s8s8

Short Name	ifxRbMemLocIntIpoFixMaps8s8s8
Long Name	Ifx_IntIpoFixMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.52 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixMapu16u16u16

Short Name	ifxRbMemLocIntIpoFixMapu16u16u16
Long Name	Ifx_IntIpoFixMap_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.53 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixMapu32u32u32

Short Name	ifxRbMemLocIntIpoFixMapu32u32u32
Long Name	Ifx_IntIpoFixMap_u32u32_u32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.54 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoFixMapu8u8u8

Short Name	ifxRbMemLocIntIpoFixMapu8u8u8
Long Name	Ifx_IntIpoFixMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.55 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16s16s16

Short Name	ifxRbMemLocIntIpoMaps16s16s16
Long Name	Ifx_IntIpoMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.56 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16s16s8

Short Name	ifxRbMemLocIntIpoMaps16s16s8
Long Name	Ifx_IntIpoMap_s16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.57 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16s16u16

Short Name	ifxRbMemLocIntIpoMaps16s16u16
Long Name	Ifx_IntIpoMap_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.58 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16s16u8

Short Name	ifxRbMemLocIntIpoMaps16s16u8
Long Name	Ifx_IntIpoMap_s16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.59 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16s8s16

Short Name	ifxRbMemLocIntIpoMaps16s8s16
Long Name	Ifx_IntIpoMap_s16s8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW

Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.60 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16s8s8

Short Name	ifxRbMemLocIntIpoMaps16s8s8
Long Name	Ifx_IntIpoMap_s16s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.61 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16s8u16

Short Name	ifxRbMemLocIntIpoMaps16s8u16
Long Name	Ifx_IntIpoMap_s16s8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.62 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16s8u8

Short Name	ifxRbMemLocIntIpoMaps16s8u8
Long Name	Ifx_IntIpoMap_s16s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.63 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16u8s16

Short Name	ifxRbMemLocIntIpoMaps16u8s16

Long Name	Ifx_IntIpoMap_s16u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.64 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16u8s8

Short Name	ifxRbMemLocIntIpoMaps16u8s8
Long Name	Ifx_IntIpoMap_s16u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.65 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16u8u16

Short Name	ifxRbMemLocIntIpoMaps16u8u16
Long Name	Ifx_IntIpoMap_s16u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.66 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps16u8u8

Short Name	ifxRbMemLocIntIpoMaps16u8u8
Long Name	Ifx_IntIpoMap_s16u8_u8

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.67 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps32s32s32

Short Name	ifxRbMemLocIntIpoMaps32s32s32
Long Name	Ifx_IntIpoMap_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.68 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps8s8s16

Short Name	ifxRbMemLocIntIpoMaps8s8s16
Long Name	Ifx_IntIpoMap_s8s8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.69 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps8s8s8

Short Name	ifxRbMemLocIntIpoMaps8s8s8
Long Name	Ifx_IntIpoMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.70 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps8s8u16

Short Name	ifxRbMemLocIntIpoMaps8s8u16
Long Name	Ifx_IntIpoMap_s8s8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.71 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMaps8s8u8

Short Name	ifxRbMemLocIntIpoMaps8s8u8
Long Name	Ifx_IntIpoMap_s8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.72 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16s16s16

Short Name	ifxRbMemLocIntIpoMapu16s16s16
Long Name	Ifx_IntIpoMap_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.73 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16s16s8

Short Name	ifxRbMemLocIntIpoMapu16s16s8
Long Name	Ifx_IntIpoMap_u16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.74 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16s16u16

Short Name	ifxRbMemLocIntIpoMapu16s16u16
Long Name	Ifx_IntIpoMap_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.75 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16s16u8

Short Name	ifxRbMemLocIntIpoMapu16s16u8
Long Name	Ifx_IntIpoMap_u16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.76 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16s8s16

Short Name	ifxRbMemLocIntIpoMapu16s8s16
Long Name	Ifx_IntIpoMap_u16s8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.77 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16s8s8

Short Name	ifxRbMemLocIntIpoMapu16s8s8
Long Name	Ifx_IntIpoMap_u16s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.78 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16s8u16

Short Name	ifxRbMemLocIntIpoMapu16s8u16
Long Name	Ifx_IntIpoMap_u16s8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.79 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16s8u8

Short Name	ifxRbMemLocIntIpoMapu16s8u8

Long Name	Ifx_IntIpoMap_u16s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.80 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16u16s16

Short Name	ifxRbMemLocIntIpoMapu16u16s16
Long Name	Ifx_IntIpoMap_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.81 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16u16s8

Short Name	ifxRbMemLocIntIpoMapu16u16s8
Long Name	Ifx_IntIpoMap_u16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.82 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16u16u16

Short Name	ifxRbMemLocIntIpoMapu16u16u16
Long Name	Ifx_IntIpoMap_u16u16_u16

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.83 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16u16u8

Short Name	ifxRbMemLocIntIpoMapu16u16u8
Long Name	Ifx_IntIpoMap_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.84 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16u8s16

Short Name	ifxRbMemLocIntIpoMapu16u8s16
Long Name	Ifx_IntIpoMap_u16u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.85 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16u8s8

Short Name	ifxRbMemLocIntIpoMapu16u8s8
Long Name	Ifx_IntIpoMap_u16u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.86 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16u8u16

Short Name	ifxRbMemLocIntIpoMapu16u8u16
Long Name	Ifx_IntIpoMap_u16u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.87 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu16u8u8

Short Name	ifxRbMemLocIntIpoMapu16u8u8
Long Name	Ifx_IntIpoMap_u16u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.88 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu32u32u32

Short Name	ifxRbMemLocIntIpoMapu32u32u32
Long Name	Ifx_IntIpoMap_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.89 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu8s8s16

Short Name	ifxRbMemLocIntIpoMapu8s8s16
Long Name	Ifx_IntIpoMap_u8s8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.90 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu8s8s8

Short Name	ifxRbMemLocIntIpoMapu8s8s8
Long Name	Ifx_IntIpoMap_u8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.91 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu8s8u16

Short Name	ifxRbMemLocIntIpoMapu8s8u16
Long Name	Ifx_IntIpoMap_u8s8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.92 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu8s8u8

Short Name	ifxRbMemLocIntIpoMapu8s8u8
Long Name	Ifx_IntIpoMap_u8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.93 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu8u8s16

Short Name	ifxRbMemLocIntIpoMapu8u8s16
Long Name	Ifx_IntIpoMap_u8u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.94 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu8u8s8

Short Name	ifxRbMemLocIntIpoMapu8u8s8
Long Name	Ifx_IntIpoMap_u8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.95 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu8u8u16

Short Name	ifxRbMemLocIntIpoMapu8u8u16

Long Name	Ifx_IntIpoMap_u8u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.96 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntIpoMapu8u8u8

Short Name	ifxRbMemLocIntIpoMapu8u8u8
Long Name	Ifx_IntIpoMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.97 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpBaseMap-s16s16s16

Short Name	ifxRbMemLocIntLkUpBaseMaps16s16s16
Long Name	Ifx_IntLkUpBaseMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.98 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpBaseMap-s32s32s32

Short Name	ifxRbMemLocIntLkUpBaseMaps32s32s32
Long Name	Ifx_IntLkUpBaseMap_s32s32_s32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.99 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpBaseMaps8s8s8

Short Name	ifxRbMemLocIntLkUpBaseMaps8s8s8
Long Name	Ifx_IntLkUpBaseMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.100 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpBaseMapu16u16u16

Short Name	ifxRbMemLocIntLkUpBaseMapu16u16u16
Long Name	Ifx_IntLkUpBaseMap_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.101 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpBaseMapu32u32u32

Short Name	ifxRbMemLocIntLkUpBaseMapu32u32u32
Long Name	Ifx_IntLkUpBaseMap_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.102 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpBaseMapu8u8u8

Short Name	ifxRbMemLocIntLkUpBaseMapu8u8u8
Long Name	Ifx_IntLkUpBaseMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.103 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs16s16

Short Name	ifxRbMemLocIntLkUpCurs16s16
Long Name	Ifx_IntLkUpCur_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.104 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs16s8

Short Name	ifxRbMemLocIntLkUpCurs16s8
Long Name	Ifx_IntLkUpCur_s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.105 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs16u16

Short Name	ifxRbMemLocIntLkUpCurs16u16
Long Name	Ifx_IntLkUpCur_s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.106 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs16u8

Short Name	ifxRbMemLocIntLkUpCurs16u8
Long Name	Ifx_IntLkUpCur_s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.107 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs32s32

Short Name	ifxRbMemLocIntLkUpCurs32s32
Long Name	Ifx_IntLkUpCur_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.108 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs8s16

Short Name	ifxRbMemLocIntLkUpCurs8s16
Long Name	Ifx_IntLkUpCur_s8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.109 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs8s8

Short Name	ifxRbMemLocIntLkUpCurs8s8
Long Name	Ifx_IntLkUpCur_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.110 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs8u16

Short Name	ifxRbMemLocIntLkUpCurs8u16
Long Name	Ifx_IntLkUpCur_s8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.111 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCurs8u8

Short Name	ifxRbMemLocIntLkUpCurs8u8
Long Name	Ifx_IntLkUpCur_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.112 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru16s16

Short Name	ifxRbMemLocIntLkUpCuru16s16
Long Name	Ifx_IntLkUpCur_u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.113 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru16s8

Short Name	ifxRbMemLocIntLkUpCuru16s8
Long Name	Ifx_IntLkUpCur_u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.114 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru16u16

Short Name	ifxRbMemLocIntLkUpCuru16u16
Long Name	Ifx_IntLkUpCur_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.115 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru16u8

Short Name	ifxRbMemLocIntLkUpCuru16u8
Long Name	Ifx_IntLkUpCur_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.116 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru32u32

Short Name	ifxRbMemLocIntLkUpCuru32u32
Long Name	Ifx_IntLkUpCur_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.117 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru8s16

Short Name	ifxRbMemLocIntLkUpCuru8s16
Long Name	Ifx_IntLkUpCur_u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.118 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru8s8

Short Name	ifxRbMemLocIntLkUpCuru8s8
Long Name	Ifx_IntLkUpCur_u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.119 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru8u16

Short Name	ifxRbMemLocIntLkUpCuru8u16
Long Name	Ifx_IntLkUpCur_u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.120 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpCuru8u8

Short Name	ifxRbMemLocIntLkUpCuru8u8
Long Name	Ifx_IntLkUpCur_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.121 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixBaseMap-s16s16s16

Short Name	ifxRbMemLocIntLkUpFixBaseMaps16s16s16
Long Name	Ifx_IntLkUpFixBaseMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.122 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixBaseMap-s32s32s32

Short Name	ifxRbMemLocIntLkUpFixBaseMaps32s32s32
Long Name	Ifx_IntLkUpFixBaseMap_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.123 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixBaseMap-s8s8s8

Short Name	ifxRbMemLocIntLkUpFixBaseMaps8s8s8
Long Name	Ifx_IntLkUpFixBaseMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.124 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixBaseMa-pu16u16u16

Short Name	ifxRbMemLocIntLkUpFixBaseMapu16u16u16
Long Name	Ifx_IntLkUpFixBaseMap_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.125 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixBaseMa-pu32u32u32

Short Name	ifxRbMemLocIntLkUpFixBaseMapu32u32u32
Long Name	Ifx_IntLkUpFixBaseMap_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.126 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixBaseMapu8u8u8

Short Name	ifxRbMemLocIntLkUpFixBaseMapu8u8u8
Long Name	Ifx_IntLkUpFixBaseMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.127 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixCurs16s16

Short Name	ifxRbMemLocIntLkUpFixCurs16s16
Long Name	Ifx_IntLkUpFixCur_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.128 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixCurs32s32

Short Name	ifxRbMemLocIntLkUpFixCurs32s32
Long Name	Ifx_IntLkUpFixCur_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.129 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixCurs8s8

Short Name	ifxRbMemLocIntLkUpFixCurs8s8
Long Name	Ifx_IntLkUpFixCur_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.130 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixCuru16u16

Short Name	ifxRbMemLocIntLkUpFixCuru16u16
Long Name	Ifx_IntLkUpFixCur_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.131 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixCuru32u32

Short Name	ifxRbMemLocIntLkUpFixCuru32u32
Long Name	Ifx_IntLkUpFixCur_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.132 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixCuru8u8

Short Name	ifxRbMemLocIntLkUpFixCuru8u8

Long Name	Ifx_IntLkUpFixCur_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.133 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixIBaseMap-s16s16s16

Short Name	ifxRbMemLocIntLkUpFixIBaseMaps16s16s16
Long Name	Ifx_IntLkUpFixIBaseMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.134 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixIBaseMap-s32s32s32

Short Name	ifxRbMemLocIntLkUpFixIBaseMaps32s32s32
Long Name	Ifx_IntLkUpFixIBaseMap_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.135 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixIBaseMap-s8s8s8

Short Name	ifxRbMemLocIntLkUpFixIBaseMaps8s8s8
Long Name	Ifx_IntLkUpFixIBaseMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.136 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlBaseMapu16u16u16

Short Name	ifxRbMemLocIntLkUpFixlBaseMapu16u16u16
Long Name	Ifx_IntLkUpFixlBaseMap_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.137 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlBaseMapu32u32u32

Short Name	ifxRbMemLocIntLkUpFixlBaseMapu32u32u32
Long Name	Ifx_IntLkUpFixlBaseMap_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.138 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlBaseMapu8u8u8

Short Name	ifxRbMemLocIntLkUpFixlBaseMapu8u8u8
Long Name	Ifx_IntLkUpFixlBaseMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.139 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlCurs16s16

Short Name	ifxRbMemLocIntLkUpFixlCurs16s16
Long Name	Ifx_IntLkUpFixlCur_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.140 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlCurs32s32

Short Name	ifxRbMemLocIntLkUpFixlCurs32s32
Long Name	Ifx_IntLkUpFixlCur_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.141 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlCurs8s8

Short Name	ifxRbMemLocIntLkUpFixlCurs8s8
Long Name	Ifx_IntLkUpFixlCur_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.142 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlCuru16u16

Short Name	ifxRbMemLocIntLkUpFixlCuru16u16
Long Name	Ifx_IntLkUpFixlCur_u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.143 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlCuru32u32

Short Name	ifxRbMemLocIntLkUpFixlCuru32u32
Long Name	Ifx_IntLkUpFixlCur_u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.144 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlCuru8u8

Short Name	ifxRbMemLocIntLkUpFixlCuru8u8
Long Name	Ifx_IntLkUpFixlCur_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.145 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixlMaps16s16s16

Short Name	ifxRbMemLocIntLkUpFixlMaps16s16s16

Long Name	Ifx_IntLkUpFixIMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.146 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixIMaps32s32s32

Short Name	ifxRbMemLocIntLkUpFixIMaps32s32s32
Long Name	Ifx_IntLkUpFixIMap_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.147 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixIMaps8s8s8

Short Name	ifxRbMemLocIntLkUpFixIMaps8s8s8
Long Name	Ifx_IntLkUpFixIMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.148 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixIMapu16u16u16

Short Name	ifxRbMemLocIntLkUpFixIMapu16u16u16
Long Name	Ifx_IntLkUpFixIMap_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.149 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixIMapu32u32u32

Short Name	ifxRbMemLocIntLkUpFixIMapu32u32u32
Long Name	Ifx_IntLkUpFixIMap_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.150 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixIMapu8u8u8

Short Name	ifxRbMemLocIntLkUpFixIMapu8u8u8
Long Name	Ifx_IntLkUpFixIMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.151 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixMaps16s16s16

Short Name	ifxRbMemLocIntLkUpFixMaps16s16s16
Long Name	Ifx_IntLkUpFixMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.152 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixMaps32s32s32

Short Name	ifxRbMemLocIntLkUpFixMaps32s32s32
Long Name	Ifx_IntLkUpFixMap_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.153 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixMaps8s8s8

Short Name	ifxRbMemLocIntLkUpFixMaps8s8s8
Long Name	Ifx_IntLkUpFixMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.154 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixMapu16u16u16

Short Name	ifxRbMemLocIntLkUpFixMapu16u16u16
Long Name	Ifx_IntLkUpFixMap_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.155 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixMapu32u32u32

Short Name	ifxRbMemLocIntLkUpFixMapu32u32u32
Long Name	Ifx_IntLkUpFixMap_u32u32_u32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.156 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpFixMapu8u8u8

Short Name	ifxRbMemLocIntLkUpFixMapu8u8u8
Long Name	Ifx_IntLkUpFixMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.157 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpMaps16s16s16

Short Name	ifxRbMemLocIntLkUpMaps16s16s16
Long Name	Ifx_IntLkUpMap_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.158 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpMaps32s32s32

Short Name	ifxRbMemLocIntLkUpMaps32s32s32
Long Name	Ifx_IntLkUpMap_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.159 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpMaps8s8s8

Short Name	ifxRbMemLocIntLkUpMaps8s8s8
Long Name	Ifx_IntLkUpMap_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.160 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpMapu16u16u16

Short Name	ifxRbMemLocIntLkUpMapu16u16u16
Long Name	Ifx_IntLkUpMap_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.161 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpMapu32u32u32

Short Name	ifxRbMemLocIntLkUpMapu32u32u32
Long Name	Ifx_IntLkUpMap_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.162 Ifx/IfxRbMemoryLocations/ifxRbMemLocIntLkUpMapu8u8u8

Short Name	ifxRbMemLocIntLkUpMapu8u8u8
Long Name	Ifx_IntLkUpMap_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.163 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCubs16

Short Name	ifxRbMemLocIpoCubs16
Long Name	Ifx_IpoCub_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.164 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCubs8

Short Name	ifxRbMemLocIpoCubs8
Long Name	Ifx_IpoCub_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.165 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCubu16

Short Name	ifxRbMemLocIpoCubu16

Long Name	Ifx_IpoCub_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.166 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCubu8

Short Name	ifxRbMemLocIpoCubu8
Long Name	Ifx_IpoCub_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.167 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCurs16

Short Name	ifxRbMemLocIpoCurs16
Long Name	Ifx_IpoCur_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.168 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCurs32

Short Name	ifxRbMemLocIpoCurs32
Long Name	Ifx_IpoCur_s32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.169 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCurs8

Short Name	ifxRbMemLocIpoCurs8
Long Name	Ifx_IpoCur_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.170 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCuru16

Short Name	ifxRbMemLocIpoCuru16
Long Name	Ifx_IpoCur_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.171 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCuru32

Short Name	ifxRbMemLocIpoCuru32
Long Name	Ifx_IpoCur_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.172 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoCuru8

Short Name	ifxRbMemLocIpoCuru8
Long Name	Ifx_IpoCur_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.173 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoMaps16

Short Name	ifxRbMemLocIpoMaps16
Long Name	Ifx_IpoMap_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.174 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoMaps32

Short Name	ifxRbMemLocIpoMaps32
Long Name	Ifx_IpoMap_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.175 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoMaps8

Short Name	ifxRbMemLocIpoMaps8
Long Name	Ifx_IpoMap_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.176 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoMapu16

Short Name	ifxRbMemLocIpoMapu16
Long Name	Ifx_IpoMap_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.177 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoMapu32

Short Name	ifxRbMemLocIpoMapu32
Long Name	Ifx_IpoMap_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.178 Ifx/IfxRbMemoryLocations/ifxRbMemLocIpoMapu8

Short Name	ifxRbMemLocIpoMapu8
Long Name	Ifx_IpoMap_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.179 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpBaseMaps16

Short Name	ifxRbMemLocLkUpBaseMaps16
Long Name	Ifx_LkUpBaseMap_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.180 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpBaseMaps32

Short Name	ifxRbMemLocLkUpBaseMaps32
Long Name	Ifx_LkUpBaseMap_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.181 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpBaseMaps8

Short Name	ifxRbMemLocLkUpBaseMaps8
Long Name	Ifx_LkUpBaseMap_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.182 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpBaseMapu16

Short Name	ifxRbMemLocLkUpBaseMapu16
Long Name	Ifx_LkUpBaseMap_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.183 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpBaseMapu32

Short Name	ifxRbMemLocLkUpBaseMapu32
Long Name	Ifx_LkUpBaseMap_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.184 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpBaseMapu8

Short Name	ifxRbMemLocLkUpBaseMapu8
Long Name	Ifx_LkUpBaseMap_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.185 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpCurs16

Short Name	ifxRbMemLocLkUpCurs16
Long Name	Ifx_LkUpCur_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.186 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpCurs32

Short Name	ifxRbMemLocLkUpCurs32
Long Name	Ifx_LkUpCur_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.187 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpCurs8

Short Name	ifxRbMemLocLkUpCurs8
Long Name	Ifx_LkUpCur_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.188 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpCuru16

Short Name	ifxRbMemLocLkUpCuru16
Long Name	Ifx_LkUpCur_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.189 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpCuru32

Short Name	ifxRbMemLocLkUpCuru32
Long Name	Ifx_LkUpCur_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.190 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpCuru8

Short Name	ifxRbMemLocLkUpCuru8
Long Name	Ifx_LkUpCur_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.191 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpMaps16

Short Name	ifxRbMemLocLkUpMaps16
Long Name	Ifx_LkUpMap_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.192 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpMaps32

Short Name	ifxRbMemLocLkUpMaps32
Long Name	Ifx_LkUpMap_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.193 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpMaps8

Short Name	ifxRbMemLocLkUpMaps8
Long Name	Ifx_LkUpMap_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.194 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpMapu16

Short Name	ifxRbMemLocLkUpMapu16
Long Name	Ifx_LkUpMap_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.195 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpMapu32

Short Name	ifxRbMemLocLkUpMapu32
Long Name	Ifx_LkUpMap_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.1.196 Ifx/IfxRbMemoryLocations/ifxRbMemLocLkUpMapu8

Short Name	ifxRbMemLocLkUpMapu8
Long Name	Ifx_LkUpMap_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

7.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

7.4 Limitations

The following limitations exist for version v12.7.0:

7.4.1 General Limitations

- Due to the scaling and unscaling involved in the calculation, the output obtained from the interpolation of curve functions can differ by +/- 1 when compared to the expected physical result. The output obtained from the interpolation of map functions can differ by +/- 2 when compared to the expected result.
- For the interpolation calculation, the rounding mechanism was not specified in AUTOSAR 4.2.2, but in AUTOSAR 4.3.1 the rounding mode is set to round-towards-zero. The current RTA-BSW implementation of the Ifx module already includes round-towards-zero.

- The array size (N value) should not exceed 127 for X_array and Val_array for Interpolation services.

7.4.2 Ifx_IpoMap and Ifx_LkUpMap and Ifx_LkUpBaseMap atomicity

The values referenced by the dpResultX and dpResultY parameters are copied to temporary storage before use. These copies are atomic, assuming appropriate compiler and hardware support.

However, because dpResultX and dpResultY are copied separately, there is no guarantee of atomicity between the two copies. The results may be incorrect if

either value is modified between copies.

7.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

7.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

7.7 API Definition

List of supported APIs

Function	**Ifx_GetVersionInfo**
Description	Returns the version information of this library

Function	**Ifx_DPSearch_<InTypeMn>**
Description	Searches the position of input Xin within the given distribution array X_array, and returns index and ratio necessary for interpolation

Implementation	`Ifx_DPSearch_s32`
	`Ifx_DPSearch_s16`
	`Ifx_DPSearch_s8`
	`Ifx_DPSearch_u32`
	`Ifx_DPSearch_u16`
	`Ifx_DPSearch_u8`

Function	**Ifx_IpoCur_<OutTypeMn>**
Description	Based on searched index and ratio information, calculates and returns interpolation for curve

Implementation	`Ifx_IpoCur_s32`
	`Ifx_IpoCur_s16`
	`Ifx_IpoCur_s8`
	`Ifx_IpoCur_u32`
	`Ifx_IpoCur_u16`
	`Ifx_IpoCur_u8`

Function	**Ifx_LkUpCur_<OutTypeMn>**
Description	Based on searched index and ratio information, calculates and returns entry point of the result array

Implementation	`Ifx_LkUpCur_s32`
	`Ifx_LkUpCur_s16`
	`Ifx_LkUpCur_s8`
	`Ifx_LkUpCur_u32`
	`Ifx_LkUpCur_u16`
	`Ifx_LkUpCur_u8`

Function	**Ifx_IpoMap_<OutTypeMn>**
Description	Based on searched indices and ratios information using the relevant Ifx_DPSearch routine, calculates and returns the interpolation result for map

Implementation	`Ifx_IpoMap_s32`
	`Ifx_IpoMap_s16`
	`Ifx_IpoMap_s8`
	`Ifx_IpoMap_u32`
	`Ifx_IpoMap_u16`
	`Ifx_IpoMap_u8`

Function	**Ifx_LkUpMap_<OutTypeMn>**
Description	Based on searched index and ratio information, calculates and returns entry value of the result distribution array

Implementation	`Ifx_LkUpMap_s32`
	`Ifx_LkUpMap_s16`
	`Ifx_LkUpMap_s8`
	`Ifx_LkUpMap_u32`
	`Ifx_LkUpMap_u16`
	`Ifx_LkUpMap_u8`

Function	**Ifx_LkUpBaseMap_<OutTypeMn>**
Description	Based on searched index and ratio information, calculates and returns entry value of the result distribution array

Implementation	`Ifx_LkUpBaseMap_s32`
	`Ifx_LkUpBaseMap_s16`
	`Ifx_LkUpBaseMap_s8`
	`Ifx_LkUpBaseMap_u32`
	`Ifx_LkUpBaseMap_u16`
	`Ifx_LkUpBaseMap_u8`

Function	**Ifx_IntIpoCur_<InTypeMn>_<OutTypeMn>**
Description	Calculates interpolation of a curve at position Xin

Implementation	`Ifx_IntIpoCur_u32_u32`
	`Ifx_IntIpoCur_s32_s32`
	`Ifx_IntIpoCur_s16_s16`
	`Ifx_IntIpoCur_s16_s8`
	`Ifx_IntIpoCur_s16_u16`
	`Ifx_IntIpoCur_s16_u8`
	`Ifx_IntIpoCur_s8_s16`
	`Ifx_IntIpoCur_s8_s8`
	`Ifx_IntIpoCur_s8_u16`
	`Ifx_IntIpoCur_s8_u8`
	`Ifx_IntIpoCur_u16_s16`
	`Ifx_IntIpoCur_u16_s8`
	`Ifx_IntIpoCur_u16_u16`
	`Ifx_IntIpoCur_u16_u8`
	`Ifx_IntIpoCur_u8_s16`
	`Ifx_IntIpoCur_u8_s8`
	`Ifx_IntIpoCur_u8_u16`
	`Ifx_IntIpoCur_u8_u8`

Function	**Ifx_IntLkUpCur_<InTypeMn>_<OutTypeMn>**
Description	Returns respective entry value of the result at position Xin

Implementation	`Ifx_IntLkUpCur_s32_s32`
	`Ifx_IntLkUpCur_u32_u32`
	`Ifx_IntLkUpCur_s16_s16`
	`Ifx_IntLkUpCur_s16_s8`
	`Ifx_IntLkUpCur_s16_u16`
	`Ifx_IntLkUpCur_s16_u8`
	`Ifx_IntLkUpCur_s8_s16`
	`Ifx_IntLkUpCur_s8_s8`
	`Ifx_IntLkUpCur_s8_u16`
	`Ifx_IntLkUpCur_s8_u8`
	`Ifx_IntLkUpCur_u16_s16`
	`Ifx_IntLkUpCur_u16_s8`
	`Ifx_IntLkUpCur_u16_u16`
	`Ifx_IntLkUpCur_u16_u8`
	`Ifx_IntLkUpCur_u8_s16`
	`Ifx_IntLkUpCur_u8_s8`
	`Ifx_IntLkUpCur_u8_u16`
	`Ifx_IntLkUpCur_u8_u8`

Function	**Ifx_IntIpoFixCur_<InTypeMn>_<OutTypeMn>**
Description	Calculates interpolation of a curve at position Xin

Implementation	`Ifx_IntIpoFixCur_s16_s16`
	`Ifx_IntIpoFixCur_s8_s8`
	`Ifx_IntIpoFixCur_u16_u16`
	`Ifx_IntIpoFixCur_u8_u8`

Function	**Ifx_IntLkUpFixCur_<InTypeMn>_<OutTypeMn>**
Description	Returns respective entry value of the result distribution array at position Xin

Implementation	`Ifx_IntLkUpFixCur_s16_s16`
	`Ifx_IntLkUpFixCur_s8_s8`
	`Ifx_IntLkUpFixCur_u16_u16`
	`Ifx_IntLkUpFixCur_u8_u8`

Function	**Ifx_IntIpoFixICur_<InTypeMn>_<OutTypeMn>**
Description	Calculates interpolation of a curve at position Xin

Implementation	`Ifx_IntIpoFixICur_s16_s16`
	`Ifx_IntIpoFixICur_s8_s8`
	`Ifx_IntIpoFixICur_u16_u16`
	`Ifx_IntIpoFixICur_u8_u8`
	`Ifx_IntIpoFixICur_u32_u32`
	`Ifx_IntIpoFixICur_s32_s32`

Function	**Ifx_IntLkUpFixICur_<InTypeMn>_<OutTypeMnt>**
Description	Returns respective entry value of the result distribution array at position Xin

Implementation	`Ifx_IntLkUpFixICur_s16_s16`
	`Ifx_IntLkUpFixICur_s8_s8`
	`Ifx_IntLkUpFixICur_u16_u16`
	`Ifx_IntLkUpFixICur_u8_u8`
	`Ifx_IntLkUpFixCur_u32_u32`
	`Ifx_IntLkUpFixICur_s32_s32`
	`Ifx_IntLkUpFixICur_u32_u32`

Function	**Ifx_IntIpoMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Calculates Interpolation of a map at position X and Y

Implementation	`Ifx_IntIpoMap_s16s16_s16`
	`Ifx_IntIpoMap_s16s16_s8`
	`Ifx_IntIpoMap_s16s16_u16`
	`Ifx_IntIpoMap_s16s16_u8`
	`Ifx_IntIpoMap_s16s8_s16`
	`Ifx_IntIpoMap_s16s8_s8`
	`Ifx_IntIpoMap_s16s8_u16`
	`Ifx_IntIpoMap_s16s8_u8`
	`Ifx_IntIpoMap_s16u8_s16`
	`Ifx_IntIpoMap_s16u8_s8`
	`Ifx_IntIpoMap_s16u8_u16`
	`Ifx_IntIpoMap_s16u8_u8`
	`Ifx_IntIpoMap_s8s8_s16`
	`Ifx_IntIpoMap_s8s8_s8`
	`Ifx_IntIpoMap_s8s8_u16`
	`Ifx_IntIpoMap_s8s8_u8`
	`Ifx_IntIpoMap_u16s16_s16`
	`Ifx_IntIpoMap_u16s16_s8`
	`Ifx_IntIpoMap_u16s16_u16`
	`Ifx_IntIpoMap_u16s16_u8`
	`Ifx_IntIpoMap_u16s8_s16`
	`Ifx_IntIpoMap_u16s8_s8`
	`Ifx_IntIpoMap_u16s8_u16`
	`Ifx_IntIpoMap_u16s8_u8`
	`Ifx_IntIpoMap_u16u16_s16`
	`Ifx_IntIpoMap_u16u16_s8`
	`Ifx_IntIpoMap_u16u16_u16`
	`Ifx_IntIpoMap_u16u16_u8`
	`Ifx_IntIpoMap_u16u8_s16`
	`Ifx_IntIpoMap_u16u8_s8`
	`Ifx_IntIpoMap_u16u8_u16`
	`Ifx_IntIpoMap_u16u8_u8`
	`Ifx_IntIpoMap_u8s8_s16`
	`Ifx_IntIpoMap_u8s8_s8`
	`Ifx_IntIpoMap_u8s8_u16`
	`Ifx_IntIpoMap_u8s8_u8`
	`Ifx_IntIpoMap_u8u8_s16`
	`Ifx_IntIpoMap_u8u8_s8`
	`Ifx_IntIpoMap_u8u8_u16`
	`Ifx_IntIpoMap_u8u8_u8`
	`Ifx_IntIpoMap_s32s32_s32`
	`Ifx_IntIpoMap_u32u32_u32`

Function	**Ifx_IntLkUpMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Returns respective entry value of the result distribution array at position Xin and Yin

Implementation	`Ifx_IntLkUpMap_s16s16_s16`
	`Ifx_IntLkUpMap_s8s8_s8`
	`Ifx_IntLkUpMap_u16u16_u16`
	`Ifx_IntLkUpMap_u8u8_u8`
	`Ifx_IntLkUpMap_s32s32_s32`
	`Ifx_IntLkUpMap_u32u32_u32`

Function	**Ifx_IntLkUpBaseMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Returns respective entry value of the result distribution array at position Xin and Yin

Implementation	`Ifx_IntLkUpBaseMap_s16s16_s16`
	`Ifx_IntLkUpBaseMap_s8s8_s8`
	`Ifx_IntLkUpBaseMap_u16u16_u16`
	`Ifx_IntLkUpBaseMap_u8u8_u8`
	`Ifx_IntLkUpBaseMap_s32s32_s32`
	`Ifx_IntLkUpBaseMap_u32u32_u32`

Function	**Ifx_IntIpoFixMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Calculates Interpolation of a map at position X and Y

Implementation	`Ifx_IntIpoFixMap_s16s16_s16`
	`Ifx_IntIpoFixMap_s8s8_s8`
	`Ifx_IntIpoFixMap_u16u16_u16`
	`Ifx_IntIpoFixMap_u8u8_u8`
	`Ifx_IntIpoFixMap_s32s32_s32`
	`Ifx_IntIpoFixMap_u32u32_u32`

Function	**Ifx_IntLkUpFixMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Returns respective entry value of the result distribution array at position Xin and Yin

Implementation	`Ifx_IntLkUpFixMap_s16s16_s16`
	`Ifx_IntLkUpFixMap_s8s8_s8`
	`Ifx_IntLkUpFixMap_u16u16_u16`
	`Ifx_IntLkUpFixMap_u8u8_u8`
	`Ifx_IntLkUpFixMap_s32s32_s32`
	`Ifx_IntLkUpFixMap_u32u32_u32`

Function	**Ifx_IntLkUpFixBaseMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Returns respective entry value of the result distribution array at position Xin and Yin

Implementation	`Ifx_IntLkUpFixBaseMap_s16s16_s16`
	`Ifx_IntLkUpFixBaseMap_s8s8_s8`
	`Ifx_IntLkUpFixBaseMap_u16u16_u16`
	`Ifx_IntLkUpFixBaseMap_u8u8_u8`
	`Ifx_IntLkUpFixBaseMap_s32s32_s32`
	`Ifx_IntLkUpFixBaseMap_u32u32_u32`

Function	**Ifx_IpoCub_<OutTypeMn>**
Description	Calculates and returns the interpolation result for a 3D cuboid.

Implementation	`Ifx_IpoCub_s16`
	`Ifx_IpoCub_s8`
	`Ifx_IpoCub_u16`
	`Ifx_IpoCub_u8`

Function	**Ifx_IntIpoFixIMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Calculates Interpolation of a map at position X and Y

Implementation	`Ifx_IntIpoFixIMap_s16s16_s16`
	`Ifx_IntIpoFixIMap_s8s8_s8`
	`Ifx_IntIpoFixIMap_u16u16_u16`
	`Ifx_IntIpoFixIMap_u8u8_u8`
	`Ifx_IntIpoFixIMap_s32s32_s32`
	`Ifx_IntIpoFixIMap_u32u32_u32`

Function	**Ifx_IntLkUpFixIMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Returns respective entry value of the result distribution array at position Xin and Yin

Implementation	`Ifx_IntLkUpFixIMap_s16s16_s16`
	`Ifx_IntLkUpFixIMap_s8s8_s8`
	`Ifx_IntLkUpFixIMap_u16u16_u16`
	`Ifx_IntLkUpFixIMap_u8u8_u8`
	`Ifx_IntLkUpFixIMap_s32s32_s32`
	`Ifx_IntLkUpFixIMap_u32u32_u32`

Function	**Ifx_IntLkUpFixIBaseMap_<InTypeMn><InTypeMn>_<OutTypeMn>**
Description	Returns respective entry value of the result distribution array at position Xin and Yin

Implementation	`Ifx_IntLkUpFixIBaseMap_s16s16_s16`
	`Ifx_IntLkUpFixIBaseMap_s8s8_s8`
	`Ifx_IntLkUpFixIBaseMap_u16u16_u16`
	`Ifx_IntLkUpFixIBaseMap_u8u8_u8`
	`Ifx_IntLkUpFixIBaseMap_s32s32_s32`
	`Ifx_IntLkUpFixIBaseMap_u32u32_u32`

For Further information please refer to the AUTOSAR specification of Fixed Point Interpolation Routines AUTOSAR_SWS_IFXLibrary.pdf

7.8 Configuration Advice

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

7.8.1 Additional Configuration Parameters

The following three extension parameters must be configured in Ifx_EcucValues.arxml when the Ifx module is used:

7.8.1.1 Ifx_VersionInfoAPI

The Ifx_GetVersionInfo function can be enabled or disabled based on the configuration of the Ifx_VersionInfoAPI parameter.

On	The Ifx library shall provide the function Ifx_GetVersionInfo which provides the version information of the Ifx library.
Off	The Ifx library shall not provide the function Ifx_GetVersionInfo.

7.8.1.2 IfxRbMemoryLocations

This parameter provides the option to configure the Memory Location of a specific service.

NORMAL	Configured in Normal flash.
SLOW	Configured in Slow flash.
FAST	Configured in Fast flash.
INLINE	The function is made inline.

7.8.1.3 IfxRbAssemblyOptimization

TRUE	The assembly optimization is enabled.
FALSE	The assembly optimization is disabled.

> **NOTE**
>
> `IfxRbAssemblyOptimization` is only specific to PS-EC and is not configurable by other projects. Its default value is FALSE.

7.9 Integration Advice

The include file “Ifx.h” provides all public function prototypes and types defined by the Ifx library specification. You need to include the “Ifx.h” file wherever required by application software.

7.9.1 Init Functions

The Ifx Library does not require an initialization phase. A library function may be called at the very first step of ECU initialization (e.g. even by the OS or EcuM), and so the library must be ready to accept this call.

7.9.2 DeInit Functions

No DeInit is required.

7.9.3 Scheduled Functions

Ifx has no periodic functions.

7.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user’s responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Ifx module does not use any exclusive OS resources.

7.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

8 Mfl Library

Module name	Mfl
Package	COMMON
AUTOSAR Module ID	210
AUTOSAR Version	22-11

8.1 Introduction

The Mfl Library provides re-entrant routines that can be used for Floating Point arithmetic, with support for the following topics:

- Conversion
- Rounding
- Magnitude and sign
- Limiting
- Logarithms and exponential
- Trigonometric
- Controller routines
- Average
- Array Average
- Hypotenuse
- Ramp routines
- Hysteresis function
- Dead Time
- Debounce
- Ascending Sort Routine
- Descending Sort Routine
- Median Sort Routine

Module Configuration

This module is not currently supported by the RTA-BSW Configuration Generator (ConfGen) and must be manually configured.

8.2 Supported Features

- Arithmetic routines for Floating Point values.
- All routines are re-entrant. They may be used by multiple runnables at the same time.

For further information please refer to the AUTOSAR specification of Floating Point Math Routines (AUTOSAR_SWS_MFLLibrary.pdf).

8.3 Extensions

8.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

8.3.1.1 Mfl

Short Name	Mfl
Long Name	Floating Point Math Library
Description	Floating Point Math Library
Multiplicity	0..1
Default Value	-
Type	ECUC-MODULE-DEF

8.3.1.2 Mfl/MflGeneral

Short Name	MflGeneral
Long Name	General settings for Mfl
Description	General settings for Mfl with selections for used controller and activation of GetVersionInfo interface
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

8.3.1.3 Mfl/MflGeneral/MflRbAssemblyOptimization

Short Name	MflRbAssemblyOptimization
Long Name	Select whether to enable or disable assembly optimization
Description	If MflRbAssemblyOptimization is chosen as “True”, the assembly optimization is enabled. If MflRbAssembly Optimization is chosen as “False”, the assembly optimization is disabled. Note: This new configuration parameter, “MflRbAssemblyOptimization” is only specific to PS-EC and is not configurable by other projects.
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

8.3.1.4 Mfl/MflGeneral/Mfl_VersionInfoAPI

Short Name	Mfl_VersionInfoAPI
Long Name	Configuration parameter for activation of Mfl_GetVersionInfo function.
Description	If MflVersionInfoAPI is set to “ON”, the function MflGetVersionInfo shall return the version information of the Mfl library. If MflVersionInfoAPI is set to “OFF”, the Mfl library shall not provide the function Mfl_GetVersionInfo
Multiplicity	1..1
Default Value	-
Enumeration Literals	ON, OFF
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.5 Mfl/MflGeneral/mflHWRounding

Short Name	mflHWRounding
Long Name	MFL_HW_ROUNDING
Description	Select Hardware rounding Mode
Multiplicity	0..1
Default Value	MFL_CFG_OFF
Enumeration Literals	MFL_CFG_ON, MFL_CFG_OFF
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.6 Mfl/MflRbMemoryLocations

Short Name	MflRbMemoryLocations
Long Name	Memory locations
Description	Choose memory location settings for each single service
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

8.3.1.7 Mfl/MflRbMemoryLocations/mflRbMemLocAbsf32

Short Name	mflRbMemLocAbsf32
Long Name	Mfl_Abs_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.8 Mfl/MflRbMemoryLocations/mflRbMemLocArcCosf32

Short Name	mflRbMemLocArcCosf32
Long Name	Mfl_ArcCos_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.9 Mfl/MflRbMemoryLocations/mflRbMemLocArcSinf32

Short Name	mflRbMemLocArcSinf32
Long Name	Mfl_ArcSin_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.10 Mfl/MflRbMemoryLocations/mflRbMemLocArcTan2f32

Short Name	mflRbMemLocArcTan2f32
Long Name	Mfl_ArcTan2_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.11 Mfl/MflRbMemoryLocations/mflRbMemLocArcTanf32

Short Name	mflRbMemLocArcTanf32
Long Name	Mfl_ArcTan_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.12 Mfl/MflRbMemoryLocations/mflRbMemLocArrayAveragef32f32

Short Name	mflRbMemLocArrayAveragef32f32
Long Name	Mfl_ArrayAverage_f32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.13 Mfl/MflRbMemoryLocations/mflRbMemLocAveragef32f32

Short Name	mflRbMemLocAveragef32f32
Long Name	Mfl_Average_f32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.14 Mfl/MflRbMemoryLocations/mflRbMemLocBitpatf32u32

Short Name	mflRbMemLocBitpatf32u32

Long Name	Mfl_Bitpat_f32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.15 Mfl/MflRbMemoryLocations/mflRbMemLocCalcTeQAppf32

Short Name	mflRbMemLocCalcTeQAppf32
Long Name	Mfl_CalcTeQApp_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.16 Mfl/MflRbMemoryLocations/mflRbMemLocCalcTeQf32

Short Name	mflRbMemLocCalcTeQf32
Long Name	Mfl_CalcTeQ_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.17 Mfl/MflRbMemoryLocations/mflRbMemLocCeilf32

Short Name	mflRbMemLocCeilf32
Long Name	Mfl_Ceil_f32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.18 Mfl/MflRbMemoryLocations/mflRbMemLocCosf32

Short Name	mflRbMemLocCosf32
Long Name	Mfl_Cos_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.19 Mfl/MflRbMemoryLocations/mflRbMemLocCoss32f32

Short Name	mflRbMemLocCoss32f32
Long Name	Mfl_Cos_s32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.20 Mfl/MflRbMemoryLocations/mflRbMemLocCtrlSetLimit

Short Name	mflRbMemLocCtrlSetLimit
Long Name	Mfl_CtrlSetLimit
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.21 Mfl/MflRbMemoryLocations/mflRbMemLocCvrtf32s16

Short Name	mflRbMemLocCvrtf32s16
Long Name	Mfl_Cvrt_f32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.22 Mfl/MflRbMemoryLocations/mflRbMemLocCvrtf32s32

Short Name	mflRbMemLocCvrtf32s32
Long Name	Mfl_Cvrt_f32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.23 Mfl/MflRbMemoryLocations/mflRbMemLocCvrtf32u16

Short Name	mflRbMemLocCvrtf32u16
Long Name	Mfl_Cvrt_f32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.24 Mfl/MflRbMemoryLocations/mflRbMemLocCvrtf32u32

Short Name	mflRbMemLocCvrtf32u32
Long Name	Mfl_Cvrt_f32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.25 Mfl/MflRbMemoryLocations/mflRbMemLocCvrts16f32

Short Name	mflRbMemLocCvrts16f32
Long Name	Mfl_Cvrt_s16_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.26 Mfl/MflRbMemoryLocations/mflRbMemLocCvrts32f32

Short Name	mflRbMemLocCvrts32f32
Long Name	Mfl_Cvrt_s32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.27 Mfl/MflRbMemoryLocations/mflRbMemLocCvrtu16f32

Short Name	mflRbMemLocCvrtu16f32
Long Name	Mfl_Cvrt_u16_f32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.28 Mfl/MflRbMemoryLocations/mflRbMemLocCvrtu32f32

Short Name	mflRbMemLocCvrtu32f32
Long Name	Mfl_Cvrt_u32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.29 Mfl/MflRbMemoryLocations/mflRbMemLocDT1Typ1Calc

Short Name	mflRbMemLocDT1Typ1Calc
Long Name	Mfl_DT1Typ1Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.30 Mfl/MflRbMemoryLocations/mflRbMemLocDT1Typ1Outf32

Short Name	mflRbMemLocDT1Typ1Outf32
Long Name	Mfl_DT1Typ1Out_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.31 Mfl/MflRbMemoryLocations/mflRbMemLocDT1Typ1SetState

Short Name	mflRbMemLocDT1Typ1SetState
Long Name	Mfl_DT1Typ1SetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.32 Mfl/MflRbMemoryLocations/mflRbMemLocDT1Typ2Calc

Short Name	mflRbMemLocDT1Typ2Calc
Long Name	Mfl_DT1Typ2Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.33 Mfl/MflRbMemoryLocations/mflRbMemLocDT1Typ2Outf32

Short Name	mflRbMemLocDT1Typ2Outf32
Long Name	Mfl_DT1Typ2Out_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.34 Mfl/MflRbMemoryLocations/mflRbMemLocDT1Typ2SetState

Short Name	mflRbMemLocDT1Typ2SetState
Long Name	Mfl_DT1Typ2SetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.35 Mfl/MflRbMemoryLocations/mflRbMemLocDeadTimef32f32

Short Name	mflRbMemLocDeadTimef32f32
Long Name	Mfl_DeadTime_f32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.36 Mfl/MflRbMemoryLocations/mflRbMemLocDebounceInit

Short Name	mflRbMemLocDebounceInit
Long Name	Mfl_DebounceInit
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.37 Mfl/MflRbMemoryLocations/mflRbMemLocDebounceSetParam

Short Name	mflRbMemLocDebounceSetParam

Long Name	Mfl_DebounceSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.38 Mfl/MflRbMemoryLocations/mflRbMemLocDebounceu8u8

Short Name	mflRbMemLocDebounceu8u8
Long Name	Mfl_Debounce_u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.39 Mfl/MflRbMemoryLocations/mflRbMemLocDivLimf32

Short Name	mflRbMemLocDivLimf32
Long Name	Mfl_DivLim_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.40 Mfl/MflRbMemoryLocations/mflRbMemLocExpf32

Short Name	mflRbMemLocExpf32
Long Name	Mfl_Exp_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.41 Mfl/MflRbMemoryLocations/mflRbMemLocFloatToIntCvrtf32s16

Short Name	mflRbMemLocFloatToIntCvrtf32s16
Long Name	Mfl_FloatToIntCvrt_f32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.42 Mfl/MflRbMemoryLocations/mflRbMemLocFloatToIntCvrtf32s32

Short Name	mflRbMemLocFloatToIntCvrtf32s32
Long Name	Mfl_FloatToIntCvrt_f32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.43 Mfl/MflRbMemoryLocations/mflRbMemLocFloatToIntCvrtf32s8

Short Name	mflRbMemLocFloatToIntCvrtf32s8
Long Name	Mfl_FloatToIntCvrt_f32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.44 Mfl/MflRbMemoryLocations/mflRbMemLocFloatToIntCvrtf32u16

Short Name	mflRbMemLocFloatToIntCvrtf32u16
Long Name	Mfl_FloatToIntCvrt_f32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.45 Mfl/MflRbMemoryLocations/mflRbMemLocFloatToIntCvrtf32u32

Short Name	mflRbMemLocFloatToIntCvrtf32u32
Long Name	Mfl_FloatToIntCvrt_f32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.46 Mfl/MflRbMemoryLocations/mflRbMemLocFloatToIntCvrtf32u8

Short Name	mflRbMemLocFloatToIntCvrtf32u8
Long Name	Mfl_FloatToIntCvrt_f32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.47 Mfl/MflRbMemoryLocations/mflRbMemLocFloorf32

Short Name	mflRbMemLocFloorf32
Long Name	Mfl_Floor_f32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.48 Mfl/MflRbMemoryLocations/mflRbMemLocHypotf32f32f32

Short Name	mflRbMemLocHypotf32f32f32
Long Name	Mfl_Hypot_f32f32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.49 Mfl/MflRbMemoryLocations/mflRbMemLocHystCenter-HalfDeltaf32u8

Short Name	mflRbMemLocHystCenterHalfDeltaf32u8
Long Name	Mfl_HystCenterHalfDelta_f32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.50 Mfl/MflRbMemoryLocations/mflRbMemLocHystDeltaRightf32u8

Short Name	mflRbMemLocHystDeltaRightf32u8
Long Name	Mfl_HystDeltaRight_f32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.51 Mfl/MflRbMemoryLocations/mflRbMemLocHystLeftDeltaf32u8

Short Name	mflRbMemLocHystLeftDeltaf32u8
Long Name	Mfl_HystLeftDelta_f32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.52 Mfl/MflRbMemoryLocations/mflRbMemLocHystLeftRightf32u8

Short Name	mflRbMemLocHystLeftRightf32u8
Long Name	Mfl_HystLeftRight_f32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.53 Mfl/MflRbMemoryLocations/mflRbMemLoclCalc

Short Name	mflRbMemLoclCalc
Long Name	Mfl_lCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.54 Mfl/MflRbMemoryLocations/mflRbMemLoclLimCalc

Short Name	mflRbMemLoclLimCalc
Long Name	Mfl_ILimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.55 Mfl/MflRbMemoryLocations/mflRbMemLoclOutf32

Short Name	mflRbMemLoclOutf32
Long Name	Mfl_IOut_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.56 Mfl/MflRbMemoryLocations/mflRbMemLoclSetState

Short Name	mflRbMemLoclSetState
Long Name	Mfl_ISetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.57 Mfl/MflRbMemoryLocations/mflRbMemLocIntToFloatCvrts16f32

Short Name	mflRbMemLocIntToFloatCvrts16f32
Long Name	Mfl_IntToFloatCvrt_s16_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.58 Mfl/MflRbMemoryLocations/mflRbMemLocIntToFloatCvrts32f32

Short Name	mflRbMemLocIntToFloatCvrts32f32
Long Name	Mfl_IntToFloatCvrt_s32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.59 Mfl/MflRbMemoryLocations/mflRbMemLocIntToFloatCvrts64f32

Short Name	mflRbMemLocIntToFloatCvrts64f32
Long Name	Mfl_IntToFloatCvrt_s64_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.60 Mfl/MflRbMemoryLocations/mflRbMemLocIntToFloatCvrts8f32

Short Name	mflRbMemLocIntToFloatCvrts8f32
Long Name	Mfl_IntToFloatCvrt_s8_f32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.61 Mfl/MflRbMemoryLocations/mflRbMemLocIntToFloatCvrtu16f32

Short Name	mflRbMemLocIntToFloatCvrtu16f32
Long Name	Mfl_IntToFloatCvrt_u16_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.62 Mfl/MflRbMemoryLocations/mflRbMemLocIntToFloatCvrtu32f32

Short Name	mflRbMemLocIntToFloatCvrtu32f32
Long Name	Mfl_IntToFloatCvrt_u32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.63 Mfl/MflRbMemoryLocations/mflRbMemLocIntToFloatCvrtu64f32

Short Name	mflRbMemLocIntToFloatCvrtu64f32
Long Name	Mfl_IntToFloatCvrt_u64_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.64 Mfl/MflRbMemoryLocations/mflRbMemLocIntToFloatCvrtu8f32

Short Name	mflRbMemLocIntToFloatCvrtu8f32
Long Name	Mfl_IntToFloatCvrt_u8_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.65 Mfl/MflRbMemoryLocations/mflRbMemLocLimitf32

Short Name	mflRbMemLocLimitf32
Long Name	Mfl_Limit_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.66 Mfl/MflRbMemoryLocations/mflRbMemLocLogf32

Short Name	mflRbMemLocLogf32
Long Name	Mfl_Log_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.67 Mfl/MflRbMemoryLocations/mflRbMemLocMaxf32

Short Name	mflRbMemLocMaxf32
Long Name	Mfl_Max_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.68 Mfl/MflRbMemoryLocations/mflRbMemLocMedianSortf32f32

Short Name	mflRbMemLocMedianSortf32f32
Long Name	Mfl_MedianSort_f32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.69 Mfl/MflRbMemoryLocations/mflRbMemLocMinf32

Short Name	mflRbMemLocMinf32
Long Name	Mfl_Min_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.70 Mfl/MflRbMemoryLocations/mflRbMemLocModf32

Short Name	mflRbMemLocModf32

Long Name	Mfl_Mod_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.71 Mfl/MflRbMemoryLocations/mflRbMemLocPCalc

Short Name	mflRbMemLocPCalc
Long Name	Mfl_PCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.72 Mfl/MflRbMemoryLocations/mflRbMemLocPDCalc

Short Name	mflRbMemLocPDCalc
Long Name	Mfl_PDCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.73 Mfl/MflRbMemoryLocations/mflRbMemLocPDOutf32

Short Name	mflRbMemLocPDOutf32
Long Name	Mfl_PDOut_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1

Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.74 Mfl/MflRbMemoryLocations/mflRbMemLocPDSetParam

Short Name	mflRbMemLocPDSetParam
Long Name	Mfl_PDSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.75 Mfl/MflRbMemoryLocations/mflRbMemLocPDSetState

Short Name	mflRbMemLocPDSetState
Long Name	Mfl_PDSetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.76 Mfl/MflRbMemoryLocations/mflRbMemLocPIDOutf32

Short Name	mflRbMemLocPIDOutf32
Long Name	Mfl_PIDOut_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.77 Mfl/MflRbMemoryLocations/mflRbMemLocPIDSetParam

Short Name	mflRbMemLocPIDSetParam
Long Name	Mfl_PIDSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.78 Mfl/MflRbMemoryLocations/mflRbMemLocPIDSetState

Short Name	mflRbMemLocPIDSetState
Long Name	Mfl_PIDSetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.79 Mfl/MflRbMemoryLocations/mflRbMemLocPIDTyp1Calc

Short Name	mflRbMemLocPIDTyp1Calc
Long Name	Mfl_PIDTyp1Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.80 Mfl/MflRbMemoryLocations/mflRbMemLocPIDTyp1LimCalc

Short Name	mflRbMemLocPIDTyp1LimCalc
Long Name	Mfl_PIDTyp1LimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.81 Mfl/MflRbMemoryLocations/mflRbMemLocPIDTyp2Calc

Short Name	mflRbMemLocPIDTyp2Calc
Long Name	Mfl_PIDTyp2Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.82 Mfl/MflRbMemoryLocations/mflRbMemLocPIDTyp2LimCalc

Short Name	mflRbMemLocPIDTyp2LimCalc
Long Name	Mfl_PIDTyp2LimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.83 Mfl/MflRbMemoryLocations/mflRbMemLocPIOutf32

Short Name	mflRbMemLocPIOutf32
Long Name	Mfl_PIOut_f32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.84 Mfl/MflRbMemoryLocations/mflRbMemLocPlSetParam

Short Name	mflRbMemLocPlSetParam
Long Name	Mfl_PlSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.85 Mfl/MflRbMemoryLocations/mflRbMemLocPlSetState

Short Name	mflRbMemLocPlSetState
Long Name	Mfl_PlSetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.86 Mfl/MflRbMemoryLocations/mflRbMemLocPlTyp1Calc

Short Name	mflRbMemLocPlTyp1Calc
Long Name	Mfl_PlTyp1Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.87 Mfl/MflRbMemoryLocations/mflRbMemLocPITyp1LimCalc

Short Name	mflRbMemLocPITyp1LimCalc
Long Name	Mfl_PITyp1LimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.88 Mfl/MflRbMemoryLocations/mflRbMemLocPITyp2Calc

Short Name	mflRbMemLocPITyp2Calc
Long Name	Mfl_PITyp2Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.89 Mfl/MflRbMemoryLocations/mflRbMemLocPITyp2LimCalc

Short Name	mflRbMemLocPITyp2LimCalc
Long Name	Mfl_PITyp2LimCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.90 Mfl/MflRbMemoryLocations/mflRbMemLocPOutf32

Short Name	mflRbMemLocPOutf32
Long Name	Mfl_POut_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.91 Mfl/MflRbMemoryLocations/mflRbMemLocPT1Calc

Short Name	mflRbMemLocPT1Calc
Long Name	Mfl_PT1Calc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.92 Mfl/MflRbMemoryLocations/mflRbMemLocPT1Outf32

Short Name	mflRbMemLocPT1Outf32
Long Name	Mfl_PT1Out_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.93 Mfl/MflRbMemoryLocations/mflRbMemLocPT1SetState

Short Name	mflRbMemLocPT1SetState

Long Name	Mfl_PT1SetState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.94 Mfl/MflRbMemoryLocations/mflRbMemLocPowf32

Short Name	mflRbMemLocPowf32
Long Name	Mfl_Pow_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.95 Mfl/MflRbMemoryLocations/mflRbMemLocRSqrtf32

Short Name	mflRbMemLocRSqrtf32
Long Name	Mfl_RSqrt_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.96 Mfl/MflRbMemoryLocations/mflRbMemLocRampCalc

Short Name	mflRbMemLocRampCalc
Long Name	Mfl_RampCalc
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash

Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.97 Mfl/MflRbMemoryLocations/mflRbMemLocRampCalcJump

Short Name	mflRbMemLocRampCalcJump
Long Name	Mfl_RampCalcJump
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.98 Mfl/MflRbMemoryLocations/mflRbMemLocRampCalcSwitch

Short Name	mflRbMemLocRampCalcSwitch
Long Name	Mfl_RampCalcSwitch
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.99 Mfl/MflRbMemoryLocations/mflRbMemLocRampCheckActivity

Short Name	mflRbMemLocRampCheckActivity
Long Name	Mfl_RampCheckActivity
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.100 Mfl/MflRbMemoryLocations/mflRbMemLocRampGetSwitchPos

Short Name	mflRbMemLocRampGetSwitchPos
Long Name	Mfl_RampGetSwitchPos
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.101 Mfl/MflRbMemoryLocations/mflRbMemLocRampInitState

Short Name	mflRbMemLocRampInitState
Long Name	Mfl_RampInitState
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.102 Mfl/MflRbMemoryLocations/mflRbMemLocRampOutf32

Short Name	mflRbMemLocRampOutf32
Long Name	Mfl_RampOut_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE

Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.103 Mfl/MflRbMemoryLocations/mflRbMemLocRampSetParam

Short Name	mflRbMemLocRampSetParam
Long Name	Mfl_RampSetParam
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.104 Mfl/MflRbMemoryLocations/mflRbMemLocRateLimiterf32

Short Name	mflRbMemLocRateLimiterf32
Long Name	Mfl_RateLimiter_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.105 Mfl/MflRbMemoryLocations/mflRbMemLocRoundf32

Short Name	mflRbMemLocRoundf32
Long Name	Mfl_Round_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.106 Mfl/MflRbMemoryLocations/mflRbMemLocSignf32

Short Name	mflRbMemLocSignf32
Long Name	Mfl_Sign_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.107 Mfl/MflRbMemoryLocations/mflRbMemLocSinf32

Short Name	mflRbMemLocSinf32
Long Name	Mfl_Sin_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.108 Mfl/MflRbMemoryLocations/mflRbMemLocSins32f32

Short Name	mflRbMemLocSins32f32
Long Name	Mfl_Sin_s32_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.109 Mfl/MflRbMemoryLocations/mflRbMemLocSortAscendf32

Short Name	mflRbMemLocSortAscendf32
Long Name	Mfl_SortAscend_f32

Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.110 Mfl/MflRbMemoryLocations/mflRbMemLocSortDescendf32

Short Name	mflRbMemLocSortDescendf32
Long Name	Mfl_SortDescend_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.111 Mfl/MflRbMemoryLocations/mflRbMemLocSqrtf32

Short Name	mflRbMemLocSqrtf32
Long Name	Mfl_Sqrt_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.112 Mfl/MflRbMemoryLocations/mflRbMemLocTanf32

Short Name	mflRbMemLocTanf32
Long Name	Mfl_Tan_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-

Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.1.113 Mfl/MflRbMemoryLocations/mflRbMemLocTruncf32

Short Name	mflRbMemLocTruncf32
Long Name	Mfl_Trunc_f32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW
Type	ECUC-ENUMERATION-PARAM-DEF

8.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

8.4 Limitations

There are no known limitations in version v12.7.0.

8.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

8.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

8.7 API Definition

List of supported API

Mfl_GetVersionInfo

Returns the version information of this library.

Mfl_Cvrt_f32_<OutTypeMn>

Returns the integer value of the fixed point result of the conversion.

Implementation:

- `Mfl_Cvrt_f32_s16`
- `Mfl_Cvrt_f32_s32`
- `Mfl_Cvrt_f32_u16`
- `Mfl_Cvrt_f32_u32`

Mfl_Cvrt_<InTypeMn>_f32

Returns the floating-point result of the conversion.

Implementation:

- `Mfl_Cvrt_s16_f32`
- `Mfl_Cvrt_s32_f32`
- `Mfl_Cvrt_u16_f32`
- `Mfl_Cvrt_u32_f32`

Mfl_Trunc_f32

Returns the integer value determined by rounding the argument toward zero.

Mfl_Round_f32

Returns the integer value determined by rounding the argument toward the nearest whole number.

Mfl_Ceil_f32

Returns the integer value determined by rounding the argument toward positive infinity.

Mfl_Floor_f32

Returns the natural number value determined by rounding the argument toward negative infinity.

Mfl_PCalc

Differential equation: Y = K * X.

Mfl_POut_f32

Returns P controller's output value limited by the return data type.

Mfl_PT1Calc

Computes PT1 controller output value using the equation: Yn= exp(-dT/T1) * Yn-1+ K(1- exp(-dT/T1)) * Xn-1.

Mfl_PT1SetState

Initialises internal state variables of a PT1 element.

Mfl_CalcTeQ_f32

Calculates time equivalent factor.

Mfl_CalcTeQApp_f32

Calculates time equivalent factor.

Mfl_PT1Out_f32

Returns PT1 controller's output value.

Mfl_DT1Typ1Calc

Computes DT1 controller output value using differential equation: Yn= exp(-dT/T1) * Yn-1+ K * (1- exp(-dT/T1)) * ((Xn-1 - Xn-2) / dT).

Mfl_DT1Typ2Calc

Computes DT1 controller output value using differential equation: Yn= exp(-dT/T1) * Yn-1+ K * (1- exp(-dT/T1)) * ((Xn - Xn-1) / dT).

Mfl_DT1Typ1SetState

Initialises internal state variables of a DT1 element.

Mfl_DT1Typ2SetState

Initialises internal state variables of a DT1 element.

Mfl_DT1Typ1Out_f32

Returns DT1 controller's output value.

Mfl_DT1Typ2Out_f32

Returns DT1 controller's output value.

Mfl_PDCalc

Computes proportional plus derivative controller output value using differential equation: Yn= K(1+Tv/dT) * Xn- K(Tv/dT) * Xn-1.

Mfl_PDSetState

Initialises internal state variables of a PD element.

Mfl_PDSetParam

Sets the parameter structure of a PD element.

Mfl_PDOut_f32

Returns PD controller's output value.

Mfl_ICalc

Computes I controller output value using differential equation: Yn= Yn-1 + K * dT * Xn-1.

Mfl_ILimCalc

Computes I controller output value using differential equation: Yn= Yn-1 + K * dT * Xn-1.

Mfl_CtrlSetLimit

Updates limit structure.

Mfl_CtrlSetLimits

Updates limit structure.

Mfl_ISetState

Initialises internal state variables of an I element.

Mfl_IOut_f32

Returns I controller's output value.

Mfl_PITyp1Calc

Computes Proportional plus integral controller (implicit type) output value using differential equation: Yn= Yn-1+ K * Xn- K * (1 - dT/Tn) * Xn-1.

Mfl_PITyp1LimCalc

Computes Proportional plus integral controller (implicit type) output value using differential equation: Yn= Yn-1+ K * Xn- K * (1 - dT/Tn) * Xn-1.

Mfl_PITyp2Calc

Computes Proportional plus integral controller (explicit type) output value using differential equation: Yn= Yn-1 + K * (1 + dT/Tn) * Xn - K * Xn-1.

Mfl_PITyp2LimCalc

Computes Proportional plus integral controller (explicit type) output value using differential equation: Yn= Yn-1 + K * (1 + dT/Tn) * Xn - K * Xn-1.

Mfl_PISetState

Initialises internal state variables of a PI element.

Mfl_PISetParam

Sets the parameter structure of a PI element.

Mfl_PIOut_f32

Returns PI controller's output value.

Mfl_PIDTyp1Calc

Computes Proportional plus integral plus derivative controller (implicit type) output value using differential equation: Yn=Yn-1+ K * (1 + Tv/dT) * Xn- K *(1 - dT/Tn + 2Tv/dT) * Xn-1 + K * (Tv/dT) * Xn-2.

Mfl_PIDTyp1LimCalc

Computes Proportional plus integral plus derivative controller (implicit type) output value using differential equation: Yn=Yn-1+ K * (1 + Tv/dT) * Xn- K *(1 - dT/Tn + 2Tv/dT) * Xn-1 + K * (Tv/dT) * Xn-2.

Mfl_PIDTyp2Calc

Computes Proportional plus integral plus derivative controller (explicit type) output value using differential equation: Yn = Yn-1 + K * (1 + dT/Tn+ Tv/dT) * Xn- K *(1 + 2Tv/dT) * Xn-1+ K * (Tv/dT) * Xn-2.

Mfl_PIDTyp2LimCalc

Computes Proportional plus integral plus derivative controller (explicit type) output value using differential equation: Yn = Yn-1 + K * (1 + dT/Tn+ Tv/dT) * Xn- K *(1 + 2Tv/dT) * Xn-1+ K * (Tv/dT) * Xn-2

Mfl_PIDSetState

Initialises internal state variables of a PID element.

Mfl_PIDSetParam

Sets the parameter structure of a PID element.

Mfl_PIDOut_f32

Returns PID controller's output value.

Mfl_Abs_f32

Returns the absolute value of the argument (ValAbs).

Mfl_Sign_f32

Returns the sign of the argument (ValSign).

Mfl_Max_f32

Returns the value of the larger of the two arguments (ValMax).

Mfl_Min_f32

Returns the value of the smaller of the two arguments (Min).

Mfl_RateLimiter_f32

An increasing value and decreasing value is rate limited by maxdif.

Mfl_Limit_f32

Returns the bounded value (newVal), determined according to the equation: min(max(val, low), high).

Mfl_Pow_f32

Returns ValBase raised to the power of ValExp.

Mfl_Sqrt_f32

Returns the square root of the operand (ValSqrt).

Mfl_Exp_f32

Returns the exponential of the operand (ValExp).

Mfl_Log_f32

Returns the natural (base-e) logarithm of the operand (ValLog).

Mfl_Sin_f32

Calculates the sine of the argument.

Mfl_Cos_f32

Calculates the cosine of the argument.

Mfl_Tan_f32

Calculates the tangent of the argument.

Mfl_ArcSin_f32

Returns the arc sine of an angle, in the range of -pi/2 through pi/2.

Mfl_ArcCos_f32

Returns the arc cosine of an angle, in the range of 0.0 through pi.

Mfl_ArcTan_f32

Returns the arc tangent of an angle, in the range of -pi/2 through pi/2.

Mfl_ArcTan2_f32

Returns the arc tangent of an angle, in the range of [-pi to pi].

Mfl_Average_f32_f32

Returns mean value.

Mfl_ArrayAverage_f32_f32

Returns mean value of an array.

Mfl_Hypot_f32f32_f32

Computes the length of a vector.

Mfl_RampCalc

The ramp output value increases or decreases a value with slope * dT_f32 de-pending if (State_cpst→State_f32 > X_f32) or (State_cpst→State_f32 < X_f32).

Mfl_RampInitState

Initializes the state, direction and switch parameters for the ramp.

Mfl_RampSetParam

Sets the slope parameter for the ramp provided by the structure Mfl_ParamRam-p_Type.

Mfl_RampOut_f32

Returns the internal state of the ramp element.

Mfl_RampCalcJump

Works in addition to Mfl_RampCalc to provide a faster adaption to target value.

Mfl_RampCalcSwitch_f32

Switches ramp between two target values based on the Switch value.

Mfl_RampCalcSwitch

Switches ramp between two target values based on the Switch value.

Mfl_RampGetSwitchPos

Gets the current switch position of ramp switch function.

Mfl_RampCheckActivity

Checks the status of the ramp and returns a TRUE if the ramp is active, otherwise it returns FALSE.

Mfl_HystCenterHalfDelta_f32_u8

Hysteresis with center and left and right side halfDelta switching point.

Mfl_HystLeftRight_f32_u8

Hysteresis with left and right switching point.

Mfl_HystDeltaRight_f32_u8

Hysteresis with right switching point and delta to left switching point.

Mfl_HystLeftDelta_f32_u8

Hysteresis with left switching point and delta to right switching point.

Mfl_DeadTime_f32_f32

Returns input value with specified delay time.

Mfl_Debounce_u8_u8

Debounces a digital input signal and returns the state of the signal as a boolean value.

Mfl_DebounceInit

Stop the debouncing timer.

Mfl_DebounceSetparam

Sets timing parameters (time for high to low transition and time for low to high for debouncing).

Mfl_SortAscend_f32

Modifies the given input array in ascending order and returns sorted array result via pointer.

Mfl_SortDescend_f32

Modifies the given input array in descending order and returns sorted array result via pointer.

Mfl_MedianSort_f32_f32

Sorts values of an array in ascending order. Input array passed by the pointer shall have sorted values after this routine call.

Mfl_IntToFloatCvrt_<InTypeMn>_f32

Returns the Float value for the corresponding Integer input.

Implementation:

- `Mfl_IntToFloatCvrt_s16_f32`
- `Mfl_IntToFloatCvrt_s32_f32`
- `Mfl_IntToFloatCvrt_s8_f32`
- `Mfl_IntToFloatCvrt_u16_f32`
- `Mfl_IntToFloatCvrt_u32_f32`
- `Mfl_IntToFloatCvrt_u8_f32`

Mfl_FloatToIntCvrt_f32_<OutTypeMn>

Returns the Integer value for the corresponding floating point input.

Implementation:

- `Mfl_FloatToIntCvrt_f32_s16`
- `Mfl_FloatToIntCvrt_f32_s32`
- `Mfl_FloatToIntCvrt_f32_s8`

- `Mfl_FloatToIntCvrt_f32_u16`
- `Mfl_FloatToIntCvrt_f32_u32`
- `Mfl_FloatToIntCvrt_f32_u8`

For further information please refer to the AUTOSAR specification of Floating Point Math routines AUTOSAR_SWS_MFLLibrary.pdf

8.8 Configuration Advice

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

8.8.1 Additional Configuration Parameters

The following three extension parameters must be configured in Mfl_EcucValues.arxml when the Mfl module is used:

8.8.1.1 Mfl_VersionInfoAPI

This parameter controls the generation of the `Mfl_GetVersionInfo` function.

Table 8.115.Mfl_VersionInfoAPI Configuration Options

Option	Behaviour
`ON`	the `Mfl_GetVersionInfo` function will return the version information of the Mfl library.
`OFF`	the Mfl library will not provide the `Mfl_GetVersionInfo` function.

8.8.1.2 MflRbMemoryLocations

This parameter provides the option to configure the memory location of a specific service.

Table 8.116.MflRbMemoryLocations

Value	Memory Location
`NORMAL`	Normal flash.
`SLOW`	Slow flash.
`FAST`	Fast flash.
`INLINE`	The function is made inline.

For each routine available, select the appropriate location in memory.

MflRbAssemblyOptimization

TRUE	The assembly optimization is enabled.
FALSE	The assembly optimization is disabled.

> **NOTE**
>
> `MflRbAssemblyOptimization` is only specific to PS-EC and is not configurable by other projects. Its default value is FALSE.

8.9 Integration Advice

The include file “Mfl.h” provides all public function prototypes and types defined by the Mfl library specification. You need to include the “Mfl.h” file wherever required by application software.

8.9.1 Init Functions

No Init is required.

8.9.2 DeInit Functions

No DeInit is required.

8.9.3 Scheduled Functions

Mfl has no periodic functions.

8.9.4 Memory mapping

For user specific allocation, for the following #define directives , a corresponding memory allocation is required for the component.

- MFL_START_SEC_CODE
- MFL_STOP_SEC_CODE

Alternatively, the #define directives could be mapped to the default sections in the Mfx_MemMap.h file.

8.9.5 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user’s responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Mfl module does not use any exclusive OS resources.

8.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

9 Mfx Library

Module name	Mfx Library
Package	COMMON
AUTOSAR Module ID	211
AUTOSAR Version	22-11

9.1 Introduction

The Mfx Library provides re-entrant routines that can be used for Fixed Point arithmetic, with support for the following topics:

- Addition
- Subtraction
- Absolute value
- Absolute value of differences
- Multiplication
- Division
- Combination of multiplication and division
- Combination of multiplication and shift right
- Combination of division and shift left
- Modulo
- Limitation
- Minimum and maximum

The following functions are also available for 2^n Scaled Integers:

- Addition
- Subtraction
- Absolute value
- Absolute value of differences
- Multiplication
- Division
- Conversion (specific to 2^n Scaled Integers)

Module Configuration

This module is not currently supported by the RTA-BSW Configuration Generator (ConfGen) and must be manually configured.

9.2 Supported Features

- Arithmetic routines for Fixed Point values.

- All routines are re-entrant. They may be used by multiple runnables at the same time.

For further information please refer to the AUTOSAR specification of Fixed Point Math Routines (AUTOSAR_SWS_MFXLibrary.pdf).

9.3 Extensions

9.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

9.3.1.1 Mfx

Short Name	Mfx
Long Name	Fixed Point Math Library
Description	Fixed Point Math Library
Multiplicity	0..1
Default Value	-
Type	ECUC-MODULE-DEF

9.3.1.2 Mfx/MfxGeneral

Short Name	MfxGeneral
Long Name	General settings for Mfx
Description	General settings for Mfx with selections for used controller and activation of GetVersionInfo interface
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

9.3.1.3 Mfx/MfxGeneral/MfxRbAssemblyOptimization

Short Name	MfxRbAssemblyOptimization
Long Name	Select whether to enable or disable assembly optimization
Description	If MfxRbAssemblyOptimization is chosen as “True”, the assembly optimization is enabled. If MfxRbAssemblyOptimization is chosen as “False”, the assembly optimization is disabled. Note: This new configuration parameter, “MfxRbAssemblyOptimization” is only specific to PS-EC and is not configurable by other projects.

Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

9.3.1.4 Mfx/MfxGeneral/Mfx_VersionInfoAPI

Short Name	Mfx_VersionInfoAPI
Long Name	Configuration parameter for activation of Mfx_GetVersionInfo function.
Description	If MfxVersionInfoAPI is set to “ON”, the function MfxGetVersionInfo shall return the version information of the Mfx library. If MfxVersionInfoAPI is set to “OFF”, the Mfx library shall not provide the function Mfx_GetVersionInfo
Multiplicity	1..1
Default Value	-
Enumeration Literals	ON, OFF
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.5 Mfx/MfxRbMemoryLocations

Short Name	MfxRbMemoryLocations
Long Name	Memory locations
Description	Choose memory location settings for each single service
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

9.3.1.6 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffP2s16s16s16

Short Name	mfxRbMemLocAbsDiffP2s16s16s16
Long Name	Mfx_AbsDiffP2_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.7 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffP2s16s16u16

Short Name	mfxRbMemLocAbsDiffP2s16s16u16
Long Name	Mfx_AbsDiffP2_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.8 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffP2u16s16s16

Short Name	mfxRbMemLocAbsDiffP2u16s16s16
Long Name	Mfx_AbsDiffP2_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.9 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffP2u16s16u16

Short Name	mfxRbMemLocAbsDiffP2u16s16u16
Long Name	Mfx_AbsDiffP2_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.10 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffP2u16u16s16

Short Name	mfxRbMemLocAbsDiffP2u16u16s16
Long Name	Mfx_AbsDiffP2_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.11 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffP2u16u16u16

Short Name	mfxRbMemLocAbsDiffP2u16u16u16
Long Name	Mfx_AbsDiffP2_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.12 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs16s16s16

Short Name	mfxRbMemLocAbsDiffs16s16s16
Long Name	Mfx_AbsDiff_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.13 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs16s16s8

Short Name	mfxRbMemLocAbsDiffs16s16s8
Long Name	Mfx_AbsDiff_s16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.14 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs16s16u16

Short Name	mfxRbMemLocAbsDiffs16s16u16
Long Name	Mfx_AbsDiff_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.15 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs16s16u8

Short Name	mfxRbMemLocAbsDiffs16s16u8
Long Name	Mfx_AbsDiff_s16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.16 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs32s32s16

Short Name	mfxRbMemLocAbsDiffs32s32s16
Long Name	Mfx_AbsDiff_s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.17 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs32s32s32

Short Name	mfxRbMemLocAbsDiffs32s32s32
Long Name	Mfx_AbsDiff_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.18 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs32s32s8

Short Name	mfxRbMemLocAbsDiffs32s32s8
Long Name	Mfx_AbsDiff_s32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.19 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs32s32u16

Short Name	mfxRbMemLocAbsDiffs32s32u16
Long Name	Mfx_AbsDiff_s32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.20 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs32s32u32

Short Name	mfxRbMemLocAbsDiffs32s32u32
Long Name	Mfx_AbsDiff_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.21 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs32s32u8

Short Name	mfxRbMemLocAbsDiffs32s32u8
Long Name	Mfx_AbsDiff_s32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.22 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs8s8s8

Short Name	mfxRbMemLocAbsDiffs8s8s8
Long Name	Mfx_AbsDiff_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.23 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffs8s8u8

Short Name	mfxRbMemLocAbsDiffs8s8u8
Long Name	Mfx_AbsDiff_s8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.24 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu16s16s16

Short Name	mfxRbMemLocAbsDiffu16s16s16
Long Name	Mfx_AbsDiff_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.25 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu16s16s8

Short Name	mfxRbMemLocAbsDiffu16s16s8
Long Name	Mfx_AbsDiff_u16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.26 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu16s16u16

Short Name	mfxRbMemLocAbsDiffu16s16u16
Long Name	Mfx_AbsDiff_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.27 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu16s16u8

Short Name	mfxRbMemLocAbsDiffu16s16u8
Long Name	Mfx_AbsDiff_u16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.28 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu16u16s16

Short Name	mfxRbMemLocAbsDiffu16u16s16
Long Name	Mfx_AbsDiff_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.29 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu16u16s8

Short Name	mfxRbMemLocAbsDiffu16u16s8
Long Name	Mfx_AbsDiff_u16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.30 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu16u16u16

Short Name	mfxRbMemLocAbsDiffu16u16u16
Long Name	Mfx_AbsDiff_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.31 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu16u16u8

Short Name	mfxRbMemLocAbsDiffu16u16u8
Long Name	Mfx_AbsDiff_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.32 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu32s32u16

Short Name	mfxRbMemLocAbsDiffu32s32u16
Long Name	Mfx_AbsDiff_u32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.33 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu32s32u32

Short Name	mfxRbMemLocAbsDiffu32s32u32
Long Name	Mfx_AbsDiff_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.34 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu32s32u8

Short Name	mfxRbMemLocAbsDiffu32s32u8
Long Name	Mfx_AbsDiff_u32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.35 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu32u32u16

Short Name	mfxRbMemLocAbsDiffu32u32u16
Long Name	Mfx_AbsDiff_u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.36 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu32u32u32

Short Name	mfxRbMemLocAbsDiffu32u32u32
Long Name	Mfx_AbsDiff_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.37 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu32u32u8

Short Name	mfxRbMemLocAbsDiffu32u32u8
Long Name	Mfx_AbsDiff_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.38 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu8s8s8

Short Name	mfxRbMemLocAbsDiffu8s8s8
Long Name	Mfx_AbsDiff_u8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.39 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu8s8u8

Short Name	mfxRbMemLocAbsDiffu8s8u8
Long Name	Mfx_AbsDiff_u8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.40 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu8u8s8

Short Name	mfxRbMemLocAbsDiffu8u8s8
Long Name	Mfx_AbsDiff_u8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.41 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsDiffu8u8u8

Short Name	mfxRbMemLocAbsDiffu8u8u8
Long Name	Mfx_AbsDiff_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.42 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsP2s16s16

Short Name	mfxRbMemLocAbsP2s16s16
Long Name	Mfx_AbsP2_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.43 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsP2s16u16

Short Name	mfxRbMemLocAbsP2s16u16
Long Name	Mfx_AbsP2_s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.44 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsP2s32s32

Short Name	mfxRbMemLocAbsP2s32s32
Long Name	Mfx_AbsP2_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.45 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsP2s32u32

Short Name	mfxRbMemLocAbsP2s32u32
Long Name	Mfx_AbsP2_s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.46 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsdiffu32s32s16

Short Name	mfxRbMemLocAbsdiffu32s32s16
Long Name	Mfx_Absdiff_u32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.47 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsdiffu32s32s32

Short Name	mfxRbMemLocAbsdiffu32s32s32
Long Name	Mfx_Absdiff_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.48 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsdiffu32s32s8

Short Name	mfxRbMemLocAbsdiffu32s32s8
Long Name	Mfx_Absdiff_u32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.49 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsdiffu32u32s16

Short Name	mfxRbMemLocAbsdiffu32u32s16
Long Name	Mfx_Absdiff_u32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.50 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsdiffu32u32s32

Short Name	mfxRbMemLocAbsdiffu32u32s32
Long Name	Mfx_Absdiff_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.51 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbsdiffu32u32s8

Short Name	mfxRbMemLocAbsdiffu32u32s8
Long Name	Mfx_Absdiff_u32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.52 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss16s16

Short Name	mfxRbMemLocAbss16s16
Long Name	Mfx_Abs_s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.53 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss16u16

Short Name	mfxRbMemLocAbss16u16
Long Name	Mfx_Abs_s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.54 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss32s16

Short Name	mfxRbMemLocAbss32s16
Long Name	Mfx_Abs_s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.55 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss32s32

Short Name	mfxRbMemLocAbss32s32
Long Name	Mfx_Abs_s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.56 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss32s8

Short Name	mfxRbMemLocAbss32s8
Long Name	Mfx_Abs_s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.57 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss32u16

Short Name	mfxRbMemLocAbss32u16
Long Name	Mfx_Abs_s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.58 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss32u32

Short Name	mfxRbMemLocAbss32u32
Long Name	Mfx_Abs_s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.59 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss32u8

Short Name	mfxRbMemLocAbss32u8
Long Name	Mfx_Abs_s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.60 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss8s8

Short Name	mfxRbMemLocAbss8s8
Long Name	Mfx_Abs_s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.61 Mfx/MfxRbMemoryLocations/mfxRbMemLocAbss8u8

Short Name	mfxRbMemLocAbss8u8
Long Name	Mfx_Abs_s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.62 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2s16s16s16

Short Name	mfxRbMemLocAddP2s16s16s16
Long Name	Mfx_AddP2_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.63 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2s16s16u16

Short Name	mfxRbMemLocAddP2s16s16u16
Long Name	Mfx_AddP2_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.64 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2s32s32s32

Short Name	mfxRbMemLocAddP2s32s32s32
Long Name	Mfx_AddP2_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.65 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2s32s32u32

Short Name	mfxRbMemLocAddP2s32s32u32
Long Name	Mfx_AddP2_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.66 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2u16s16s16

Short Name	mfxRbMemLocAddP2u16s16s16
Long Name	Mfx_AddP2_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.67 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2u16s16u16

Short Name	mfxRbMemLocAddP2u16s16u16
Long Name	Mfx_AddP2_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.68 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2u16u16s16

Short Name	mfxRbMemLocAddP2u16u16s16
Long Name	Mfx_AddP2_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.69 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2u16u16u16

Short Name	mfxRbMemLocAddP2u16u16u16
Long Name	Mfx_AddP2_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.70 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2u32s32s32

Short Name	mfxRbMemLocAddP2u32s32s32
Long Name	Mfx_AddP2_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.71 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2u32s32u32

Short Name	mfxRbMemLocAddP2u32s32u32
Long Name	Mfx_AddP2_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.72 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2u32u32s32

Short Name	mfxRbMemLocAddP2u32u32s32
Long Name	Mfx_AddP2_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.73 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddP2u32u32u32

Short Name	mfxRbMemLocAddP2u32u32u32
Long Name	Mfx_AddP2_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.74 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds16s16s16

Short Name	mfxRbMemLocAdds16s16s16
Long Name	Mfx_Add_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.75 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds16s16s8

Short Name	mfxRbMemLocAdds16s16s8
Long Name	Mfx_Add_s16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.76 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds16s16u16

Short Name	mfxRbMemLocAdds16s16u16
Long Name	Mfx_Add_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.77 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds16s16u8

Short Name	mfxRbMemLocAdds16s16u8
Long Name	Mfx_Add_s16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.78 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds32s32s16

Short Name	mfxRbMemLocAdds32s32s16
Long Name	Mfx_Add_s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.79 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds32s32s32

Short Name	mfxRbMemLocAdds32s32s32
Long Name	Mfx_Add_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.80 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds32s32s8

Short Name	mfxRbMemLocAdds32s32s8
Long Name	Mfx_Add_s32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.81 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds32s32u16

Short Name	mfxRbMemLocAdds32s32u16
Long Name	Mfx_Add_s32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.82 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds32s32u32

Short Name	mfxRbMemLocAdds32s32u32
Long Name	Mfx_Add_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.83 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds32s32u8

Short Name	mfxRbMemLocAdds32s32u8
Long Name	Mfx_Add_s32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.84 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds8s8s8

Short Name	mfxRbMemLocAdds8s8s8
Long Name	Mfx_Add_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.85 Mfx/MfxRbMemoryLocations/mfxRbMemLocAdds8s8u8

Short Name	mfxRbMemLocAdds8s8u8
Long Name	Mfx_Add_s8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.86 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu16s16s16

Short Name	mfxRbMemLocAddu16s16s16
Long Name	Mfx_Add_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.87 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu16s16s8

Short Name	mfxRbMemLocAddu16s16s8
Long Name	Mfx_Add_u16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.88 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu16s16u16

Short Name	mfxRbMemLocAddu16s16u16
Long Name	Mfx_Add_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.89 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu16s16u8

Short Name	mfxRbMemLocAddu16s16u8
Long Name	Mfx_Add_u16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.90 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu16u16s16

Short Name	mfxRbMemLocAddu16u16s16
Long Name	Mfx_Add_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.91 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu16u16s8

Short Name	mfxRbMemLocAddu16u16s8
Long Name	Mfx_Add_u16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.92 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu16u16u16

Short Name	mfxRbMemLocAddu16u16u16
Long Name	Mfx_Add_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.93 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu16u16u8

Short Name	mfxRbMemLocAddu16u16u8
Long Name	Mfx_Add_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.94 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32s32s16

Short Name	mfxRbMemLocAddu32s32s16
Long Name	Mfx_Add_u32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.95 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32s32s32

Short Name	mfxRbMemLocAddu32s32s32
Long Name	Mfx_Add_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.96 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32s32s8

Short Name	mfxRbMemLocAddu32s32s8
Long Name	Mfx_Add_u32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.97 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32s32u16

Short Name	mfxRbMemLocAddu32s32u16
Long Name	Mfx_Add_u32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.98 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32s32u32

Short Name	mfxRbMemLocAddu32s32u32
Long Name	Mfx_Add_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.99 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32s32u8

Short Name	mfxRbMemLocAddu32s32u8
Long Name	Mfx_Add_u32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.100 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32u32s16

Short Name	mfxRbMemLocAddu32u32s16
Long Name	Mfx_Add_u32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.101 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32u32s32

Short Name	mfxRbMemLocAddu32u32s32
Long Name	Mfx_Add_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.102 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32u32s8

Short Name	mfxRbMemLocAddu32u32s8
Long Name	Mfx_Add_u32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.103 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32u32u16

Short Name	mfxRbMemLocAddu32u32u16
Long Name	Mfx_Add_u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.104 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32u32u32

Short Name	mfxRbMemLocAddu32u32u32
Long Name	Mfx_Add_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.105 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu32u32u8

Short Name	mfxRbMemLocAddu32u32u8
Long Name	Mfx_Add_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.106 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu8s8s8

Short Name	mfxRbMemLocAddu8s8s8
Long Name	Mfx_Add_u8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.107 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu8s8u8

Short Name	mfxRbMemLocAddu8s8u8
Long Name	Mfx_Add_u8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.108 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu8u8s8

Short Name	mfxRbMemLocAddu8u8s8
Long Name	Mfx_Add_u8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.109 Mfx/MfxRbMemoryLocations/mfxRbMemLocAddu8u8u8

Short Name	mfxRbMemLocAddu8u8u8
Long Name	Mfx_Add_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.110 Mfx/MfxRbMemoryLocations/mfxRbMemLocConvertP2s16s32

Short Name	mfxRbMemLocConvertP2s16s32
Long Name	Mfx_ConvertP2_s16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.111 Mfx/MfxRbMemoryLocations/mfxRbMemLocConvertP2s16s8

Short Name	mfxRbMemLocConvertP2s16s8
Long Name	Mfx_ConvertP2_s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.112 Mfx/MfxRbMemoryLocations/mfxRbMemLocConvertP2s32s16

Short Name	mfxRbMemLocConvertP2s32s16
Long Name	Mfx_ConvertP2_s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.113 Mfx/MfxRbMemoryLocations/mfxRbMemLocConvertP2s8s16

Short Name	mfxRbMemLocConvertP2s8s16
Long Name	Mfx_ConvertP2_s8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.114 Mfx/MfxRbMemoryLocations/mfxRbMemLocConvertP2u16u32

Short Name	mfxRbMemLocConvertP2u16u32
Long Name	Mfx_ConvertP2_u16_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.115 Mfx/MfxRbMemoryLocations/mfxRbMemLocConvertP2u16u8

Short Name	mfxRbMemLocConvertP2u16u8
Long Name	Mfx_ConvertP2_u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.116 Mfx/MfxRbMemoryLocations/mfxRbMemLocConvertP2u32u16

Short Name	mfxRbMemLocConvertP2u32u16
Long Name	Mfx_ConvertP2_u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.117 Mfx/MfxRbMemoryLocations/mfxRbMemLocConvertP2u8u16

Short Name	mfxRbMemLocConvertP2u8u16
Long Name	Mfx_ConvertP2_u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.118 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2s16s16s16

Short Name	mfxRbMemLocDivP2s16s16s16
Long Name	Mfx_DivP2_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.119 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2s16s16u16

Short Name	mfxRbMemLocDivP2s16s16u16
Long Name	Mfx_DivP2_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.120 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2s16u16s16

Short Name	mfxRbMemLocDivP2s16u16s16
Long Name	Mfx_DivP2_s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.121 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2s16u16u16

Short Name	mfxRbMemLocDivP2s16u16u16
Long Name	Mfx_DivP2_s16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.122 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2s32s32s32

Short Name	mfxRbMemLocDivP2s32s32s32
Long Name	Mfx_DivP2_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.123 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2s32s32u32

Short Name	mfxRbMemLocDivP2s32s32u32
Long Name	Mfx_DivP2_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.124 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2s32u32s32

Short Name	mfxRbMemLocDivP2s32u32s32
Long Name	Mfx_DivP2_s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.125 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2s32u32u32

Short Name	mfxRbMemLocDivP2s32u32u32
Long Name	Mfx_DivP2_s32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.126 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2u16s16s16

Short Name	mfxRbMemLocDivP2u16s16s16
Long Name	Mfx_DivP2_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.127 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2u16s16u16

Short Name	mfxRbMemLocDivP2u16s16u16
Long Name	Mfx_DivP2_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.128 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2u16u16s16

Short Name	mfxRbMemLocDivP2u16u16s16
Long Name	Mfx_DivP2_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.129 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2u16u16u16

Short Name	mfxRbMemLocDivP2u16u16u16
Long Name	Mfx_DivP2_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.130 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2u32s32s32

Short Name	mfxRbMemLocDivP2u32s32s32
Long Name	Mfx_DivP2_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.131 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2u32s32u32

Short Name	mfxRbMemLocDivP2u32s32u32
Long Name	Mfx_DivP2_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.132 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2u32u32s32

Short Name	mfxRbMemLocDivP2u32u32s32
Long Name	Mfx_DivP2_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.133 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivP2u32u32u32

Short Name	mfxRbMemLocDivP2u32u32u32
Long Name	Mfx_DivP2_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.134 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s16s16u8s16

Short Name	mfxRbMemLocDivShLefts16s16u8s16
Long Name	Mfx_DivShLeft_s16s16u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.135 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s16u16u8s16

Short Name	mfxRbMemLocDivShLefts16u16u8s16
Long Name	Mfx_DivShLeft_s16u16u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.136 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s32s32u8s16

Short Name	mfxRbMemLocDivShLefts32s32u8s16
Long Name	Mfx_DivShLeft_s32s32u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.137 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s32s32u8s32

Short Name	mfxRbMemLocDivShLefts32s32u8s32
Long Name	Mfx_DivShLeft_s32s32u8_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.138 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLefts32s32u8s8

Short Name	mfxRbMemLocDivShLefts32s32u8s8
Long Name	Mfx_DivShLeft_s32s32u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.139 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s32s32u8u16

Short Name	mfxRbMemLocDivShLefts32s32u8u16
Long Name	Mfx_DivShLeft_s32s32u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.140 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s32s32u8u32

Short Name	mfxRbMemLocDivShLefts32s32u8u32
Long Name	Mfx_DivShLeft_s32s32u8_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.141 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLefts32s32u8u8

Short Name	mfxRbMemLocDivShLefts32s32u8u8
Long Name	Mfx_DivShLeft_s32s32u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.142 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s32u32u8s16

Short Name	mfxRbMemLocDivShLefts32u32u8s16
Long Name	Mfx_DivShLeft_s32u32u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.143 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s32u32u8s32

Short Name	mfxRbMemLocDivShLefts32u32u8s32
Long Name	Mfx_DivShLeft_s32u32u8_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.144 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLefts32u32u8s8

Short Name	mfxRbMemLocDivShLefts32u32u8s8
Long Name	Mfx_DivShLeft_s32u32u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.145 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s32u32u8u16

Short Name	mfxRbMemLocDivShLefts32u32u8u16
Long Name	Mfx_DivShLeft_s32u32u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.146 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-s32u32u8u32

Short Name	mfxRbMemLocDivShLefts32u32u8u32
Long Name	Mfx_DivShLeft_s32u32u8_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.147 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLefts32u32u8u8

Short Name	mfxRbMemLocDivShLefts32u32u8u8
Long Name	Mfx_DivShLeft_s32u32u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.148 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u16u16u8u16

Short Name	mfxRbMemLocDivShLeftu16u16u8u16
Long Name	Mfx_DivShLeft_u16u16u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.149 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeftu16u16u8u8

Short Name	mfxRbMemLocDivShLeftu16u16u8u8
Long Name	Mfx_DivShLeft_u16u16u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.150 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32s32u8s16

Short Name	mfxRbMemLocDivShLeftu32s32u8s16
Long Name	Mfx_DivShLeft_u32s32u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.151 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32s32u8s32

Short Name	mfxRbMemLocDivShLeftu32s32u8s32
Long Name	Mfx_DivShLeft_u32s32u8_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.152 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeftu32s32u8s8

Short Name	mfxRbMemLocDivShLeftu32s32u8s8
Long Name	Mfx_DivShLeft_u32s32u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.153 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32s32u8u16

Short Name	mfxRbMemLocDivShLeftu32s32u8u16
Long Name	Mfx_DivShLeft_u32s32u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.154 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32s32u8u32

Short Name	mfxRbMemLocDivShLeftu32s32u8u32
Long Name	Mfx_DivShLeft_u32s32u8_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.155 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeftu32s32u8u8

Short Name	mfxRbMemLocDivShLeftu32s32u8u8
Long Name	Mfx_DivShLeft_u32s32u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.156 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32u32u8s16

Short Name	mfxRbMemLocDivShLeftu32u32u8s16
Long Name	Mfx_DivShLeft_u32u32u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.157 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32u32u8s32

Short Name	mfxRbMemLocDivShLeftu32u32u8s32
Long Name	Mfx_DivShLeft_u32u32u8_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.158 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeftu32u32u8s8

Short Name	mfxRbMemLocDivShLeftu32u32u8s8
Long Name	Mfx_DivShLeft_u32u32u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.159 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32u32u8u16

Short Name	mfxRbMemLocDivShLeftu32u32u8u16
Long Name	Mfx_DivShLeft_u32u32u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.160 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32u32u8u32

Short Name	mfxRbMemLocDivShLeftu32u32u8u32
Long Name	Mfx_DivShLeft_u32u32u8_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.161 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeft-u32u32u8u8

Short Name	mfxRbMemLocDivShLeftu32u32u8u8
Long Name	Mfx_DivShLeft_u32u32u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.162 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivShLeftu8u8u8u8

Short Name	mfxRbMemLocDivShLeftu8u8u8u8
Long Name	Mfx_DivShLeft_u8u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.163 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs16s16s16

Short Name	mfxRbMemLocDivs16s16s16
Long Name	Mfx_Div_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.164 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs16s16s8

Short Name	mfxRbMemLocDivs16s16s8
Long Name	Mfx_Div_s16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.165 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs16s16u16

Short Name	mfxRbMemLocDivs16s16u16
Long Name	Mfx_Div_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.166 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs16s16u8

Short Name	mfxRbMemLocDivs16s16u8
Long Name	Mfx_Div_s16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.167 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs16u16s16

Short Name	mfxRbMemLocDivs16u16s16
Long Name	Mfx_Div_s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.168 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs16u16s8

Short Name	mfxRbMemLocDivs16u16s8
Long Name	Mfx_Div_s16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.169 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs16u16u16

Short Name	mfxRbMemLocDivs16u16u16
Long Name	Mfx_Div_s16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.170 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs16u16u8

Short Name	mfxRbMemLocDivs16u16u8
Long Name	Mfx_Div_s16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.171 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32s16s16

Short Name	mfxRbMemLocDivs32s16s16
Long Name	Mfx_Div_s32s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.172 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32s32s16

Short Name	mfxRbMemLocDivs32s32s16
Long Name	Mfx_Div_s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.173 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32s32s32

Short Name	mfxRbMemLocDivs32s32s32
Long Name	Mfx_Div_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.174 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32s32s8

Short Name	mfxRbMemLocDivs32s32s8
Long Name	Mfx_Div_s32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.175 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32s32u16

Short Name	mfxRbMemLocDivs32s32u16
Long Name	Mfx_Div_s32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.176 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32s32u32

Short Name	mfxRbMemLocDivs32s32u32
Long Name	Mfx_Div_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.177 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32s32u8

Short Name	mfxRbMemLocDivs32s32u8
Long Name	Mfx_Div_s32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.178 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32u16u16

Short Name	mfxRbMemLocDivs32u16u16
Long Name	Mfx_Div_s32u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.179 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32u32s16

Short Name	mfxRbMemLocDivs32u32s16
Long Name	Mfx_Div_s32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.180 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32u32s32

Short Name	mfxRbMemLocDivs32u32s32
Long Name	Mfx_Div_s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.181 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32u32s8

Short Name	mfxRbMemLocDivs32u32s8
Long Name	Mfx_Div_s32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.182 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32u32u16

Short Name	mfxRbMemLocDivs32u32u16
Long Name	Mfx_Div_s32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.183 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32u32u32

Short Name	mfxRbMemLocDivs32u32u32
Long Name	Mfx_Div_s32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.184 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs32u32u8

Short Name	mfxRbMemLocDivs32u32u8
Long Name	Mfx_Div_s32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.185 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs8s8s8

Short Name	mfxRbMemLocDivs8s8s8
Long Name	Mfx_Div_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.186 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs8s8u8

Short Name	mfxRbMemLocDivs8s8u8
Long Name	Mfx_Div_s8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.187 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs8u8s8

Short Name	mfxRbMemLocDivs8u8s8
Long Name	Mfx_Div_s8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.188 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivs8u8u8

Short Name	mfxRbMemLocDivs8u8u8
Long Name	Mfx_Div_s8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.189 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu16s16s16

Short Name	mfxRbMemLocDivu16s16s16
Long Name	Mfx_Div_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.190 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu16s16s8

Short Name	mfxRbMemLocDivu16s16s8
Long Name	Mfx_Div_u16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.191 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu16s16u16

Short Name	mfxRbMemLocDivu16s16u16
Long Name	Mfx_Div_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.192 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu16s16u8

Short Name	mfxRbMemLocDivu16s16u8
Long Name	Mfx_Div_u16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.193 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu16u16s16

Short Name	mfxRbMemLocDivu16u16s16
Long Name	Mfx_Div_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.194 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu16u16s8

Short Name	mfxRbMemLocDivu16u16s8
Long Name	Mfx_Div_u16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.195 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu16u16u16

Short Name	mfxRbMemLocDivu16u16u16
Long Name	Mfx_Div_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.196 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu16u16u8

Short Name	mfxRbMemLocDivu16u16u8
Long Name	Mfx_Div_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.197 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32s32s16

Short Name	mfxRbMemLocDivu32s32s16
Long Name	Mfx_Div_u32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.198 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32s32s32

Short Name	mfxRbMemLocDivu32s32s32
Long Name	Mfx_Div_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.199 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32s32s8

Short Name	mfxRbMemLocDivu32s32s8
Long Name	Mfx_Div_u32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.200 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32s32u16

Short Name	mfxRbMemLocDivu32s32u16
Long Name	Mfx_Div_u32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.201 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32s32u32

Short Name	mfxRbMemLocDivu32s32u32
Long Name	Mfx_Div_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.202 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32s32u8

Short Name	mfxRbMemLocDivu32s32u8
Long Name	Mfx_Div_u32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.203 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32u16u16

Short Name	mfxRbMemLocDivu32u16u16
Long Name	Mfx_Div_u32u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.204 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32u16u32

Short Name	mfxRbMemLocDivu32u16u32
Long Name	Mfx_Div_u32u16_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.205 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32u32s16

Short Name	mfxRbMemLocDivu32u32s16
Long Name	Mfx_Div_u32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.206 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32u32s32

Short Name	mfxRbMemLocDivu32u32s32
Long Name	Mfx_Div_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.207 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32u32s8

Short Name	mfxRbMemLocDivu32u32s8
Long Name	Mfx_Div_u32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.208 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32u32u16

Short Name	mfxRbMemLocDivu32u32u16
Long Name	Mfx_Div_u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.209 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32u32u32

Short Name	mfxRbMemLocDivu32u32u32
Long Name	Mfx_Div_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.210 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu32u32u8

Short Name	mfxRbMemLocDivu32u32u8
Long Name	Mfx_Div_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.211 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu8s8s8

Short Name	mfxRbMemLocDivu8s8s8
Long Name	Mfx_Div_u8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.212 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu8s8u8

Short Name	mfxRbMemLocDivu8s8u8
Long Name	Mfx_Div_u8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.213 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu8u8s8

Short Name	mfxRbMemLocDivu8u8s8
Long Name	Mfx_Div_u8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.214 Mfx/MfxRbMemoryLocations/mfxRbMemLocDivu8u8u8

Short Name	mfxRbMemLocDivu8u8u8
Long Name	Mfx_Div_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.215 Mfx/MfxRbMemoryLocations/mfxRbMemLocLimits16

Short Name	mfxRbMemLocLimits16
Long Name	Mfx_Limit_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.216 Mfx/MfxRbMemoryLocations/mfxRbMemLocLimits32

Short Name	mfxRbMemLocLimits32
Long Name	Mfx_Limit_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.217 Mfx/MfxRbMemoryLocations/mfxRbMemLocLimits8

Short Name	mfxRbMemLocLimits8
Long Name	Mfx_Limit_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.218 Mfx/MfxRbMemoryLocations/mfxRbMemLocLimitu16

Short Name	mfxRbMemLocLimitu16
Long Name	Mfx_Limit_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.219 Mfx/MfxRbMemoryLocations/mfxRbMemLocLimitu32

Short Name	mfxRbMemLocLimitu32
Long Name	Mfx_Limit_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.220 Mfx/MfxRbMemoryLocations/mfxRbMemLocLimitu8

Short Name	mfxRbMemLocLimitu8
Long Name	Mfx_Limit_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.221 Mfx/MfxRbMemoryLocations/mfxRbMemLocMaxs16

Short Name	mfxRbMemLocMaxs16
Long Name	Mfx_Max_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.222 Mfx/MfxRbMemoryLocations/mfxRbMemLocMaxs32

Short Name	mfxRbMemLocMaxs32
Long Name	Mfx_Max_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.223 Mfx/MfxRbMemoryLocations/mfxRbMemLocMaxs8

Short Name	mfxRbMemLocMaxs8
Long Name	Mfx_Max_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.224 Mfx/MfxRbMemoryLocations/mfxRbMemLocMaxu16

Short Name	mfxRbMemLocMaxu16
Long Name	Mfx_Max_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.225 Mfx/MfxRbMemoryLocations/mfxRbMemLocMaxu32

Short Name	mfxRbMemLocMaxu32
Long Name	Mfx_Max_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.226 Mfx/MfxRbMemoryLocations/mfxRbMemLocMaxu8

Short Name	mfxRbMemLocMaxu8
Long Name	Mfx_Max_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.227 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinmaxs16

Short Name	mfxRbMemLocMinmaxs16
Long Name	Mfx_Minmax_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.228 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinmaxs32

Short Name	mfxRbMemLocMinmaxs32
Long Name	Mfx_Minmax_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.229 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinmaxs8

Short Name	mfxRbMemLocMinmaxs8
Long Name	Mfx_Minmax_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.230 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinmaxu16

Short Name	mfxRbMemLocMinmaxu16
Long Name	Mfx_Minmax_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.231 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinmaxu32

Short Name	mfxRbMemLocMinmaxu32
Long Name	Mfx_Minmax_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.232 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinmaxu8

Short Name	mfxRbMemLocMinmaxu8
Long Name	Mfx_Minmax_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.233 Mfx/MfxRbMemoryLocations/mfxRbMemLocMins16

Short Name	mfxRbMemLocMins16
Long Name	Mfx_Min_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.234 Mfx/MfxRbMemoryLocations/mfxRbMemLocMins32

Short Name	mfxRbMemLocMins32
Long Name	Mfx_Min_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.235 Mfx/MfxRbMemoryLocations/mfxRbMemLocMins8

Short Name	mfxRbMemLocMins8
Long Name	Mfx_Min_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.236 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinu16

Short Name	mfxRbMemLocMinu16
Long Name	Mfx_Min_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.237 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinu32

Short Name	mfxRbMemLocMinu32
Long Name	Mfx_Min_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.238 Mfx/MfxRbMemoryLocations/mfxRbMemLocMinu8

Short Name	mfxRbMemLocMinu8
Long Name	Mfx_Min_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.239 Mfx/MfxRbMemoryLocations/mfxRbMemLocMods16

Short Name	mfxRbMemLocMods16
Long Name	Mfx_Mod_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.240 Mfx/MfxRbMemoryLocations/mfxRbMemLocMods32

Short Name	mfxRbMemLocMods32
Long Name	Mfx_Mod_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.241 Mfx/MfxRbMemoryLocations/mfxRbMemLocMods32s32s16

Short Name	mfxRbMemLocMods32s32s16
Long Name	Mfx_Mod_s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.242 Mfx/MfxRbMemoryLocations/mfxRbMemLocMods32s32s8

Short Name	mfxRbMemLocMods32s32s8
Long Name	Mfx_Mod_s32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.243 Mfx/MfxRbMemoryLocations/mfxRbMemLocMods8

Short Name	mfxRbMemLocMods8
Long Name	Mfx_Mod_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.244 Mfx/MfxRbMemoryLocations/mfxRbMemLocModu16

Short Name	mfxRbMemLocModu16
Long Name	Mfx_Mod_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.245 Mfx/MfxRbMemoryLocations/mfxRbMemLocModu32

Short Name	mfxRbMemLocModu32
Long Name	Mfx_Mod_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.246 Mfx/MfxRbMemoryLocations/mfxRbMemLocModu32u32u16

Short Name	mfxRbMemLocModu32u32u16
Long Name	Mfx_Mod_u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.247 Mfx/MfxRbMemoryLocations/mfxRbMemLocModu32u32u8

Short Name	mfxRbMemLocModu32u32u8
Long Name	Mfx_Mod_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.248 Mfx/MfxRbMemoryLocations/mfxRbMemLocModu8

Short Name	mfxRbMemLocModu8
Long Name	Mfx_Mod_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.249 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs16s16s16s16

Short Name	mfxRbMemLocMulDivs16s16s16s16
Long Name	Mfx_MulDiv_s16s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.250 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs16s16u16s16

Short Name	mfxRbMemLocMulDivs16s16u16s16
Long Name	Mfx_MulDiv_s16s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.251 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs16u16s16s16

Short Name	mfxRbMemLocMulDivs16u16s16s16
Long Name	Mfx_MulDiv_s16u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.252 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs16u16s16u16

Short Name	mfxRbMemLocMulDivs16u16s16u16
Long Name	Mfx_MulDiv_s16u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.253 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs16u16u16s16

Short Name	mfxRbMemLocMulDivs16u16u16s16
Long Name	Mfx_MulDiv_s16u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.254 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs16u16u16u16

Short Name	mfxRbMemLocMulDivs16u16u16u16
Long Name	Mfx_MulDiv_s16u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.255 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs32s32s16s16

Short Name	mfxRbMemLocMulDivs32s32s16s16
Long Name	Mfx_MulDiv_s32s32s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.256 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs32s32s32s16

Short Name	mfxRbMemLocMulDivs32s32s32s16
Long Name	Mfx_MulDiv_s32s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.257 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs32s32s32s32

Short Name	mfxRbMemLocMulDivs32s32s32s32
Long Name	Mfx_MulDiv_s32s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.258 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs32s32s32u16

Short Name	mfxRbMemLocMulDivs32s32s32u16
Long Name	Mfx_MulDiv_s32s32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.259 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs32s32u32s32

Short Name	mfxRbMemLocMulDivs32s32u32s32
Long Name	Mfx_MulDiv_s32s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.260 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs32u32s32s32

Short Name	mfxRbMemLocMulDivs32u32s32s32
Long Name	Mfx_MulDiv_s32u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.261 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivs32u32u32s32

Short Name	mfxRbMemLocMulDivs32u32u32s32
Long Name	Mfx_MulDiv_s32u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.262 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu16s16s16s16

Short Name	mfxRbMemLocMulDivu16s16s16s16
Long Name	Mfx_MulDiv_u16s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.263 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu16s16s16u16

Short Name	mfxRbMemLocMulDivu16s16s16u16
Long Name	Mfx_MulDiv_u16s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.264 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu16s16u16s16

Short Name	mfxRbMemLocMulDivu16s16u16s16
Long Name	Mfx_MulDiv_u16s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.265 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu16s16u16u16

Short Name	mfxRbMemLocMulDivu16s16u16u16
Long Name	Mfx_MulDiv_u16s16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.266 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu16u16u16u16

Short Name	mfxRbMemLocMulDivu16u16u16u16
Long Name	Mfx_MulDiv_u16u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.267 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu32s32s32s32

Short Name	mfxRbMemLocMulDivu32s32s32s32
Long Name	Mfx_MulDiv_u32s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.268 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu32s32s32u32

Short Name	mfxRbMemLocMulDivu32s32s32u32
Long Name	Mfx_MulDiv_u32s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.269 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu32s32u32s32

Short Name	mfxRbMemLocMulDivu32s32u32s32
Long Name	Mfx_MulDiv_u32s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.270 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu32s32u32u32

Short Name	mfxRbMemLocMulDivu32s32u32u32
Long Name	Mfx_MulDiv_u32s32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.271 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu32u32s32u32

Short Name	mfxRbMemLocMulDivu32u32s32u32
Long Name	Mfx_MulDiv_u32u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.272 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu32u32u16u16

Short Name	mfxRbMemLocMulDivu32u32u16u16
Long Name	Mfx_MulDiv_u32u32u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.273 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu32u32u32u16

Short Name	mfxRbMemLocMulDivu32u32u32u16
Long Name	Mfx_MulDiv_u32u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.274 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulDivu32u32u32u32

Short Name	mfxRbMemLocMulDivu32u32u32u32
Long Name	Mfx_MulDiv_u32u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.275 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2s16s16s16

Short Name	mfxRbMemLocMulP2s16s16s16
Long Name	Mfx_MulP2_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.276 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2s16s16u16

Short Name	mfxRbMemLocMulP2s16s16u16
Long Name	Mfx_MulP2_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.277 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2s32s32s32

Short Name	mfxRbMemLocMulP2s32s32s32
Long Name	Mfx_MulP2_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.278 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2s32s32u32

Short Name	mfxRbMemLocMulP2s32s32u32
Long Name	Mfx_MulP2_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.279 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2u16s16s16

Short Name	mfxRbMemLocMulP2u16s16s16
Long Name	Mfx_MulP2_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.280 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2u16s16u16

Short Name	mfxRbMemLocMulP2u16s16u16
Long Name	Mfx_MulP2_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.281 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2u16u16s16

Short Name	mfxRbMemLocMulP2u16u16s16
Long Name	Mfx_MulP2_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.282 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2u16u16u16

Short Name	mfxRbMemLocMulP2u16u16u16
Long Name	Mfx_MulP2_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.283 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2u32s32s32

Short Name	mfxRbMemLocMulP2u32s32s32
Long Name	Mfx_MulP2_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.284 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2u32s32u32

Short Name	mfxRbMemLocMulP2u32s32u32
Long Name	Mfx_MulP2_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.285 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2u32u32s32

Short Name	mfxRbMemLocMulP2u32u32s32
Long Name	Mfx_MulP2_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.286 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulP2u32u32u32

Short Name	mfxRbMemLocMulP2u32u32u32
Long Name	Mfx_MulP2_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.287 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s16s16u8s16

Short Name	mfxRbMemLocMulShRights16s16u8s16
Long Name	Mfx_MulShRight_s16s16u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.288 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s16s16u8s8

Short Name	mfxRbMemLocMulShRights16s16u8s8
Long Name	Mfx_MulShRight_s16s16u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.289 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s16s16u8u16

Short Name	mfxRbMemLocMulShRights16s16u8u16
Long Name	Mfx_MulShRight_s16s16u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.290 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s16s16u8u8

Short Name	mfxRbMemLocMulShRights16s16u8u8
Long Name	Mfx_MulShRight_s16s16u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.291 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s32s32u8s16

Short Name	mfxRbMemLocMulShRights32s32u8s16
Long Name	Mfx_MulShRight_s32s32u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.292 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s32s32u8s32

Short Name	mfxRbMemLocMulShRights32s32u8s32
Long Name	Mfx_MulShRight_s32s32u8_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.293 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s32s32u8s8

Short Name	mfxRbMemLocMulShRights32s32u8s8
Long Name	Mfx_MulShRight_s32s32u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.294 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s32s32u8u16

Short Name	mfxRbMemLocMulShRights32s32u8u16
Long Name	Mfx_MulShRight_s32s32u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.295 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s32s32u8u32

Short Name	mfxRbMemLocMulShRights32s32u8u32
Long Name	Mfx_MulShRight_s32s32u8_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.296 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRight-s32s32u8u8

Short Name	mfxRbMemLocMulShRights32s32u8u8
Long Name	Mfx_MulShRight_s32s32u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.297 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRigh-tu32s32u8s16

Short Name	mfxRbMemLocMulShRightu32s32u8s16
Long Name	Mfx_MulShRight_u32s32u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.298 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32s32u8s32

Short Name	mfxRbMemLocMulShRightu32s32u8s32
Long Name	Mfx_MulShRight_u32s32u8_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.299 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32s32u8s8

Short Name	mfxRbMemLocMulShRightu32s32u8s8
Long Name	Mfx_MulShRight_u32s32u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.300 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32s32u8u16

Short Name	mfxRbMemLocMulShRightu32s32u8u16
Long Name	Mfx_MulShRight_u32s32u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.301 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32s32u8u32

Short Name	mfxRbMemLocMulShRightu32s32u8u32
Long Name	Mfx_MulShRight_u32s32u8_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.302 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32s32u8u8

Short Name	mfxRbMemLocMulShRightu32s32u8u8
Long Name	Mfx_MulShRight_u32s32u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.303 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32u32u8s16

Short Name	mfxRbMemLocMulShRightu32u32u8s16
Long Name	Mfx_MulShRight_u32u32u8_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.304 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32u32u8s32

Short Name	mfxRbMemLocMulShRightu32u32u8s32
Long Name	Mfx_MulShRight_u32u32u8_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.305 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32u32u8s8

Short Name	mfxRbMemLocMulShRightu32u32u8s8
Long Name	Mfx_MulShRight_u32u32u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.306 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32u32u8u16

Short Name	mfxRbMemLocMulShRightu32u32u8u16
Long Name	Mfx_MulShRight_u32u32u8_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.307 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32u32u8u32

Short Name	mfxRbMemLocMulShRightu32u32u8u32
Long Name	Mfx_MulShRight_u32u32u8_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.308 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulShRightu32u32u8u8

Short Name	mfxRbMemLocMulShRightu32u32u8u8
Long Name	Mfx_MulShRight_u32u32u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.309 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls16s16s16

Short Name	mfxRbMemLocMuls16s16s16
Long Name	Mfx_Mul_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.310 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls16s16s32

Short Name	mfxRbMemLocMuls16s16s32
Long Name	Mfx_Mul_s16s16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.311 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls16s16s8

Short Name	mfxRbMemLocMuls16s16s8
Long Name	Mfx_Mul_s16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.312 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls16s16u16

Short Name	mfxRbMemLocMuls16s16u16
Long Name	Mfx_Mul_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.313 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls16s16u8

Short Name	mfxRbMemLocMuls16s16u8
Long Name	Mfx_Mul_s16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.314 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls16u16s16

Short Name	mfxRbMemLocMuls16u16s16
Long Name	Mfx_Mul_s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.315 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls16u16s32

Short Name	mfxRbMemLocMuls16u16s32
Long Name	Mfx_Mul_s16u16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.316 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls16u16u16

Short Name	mfxRbMemLocMuls16u16u16
Long Name	Mfx_Mul_s16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.317 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls32s32s16

Short Name	mfxRbMemLocMuls32s32s16
Long Name	Mfx_Mul_s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.318 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls32s32s32

Short Name	mfxRbMemLocMuls32s32s32
Long Name	Mfx_Mul_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.319 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls32s32s8

Short Name	mfxRbMemLocMuls32s32s8
Long Name	Mfx_Mul_s32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.320 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls32s32u16

Short Name	mfxRbMemLocMuls32s32u16
Long Name	Mfx_Mul_s32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.321 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls32s32u32

Short Name	mfxRbMemLocMuls32s32u32
Long Name	Mfx_Mul_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.322 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls32s32u8

Short Name	mfxRbMemLocMuls32s32u8
Long Name	Mfx_Mul_s32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.323 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls32u16s32

Short Name	mfxRbMemLocMuls32u16s32
Long Name	Mfx_Mul_s32u16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.324 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls8s8s8

Short Name	mfxRbMemLocMuls8s8s8
Long Name	Mfx_Mul_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.325 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls8s8u8

Short Name	mfxRbMemLocMuls8s8u8
Long Name	Mfx_Mul_s8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.326 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls8u8s8

Short Name	mfxRbMemLocMuls8u8s8
Long Name	Mfx_Mul_s8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.327 Mfx/MfxRbMemoryLocations/mfxRbMemLocMuls8u8u8

Short Name	mfxRbMemLocMuls8u8u8
Long Name	Mfx_Mul_s8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.328 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16s16s16

Short Name	mfxRbMemLocMulu16s16s16
Long Name	Mfx_Mul_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.329 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16s16s32

Short Name	mfxRbMemLocMulu16s16s32
Long Name	Mfx_Mul_u16s16_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.330 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16s16s8

Short Name	mfxRbMemLocMulu16s16s8
Long Name	Mfx_Mul_u16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.331 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16s16u16

Short Name	mfxRbMemLocMulu16s16u16
Long Name	Mfx_Mul_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.332 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16s16u8

Short Name	mfxRbMemLocMulu16s16u8
Long Name	Mfx_Mul_u16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.333 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16u16s16

Short Name	mfxRbMemLocMulu16u16s16
Long Name	Mfx_Mul_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.334 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16u16s8

Short Name	mfxRbMemLocMulu16u16s8
Long Name	Mfx_Mul_u16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.335 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16u16u16

Short Name	mfxRbMemLocMulu16u16u16
Long Name	Mfx_Mul_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.336 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16u16u32

Short Name	mfxRbMemLocMulu16u16u32
Long Name	Mfx_Mul_u16u16_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.337 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu16u16u8

Short Name	mfxRbMemLocMulu16u16u8
Long Name	Mfx_Mul_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.338 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32s32s16

Short Name	mfxRbMemLocMulu32s32s16
Long Name	Mfx_Mul_u32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.339 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32s32s32

Short Name	mfxRbMemLocMulu32s32s32
Long Name	Mfx_Mul_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.340 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32s32s8

Short Name	mfxRbMemLocMulu32s32s8
Long Name	Mfx_Mul_u32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.341 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32s32u16

Short Name	mfxRbMemLocMulu32s32u16
Long Name	Mfx_Mul_u32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.342 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32s32u32

Short Name	mfxRbMemLocMulu32s32u32
Long Name	Mfx_Mul_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.343 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32s32u8

Short Name	mfxRbMemLocMulu32s32u8
Long Name	Mfx_Mul_u32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.344 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32u16u32

Short Name	mfxRbMemLocMulu32u16u32
Long Name	Mfx_Mul_u32u16_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.345 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32u32s16

Short Name	mfxRbMemLocMulu32u32s16
Long Name	Mfx_Mul_u32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.346 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32u32s32

Short Name	mfxRbMemLocMulu32u32s32
Long Name	Mfx_Mul_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.347 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32u32s8

Short Name	mfxRbMemLocMulu32u32s8
Long Name	Mfx_Mul_u32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.348 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32u32u16

Short Name	mfxRbMemLocMulu32u32u16
Long Name	Mfx_Mul_u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.349 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32u32u32

Short Name	mfxRbMemLocMulu32u32u32
Long Name	Mfx_Mul_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.350 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu32u32u8

Short Name	mfxRbMemLocMulu32u32u8
Long Name	Mfx_Mul_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.351 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu8s8s8

Short Name	mfxRbMemLocMulu8s8s8
Long Name	Mfx_Mul_u8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.352 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu8s8u8

Short Name	mfxRbMemLocMulu8s8u8
Long Name	Mfx_Mul_u8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.353 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu8u8s8

Short Name	mfxRbMemLocMulu8u8s8
Long Name	Mfx_Mul_u8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.354 Mfx/MfxRbMemoryLocations/mfxRbMemLocMulu8u8u8

Short Name	mfxRbMemLocMulu8u8u8
Long Name	Mfx_Mul_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.355 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs16s16s16

Short Name	mfxRbMemLocRDivs16s16s16
Long Name	Mfx_RDiv_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.356 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs16s16s8

Short Name	mfxRbMemLocRDivs16s16s8
Long Name	Mfx_RDiv_s16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.357 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs16s16u16

Short Name	mfxRbMemLocRDivs16s16u16
Long Name	Mfx_RDiv_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.358 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs16s16u8

Short Name	mfxRbMemLocRDivs16s16u8
Long Name	Mfx_RDiv_s16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.359 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs16u16s16

Short Name	mfxRbMemLocRDivs16u16s16
Long Name	Mfx_RDiv_s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.360 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs16u16s8

Short Name	mfxRbMemLocRDivs16u16s8
Long Name	Mfx_RDiv_s16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.361 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs16u16u16

Short Name	mfxRbMemLocRDivs16u16u16
Long Name	Mfx_RDiv_s16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.362 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs16u16u8

Short Name	mfxRbMemLocRDivs16u16u8
Long Name	Mfx_RDiv_s16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.363 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32s16s16

Short Name	mfxRbMemLocRDivs32s16s16
Long Name	Mfx_RDiv_s32s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.364 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32s32s16

Short Name	mfxRbMemLocRDivs32s32s16
Long Name	Mfx_RDiv_s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.365 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32s32s32

Short Name	mfxRbMemLocRDivs32s32s32
Long Name	Mfx_RDiv_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.366 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32s32s8

Short Name	mfxRbMemLocRDivs32s32s8
Long Name	Mfx_RDiv_s32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.367 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32s32u16

Short Name	mfxRbMemLocRDivs32s32u16
Long Name	Mfx_RDiv_s32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.368 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32s32u32

Short Name	mfxRbMemLocRDivs32s32u32
Long Name	Mfx_RDiv_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.369 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32s32u8

Short Name	mfxRbMemLocRDivs32s32u8
Long Name	Mfx_RDiv_s32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.370 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32u16u16

Short Name	mfxRbMemLocRDivs32u16u16
Long Name	Mfx_RDiv_s32u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.371 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32u32s16

Short Name	mfxRbMemLocRDivs32u32s16
Long Name	Mfx_RDiv_s32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.372 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32u32s32

Short Name	mfxRbMemLocRDivs32u32s32
Long Name	Mfx_RDiv_s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.373 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32u32s8

Short Name	mfxRbMemLocRDivs32u32s8
Long Name	Mfx_RDiv_s32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.374 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32u32u16

Short Name	mfxRbMemLocRDivs32u32u16
Long Name	Mfx_RDiv_s32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.375 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32u32u32

Short Name	mfxRbMemLocRDivs32u32u32
Long Name	Mfx_RDiv_s32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.376 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs32u32u8

Short Name	mfxRbMemLocRDivs32u32u8
Long Name	Mfx_RDiv_s32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.377 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs8s8s8

Short Name	mfxRbMemLocRDivs8s8s8
Long Name	Mfx_RDiv_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.378 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs8s8u8

Short Name	mfxRbMemLocRDivs8s8u8
Long Name	Mfx_RDiv_s8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.379 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs8u8s8

Short Name	mfxRbMemLocRDivs8u8s8
Long Name	Mfx_RDiv_s8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.380 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivs8u8u8

Short Name	mfxRbMemLocRDivs8u8u8
Long Name	Mfx_RDiv_s8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.381 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu16s16s16

Short Name	mfxRbMemLocRDivu16s16s16
Long Name	Mfx_RDiv_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.382 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu16s16s8

Short Name	mfxRbMemLocRDivu16s16s8
Long Name	Mfx_RDiv_u16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.383 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu16s16u16

Short Name	mfxRbMemLocRDivu16s16u16
Long Name	Mfx_RDiv_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.384 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu16s16u8

Short Name	mfxRbMemLocRDivu16s16u8
Long Name	Mfx_RDiv_u16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.385 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu16u16s16

Short Name	mfxRbMemLocRDivu16u16s16
Long Name	Mfx_RDiv_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.386 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu16u16s8

Short Name	mfxRbMemLocRDivu16u16s8
Long Name	Mfx_RDiv_u16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.387 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu16u16u16

Short Name	mfxRbMemLocRDivu16u16u16
Long Name	Mfx_RDiv_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.388 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu16u16u8

Short Name	mfxRbMemLocRDivu16u16u8
Long Name	Mfx_RDiv_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.389 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32s32s16

Short Name	mfxRbMemLocRDivu32s32s16
Long Name	Mfx_RDiv_u32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.390 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32s32s32

Short Name	mfxRbMemLocRDivu32s32s32
Long Name	Mfx_RDiv_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.391 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32s32s8

Short Name	mfxRbMemLocRDivu32s32s8
Long Name	Mfx_RDiv_u32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.392 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32s32u16

Short Name	mfxRbMemLocRDivu32s32u16
Long Name	Mfx_RDiv_u32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.393 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32s32u32

Short Name	mfxRbMemLocRDivu32s32u32
Long Name	Mfx_RDiv_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.394 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32s32u8

Short Name	mfxRbMemLocRDivu32s32u8
Long Name	Mfx_RDiv_u32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.395 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32u16u16

Short Name	mfxRbMemLocRDivu32u16u16
Long Name	Mfx_RDiv_u32u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.396 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32u16u32

Short Name	mfxRbMemLocRDivu32u16u32
Long Name	Mfx_RDiv_u32u16_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.397 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32u32s16

Short Name	mfxRbMemLocRDivu32u32s16
Long Name	Mfx_RDiv_u32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.398 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32u32s32

Short Name	mfxRbMemLocRDivu32u32s32
Long Name	Mfx_RDiv_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.399 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32u32s8

Short Name	mfxRbMemLocRDivu32u32s8
Long Name	Mfx_RDiv_u32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.400 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32u32u16

Short Name	mfxRbMemLocRDivu32u32u16
Long Name	Mfx_RDiv_u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.401 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32u32u32

Short Name	mfxRbMemLocRDivu32u32u32
Long Name	Mfx_RDiv_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.402 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu32u32u8

Short Name	mfxRbMemLocRDivu32u32u8
Long Name	Mfx_RDiv_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.403 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu8s8s8

Short Name	mfxRbMemLocRDivu8s8s8
Long Name	Mfx_RDiv_u8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.404 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu8s8u8

Short Name	mfxRbMemLocRDivu8s8u8
Long Name	Mfx_RDiv_u8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.405 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu8u8s8

Short Name	mfxRbMemLocRDivu8u8s8
Long Name	Mfx_RDiv_u8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.406 Mfx/MfxRbMemoryLocations/mfxRbMemLocRDivu8u8u8

Short Name	mfxRbMemLocRDivu8u8u8
Long Name	Mfx_RDiv_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.407 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivs16s16s16s16

Short Name	mfxRbMemLocRMulDivs16s16s16s16
Long Name	Mfx_RMulDiv_s16s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.408 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivs16s16u16s16

Short Name	mfxRbMemLocRMulDivs16s16u16s16
Long Name	Mfx_RMulDiv_s16s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.409 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivs16u16s16s16

Short Name	mfxRbMemLocRMulDivs16u16s16s16
Long Name	Mfx_RMulDiv_s16u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.410 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivs16u16s16u16

Short Name	mfxRbMemLocRMulDivs16u16s16u16
Long Name	Mfx_RMulDiv_s16u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.411 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivs16u16u16s16

Short Name	mfxRbMemLocRMulDivs16u16u16s16
Long Name	Mfx_RMulDiv_s16u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.412 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivs16u16u16u16

Short Name	mfxRbMemLocRMulDivs16u16u16u16
Long Name	Mfx_RMulDiv_s16u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.413 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivs32s32s16s16

Short Name	mfxRbMemLocRMulDivs32s32s16s16
Long Name	Mfx_RMulDiv_s32s32s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.414 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivs32s32s32s16

Short Name	mfxRbMemLocRMulDivs32s32s32s16
Long Name	Mfx_RMulDiv_s32s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.415 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divs32s32s32s32

Short Name	mfxRbMemLocRMulDivs32s32s32s32
Long Name	Mfx_RMulDiv_s32s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.416 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divs32s32s32u16

Short Name	mfxRbMemLocRMulDivs32s32s32u16
Long Name	Mfx_RMulDiv_s32s32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.417 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divs32s32u32s32

Short Name	mfxRbMemLocRMulDivs32s32u32s32
Long Name	Mfx_RMulDiv_s32s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.418 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divs32u32s32s32

Short Name	mfxRbMemLocRMulDivs32u32s32s32
Long Name	Mfx_RMulDiv_s32u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.419 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divs32u32u32s32

Short Name	mfxRbMemLocRMulDivs32u32u32s32
Long Name	Mfx_RMulDiv_s32u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.420 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivu16s16s16s16

Short Name	mfxRbMemLocRMulDivu16s16s16s16
Long Name	Mfx_RMulDiv_u16s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.421 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivu16s16s16u16

Short Name	mfxRbMemLocRMulDivu16s16s16u16
Long Name	Mfx_RMulDiv_u16s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.422 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivu16s16u16s16

Short Name	mfxRbMemLocRMulDivu16s16u16s16
Long Name	Mfx_RMulDiv_u16s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.423 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivu16s16u16u16

Short Name	mfxRbMemLocRMulDivu16s16u16u16
Long Name	Mfx_RMulDiv_u16s16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.424 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMulDivu16u16u16u16

Short Name	mfxRbMemLocRMulDivu16u16u16u16
Long Name	Mfx_RMulDiv_u16u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.425 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divu32s32s32s32

Short Name	mfxRbMemLocRMulDivu32s32s32s32
Long Name	Mfx_RMulDiv_u32s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.426 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divu32s32s32u32

Short Name	mfxRbMemLocRMulDivu32s32s32u32
Long Name	Mfx_RMulDiv_u32s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.427 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divu32s32u32s32

Short Name	mfxRbMemLocRMulDivu32s32u32s32
Long Name	Mfx_RMulDiv_u32s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.428 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divu32s32u32u32

Short Name	mfxRbMemLocRMulDivu32s32u32u32
Long Name	Mfx_RMulDiv_u32s32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.429 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divu32u32s32u32

Short Name	mfxRbMemLocRMulDivu32u32s32u32
Long Name	Mfx_RMulDiv_u32u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.430 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divu32u32u16u16

Short Name	mfxRbMemLocRMulDivu32u32u16u16
Long Name	Mfx_RMulDiv_u32u32u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.431 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divu32u32u32u16

Short Name	mfxRbMemLocRMulDivu32u32u32u16
Long Name	Mfx_RMulDiv_u32u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.432 Mfx/MfxRbMemoryLocations/mfxRbMemLocRMul-Divu32u32u32u32

Short Name	mfxRbMemLocRMulDivu32u32u32u32
Long Name	Mfx_RMulDiv_u32u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.433 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2s16s16s16

Short Name	mfxRbMemLocSubP2s16s16s16
Long Name	Mfx_SubP2_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.434 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2s16s16u16

Short Name	mfxRbMemLocSubP2s16s16u16
Long Name	Mfx_SubP2_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.435 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2s16u16s16

Short Name	mfxRbMemLocSubP2s16u16s16
Long Name	Mfx_SubP2_s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.436 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2s16u16u16

Short Name	mfxRbMemLocSubP2s16u16u16
Long Name	Mfx_SubP2_s16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.437 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2s32s32s32

Short Name	mfxRbMemLocSubP2s32s32s32
Long Name	Mfx_SubP2_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.438 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2s32s32u32

Short Name	mfxRbMemLocSubP2s32s32u32
Long Name	Mfx_SubP2_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.439 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2s32u32s32

Short Name	mfxRbMemLocSubP2s32u32s32
Long Name	Mfx_SubP2_s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.440 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2s32u32u32

Short Name	mfxRbMemLocSubP2s32u32u32
Long Name	Mfx_SubP2_s32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.441 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2u16s16s16

Short Name	mfxRbMemLocSubP2u16s16s16
Long Name	Mfx_SubP2_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.442 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2u16s16u16

Short Name	mfxRbMemLocSubP2u16s16u16
Long Name	Mfx_SubP2_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.443 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2u16u16s16

Short Name	mfxRbMemLocSubP2u16u16s16
Long Name	Mfx_SubP2_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.444 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2u16u16u16

Short Name	mfxRbMemLocSubP2u16u16u16
Long Name	Mfx_SubP2_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.445 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2u32s32s32

Short Name	mfxRbMemLocSubP2u32s32s32
Long Name	Mfx_SubP2_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.446 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2u32s32u32

Short Name	mfxRbMemLocSubP2u32s32u32
Long Name	Mfx_SubP2_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.447 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2u32u32s32

Short Name	mfxRbMemLocSubP2u32u32s32
Long Name	Mfx_SubP2_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.448 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubP2u32u32u32

Short Name	mfxRbMemLocSubP2u32u32u32
Long Name	Mfx_SubP2_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.449 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs16s16s16

Short Name	mfxRbMemLocSubs16s16s16
Long Name	Mfx_Sub_s16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.450 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs16s16s8

Short Name	mfxRbMemLocSubs16s16s8
Long Name	Mfx_Sub_s16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.451 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs16s16u16

Short Name	mfxRbMemLocSubs16s16u16
Long Name	Mfx_Sub_s16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.452 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs16s16u8

Short Name	mfxRbMemLocSubs16s16u8
Long Name	Mfx_Sub_s16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.453 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs16u16s16

Short Name	mfxRbMemLocSubs16u16s16
Long Name	Mfx_Sub_s16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.454 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs16u16s8

Short Name	mfxRbMemLocSubs16u16s8
Long Name	Mfx_Sub_s16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.455 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs16u16u16

Short Name	mfxRbMemLocSubs16u16u16
Long Name	Mfx_Sub_s16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.456 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs16u16u8

Short Name	mfxRbMemLocSubs16u16u8
Long Name	Mfx_Sub_s16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.457 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32s32s16

Short Name	mfxRbMemLocSubs32s32s16
Long Name	Mfx_Sub_s32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.458 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32s32s32

Short Name	mfxRbMemLocSubs32s32s32
Long Name	Mfx_Sub_s32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.459 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32s32s8

Short Name	mfxRbMemLocSubs32s32s8
Long Name	Mfx_Sub_s32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.460 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32s32u16

Short Name	mfxRbMemLocSubs32s32u16
Long Name	Mfx_Sub_s32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.461 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32s32u32

Short Name	mfxRbMemLocSubs32s32u32
Long Name	Mfx_Sub_s32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.462 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32s32u8

Short Name	mfxRbMemLocSubs32s32u8
Long Name	Mfx_Sub_s32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.463 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32u32s16

Short Name	mfxRbMemLocSubs32u32s16
Long Name	Mfx_Sub_s32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.464 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32u32s32

Short Name	mfxRbMemLocSubs32u32s32
Long Name	Mfx_Sub_s32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.465 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32u32s8

Short Name	mfxRbMemLocSubs32u32s8
Long Name	Mfx_Sub_s32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.466 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32u32u16

Short Name	mfxRbMemLocSubs32u32u16
Long Name	Mfx_Sub_s32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.467 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32u32u32

Short Name	mfxRbMemLocSubs32u32u32
Long Name	Mfx_Sub_s32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.468 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs32u32u8

Short Name	mfxRbMemLocSubs32u32u8
Long Name	Mfx_Sub_s32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.469 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs8s8s8

Short Name	mfxRbMemLocSubs8s8s8
Long Name	Mfx_Sub_s8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.470 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs8s8u8

Short Name	mfxRbMemLocSubs8s8u8
Long Name	Mfx_Sub_s8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.471 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs8u8s8

Short Name	mfxRbMemLocSubs8u8s8
Long Name	Mfx_Sub_s8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.472 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubs8u8u8

Short Name	mfxRbMemLocSubs8u8u8
Long Name	Mfx_Sub_s8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.473 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu16s16s16

Short Name	mfxRbMemLocSubu16s16s16
Long Name	Mfx_Sub_u16s16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.474 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu16s16s8

Short Name	mfxRbMemLocSubu16s16s8
Long Name	Mfx_Sub_u16s16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.475 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu16s16u16

Short Name	mfxRbMemLocSubu16s16u16
Long Name	Mfx_Sub_u16s16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.476 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu16s16u8

Short Name	mfxRbMemLocSubu16s16u8
Long Name	Mfx_Sub_u16s16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.477 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu16u16s16

Short Name	mfxRbMemLocSubu16u16s16
Long Name	Mfx_Sub_u16u16_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.478 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu16u16s8

Short Name	mfxRbMemLocSubu16u16s8
Long Name	Mfx_Sub_u16u16_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.479 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu16u16u16

Short Name	mfxRbMemLocSubu16u16u16
Long Name	Mfx_Sub_u16u16_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.480 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu16u16u8

Short Name	mfxRbMemLocSubu16u16u8
Long Name	Mfx_Sub_u16u16_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.481 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32s32s16

Short Name	mfxRbMemLocSubu32s32s16
Long Name	Mfx_Sub_u32s32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.482 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32s32s32

Short Name	mfxRbMemLocSubu32s32s32
Long Name	Mfx_Sub_u32s32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.483 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32s32s8

Short Name	mfxRbMemLocSubu32s32s8
Long Name	Mfx_Sub_u32s32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.484 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32s32u16

Short Name	mfxRbMemLocSubu32s32u16
Long Name	Mfx_Sub_u32s32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.485 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32s32u32

Short Name	mfxRbMemLocSubu32s32u32
Long Name	Mfx_Sub_u32s32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.486 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32s32u8

Short Name	mfxRbMemLocSubu32s32u8
Long Name	Mfx_Sub_u32s32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.487 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32u32s16

Short Name	mfxRbMemLocSubu32u32s16
Long Name	Mfx_Sub_u32u32_s16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.488 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32u32s32

Short Name	mfxRbMemLocSubu32u32s32
Long Name	Mfx_Sub_u32u32_s32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.489 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32u32s8

Short Name	mfxRbMemLocSubu32u32s8
Long Name	Mfx_Sub_u32u32_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.490 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32u32u16

Short Name	mfxRbMemLocSubu32u32u16
Long Name	Mfx_Sub_u32u32_u16
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.491 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32u32u32

Short Name	mfxRbMemLocSubu32u32u32
Long Name	Mfx_Sub_u32u32_u32
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.492 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu32u32u8

Short Name	mfxRbMemLocSubu32u32u8
Long Name	Mfx_Sub_u32u32_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.493 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu8s8s8

Short Name	mfxRbMemLocSubu8s8s8
Long Name	Mfx_Sub_u8s8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.494 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu8s8u8

Short Name	mfxRbMemLocSubu8s8u8
Long Name	Mfx_Sub_u8s8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.495 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu8u8s8

Short Name	mfxRbMemLocSubu8u8s8
Long Name	Mfx_Sub_u8u8_s8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.1.496 Mfx/MfxRbMemoryLocations/mfxRbMemLocSubu8u8u8

Short Name	mfxRbMemLocSubu8u8u8
Long Name	Mfx_Sub_u8u8_u8
Description	Select one of following values: NORMAL for location in normal flash, FAST for location in fast flash, SLOW for location in slow flash, INLINE for inlining of the service
Multiplicity	1..1
Default Value	-
Enumeration Literals	NORMAL, FAST, SLOW, INLINE
Type	ECUC-ENUMERATION-PARAM-DEF

9.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

9.4 Limitations

The following features are not supported for version v12.7.0

- There are no known limitations in this version.

9.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

9.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

9.7 API Definition

List of supported APIs

Mfx_GetVersionInfo

Returns the version information of this library.

Mfx_Add_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Adds the two arguments.

Implementation:

- `Mfx_Add_s16s16_s16`
- `Mfx_Add_s16s16_s8`
- `Mfx_Add_s16s16_u16`
- `Mfx_Add_s16s16_u8`
- `Mfx_Add_s32s32_s16`
- `Mfx_Add_s32s32_s32`
- `Mfx_Add_s32s32_s8`
- `Mfx_Add_s32s32_u16`
- `Mfx_Add_s32s32_u32`
- `Mfx_Add_s32s32_u8`
- `Mfx_Add_s8s8_s8`
- `Mfx_Add_s8s8_u8`
- `Mfx_Add_u16s16_s16`
- `Mfx_Add_u16s16_s8`
- `Mfx_Add_u16s16_u16`
- `Mfx_Add_u16s16_u8`
- `Mfx_Add_u16u16_s16`
- `Mfx_Add_u16u16_s8`
- `Mfx_Add_u16u16_u16`
- `Mfx_Add_u16u16_u8`
- `Mfx_Add_u32s32_s16`
- `Mfx_Add_u32s32_s32`
- `Mfx_Add_u32s32_s8`
- `Mfx_Add_u32s32_u16`
- `Mfx_Add_u32s32_u32`
- `Mfx_Add_u32s32_u8`
- `Mfx_Add_u32u32_s16`
- `Mfx_Add_u32u32_s32`
- `Mfx_Add_u32u32_s8`
- `Mfx_Add_u32u32_u16`
- `Mfx_Add_u32u32_u32`
- `Mfx_Add_u32u32_u8`
- `Mfx_Add_u8s8_s8`
- `Mfx_Add_u8s8_u8`

- Mfx_Add_u8u8_s8
- Mfx_Add_u8u8_u8

Mfx_Sub_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Subtracts the two arguments.

Implementation:

- Mfx_Sub_s16s16_s16
- Mfx_Sub_s16s16_s8
- Mfx_Sub_s16s16_u16
- Mfx_Sub_s16s16_u8
- Mfx_Sub_s16u16_s16
- Mfx_Sub_s16u16_s8
- Mfx_Sub_s16u16_u16
- Mfx_Sub_s16u16_u8
- Mfx_Sub_s32s32_s16
- Mfx_Sub_s32s32_s32
- Mfx_Sub_s32s32_s8
- Mfx_Sub_s32s32_u16
- Mfx_Sub_s32s32_u32
- Mfx_Sub_s32s32_u8
- Mfx_Sub_s32u32_s16
- Mfx_Sub_s32u32_s32
- Mfx_Sub_s32u32_s8
- Mfx_Sub_s32u32_u16
- Mfx_Sub_s32u32_u32
- Mfx_Sub_s32u32_u8
- Mfx_Sub_s8s8_s8
- Mfx_Sub_s8s8_u8
- Mfx_Sub_s8u8_s8
- Mfx_Sub_s8u8_u8
- Mfx_Sub_u16s16_s16
- Mfx_Sub_u16s16_s8
- Mfx_Sub_u16s16_u16
- Mfx_Sub_u16s16_u8
- Mfx_Sub_u16u16_s16
- Mfx_Sub_u16u16_s8

- Mfx_Sub_u16u16_u16
- Mfx_Sub_u16u16_u8
- Mfx_Sub_u32s32_s16
- Mfx_Sub_u32s32_s32
- Mfx_Sub_u32s32_s8
- Mfx_Sub_u32s32_u16
- Mfx_Sub_u32s32_u32
- Mfx_Sub_u32s32_u8
- Mfx_Sub_u32u32_s16
- Mfx_Sub_u32u32_s32
- Mfx_Sub_u32u32_s8
- Mfx_Sub_u32u32_u16
- Mfx_Sub_u32u32_u32
- Mfx_Sub_u32u32_u8
- Mfx_Sub_u8s8_s8
- Mfx_Sub_u8s8_u8
- Mfx_Sub_u8u8_s8
- Mfx_Sub_u8u8_u8

Mfx_Abs_<InTypeMn1>_<OutTypeMn>

Computes the absolute value of a signed value.

Implementation:

- Mfx_Abs_s16_s16
- Mfx_Abs_s16_u16
- Mfx_Abs_s32_s16
- Mfx_Abs_s32_s32
- Mfx_Abs_s32_s8
- Mfx_Abs_s32_u16
- Mfx_Abs_s32_u32
- Mfx_Abs_s32_u8
- Mfx_Abs_s8_s8
- Mfx_Abs_s8_u8

Mfx_AbsDiff_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Computes the absolute value of a difference between 2 values.

Implementation:

- Mfx_AbsDiff_s16s16_s16

- Mfx_AbsDiff_s16s16_s8
- Mfx_AbsDiff_s16s16_u16
- Mfx_AbsDiff_s16s16_u8
- Mfx_AbsDiff_s32s32_s16
- Mfx_AbsDiff_s32s32_s32
- Mfx_AbsDiff_s32s32_s8
- Mfx_AbsDiff_s32s32_u16
- Mfx_AbsDiff_s32s32_u32
- Mfx_AbsDiff_s32s32_u8
- Mfx_AbsDiff_s8s8_s8
- Mfx_AbsDiff_s8s8_u8
- Mfx_AbsDiff_u16s16_s16
- Mfx_AbsDiff_u16s16_s8
- Mfx_AbsDiff_u16s16_u16
- Mfx_AbsDiff_u16s16_u8
- Mfx_AbsDiff_u16u16_s16
- Mfx_AbsDiff_u16u16_s8
- Mfx_AbsDiff_u16u16_u16
- Mfx_AbsDiff_u16u16_u8
- Mfx_Absdiff_u32s32_s16
- Mfx_Absdiff_u32s32_s32
- Mfx_Absdiff_u32s32_s8
- Mfx_AbsDiff_u32s32_u16
- Mfx_AbsDiff_u32s32_u32
- Mfx_AbsDiff_u32s32_u8
- Mfx_Absdiff_u32u32_s16
- Mfx_Absdiff_u32u32_s32
- Mfx_Absdiff_u32u32_s8
- Mfx_AbsDiff_u32u32_u16
- Mfx_AbsDiff_u32u32_u32
- Mfx_AbsDiff_u32u32_u8
- Mfx_AbsDiff_u8s8_s8
- Mfx_AbsDiff_u8s8_u8
- Mfx_AbsDiff_u8u8_s8
- Mfx_AbsDiff_u8u8_u8

Mfx_Mul_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Multiplies the two arguments.

Implementation:

- `Mfx_Mul_s16s16_s16`
- `Mfx_Mul_s16s16_s32`
- `Mfx_Mul_s16s16_s8`
- `Mfx_Mul_s16s16_u16`
- `Mfx_Mul_s16s16_u8`
- `Mfx_Mul_s16u16_s16`
- `Mfx_Mul_s16u16_s32`
- `Mfx_Mul_s16u16_u16`
- `Mfx_Mul_s32s32_s16`
- `Mfx_Mul_s32s32_s32`
- `Mfx_Mul_s32s32_s8`
- `Mfx_Mul_s32s32_u16`
- `Mfx_Mul_s32s32_u32`
- `Mfx_Mul_s32s32_u8`
- `Mfx_Mul_s32u16_s32`
- `Mfx_Mul_s8s8_s8`
- `Mfx_Mul_s8s8_u8`
- `Mfx_Mul_s8u8_s8`
- `Mfx_Mul_s8u8_u8`
- `Mfx_Mul_u16s16_s16`
- `Mfx_Mul_u16s16_s32`
- `Mfx_Mul_u16s16_s8`
- `Mfx_Mul_u16s16_u16`
- `Mfx_Mul_u16s16_u8`
- `Mfx_Mul_u16u16_s16`
- `Mfx_Mul_u16u16_s8`
- `Mfx_Mul_u16u16_u16`
- `Mfx_Mul_u16u16_u32`
- `Mfx_Mul_u16u16_u8`
- `Mfx_Mul_u32s32_s16`
- `Mfx_Mul_u32s32_s32`
- `Mfx_Mul_u32s32_s8`
- `Mfx_Mul_u32s32_u16`

- Mfx_Mul_u32s32_u32
- Mfx_Mul_u32s32_u8
- Mfx_Mul_u32u16_u32
- Mfx_Mul_u32u32_s16
- Mfx_Mul_u32u32_s32
- Mfx_Mul_u32u32_s8
- Mfx_Mul_u32u32_u16
- Mfx_Mul_u32u32_u32
- Mfx_Mul_u32u32_u8
- Mfx_Mul_u8s8_s8
- Mfx_Mul_u8s8_u8
- Mfx_Mul_u8u8_s8
- Mfx_Mul_u8u8_u8

Mfx_Div_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Makes a division between the two arguments.

Implementation:

- Mfx_Div_s16s16_s16
- Mfx_Div_s16s16_s8
- Mfx_Div_s16s16_u16
- Mfx_Div_s16s16_u8
- Mfx_Div_s16u16_s16
- Mfx_Div_s16u16_s8
- Mfx_Div_s16u16_u16
- Mfx_Div_s16u16_u8
- Mfx_Div_s32s16_s16
- Mfx_Div_s32s32_s16
- Mfx_Div_s32s32_s32
- Mfx_Div_s32s32_s8
- Mfx_Div_s32s32_u16
- Mfx_Div_s32s32_u32
- Mfx_Div_s32s32_u8
- Mfx_Div_s32u16_u16
- Mfx_Div_s32u32_s16
- Mfx_Div_s32u32_s32
- Mfx_Div_s32u32_s8

- Mfx_Div_s32u32_u16
- Mfx_Div_s32u32_u32
- Mfx_Div_s32u32_u8
- Mfx_Div_s8s8_s8
- Mfx_Div_s8s8_u8
- Mfx_Div_s8u8_s8
- Mfx_Div_s8u8_u8
- Mfx_Div_u16s16_s16
- Mfx_Div_u16s16_s8
- Mfx_Div_u16s16_u16
- Mfx_Div_u16s16_u8
- Mfx_Div_u16u16_s16
- Mfx_Div_u16u16_s8
- Mfx_Div_u16u16_u16
- Mfx_Div_u16u16_u8
- Mfx_Div_u32s32_s16
- Mfx_Div_u32s32_s32
- Mfx_Div_u32s32_s8
- Mfx_Div_u32s32_u16
- Mfx_Div_u32s32_u32
- Mfx_Div_u32s32_u8
- Mfx_Div_u32u16_u16
- Mfx_Div_u32u16_u32
- Mfx_Div_u32u32_s16
- Mfx_Div_u32u32_s32
- Mfx_Div_u32u32_s8
- Mfx_Div_u32u32_u16
- Mfx_Div_u32u32_u32
- Mfx_Div_u32u32_u8
- Mfx_Div_u8s8_s8
- Mfx_Div_u8s8_u8
- Mfx_Div_u8u8_s8
- Mfx_Div_u8u8_u8

Mfx_RDiv_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Makes a division between the two arguments.

Implementation:

- Mfx_RDiv_s16s16_s16
- Mfx_RDiv_s16s16_s8
- Mfx_RDiv_s16s16_u16
- Mfx_RDiv_s16s16_u8
- Mfx_RDiv_s16u16_s16
- Mfx_RDiv_s16u16_s8
- Mfx_RDiv_s16u16_u16
- Mfx_RDiv_s16u16_u8
- Mfx_RDiv_s32s16_s16
- Mfx_RDiv_s32s32_s16
- Mfx_RDiv_s32s32_s32
- Mfx_RDiv_s32s32_s8
- Mfx_RDiv_s32s32_u16
- Mfx_RDiv_s32s32_u32
- Mfx_RDiv_s32s32_u8
- Mfx_RDiv_s32u16_u16
- Mfx_RDiv_s32u32_s16
- Mfx_RDiv_s32u32_s32
- Mfx_RDiv_s32u32_s8
- Mfx_RDiv_s32u32_u16
- Mfx_RDiv_s32u32_u32
- Mfx_RDiv_s32u32_u8
- Mfx_RDiv_s8s8_s8
- Mfx_RDiv_s8s8_u8
- Mfx_RDiv_s8u8_s8
- Mfx_RDiv_s8u8_u8
- Mfx_RDiv_u16s16_s16
- Mfx_RDiv_u16s16_s8
- Mfx_RDiv_u16s16_u16
- Mfx_RDiv_u16s16_u8
- Mfx_RDiv_u16u16_s16
- Mfx_RDiv_u16u16_s8
- Mfx_RDiv_u16u16_u16
- Mfx_RDiv_u16u16_u8
- Mfx_RDiv_u32s32_s16

- Mfx_RDiv_u32s32_s32
- Mfx_RDiv_u32s32_s8
- Mfx_RDiv_u32s32_u16
- Mfx_RDiv_u32s32_u32
- Mfx_RDiv_u32s32_u8
- Mfx_RDiv_u32u16_u16
- Mfx_RDiv_u32u16_u32
- Mfx_RDiv_u32u32_s16
- Mfx_RDiv_u32u32_s32
- Mfx_RDiv_u32u32_s8
- Mfx_RDiv_u32u32_u16
- Mfx_RDiv_u32u32_u32
- Mfx_RDiv_u32u32_u8
- Mfx_RDiv_u8s8_s8
- Mfx_RDiv_u8s8_u8
- Mfx_RDiv_u8u8_s8
- Mfx_RDiv_u8u8_u8

Mfx_MulDiv_<InTypeMn1><InTypeMn2><InTypeMn3>_<OutTypeMn>

Multiplies the first two arguments and divides the result by the third argument.

Implementation:

- Mfx_MulDiv_s16s16s16_s16
- Mfx_MulDiv_s16s16u16_s16
- Mfx_MulDiv_s16u16s16_s16
- Mfx_MulDiv_s16u16s16_u16
- Mfx_MulDiv_s16u16u16_s16
- Mfx_MulDiv_s16u16u16_u16
- Mfx_MulDiv_s32s32s16_s16
- Mfx_MulDiv_s32s32s32_s16
- Mfx_MulDiv_s32s32s32_s32
- Mfx_MulDiv_s32s32s32_u16
- Mfx_MulDiv_s32s32u32_s32
- Mfx_MulDiv_s32u32s32_s32
- Mfx_MulDiv_s32u32u32_s32
- Mfx_MulDiv_u16s16s16_s16
- Mfx_MulDiv_u16s16s16_u16

- Mfx_MulDiv_u16s16u16_s16
- Mfx_MulDiv_u16s16u16_u16
- Mfx_MulDiv_u16u16u16_u16
- Mfx_MulDiv_u32s32s32_s32
- Mfx_MulDiv_u32s32s32_u32
- Mfx_MulDiv_u32s32u32_s32
- Mfx_MulDiv_u32s32u32_u32
- Mfx_MulDiv_u32u32s32_u32
- Mfx_MulDiv_u32u32u16_u16
- Mfx_MulDiv_u32u32u32_u16
- Mfx_MulDiv_u32u32u32_u32

Mfx_RMulDiv_<InTypeMn1><InTypeMn2><InTypeMn3>_<OutTypeMn>

Multiplies the first two arguments and divides the result by the third argument.

Implementation:

- Mfx_RMulDiv_s16s16s16_s16
- Mfx_RMulDiv_s16s16u16_s16
- Mfx_RMulDiv_s16u16s16_s16
- Mfx_RMulDiv_s16u16s16_u16
- Mfx_RMulDiv_s16u16u16_s16
- Mfx_RMulDiv_s16u16u16_u16
- Mfx_RMulDiv_s32s32s16_s16
- Mfx_RMulDiv_s32s32s32_s16
- Mfx_RMulDiv_s32s32s32_s32
- Mfx_RMulDiv_s32s32s32_u16
- Mfx_RMulDiv_s32s32u32_s32
- Mfx_RMulDiv_s32u32s32_s32
- Mfx_RMulDiv_s32u32u32_s32
- Mfx_RMulDiv_u16s16s16_s16
- Mfx_RMulDiv_u16s16s16_u16
- Mfx_RMulDiv_u16s16u16_s16
- Mfx_RMulDiv_u16s16u16_u16
- Mfx_RMulDiv_u16u16u16_u16
- Mfx_RMulDiv_u32s32s32_s32
- Mfx_RMulDiv_u32s32s32_u32
- Mfx_RMulDiv_u32s32u32_s32

- Mfx_RMulDiv_u32s32u32_u32
- Mfx_RMulDiv_u32u32s32_u32
- Mfx_RMulDiv_u32u32u16_u16
- Mfx_RMulDiv_u32u32u32_u16
- Mfx_RMulDiv_u32u32u32_u32

Mfx_MulShRight_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Multiplies the first two arguments and applies a shift right defined by the third argument.

Implementation:

- Mfx_MulShRight_s16s16u8_s16
- Mfx_MulShRight_s16s16u8_s8
- Mfx_MulShRight_s16s16u8_u16
- Mfx_MulShRight_s16s16u8_u8
- Mfx_MulShRight_s32s32u8_s16
- Mfx_MulShRight_s32s32u8_s32
- Mfx_MulShRight_s32s32u8_s8
- Mfx_MulShRight_s32s32u8_u16
- Mfx_MulShRight_s32s32u8_u32
- Mfx_MulShRight_s32s32u8_u8
- Mfx_MulShRight_u32s32u8_s16
- Mfx_MulShRight_u32s32u8_s32
- Mfx_MulShRight_u32s32u8_s8
- Mfx_MulShRight_u32s32u8_u16
- Mfx_MulShRight_u32s32u8_u32
- Mfx_MulShRight_u32s32u8_u8
- Mfx_MulShRight_u32u32u8_s16
- Mfx_MulShRight_u32u32u8_s32
- Mfx_MulShRight_u32u32u8_s8
- Mfx_MulShRight_u32u32u8_u16
- Mfx_MulShRight_u32u32u8_u32
- Mfx_MulShRight_u32u32u8_u8

Mfx_DivShLeft_<InTypeMn1><InTypeMn2>u8_<OutTypeMn>

Left shifts argument one by argument three and divides the result by argument two.

Implementation:

- Mfx_DivShLeft_s16s16u8_s16
- Mfx_DivShLeft_s16u16u8_s16
- Mfx_DivShLeft_s32s32u8_s16
- Mfx_DivShLeft_s32s32u8_s32
- Mfx_DivShLeft_s32s32u8_s8
- Mfx_DivShLeft_s32s32u8_u16
- Mfx_DivShLeft_s32s32u8_u32
- Mfx_DivShLeft_s32s32u8_u8
- Mfx_DivShLeft_s32u32u8_s16
- Mfx_DivShLeft_s32u32u8_s32
- Mfx_DivShLeft_s32u32u8_s8
- Mfx_DivShLeft_s32u32u8_u16
- Mfx_DivShLeft_s32u32u8_u32
- Mfx_DivShLeft_s32u32u8_u8
- Mfx_DivShLeft_u16u16u8_u16
- Mfx_DivShLeft_u16u16u8_u8
- Mfx_DivShLeft_u32s32u8_s16
- Mfx_DivShLeft_u32s32u8_s32
- Mfx_DivShLeft_u32s32u8_s8
- Mfx_DivShLeft_u32s32u8_u16
- Mfx_DivShLeft_u32s32u8_u32
- Mfx_DivShLeft_u32s32u8_u8
- Mfx_DivShLeft_u32u32u8_s16
- Mfx_DivShLeft_u32u32u8_s32
- Mfx_DivShLeft_u32u32u8_s8
- Mfx_DivShLeft_u32u32u8_u16
- Mfx_DivShLeft_u32u32u8_u32
- Mfx_DivShLeft_u32u32u8_u8
- Mfx_DivShLeft_u8u8u8_u8

Mfx_Mod_<TypeMn>

Returns the remainder of x_value / y_value if y_value is not zero.

Implementation:

- Mfx_Mod_s16
- Mfx_Mod_s32
- Mfx_Mod_s32s32_s16

- `Mfx_Mod_s32s32_s8`
- `Mfx_Mod_s8`
- `Mfx_Mod_u16`
- `Mfx_Mod_u32`
- `Mfx_Mod_u32u32_u16`
- `Mfx_Mod_u32u32_u8`
- `Mfx_Mod_u8`

Mfx_Limit_<TypeMn>

Limits a value to a minimum and a maximum.

Implementation:

- `Mfx_Limit_s16`
- `Mfx_Limit_s32`
- `Mfx_Limit_s8`
- `Mfx_Limit_u16`
- `Mfx_Limit_u32`
- `Mfx_Limit_u8`

Mfx_Minmax_<TypeMn>

Limits a value to a minimum or a maximum that depends on the sign of the minmax_value.

Implementation:

- `Mfx_Minmax_s16`
- `Mfx_Minmax_s32`
- `Mfx_Minmax_s8`
- `Mfx_Minmax_u16`
- `Mfx_Minmax_u32`
- `Mfx_Minmax_u8`

Mfx_Min_<TypeMn>

Returns the minimum of two values.

Implementation:

- `Mfx_Min_s16`
- `Mfx_Min_s32`
- `Mfx_Min_s8`
- `Mfx_Min_u16`
- `Mfx_Min_u32`

- Mfx_Min_u8

Mfx_Max_<TypeMn>

Returns the maximum of two values.

Implementation:

- Mfx_Max_s16
- Mfx_Max_s32
- Mfx_Max_s8
- Mfx_Max_u16
- Mfx_Max_u32
- Mfx_Max_u8

Mfx_ConvertP2_<InTypeMn>_<OutTypeMn>

Converts a scaled nn-bit integer to a scaled nn-bit integer.

Implementation:

- Mfx_ConvertP2_s16_s32
- Mfx_ConvertP2_s16_s8
- Mfx_ConvertP2_s32_s16
- Mfx_ConvertP2_s8_s16
- Mfx_ConvertP2_u16_u32
- Mfx_ConvertP2_u16_u8
- Mfx_ConvertP2_u32_u16
- Mfx_ConvertP2_u8_u16

Mfx_MulP2_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Multiplies two 16-bit integers with scaling factors set by input parameters.

Implementation:

- Mfx_MulP2_s16s16_s16
- Mfx_MulP2_s16s16_u16
- Mfx_MulP2_s32s32_s32
- Mfx_MulP2_s32s32_u32
- Mfx_MulP2_u16s16_s16
- Mfx_MulP2_u16s16_u16
- Mfx_MulP2_u16u16_s16
- Mfx_MulP2_u16u16_u16
- Mfx_MulP2_u32s32_s32
- Mfx_MulP2_u32s32_u32

- Mfx_MulP2_u32u32_s32
- Mfx_MulP2_u32u32_u32

Mfx_DivP2_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Divides two 16-bit integers with scaling factors set by input parameters.

Implementation:

- Mfx_DivP2_s16s16_s16
- Mfx_DivP2_s16s16_u16
- Mfx_DivP2_s16u16_s16
- Mfx_DivP2_s16u16_u16
- Mfx_DivP2_s32s32_s32
- Mfx_DivP2_s32s32_u32
- Mfx_DivP2_s32u32_s32
- Mfx_DivP2_s32u32_u32
- Mfx_DivP2_u16s16_s16
- Mfx_DivP2_u16s16_u16
- Mfx_DivP2_u16u16_s16
- Mfx_DivP2_u16u16_u16
- Mfx_DivP2_u32s32_s32
- Mfx_DivP2_u32s32_u32
- Mfx_DivP2_u32u32_s32
- Mfx_DivP2_u32u32_u32

Mfx_AddP2_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Adds two 16-bit integers with scaling factors set by input parameters.

Implementation:

- Mfx_AddP2_s16s16_s16
- Mfx_AddP2_s16s16_u16
- Mfx_AddP2_s32s32_s32
- Mfx_AddP2_s32s32_u32
- Mfx_AddP2_u16s16_s16
- Mfx_AddP2_u16s16_u16
- Mfx_AddP2_u16u16_s16
- Mfx_AddP2_u16u16_u16
- Mfx_AddP2_u32s32_s32
- Mfx_AddP2_u32s32_u32
- Mfx_AddP2_u32u32_s32

- Mfx_AddP2_u32u32_u32

Mfx_SubP2_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Subtracts two 16-bit integers with scaling.

Implementation:

- Mfx_SubP2_s16s16_s16
- Mfx_SubP2_s16s16_u16
- Mfx_SubP2_s16u16_s16
- Mfx_SubP2_s16u16_u16
- Mfx_SubP2_s32s32_s32
- Mfx_SubP2_s32s32_u32
- Mfx_SubP2_s32u32_s32
- Mfx_SubP2_s32u32_u32
- Mfx_SubP2_u16s16_s16
- Mfx_SubP2_u16s16_u16
- Mfx_SubP2_u16u16_s16
- Mfx_SubP2_u16u16_u16
- Mfx_SubP2_u32s32_s32
- Mfx_SubP2_u32s32_u32
- Mfx_SubP2_u32u32_s32
- Mfx_SubP2_u32u32_u32

Mfx_AbsDiffP2_<InTypeMn1><InTypeMn2>_<OutTypeMn>

Subtracts and takes the absolute value of two 16-bit integers with scaling.

Implementation:

- Mfx_AbsDiffP2_s16s16_s16
- Mfx_AbsDiffP2_s16s16_u16
- Mfx_AbsDiffP2_u16s16_s16
- Mfx_AbsDiffP2_u16s16_u16
- Mfx_AbsDiffP2_u16u16_s16
- Mfx_AbsDiffP2_u16u16_u16

Mfx_AbsP2_s16_<OutTypeMn>

Takes the absolute value of a 16-bit integer with scaling factors set by input parameters.

Implementation:

- Mfx_AbsP2_s16_s16

- `Mfx_AbsP2_s16_u16`

Mfx_AbsP2_s32_<OutTypeMn>

Takes the absolute value of a 16-bit integer with scaling factors set by input parameters.

Implementation:

- `Mfx_AbsP2_s32_s32`
- `Mfx_AbsP2_s32_u32`

For further information please refer to the AUTOSAR specification of Fixed Point Math routines AUTOSAR_SWS_MFXLibrary.pdf

9.8 Configuration Advice

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

9.8.1 Additional Configuration Parameters

The following three extension parameters must be configured in Mfx_EcucValues.arxml when the Mfx module is used:

9.8.1.1 Mfx_VersionInfoAPI

This parameter controls generation of the `Mfx_GetVersionInfo` function.

Table 9.498.Mfx_VersionInfoAPI Configuration Options

Option	Behaviour
`ON`	the `Mfx_GetVersionInfo` function will return the version information of the Mfx library.
`OFF`	the Mfx library will not provide the `Mfx_GetVersionInfo` function.

9.8.1.2 MfxRbMemoryLocations

This parameter provides the option to configure the memory location of a specific service.

Table 9.499.MfxRbMemoryLocations

Value	Memory Location
`NORMAL`	Normal flash.
`SLOW`	Slow flash.

FAST	Fast flash.
INLINE	The function is made inline.

For each routine available, select the appropriate location in memory.

MfxRbAssemblyOptimization

TRUE	The assembly optimization is enabled.
FALSE	The assembly optimization is disabled.

> **NOTE**
>
> `MfxRbAssemblyOptimization` is only specific to PS-EC and is not configurable by other projects. Its default value is FALSE.

9.9 Integration Advice

The include file "Mfx.h" provides all public function prototypes and types defined by the Mfx library specification. You need to include the "Mfx.h" file wherever required by application software.

9.9.1 Init Functions

No Init is required.

9.9.2 DeInit Functions

No DeInit is required.

9.9.3 Scheduled Functions

Mfx has no periodic functions.

9.9.4 Memory mapping

For user specific allocation, for the following #define directives, a corresponding memory allocation is required for the component.

- MFX_START_SEC_CODE
- MFX_STOP_SEC_CODE

Alternatively, the #define directives could be mapped to the default sections in the Mfx_MemMap.h file.

9.9.5 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Mfx module does not use any exclusive OS resources.

9.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

10 Platform Module

Module name	Platform
Package	COMMON
AUTOSAR Module ID	199
AUTOSAR Version	22-11

10.1 Introduction

The Platform module provides centrally defined header files (Platform_Types.h) and ARXML files (Platform_Types.arxml) and symbols, that are used throughout BSW and ASW.

The Platform module does not interact with any other module, but the generated output files are used from several other modules and components.

Module Configuration

This module does not have configuration parameters.

10.2 Supported Features

The Platform module supports types and symbols from the AUTOSAR42 Rev2 (AR 4.2.2) specification.

Based on the configuration of the EcuC module, the following files are generated by the RTA-BSW Code Generator:

- Platform_Types.h
- Platform_AddOn_Types.h
- Platform_Types.arxml
- PlatformBase_Types.arxml

Notes:

- Platform_Types.arxml contains the same types and symbols as provided in the header file. As per the latest AUTOSAR naming convention, in order to refer to these types and symbols, the AR package paths /AUTOSAR_Platform/ImplementationDataTypes/<Type> and /AUTOSAR_Platform/CompuMethods/<CompuMethod> have to be used respectively.
- PlatformBase_Types.arxml contains the base types which are referred in Platform_Types.arxml file. As per the latest AUTOSAR naming convention, in order to refer to these base types, the AR package path /AUTOSAR_Platform/BaseTypes/<BaseType> has to be used.
- Platform_Types_Cfg.h template header was introduced to support user definitions overriding the default ones in Platform_Types.h. The header is accessible via Platform_Types.h
- Platform_AddOn_Types.h contains additional non-AUTOSAR types.

10.3 Extensions

10.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

10.3.1.1 Platform

Short Name	Platform
Long Name	Central Elements: Platform
Description	Central Elements: Platform
Multiplicity	1..1
Default Value	-
Type	ECUC-MODULE-DEF

10.3.1.2 Platform/PlatformRbSettings

Short Name	PlatformRbSettings
Long Name	Configuration settings for CUCEL Central Elements module: Platform
Description	Configuration settings for CUCEL Central Elements module: Platform
Multiplicity	1..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

10.3.1.3 Platform/PlatformRbSettings/PlatformRbCpuBitOrder

Short Name	PlatformRbCpuBitOrder
Long Name	Configuration parameter to choose the bit order of the controller
Description	Choose one of two possible bit orders: MSB_FIRST or LSB_FIRST. The bit order shall not be mixed with the byte order. The bit order is only relevant for definition of the bit order in pictures in specifications of a controller. On software implementation side the bit order has mostly no relevance.
Multiplicity	1..1
Default Value	-
Enumeration Literals	MSB_FIRST, LSB_FIRST
Type	ECUC-ENUMERATION-PARAM-DEF

10.3.1.4 Platform/PlatformRbSettings/PlatformRbCpuByteOrder

Short Name	PlatformRbCpuByteOrder
Long Name	Configuration parameter to choose the byte order of the controller
Description	Choose one of two possible byte orders: HIGH_BYTE_FIRST or LOW_BYTE_FIRST
Multiplicity	1..1
Default Value	-
Enumeration Literals	HIGH_BYTE_FIRST, LOW_BYTE_FIRST
Type	ECUC-ENUMERATION-PARAM-DEF

10.3.1.5 Platform/PlatformRbSettings/PlatformRbCpuType

Short Name	PlatformRbCpuType
Long Name	Configuration parameter to choose the type of a controller
Description	Choose one of three two possible controller types: 8, 16, 32 or 64 bit controller
Multiplicity	1..1
Default Value	-
Enumeration Literals	CPU_TYPE_8, CPU_TYPE_16, CPU_TYPE_32, CPU_TYPE_64
Type	ECUC-ENUMERATION-PARAM-DEF

10.3.1.6 Platform/PlatformRbSettings/PlatformRbFloatActivation

Short Name	PlatformRbFloatActivation
Long Name	Configuration parameter to activate the float data types
Description	If PlatformRbFloatActivation is set to “ALLOW”, the float data types are activated. If “SUPPRESS” is chosen the float data types are not generated.
Multiplicity	1..1
Default Value	-
Enumeration Literals	ALLOW, SUPPRESS
Type	ECUC-ENUMERATION-PARAM-DEF

10.3.1.7 Platform/PlatformRbSettings/PlatformRbFloatdeActivation

Short Name	PlatformRbFloatdeActivation
Long Name	Configuration parameter to deactivate either the float32 or float64 data types

Description	If PlatformRbFloatdeActivation is set to “SUPPRESS_float32”, the float32 data type is deactivated. If “SUPPRESS_float64” is chosen the float64 data type is not generated.
Multiplicity	0..1
Default Value	-
Enumeration Literals	SUPPRESS_float32, SUPPRESS_float64
Type	ECUC-ENUMERATION-PARAM-DEF

10.3.1.8 Platform/PlatformRbSettings/PlatformRbNativeActivation

Short Name	PlatformRbNativeActivation
Long Name	Configuration parameter to activate the Native declaration
Description	If PlatformRbNativeActivation is set to “ALLOW”, the native type of the corresponding base type will be generated. If “SUPPRESS” is chosen then the native type will not be generated.
Multiplicity	0..1
Default Value	-
Enumeration Literals	ALLOW, SUPPRESS
Type	ECUC-ENUMERATION-PARAM-DEF

10.3.1.9 Platform/PlatformRbSettings/PlatformRbNativeBoolean

Short Name	PlatformRbNativeBoolean
Long Name	Configuration parameter to define the native declaration of the data type boolean
Description	Specify the native declaration which is used by the compiler to define the data type boolean.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.10 Platform/PlatformRbSettings/PlatformRbNativeChar

Short Name	PlatformRbNativeChar
Long Name	native declaration of the data type Char
Description	Specify the native declaration which is used by the compiler to define the data type Char.
Multiplicity	0..1
Default Value	-

Type	ECUC-STRING-PARAM-DEF

10.3.1.11 Platform/PlatformRbSettings/PlatformRbNativeFloat32

Short Name	PlatformRbNativeFloat32
Long Name	Configuration parameter to define the native declaration of the data type float32
Description	Specify the native declaration which is used by the compiler to define the data type float32.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.12 Platform/PlatformRbSettings/PlatformRbNativeFloat64

Short Name	PlatformRbNativeFloat64
Long Name	Configuration parameter to define the native declaration of the data type float64
Description	Specify the native declaration which is used by the compiler to define the data type float64.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.13 Platform/PlatformRbSettings/PlatformRbNativeSint16

Short Name	PlatformRbNativeSint16
Long Name	Configuration parameter to define the native declaration of the data type sint16
Description	Specify the native declaration which is used by the compiler to define the data type sint16.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.14 Platform/PlatformRbSettings/PlatformRbNativeSint16Least

Short Name	PlatformRbNativeSint16Least
Long Name	Configuration parameter to define the native declaration of the data type sint16_least

Description	Specify the native declaration which is used by the compiler to define the data type sint16_least.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.15 Platform/PlatformRbSettings/PlatformRbNativeSint32

Short Name	PlatformRbNativeSint32
Long Name	Configuration parameter to define the native declaration of the data type sint32
Description	Specify the native declaration which is used by the compiler to define the data type sint32.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.16 Platform/PlatformRbSettings/PlatformRbNativeSint32Least

Short Name	PlatformRbNativeSint32Least
Long Name	Configuration parameter to define the native declaration of the data type sint32_least
Description	Specify the native declaration which is used by the compiler to define the data type sint32_least.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.17 Platform/PlatformRbSettings/PlatformRbNativeSint64

Short Name	PlatformRbNativeSint64
Long Name	Configuration parameter to define the native declaration of the data type Sint64
Description	Specify the native declaration which is used by the compiler to define the data type Sint64.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.18 Platform/PlatformRbSettings/PlatformRbNativeSint8

Short Name	PlatformRbNativeSint8
Long Name	Configuration parameter to define the native declaration of the data type sint8
Description	Specify the native declaration which is used by the compiler to define the data type sint8.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.19 Platform/PlatformRbSettings/PlatformRbNativeSint8Least

Short Name	PlatformRbNativeSint8Least
Long Name	Configuration parameter to define the native declaration of the data type sint8_least
Description	Specify the native declaration which is used by the compiler to define the data type sint8_least.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.20 Platform/PlatformRbSettings/PlatformRbNativeUint16

Short Name	PlatformRbNativeUint16
Long Name	Configuration parameter to define the native declaration of the data type uint16
Description	Specify the native declaration which is used by the compiler to define the data type uint16.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.21 Platform/PlatformRbSettings/PlatformRbNativeUint16Least

Short Name	PlatformRbNativeUint16Least
Long Name	Configuration parameter to define the native declaration of the data type uint16_least
Description	Specify the native declaration which is used by the compiler to define the data type uint16_least.
Multiplicity	1..1

Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.22 Platform/PlatformRbSettings/PlatformRbNativeUint32

Short Name	PlatformRbNativeUint32
Long Name	Configuration parameter to define the native declaration of the data type uint32
Description	Specify the native declaration which is used by the compiler to define the data type uint32.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.23 Platform/PlatformRbSettings/PlatformRbNativeUint32Least

Short Name	PlatformRbNativeUint32Least
Long Name	Configuration parameter to define the native declaration of the data type uint32_least
Description	Specify the native declaration which is used by the compiler to define the data type uint32_least.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.24 Platform/PlatformRbSettings/PlatformRbNativeUint64

Short Name	PlatformRbNativeUint64
Long Name	Configuration parameter to define the native declaration of the data type uint64
Description	Specify the native declaration which is used by the compiler to define the data type uint64.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.25 Platform/PlatformRbSettings/PlatformRbNativeUint8

Short Name	PlatformRbNativeUint8
Long Name	Configuration parameter to define the native declaration of the data type uint8

Description	Specify the native declaration which is used by the compiler to define the data type uint8.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.26 Platform/PlatformRbSettings/PlatformRbNativeUint8Least

Short Name	PlatformRbNativeUint8Least
Long Name	Configuration parameter to define the native declaration of the data type uint8_least
Description	Specify the native declaration which is used by the compiler to define the data type uint8_least.
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

10.3.1.27 Platform/PlatformRbSettings/PlatformRbTypeEmitter

Short Name	PlatformRbTypeEmitter
Long Name	Configuration parameter for type emitter
Description	To suppress the typedef in RTE specify the typeEmitter attribute with a value other than RTE. By default the value is provided other than RTE which is Platform_Types
Multiplicity	0..1
Default Value	Platform_Types
Enumeration Literals	Platform_Types, RTE
Type	ECUC-ENUMERATION-PARAM-DEF

10.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

10.4 Limitations

There are no known limitations in this version of the Platform module.

10.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

10.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

10.7 API Definition

This section is not complete in version v12.7.0 of the Reference Guide and will be available in a later version.

10.8 Configuration Advice

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

10.9 Integration Advice

To integrate the Platform module:

- Add the PAC: CUCEL to the Project following the standard procedures for adding BSW packages. There are no variants to be chosen, no cyclic functions to be called, and no project-specific configuration settings to be adapted.
- Macros RBA_VECU_ENABLED (VECU specific) and RBA_VECU_ENABLED_BOOL_CONFIGURABLE have been provided in the *Plaform_Types_Cfg.h_tpl* template file to support the RTA-CAR integration use cases; they should not be used by any other projects (including those with VECU enabled).
- VECU projects use both RBA_VECU_ENABLED and the EcuCRbVecuEnabled CUCEL BCT switch to activate VECU.
- The *Platform_AddOn_Types.h* path should be given as input to the RTAOS bamf action in the BATCH_PARAMS parameter. The Platform header file uses the COMPILER_RB_ASSERT_GLOBAL, hence the availability of the COMPILER_RB_ASSERT_GLOBAL definition in *Compiler_Cfg.h* has to be ensured.
- If the Platform module is configured, the duplicate *Platform_Types.h* file within the integration folder must be removed after CodeGen.
- The *Platform_Types.h* file will be generated with invalid syntax if the Platform module is not correctly configured. Ensure that all mandatory (Multi-

plicity1:1) fields of the PlatformRbSettings container are configured.

10.9.1 Init Functions

No Init is required.

10.9.2 DeInit Functions

No DeInit is required.

10.9.3 Scheduled Functions

Platform has no periodic functions.

10.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Platform module does not use any exclusive OS resources.

10.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

11 rba_ArxmlGen Module

Module name	rba_ArxmlGen
Package	COMMON
AUTOSAR Module ID	N/A
AUTOSAR Version	22-11

11.1 Introduction

rba_ArxmlGen provides an ARXML generator, which abstracts elements commonly defined in BSWMD (basic software module description) or SWCD (software component description) files.

This allows the creation of BSWMD and/or SWCD contents (by providing ECUC values containing the desired elements) in a more abstract way when compared to directly specifying ARXML files.

These ECUC values can be provided either as a file or as output (possibly non-persisted) of a configuration generator.

Note that rba_ArxmlGen is intended exclusively for the generation of ECUC-dependent BSWMD/SWCD files, and not for directly editing them.

The figure below shows a typical flow of information when using rba_ArxmlGen for the creation of BSWMD files. In this example, two BSW modules (independently from each other) create an ECU configuration fragment for rba_ArxmlGen. As a result, each of these BSW modules gets a BSWMD file generated on their behalf. These BSWMD files then typically serve as input for the RTE generator (not shown in this figure).

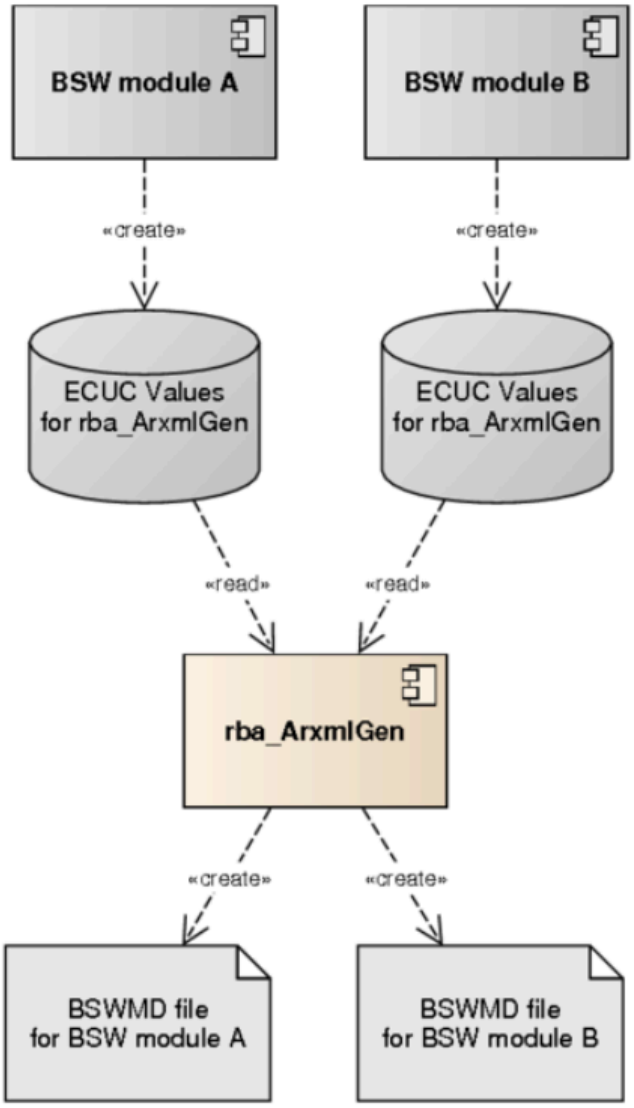

Figure 11.1.rba_ArxmlGen Interaction

11.2 Supported Features

Rba_ArxmlGen can be used for the generation of locally defined elements, including:

- data types (application and implementation data types)
- calibration parameters
- measurement variables
- computation methods
- executable entities (currently only scheduled and called entities)
- exclusive area executable entities

The following elements are expected to be defined elsewhere (typically in manually maintained ARXML files):

- application and implementation data types shared with other components
- BSW module entries (including their documentation)
- ECUC parameter definitions
- ECUC values

11.2.1 BSW Measurement Support

An optional parameter (rba_ArxmlGen_BswMeasurementSupport) is created which provides the measurement definition and describes the behavior of memory block which is available for measurement variables.

By default the staticMemory section will be generated, along with ArTypedPerInstanceMemory requiring RTE for the generation of Measurement variable. Projects with RTE can either choose staticMemory or ArTypedPerInstanceMemory and projects without RTE can only use staticMemory.

If ArTypedPerInstanceMemory is selected, then corresponding Measurement variables will generated in SchM_*.h, FlatMap Measurement has to enabled for ARTYPED PIM to be generated in A2L file. For StaticMemorys, corresponding Measurement variables will get generated in A2L file by RTE Vendor Specific Option.

11.3 Extensions

11.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

11.3.1.1 rba_ArxmlGen

Short Name	rba_ArxmlGen
Long Name	ARXML Generator
Description	Provides an abstraction of elements commonly defined in SWCD or BSWMD files. This allows users to define AUTOSAR elements in a more abstract way than by specifying ARXML files directly.
Multiplicity	0..1
Default Value	-
Type	ECUC-MODULE-DEF

11.3.1.2 rba_ArxmlGen/rba_ArxmlGen_BswControl

Short Name	rba_ArxmlGen_BswControl

Long Name	ARXMLGen_SchedulingControl
Description	The instance of this container is the indication to have control on the generation of schedulable entity.
Multiplicity	0..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.3 rba_ArxmlGen/rba_ArxmlGen_BswControl/rba_ArxmlGen_BswControlStatus

Short Name	rba_ArxmlGen_BswControlStatus
Long Name	Control
Description	The status shows to enable or disable the generation of schedulable entity and related parameters globally. If configured true the schedulable entity generation will be disabled globally and vice-versa.
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.4 rba_ArxmlGen/rba_ArxmlGen_BswControl/rba_ArxmlGen_BswControlStatus_Comp

Short Name	rba_ArxmlGen_BswControlStatus_Comp
Long Name	CompRteSchedulingCntrol
Description	The status shows to enable or disable the generation of schedulable entity and related parameters globally.
Multiplicity	0..*
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.5 rba_ArxmlGen/rba_ArxmlGen_Comp

Short Name	rba_ArxmlGen_Comp
Long Name	Component
Description	For each instance of this container, one BSWMD file will be generated for the component named according to the short name of this container. This generated BSWMD file contains the ARXML counterparts of all elements defined inside this container.
Multiplicity	0..*
Default Value	-

Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.6 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Appl-DataType

Short Name	rba_ArxmlGen_ApplDataType
Long Name	Appl. data type
Description	Defines an application data type used for measurement or calibration. The short name of this application data type shall start with the component' s short name.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.7 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Appl-DataType/rba_ArxmlGen_ApplDataTypeCalibrationaccess

Short Name	rba_ArxmlGen_ApplDataTypeCalibrationaccess
Long Name	Calibration Access
Description	The parameter shall be configured for application data type which are non calibration parameters and non measurement variables If this parameter is not configured then the value will be taken as " Not accessible"
Multiplicity	0..1
Default Value	-
Enumeration Literals	Read_Only, Not_Accessible
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.8 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Appl-DataType/rba_ArxmlGen_ApplDataTypeCategory

Short Name	rba_ArxmlGen_ApplDataTypeCategory
Long Name	Category
Description	Categorizes this application data type. Currently, simple values, arrays, structures and value blocks are supported.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Simple, Array, Struct, ValBlock, Boolean
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.9 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeCompuMethodOwnRef

Short Name	rba_ArxmlGen_ApplDataTypeCompuMethodOwnRef
Long Name	Computation method (own)
Description	Reference to the computation method which describes the translation between the internal (often integer) and physical (often floating point) representation of elements using this application data type. Only applicable to simple data types, not to arrays or structures. This parameter shall only be used if the referenced computation method is also defined using rba_ArxmlGen and if it is part of the same component as this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.10 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeCompuMethodRef

Short Name	rba_ArxmlGen_ApplDataTypeCompuMethodRef
Long Name	Computation method (other)
Description	Short name path to the (typically centrally defined) computation method which describes the translation between the internal (often integer) and physical (often floating point) representation of elements using this application data type. Only applicable to simple data types, not to arrays or structures. This parameter shall only be used if the referenced computation method is not defined using rba_ArxmlGen or if it is part of a different component than this application data type. The list of centrally available computation methods is provided in the Central Elements Guideline (Rule CEL_113). If a particular computation method is not centrally defined the local expert for central elements has to be consulted.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.11 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Appl-

DataType/rba_ArxmlGen_ApplDataTypeDataConstrOwnRef

Short Name	rba_ArxmlGen_ApplDataTypeDataConstrOwnRef
Long Name	Data constraint (own)
Description	DataConstraints are used to implement limits on the values for data element.The meta-class DataConstr is referenced via the attribute SwDataDefProps of an ApplicationDataType.This parameter shall only be used if the referenced DataConstr type is also defined using rba_ArxmlGen and if it is part of the same component as this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.12 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeDataConstrRef

Short Name	rba_ArxmlGen_ApplDataTypeDataConstrRef
Long Name	Data constraint (other)
Description	DataConstraints are used to implement limits on the values for data element.The meta class DataConstr is referenced via the attribute SwDataDefProps of an ApplicationDataType.This parameter shall only be used if the referenced DataConstr type is not defined using rba_ArxmlGen or if it is part of a different component than this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.13 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeDispFormat

Short Name	rba_ArxmlGen_ApplDataTypeDispFormat
Long Name	Display format
Description	Display format of the (physical) value of the application data type. A printf-like format string shall be given here, e.g. %5.0f. Due to backwards compatibility this attribute is currently optional—but will become mandatory in future.
Multiplicity	0..1

Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.14 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeImplOwnRef

Short Name	rba_ArxmlGen_ApplDataTypeImplOwnRef
Long Name	Impl. data type (own)
Description	Reference to the implementation data type which is used on implementation level for this application data type. This parameter shall only be used if the referenced implementation data type is also defined using rba_ArxmlGen and if it is part of the same component as this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.15 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeImplRef

Short Name	rba_ArxmlGen_ApplDataTypeImplRef
Long Name	Impl. data type (other)
Description	Short name path to the implementation data type which is used on implementation level for this application data type. This parameter shall only be used if the referenced implementation data type is not defined using rba_ArxmlGen or if it is part of a different component than this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.16 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeLongName

Short Name	rba_ArxmlGen_ApplDataTypeLongName
Long Name	Long name
Description	Long name of this application data type. The long name shall be the human readable representation of the short name of this application data type.

Multiplicity	1..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.17 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeNumElements

Short Name	rba_ArxmlGen_ApplDataTypeNumElements
Long Name	Number of array elements
Description	Array size in case of array application data types. Not applicable to simple or structure application data types.
Multiplicity	0..1
Minimum Value	1
Default Value	-
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.18 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeRefreshing

Short Name	rba_ArxmlGen_ApplDataTypeRefreshing
Long Name	Refreshing
Description	Specifies the frequency in which the application data is updated. This container shall only be activated in exceptional cases, in particular for adaptive calibration parameters. If this container is activated but not filled a default of 200ms is provided.
Multiplicity	0..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.19 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeRefreshing/rba_ArxmlGen_ApplDataTypeRefreshCode

Short Name	rba_ArxmlGen_ApplDataTypeRefreshCode
Long Name	CSE code
Description	Specifies the code for the scaling units. The default value for scaling unit is 3 (representing 1 ms). The mapping value to scaling unit can be found in chapter " Common explanation of MSRSW elements" in the ASAM-AE-MDX-V*.pdf document.

Multiplicity	0..1
Value Range	0..1000
Default Value	3
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.20 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeRefreshing/rba_ArxmlGen_ApplDataTypeRefreshFactor

Short Name	rba_ArxmlGen_ApplDataTypeRefreshFactor
Long Name	CSE factor
Description	Specifies the factor for the timing rate. The default refresh factor is 200.
Multiplicity	0..1
Minimum Value	1
Default Value	200
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.21 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeSub

Short Name	rba_ArxmlGen_ApplDataTypeSub
Long Name	Sub appl. data type
Description	Specifies a subordinate application data type in case of array or structure application data types. Not applicable to simple application data types, i.e. of category simple value or value block. In case of arrays, only one such subordinate application data type is allowed to be specified here.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.22 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeSub/rba_ArxmlGen_ApplDataTypeSubOwnRef

Short Name	rba_ArxmlGen_ApplDataTypeSubOwnRef
Long Name	Sub appl. data type (own)

Description	Reference to the subordinate application data type(s) in case of array or structure application data types. Not applicable to simple application data types. This parameter shall only be used if the referenced application data type is also defined using rba_ArxmlGen and if it is part of the same component as this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.23 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeSub/rba_ArxmlGen_ApplDataTypeSubXArrayRef

Short Name	rba_ArxmlGen_ApplDataTypeSubXArrayRef
Long Name	Sub appl. data type (other, array)
Description	Short name path to the subordinate array application data type(s) in case of array or structure application data types. Not applicable to simple application data types. This parameter shall only be used if the referenced application data type is not defined using rba_ArxmlGen or if it is part of a different component than this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.24 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeSub/rba_ArxmlGen_ApplDataTypeSubXPrimitiveRef

Short Name	rba_ArxmlGen_ApplDataTypeSubXPrimitiveRef
Long Name	Sub appl. data type (other, simple)
Description	Short name path to the subordinate simple application data type(s) in case of array or structure application data types. Not applicable to simple application data types. This parameter shall only be used if the referenced application data type is not defined using rba_ArxmlGen or if it is part of a different component than this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.25 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeSub/rba_ArxmlGen_ApplDataTypeSubXRecordRef

Short Name	rba_ArxmlGen_ApplDataTypeSubXRecordRef
Long Name	Sub appl. data type (other, structure)
Description	Short name path to the subordinate structure application data type(s) in case of array or structure application data types. Not applicable to simple application data types. This parameter shall only be used if the referenced application data type is not defined using rba_ArxmlGen or if it is part of a different component than this application data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.26 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ApplDataType/rba_ArxmlGen_ApplDataTypeSwRecordLayoutRef

Short Name	rba_ArxmlGen_ApplDataTypeSwRecordLayoutRef
Long Name	Sw Record Layout Ref
Description	This is reference to a Sw Record Layout. Developers shall make use of Record Layouts for their data elements.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.27 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswMeasurementSupport

Short Name	rba_ArxmlGen_BswMeasurementSupport
Long Name	Bsw Measurement Support
Description	the measurement definition which describes the behavior of memory block which is available for measuremnt variables. currently supports arTypedPerInstanceMemory and staticMemory, by default staticMemory will be generated. (this parameter is provided as a backward compatibility option for projects which do not supports RTE, staticMemorys is provided)
Multiplicity	0..1
Default Value	staticMemory

Enumeration Literals	arTypedPerInstanceMemory, staticMemory
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.28 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry

Short Name	rba_ArxmlGen_BswModuleEntry
Long Name	BswModuleEntry
Description	This class represents a single API entry (C-function prototype) into the BSW module or cluster.The ShortName of the BswModuleEntry shall be set identical to the name of the C-function (but without a VendorId and a VendorApiInfix).
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.29 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments

Short Name	rba_ArxmlGen_Arguments
Long Name	Arguments
Description	This Container the specifies the arguments belonging to this BswModuleEntry
Multiplicity	0..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.30 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments/rba_ArxmlGen_SwServiceArg

Short Name	rba_ArxmlGen_SwServiceArg
Long Name	SwServiceArg
Description	Specifies the properties of a data object exchanged during the call of an SwService
Multiplicity	1..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.31 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments/rba_ArxmlGen_SwServiceArg/rba_ArxmlGen_Category

Short Name	rba_ArxmlGen_Category
Long Name	Category
Description	Categorizes the kind of the return value (value, data pointer, functionpointer).
Multiplicity	1..1
Default Value	-
Enumeration Literals	TYPE_REFERENCE, DATA_REFERENCE, FUNCTION_REFERENCE
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.32 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments/rba_ArxmlGen_SwServiceArg/rba_ArxmlGen_Direction

Short Name	rba_ArxmlGen_Direction
Long Name	Direction
Description	Describes the kind of the data flow of the return value of a BswModuleEntry.
Multiplicity	0..1
Default Value	-
Enumeration Literals	IN, INOUT, OUT
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.33 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments/rba_ArxmlGen_SwServiceArg/rba_ArxmlGen_FunctionPointerRef

Short Name	rba_ArxmlGen_FunctionPointerRef
Long Name	FunctionPointerRef
Description	The referenced BswModuleEntry serves as the signature of a function pointer definition.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.34 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments/rba_ArxmlGen_SwServiceArg/rba_ArxmlGen_ImplDataTypeRef

Short Name	rba_ArxmlGen_ImplDataTypeRef
Long Name	impl. data type
Description	Short name path to the implementation data type which is used as a basis for this implementation data type. Only applicable to simple implementation data types.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.35 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments/rba_ArxmlGen_SwServiceArg/rba_ArxmlGen_NativeDeclarationString

Short Name	rba_ArxmlGen_NativeDeclarationString
Long Name	AdditionalNativeTypeQualifier
Description	This attribute describes the declaration of such a basetype and is optional and shall only be used if an additional native qualifier is necessary.
Multiplicity	0..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.36 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments/rba_ArxmlGen_SwServiceArg/rba_ArxmlGen_TargetCategory

Short Name	rba_ArxmlGen_TargetCategory
Long Name	TargetCategory
Description	SwPointerTargetProps construct the category of the target shall be specified. Depending on the particular use case the value shall be set to TYPE_REFERENCE or DATA_REFERENCE
Multiplicity	0..1
Default Value	-
Enumeration Literals	TYPE_REFERENCE, DATA_REFERENCE
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.37 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_Arguments/rba_ArxmlGen_SwSer-

viceArg/rba_ArxmlGen_baseTypeRef

Short Name	rba_ArxmlGen_baseTypeRef
Long Name	base data type
Description	Short name path to the base data type which is used as a basis for this base data type. Only applicable to simple base data types.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.38 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_BswCallType

Short Name	rba_ArxmlGen_BswCallType
Long Name	BswModuleEntry Call Type
Description	The type of call associated with this service. There could be two use cases possible to call a BSW initialization functions such as before and after the start of OS: 1.Before the start of OS, specify the CALL-TYPE as REGULAR. 2.After the start of OS (for example in an OS_Ini_Task), specify the CALL-TYPE as SCHEDULED
Multiplicity	1..1
Default Value	-
Enumeration Literals	CALLBACK, INTERRUPT, REGULAR, SCHEDULED
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.39 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_BswExecutionContext

Short Name	rba_ArxmlGen_BswExecutionContext
Long Name	BswExecutionContext
Description	Specifies the execution context which is required (in caseof entries into this module) or guaranteed (in case ofentries called from this module) for this service. Hints : It is not recommended to use interrupts of INTERRUPT-CAT-1 because interrupts should be under control of the OS. There could be two use cases possible to call a BSW initialization functions such as before and after the start of OS: 1.Before the start of OS, specify the EXECUTION-CONTEXT as UNSPECIFIED. 2.After the start of OS(for example in an OS_Ini_Task), specify the EXECUTION-CONTEXT as TASK.
Multiplicity	1..1

Default Value	-
Enumeration Literals	HOOK, INTERRUPT_CAT_1, INTERRUPT_CAT_2, TASK, UNSPECIFIED
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.40 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_IsReentrant

Short Name	rba_ArxmlGen_IsReentrant
Long Name	IsReentrant
Description	Reentrancy from the viewpoint of function callers: True: Enables the service to be invoked again, before the service has finished. False: It is prohibited to invoke the service againbefore is has finished.
Multiplicity	1..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.41 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_IsSynchronus

Short Name	rba_ArxmlGen_IsSynchronus
Long Name	IsSynchronus
Description	Synchronicity from the viewpoint of function callers: True: This calls a synchronous service, i.e. theservice is completed when the call returns. False: The service (on semantical level) may notbe complete when the call returns
Multiplicity	1..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.42 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_LongNamebswmoduleentry

Short Name	rba_ArxmlGen_LongNamebswmoduleentry
Long Name	Long name
Description	Long name of this Bsw Module Entry. The long name shall be the human readable representation of the short name of this Bsw Module Entry.
Multiplicity	0..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.43 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_ServiceId

Short Name	rba_ArxmlGen_ServiceId
Long Name	ServiceId
Description	Refers to the service identifier of the StandardizedInterfaces of AUTOSAR basic software. Fornon-standardized interfaces, it can optionally be used forproprietary identification
Multiplicity	0..1
Default Value	-
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.44 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_returnType

Short Name	rba_ArxmlGen_returnType
Long Name	returnType
Description	This container represents the return type belonging to this bswModuleEntry.
Multiplicity	0..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.45 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_returnType/rba_ArxmlGen_Category

Short Name	rba_ArxmlGen_Category
Long Name	Category
Description	Categorizes the kind of the return value (value, data pointer, functionpointer).
Multiplicity	1..1
Default Value	-
Enumeration Literals	TYPE_REFERENCE, DATA_REFERENCE, FUNCTION_REFERENCE
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.46 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_returnType/rba_ArxmlGen_FunctionPointerRef

Short Name	rba_ArxmlGen_FunctionPointerRef
Long Name	FunctionPointerRef

Description	The referenced BswModuleEntry serves as the signature of a function pointer definition.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.47 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_returnType/rba_ArxmlGen_ImplDataTypeRef

Short Name	rba_ArxmlGen_ImplDataTypeRef
Long Name	impl. data type
Description	Short name path to the implementation data type which is used as a basis for this implementation data type. Only applicable to simple implementation data types.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.48 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_returnType/rba_ArxmlGen_NativeDeclarationString

Short Name	rba_ArxmlGen_NativeDeclarationString
Long Name	AdditionalNativeTypeQualifier
Description	This attribute describes the declaration of such a basetype and is optional and shall only be used if an additional native qualifier is necessary.
Multiplicity	0..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.49 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_returnType/rba_ArxmlGen_TargetCategory

Short Name	rba_ArxmlGen_TargetCategory
Long Name	TargetCategory
Description	SwPointerTargetProps construct the category of the target shall be specified. Depending on the particular use case the value shall be set to TYPE_REFERENCE or DATA_REFERENCE
Multiplicity	0..1
Default Value	-

Enumeration Literals	TYPE_REFERENCE, DATA_REFERENCE
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.50 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_returnType/rba_ArxmlGen_baseTypeRef

Short Name	rba_ArxmlGen_baseTypeRef
Long Name	base data type
Description	Short name path to the base data type which is used as a basis for this base data type. Only applicable to simple base data types.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.51 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_BswModuleEntry/rba_ArxmlGen_swServiceImplPolicy

Short Name	rba_ArxmlGen_swServiceImplPolicy
Long Name	SwServiceImplPolicy
Description	Denotes the implementation policy as a standard functioncall, inline function or macro. This has to be specified oninterface level because it determines the signature of thecall.
Multiplicity	1..1
Default Value	-
Enumeration Literals	INLINE, INLINE_CONDITIONAL, MACRO, STANDARD
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.52 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam

Short Name	rba_ArxmlGen_CalParam
Long Name	Calibration parameter
Description	Defines a calibration parameter. The RTE generator automatically defines the corresponding C implementation of this parameter. The short name of this calibration parameter shall start with the component' s short name. The short name shall have one of the following suffixes " _C" (for simple values), " _CA" (for arrays), " _CST" (for structures) or " _CVB" (for value blocks), r.f. Rule BSWMD_MCSupport_005 of the BSW_CodingGuidelines.
Multiplicity	0..*

Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.53 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamAddrMethodRef

Short Name	rba_ArxmlGen_CalParamAddrMethodRef
Long Name	Addressing method
Description	Short name path to the (typically centrally defined) addressing method used for this calibration parameter. The addressing method describes memory allocation aspects of this calibration parameter. The list of centrally available addressing methods is provided in the Central Elements Guideline (Rule CEL_114). If a particular addressing method is not centrally defined the local expert for central elements has to be consulted.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.54 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamApplDataTypeOwnRef

Short Name	rba_ArxmlGen_CalParamApplDataTypeOwnRef
Long Name	Appl. data type (own)
Description	Reference to the application data type which is used for this calibration parameter. This parameter shall only be used if the referenced application data type is also defined using rba_ArxmlGen and if it is part of the same component as this calibration parameter.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.55 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamApplDataTypeXArrayRef

Short Name	rba_ArxmlGen_CalParamApplDataTypeXArrayRef
Long Name	Appl. data type (other, array)

Description	Short name path to the array application data type which is used for this calibration parameter. Only applicable to array type calibration parameters. This parameter shall only be used if the referenced application data type is not defined using rba_ArxmlGen or if it is part of a different component than this calibration parameter.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.56 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/ rba_ArxmlGen_CalParamApplDataTypeXPrimitiveRef

Short Name	rba_ArxmlGen_CalParamApplDataTypeXPrimitiveRef
Long Name	Appl. data type (other, primitive)
Description	Short name path to the primitive application data type which is used for this calibration parameter. Only applicable to simple type and value block calibration parameters. This parameter shall only be used if the referenced application data type is not defined using rba_ ArxmlGen or if it is part of a different component than this calibration parameter.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.57 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/ rba_ArxmlGen_CalParamApplDataTypeXRecordRef

Short Name	rba_ArxmlGen_CalParamApplDataTypeXRecordRef
Long Name	Appl. data type (other, structure)
Description	Short name path to the structure application data type which is used for this calibration parameter. Only applicable to structure type calibration parameters. This parameter shall only be used if the referenced application data type is not defined using rba_ArxmlGen or if it is part of a different component than this calibration parameter.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.58 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/

rba_ArxmlGen_CalParamCalibrationAccess

Short Name	rba_ArxmlGen_CalParamCalibrationAccess
Long Name	Calibration Access
Description	swCalibrationAccess determines the access rights to a data object w.r.t. measurement and calibration.If the parameter is not configured, thee the default value “Read-Write” will be generated.
Multiplicity	0..1
Default Value	readWrite
Enumeration Literals	readWrite, readOnly, notAccessible
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.59 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/ rba_ArxmlGen_CalParamCategory

Short Name	rba_ArxmlGen_CalParamCategory
Long Name	Category
Description	Categorizes this calibration parameter. Currently, simple values, arrays, structures and value blocks are supported.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Simple, Array, Struct, ValBlock
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.60 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/ rba_ArxmlGen_CalParamDataConstrOwnRef

Short Name	rba_ArxmlGen_CalParamDataConstrOwnRef
Long Name	Data constraint (own)
Description	DataConstraints are used to implement limits on the values for data element.The meta-class Data-Constr is referenced via the attribute SwDataDef-Props of a Calibration Parameter.This parameter shall only be used if the referenced DataConstr type is also defined using rba_ArxmlGen and if it is part of the same component as this Calibration Parameter.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.61 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamDataConstrRef

Short Name	rba_ArxmlGen_CalParamDataConstrRef
Long Name	Data constraint (other)
Description	DataConstraints are used to implement limits on the values for data element.The meta class DataConstr is referenced via the attribute SwDataDefProps of a Calibration Parameter.This parameter shall only be used if the referenced DataConstr type is not defined using rba_ArxmlGen or if it is part of a different component than this Calibration Parameter.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.62 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamDataInitSubOwnRef

Short Name	rba_ArxmlGen_CalParamDataInitSubOwnRef
Long Name	Data initialisation reference
Description	Reference to the initialisation of a data structure. Note that the referenced data structure must match the application data type of this calibration parameter.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.63 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamDispFormat

Short Name	rba_ArxmlGen_CalParamDispFormat
Long Name	Display format
Description	Display format of the (physical) value of the calibration parameter. A printf-like format string shall be given here, e.g. %5.0f. Note that the display format of the referenced application data type is overwritten if specified at the level of calibration parameters.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.64 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit

Short Name	rba_ArxmlGen_CalParamInit
Long Name	Initial value
Description	Defines an initial value for this calibration parameter (physical value). Only applicable to array, value block or structure calibration parameters. The short name of this container is not relevant for the generated output but the order of these initial value containers is expected to be the same as in the corresponding application data type.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.65 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitArrayBlock

Short Name	rba_ArxmlGen_CalParamInitArrayBlock
Long Name	Init array block
Description	Defines an initial value block for this calibration parameter (physical value). Only applicable to nested array or structure calibration parameters. The short name of this container is not relevant for the generated output but the order of these initial value containers is expected to be the same as in the corresponding application data type.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.66 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitArrayBlock/rba_ArxmlGen_CalParamInitArrayBlockInitValue

Short Name	rba_ArxmlGen_CalParamInitArrayBlockInitValue
Long Name	Init array block value
Description	Initial value of the nested calibration parameter element (physical value). Only applicable to nested array calibration parameters.
Multiplicity	1..1
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.67 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitArrayBlock/rba_ArxmlGen_CalParamInitArrayBlockInitValueShortLabel

Short Name	rba_ArxmlGen_CalParamInitArrayBlockInitValueShortLabel
Long Name	Init array block Short Label
Description	This can be used to identify particular value specifications for human readers. of the nested calibration parameter element (physical value). Only applicable to nested Array calibration parameters.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.68 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitArrayBlock/rba_ArxmlGen_CalParamInitArrayBlockInitValueUnitRef

Short Name	rba_ArxmlGen_CalParamInitArrayBlockInitValueUnitRef
Long Name	Init array block Unit
Description	This is the physical unit of the Physical values for which the CompuMethod applies of the nested calibration parameter element (physical value). Only applicable to nested array calibration parameters.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.69 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitRecordBlock

Short Name	rba_ArxmlGen_CalParamInitRecordBlock
Long Name	Init record block
Description	Defines an initial array value block for this nested calibration parameter (physical value). Only applicable to nested array calibration parameters. The short name of this container is not relevant for the generated output but the order of these initial value containers is expected to be the same as in the corresponding application data type.
Multiplicity	0..*

Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.70 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitRecordBlock/rba_ArxmlGen_CalParamInitRecordBlockInitValue

Short Name	rba_ArxmlGen_CalParamInitRecordBlockInitValue
Long Name	Init record block value
Description	Initial value of the nested calibration parameter element (physical value). Only applicable to nested structured calibration parameters.
Multiplicity	1..1
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.71 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitRecordBlock/rba_ArxmlGen_CalParamInitRecordBlockInitValueShortLabel

Short Name	rba_ArxmlGen_CalParamInitRecordBlockInitValueShortLabel
Long Name	Init record block Short Label
Description	This can be used to identify particular value specifications for human readers. of the nested calibration parameter element (physical value). Only applicable to nested structured calibration parameters.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.72 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitRecordBlock/rba_ArxmlGen_CalParamInitRecordBlockInitValueUnitRef

Short Name	rba_ArxmlGen_CalParamInitRecordBlockInitValueUnitRef
Long Name	Init record block Unit
Description	This is the physical unit of the Physical values for which the CompuMethod applies of the nested calibration parameter element (physical value). Only applicable to nested structured calibration parameters.
Multiplicity	0..1

Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.73 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitValue

Short Name	rba_ArxmlGen_CalParamInitValue
Long Name	Initial value
Description	Initial value of the calibration parameter element (physical value). Only applicable to simple calibration parameters inside structure, array, value block calibration parameters.
Multiplicity	0..1
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.74 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitValueShortLabel

Short Name	rba_ArxmlGen_CalParamInitValueShortLabel
Long Name	Short Label
Description	This can be used to identify particular value specifications for human readers.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.75 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInit/rba_ArxmlGen_CalParamInitValueUnitRef

Short Name	rba_ArxmlGen_CalParamInitValueUnitRef
Long Name	Unit Ref
Description	This is the physical unit of the Physical values for which the CompuMethod applies.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.76 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamInitValue

Short Name	rba_ArxmlGen_CalParamInitValue
Long Name	Initial value
Description	Initial value of the calibration parameter (physical value). Only applicable to simple calibration parameters .
Multiplicity	0..1
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.77 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamLabel

Short Name	rba_ArxmlGen_CalParamLabel
Long Name	Short Label
Description	This can be used to identify particular value specifications for human readers.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.78 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamLongName

Short Name	rba_ArxmlGen_CalParamLongName
Long Name	Long name
Description	Long name of this calibration parameter. The long name shall be the human readable representation of the short name of this calibration parameter.
Multiplicity	1..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.79 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamNumElements

Short Name	rba_ArxmlGen_CalParamNumElements

Long Name	Number of array elements
Description	Array size in case of calibration parameter of category array or value block. Not applicable to any other calibration parameter type. Only has to be filled if the array application data type is externally defined (not via rba_ArxmlGen or defined in a different component).
Multiplicity	0..1
Minimum Value	1
Default Value	-
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.80 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamSwcomp

Short Name	rba_ArxmlGen_CalParamSwcomp
Long Name	SW-C
Description	Short name path to the (typically centrally defined) addressing method used for this calibration parameter. The addressing method describes memory allocation aspects of this calibration parameter. The list of centrally available addressing methods is provided in the Central Elements Guideline (Rule CEL_114). If a particular addressing method is not centrally defined the local expert for central elements has to be consulted.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.81 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CalParam/rba_ArxmlGen_CalParamUnitRef

Short Name	rba_ArxmlGen_CalParamUnitRef
Long Name	Unit Reference
Description	This is the physical unit of the Physical values for which the CompuMethod applies.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.82 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompCate-

goryrba_ArxmlGen_CompCategory

Short Name	rba_ArxmlGen_CompCategory
Long Name	Category
Description	Categorizes this component. Currently only the category BswModule is supported.
Multiplicity	1..1
Default Value	-
Enumeration Literals	BswModule
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.83 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompId

Short Name	rba_ArxmlGen_CompId
Long Name	Module identifier
Description	Identifier of this component (only applies to BSW). Please refer to the AUTOSAR_TR_BSWModuleList.pdf for a normative list of all module IDs for standardized BSW modules. For non-standardized modules, BSW architects define the ID. Special cases are modules for I/O Hardware Abstraction (ID = 254) and complex drivers (ID = 255).
Multiplicity	1..1
Value Range	1..65535
Default Value	false
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.84 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompIsConfigurable

Short Name	rba_ArxmlGen_CompIsConfigurable
Long Name	Is configurable
Description	Defines whether this component is configurable via the AUTOSAR ECU configuration methodology. If this is set to true, a reference to the vendor-specific ECUC parameter definition' s top level element is added to the BSWMD output.
Multiplicity	1..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.85 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompIs-

Standalonerba_ArxmlGen_CompIsStandalone

Short Name	rba_ArxmlGen_CompIsStandalone
Long Name	Is standalone
Description	Defines whether the generated BSWMD file by rba_ArxmlGen is the only BSWMD file for the component (tag shall be set to true) or an additional (static) BSWMD file exists in parallel (tag shall be set to false). Due to backwards compatibility this attribute is currently optional—but will become mandatory in future.
Multiplicity	0..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.86 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompIs-Standardized

Short Name	rba_ArxmlGen_CompIsStandardized
Long Name	Is standardized
Description	Defines whether this component is a standardized AUTOSAR BSW module.
Multiplicity	1..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.87 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompIsVen-dorspecific

Short Name	rba_ArxmlGen_CompIsVendorspecific
Long Name	Is Vendor specific
Description	Defines whether this component is configurable as per the Vendor. If this is set to true, then in the BSWMD output the ARPackage structure is gener-ated without the prefix AUTOSAR_.
Multiplicity	0..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.88 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompLong-Name

Short Name	rba_ArxmlGen_CompLongName
Long Name	Long name

Description	Long name of this component. The long name shall be the human readable representation of the short name of this component.
Multiplicity	1..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.89 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompMappingSetRef

Short Name	rba_ArxmlGen_CompMappingSetRef
Long Name	Data type mapping set
Description	Short name path to an externally defined (i.e. not generated with rba_ArxmlGen) data type mapping set. This reference shall only be used if a reference to an externally defined application data type which is used within this component shall be defined.
Multiplicity	0..*
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.90 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompSwcBswMappingRef

Short Name	rba_ArxmlGen_CompSwcBswMappingRef
Long Name	SWC-BSW mapping
Description	Reference to an SwcBswMapping which maps an SwcInternalBehavior to a BswInternalBehavior. This is only required to coordinate the API generation and the scheduling for service components, ECU abstraction components and complex driver components by the RTE and the BSW scheduling mechanisms.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.91 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompVendorApiInfix

Short Name	rba_ArxmlGen_CompVendorApiInfix
Long Name	VendorApiInfix

Description	VendorApiInfix is the Vendor specific name
Multiplicity	0..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.92 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompVersionAr

Short Name	rba_ArxmlGen_CompVersionAr
Long Name	AUTOSAR version
Description	Version of the AUTOSAR release on which the implementation of this component is based. The version information must follow the pattern defined by the AUTOSAR RevisionLabelString element, e.g. 4.0.3. HINT : this parameter is deprecated and maintained only for backward compatibility purpose… Dont use these parameter for latest developments. Now on if the parameter is not configured, rba_Arxml Gen will use EcuC parameter for deciding the AR version
Multiplicity	0..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.93 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompVersionSw

Short Name	rba_ArxmlGen_CompVersionSw
Long Name	Software version
Description	Defines the version of the software which implements this component. Take the variant without the alternative prefix, as specified in the CM plan (this is then conform to the AUTOSAR RevisionLabelString pattern).
Multiplicity	1..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.94 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod

Short Name	rba_ArxmlGen_CompuMethod
Long Name	Computation method
Description	Specifies a conversion between the internal and physical representation of data. Only applicable to simple data types.

Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.95 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod/rba_ArxmlGen_CompuMethodCategory

Short Name	rba_ArxmlGen_CompuMethodCategory
Long Name	Category
Description	Categorizes the computation method. Currently only linear conversions and text tables are supported.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Linear, TextTable
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.96 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod/rba_ArxmlGen_CompuMethodFactor

Short Name	rba_ArxmlGen_CompuMethodFactor
Long Name	Factor
Description	The internal value is multiplied with the factor defined here to get the physical value. Only applicable to linear conversions.
Multiplicity	0..1
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.97 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod/rba_ArxmlGen_CompuMethodLongName

Short Name	rba_ArxmlGen_CompuMethodLongName
Long Name	Long name
Description	Long name of this computation method. The long name shall be the human readable representation of the short name of this computation method.
Multiplicity	1..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.98 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod/rba_ArxmlGen_CompuMethodTextEntry

Short Name	rba_ArxmlGen_CompuMethodTextEntry
Long Name	Text entry
Description	Defines a mapping which is used for the transformation of one or more internal values into the corresponding display text. Only applicable to computation methods of category text table.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.99 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod/rba_ArxmlGen_CompuMethodTextEntry/rba_ArxmlGen_CompuMethodTEIntVal

Short Name	rba_ArxmlGen_CompuMethodTEIntVal
Long Name	Internal value
Description	The internal value to be displayed as a text.
Multiplicity	1..1
Default Value	-
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.100 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod/rba_ArxmlGen_CompuMethodTextEntry/rba_ArxmlGen_CompuMethodTENumVals

Short Name	rba_ArxmlGen_CompuMethodTENumVals
Long Name	Number of values
Description	The number of values which are to be displayed with the same text. If not specified, only a single internal value is displayed with this text. If e.g. the range 4..6 (i.e. 3 values starting from 4) shall be displayed with the same text, specify 4 for the internal value and 3 as the number of values.
Multiplicity	0..1
Minimum Value	1
Default Value	1
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.101 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Com-

puMethod/rba_ArxmlGen_CompuMethodTextEntry/rba_ArxmlGen_CompuMethodTESymbol

Short Name	rba_ArxmlGen_CompuMethodTESymbol
Long Name	Symbol
Description	The symbol, if provided, is used by code generators to get a C identifier for the CompuScale. The name will be used as is for the code generation, therefore it needs to be unique within the generation context.
Multiplicity	0..1
Default Value	-
Type	ECUC-LINKER-SYMBOL-DEF

11.3.1.102 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod/rba_ArxmlGen_CompuMethodTextEntry/rba_ArxmlGen_CompuMethodTEText

Short Name	rba_ArxmlGen_CompuMethodTEText
Long Name	Text
Description	The text(Vt) shall either be a valid C-Identifier or Symbol shall be defined.-Content of Vt elements shall follow C-Identifier syntax. If Vt is explicitely designed to have no C-Identifier syntax developer shall define Symbol additionally. In this case Symbol shall have C-identifier syntax.
Multiplicity	1..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.103 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_CompuMethod/rba_ArxmlGen_CompuMethodUnitRef

Short Name	rba_ArxmlGen_CompuMethodUnitRef
Long Name	Unit
Description	A reference to the physical unit of the physical values for which the computation method applies. Note that units are not specified inside rba_ArxmlGen. Only applicable to linear conversions.By default, texttable computation method refers to Nounit.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.104 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataConstraint

Short Name	rba_ArxmlGen_DataConstraint
Long Name	Data constraint
Description	Constraints for the possible values of a data type, i.e. limits for the physical and internal value range.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.105 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataConstraint/rba_ArxmlGen_DataConstraintCategory

Short Name	rba_ArxmlGen_DataConstraintCategory
Long Name	Category
Description	Categorizes this data constraint, i.e. either limitations on the internal or physical domain.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Physical, Internal
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.106 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataConstraint/rba_ArxmlGen_DataConstraintLower

Short Name	rba_ArxmlGen_DataConstraintLower
Long Name	Lower limit
Description	Specifies the lower limit of this data constraint.
Multiplicity	1..1
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.107 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataConstraint/rba_ArxmlGen_DataConstraintUnitRef

Short Name	rba_ArxmlGen_DataConstraintUnitRef
Long Name	Unit

Description	A reference to the physical unit of the physical values for which the data constraint applies. Note that currently units are not specified inside rba_ ArxmlGen.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.108 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataConstraint/rba_ArxmlGen_DataConstraintUpper

Short Name	rba_ArxmlGen_DataConstraintUpper
Long Name	Upper limit
Description	Specifies the upper limit of this data constraint.
Multiplicity	1..1
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.109 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit

Short Name	rba_ArxmlGen_DataInit
Long Name	Data initialisation
Description	Initialisation of complex data structures (arrays and structures and possible nesting).
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.110 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit/rba_ArxmlGen_DataInitCategory

Short Name	rba_ArxmlGen_DataInitCategory
Long Name	Category
Description	Categorizes this data initialisation. Currently, simple value, array and structure are supported.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Simple, Array, Struct, ValBlock
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.111 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit/rba_ArxmlGen_DataInitPhyShortLabel

Short Name	rba_ArxmlGen_DataInitPhyShortLabel
Long Name	Short Label
Description	This can be used to identify particular value specifications for human readers.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.112 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit/rba_ArxmlGen_DataInitPhyUnitRef

Short Name	rba_ArxmlGen_DataInitPhyUnitRef
Long Name	Unit Ref
Description	This is the physical unit of the Physical values for which the CompuMethod applies. This unit reference is used for value block type category.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.113 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit/rba_ArxmlGen_DataInitSubOwnRef

Short Name	rba_ArxmlGen_DataInitSubOwnRef
Long Name	Sub data init
Description	Reference to the subordinate application data type(s) in case of array or structure application data types. Not applicable to simple application data types.
Multiplicity	0..*
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.114 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit/rba_ArxmlGen_DataInitSubParamInit

Short Name	rba_ArxmlGen_DataInitSubParamInit
Long Name	Initial value

Description	Defines an initial value for this calibration parameter (physical value) when data prototype is typified by application data type. The multiple instances of this parameter is created for complex data structures and the values to initialise them.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.115 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit/rba_ArxmlGen_DataInitSubParamInit/rba_ArxmlGen_DataInitValue

Short Name	rba_ArxmlGen_DataInitValue
Long Name	Initial value
Description	Initial value of the calibration parameter element (physical value).
Multiplicity	0..1
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.116 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit/rba_ArxmlGen_DataInitSubParamInit/rba_ArxmlGen_DataInitValueShortLabel

Short Name	rba_ArxmlGen_DataInitValueShortLabel
Long Name	Short Label
Description	This can be used to identify particular value specifications for human readers.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.117 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_DataInit/rba_ArxmlGen_DataInitSubParamInit/rba_ArxmlGen_DataInitValueUnitRef

Short Name	rba_ArxmlGen_DataInitValueUnitRef
Long Name	Unit
Description	This is the physical unit of the Physical values for which the CompuMethod applies.This unit reference shall be used for category array, struct value type.
Multiplicity	0..1

Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.118 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_EnableBswImplementations

Short Name	rba_ArxmlGen_EnableBswImplementations
Long Name	BswImplementations Generation
Description	The status shows to enable or disable the generation of BswImplementations. If configured false the BswImplementations generation will be disabled.
Multiplicity	0..1
Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.119 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExclusiveArea

Short Name	rba_ArxmlGen_ExclusiveArea
Long Name	Exclusive Area
Description	Defines an Exclusive areas within the BswInternalBehavior
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.120 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExclusiveArea/rba_ArxmlGen_ExclusiveAreaName

Short Name	rba_ArxmlGen_ExclusiveAreaName
Long Name	Exclusive Area Name
Description	Defines name of the Exclusive area.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.121 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExclusiveArea/rba_ArxmlGen_ExclusiveArea_Desc

Short Name	rba_ArxmlGen_ExclusiveArea_Desc
Long Name	Exclusive Area Description

Description	Any additional information can be added to this parameter which is used for the integrator. The information can be added in the “DESC” tag in the BSWMD file .
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.122 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExclusiveArea/rba_ArxmlGen_ExclusiveImplEntryRef

Short Name	rba_ArxmlGen_ExclusiveImplEntryRef
Long Name	Implemented entry
Description	This parameter defines a Executable entity reference for the CAN-ENTER-EXCLUSIVE-AREA-REF .
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.123 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity

Short Name	rba_ArxmlGen_ExecEntity
Long Name	Executable entity
Description	Defines an executable entity. Don’ t prefix the short name of this entity with the component’ s short name!
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.124 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecAddrMethodRef

Short Name	rba_ArxmlGen_ExecAddrMethodRef
Long Name	Addressing method

Description	Short name path to the (typically centrally defined) addressing method used for this executable variable. The addressing method describes memory allocation aspects of this executable variable. The list of centrally available addressing methods is provided in the Central Elements Guideline (Rule CEL_114). If a particular addressing method is not centrally defined the local expert for central elements has to be consulted.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.125 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityCategory

Short Name	rba_ArxmlGen_ExecEntityCategory
Long Name	Category
Description	Categorizes this executable entity. Schedulable entities are designed to be scheduled by the RTE. Called entities are designed to be called from another BSW module or cluster. Since the BswEntity and the BswEvent are generated in one go, the schedulable entities can have one of the following five types: schedulable entity either triggered by BswTimingEvent or BswBackgroundEvent, schedulable entity triggered by BswInternalTriggerOccurredEvent, schedulable entity triggered by BswExternalTriggerOccurredEvent, schedulable entity triggered by BswModeSwitchEvent or schedulable entity triggered by BswModeSwitchedAckEvent.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Schedulable, Called, Interrupt, SchedulableWithInternalTrigger, SchedulableWithExternalTrigger, SchedulableWithModeSwitch, SchedulableWithModeSwitchedAck
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.126 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityITPRef

Short Name	rba_ArxmlGen_ExecEntityITPRef
Long Name	Reference to schedulable entity activated by internal trigger

Description	Reference to a schedulable entity that is activated by an internal trigger. This is required to reference the schedulable entity to be triggered by a BswInterrnalTriggerOccurredEvent.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.127 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityImplEntryRef

Short Name	rba_ArxmlGen_ExecEntityImplEntryRef
Long Name	Implemented entry
Description	Short name path to the BSW module entry implemented by this entity.
Multiplicity	1..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.128 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityInterruptCategory

Short Name	rba_ArxmlGen_ExecEntityInterruptCategory
Long Name	InterruptCategory
Description	Every BswInterruptEntity shall specify the category of the interrupt service.The applied category shall be the same as used in the referred BswModuleEntry. Cat1 interrupt routines are not controlled by the OS and are only allowed to make a very limited selection of OS calls to enable and disable all interrupts. The BswInterruptEntity is implemented by the interrupt service routine, which is directly called from the interrupt vector. Cat2 interrupt routines are controlled by the OS and they are allowed to make OS calls. The Bsw InterruptEntity is implemented by the interrupt handler, which is called from the OS.
Multiplicity	0..1
Default Value	-
Enumeration Literals	CAT_1, CAT_2
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.129 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityModeActivation

Short Name	rba_ArxmlGen_ExecEntityModeActivation

Long Name	Mode activation
Description	Specifies the kind of mode switch condition that is used for the activation of a BSW ModeSwitchEvent for this schedulable entity, i.e. on entry, on exit or on transition.
Multiplicity	0..1
Default Value	-
Enumeration Literals	Entry, Exit, Transition
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.130 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityModeGroupOwnRef

Short Name	rba_ArxmlGen_ExecEntityModeGroupOwnRef
Long Name	Mode declaration group prototype
Description	A reference to a mode declaration group prototype (either provided or required).
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.131 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityModelRefs

Short Name	rba_ArxmlGen_ExecEntityModelRefs
Long Name	Modes
Description	Reference to one or two modes (dependent on the value of the mode activation) that initiate the BswModeSwitchEvent. One mode if the mode activation is set to " on entry" or " on exit" . Two modes if the mode activation is set to " on transition" .
Multiplicity	0..2
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.132 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityModelRefs/rba_ArxmlGen_ExecEntityModelRefsTargetRef

Short Name	rba_ArxmlGen_ExecEntityModelRefsTargetRef
Long Name	Mode (own)

Description	The referenced mode. This parameter shall only be used if the referenced mode is also defined using rba_ArxmlGen and if it is part of the same component as this executable entity.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.133 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityModelRefs/rba_ArxmlGen_ExecEntity-ModelRefsXMGTargetRef

Short Name	rba_ArxmlGen_ExecEntityModelRefsXMGTargetRef
Long Name	Mode declaration group (other)
Description	The referenced mode declaration group. In order to define the referenced mode both the mode declaration group and the respective mode declaration group prototype (rba_ArxmlGen_ExecEntityModelRefsXMP-TargetRef) shall be provided. This parameter shall only be used if the referenced mode is not defined using rba_ArxmlGen or if it is part of a different component than this executable entity.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.134 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityModelRefs/rba_ArxmlGen_ExecEntity-ModelRefsXMPTargetRef

Short Name	rba_ArxmlGen_ExecEntityModelRefsXMPTargetRef
Long Name	Mode declaration group prototype (other)
Description	The referenced mode declaration group prototype. In order to define the referenced mode both the mode declaration group (rba_ArxmlGen_ExecEntityMode lRefsXMGTargetRef) and the respective mode declaration group prototype shall be provided. This parameter shall only be used if the referenced mode is not defined using rba_ArxmlGen or if it is part of a different component than this executable entity.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.135 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/

rba_ArxmlGen_ExecEntityMultiplePeriodSetting

Short Name	rba_ArxmlGen_ExecEntityMultiplePeriodSetting
Long Name	Multiple Calling period [s]
Description	Time periods (in seconds) by which this entities are invoked. If set to zero, this entity is invoked in background, Multiple timing events are defined for multicore usage.
Multiplicity	0..*
Minimum Value	0
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.136 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityPeriod

Short Name	rba_ArxmlGen_ExecEntityPeriod
Long Name	Calling period [s]
Description	Time period (in seconds) by which this entity is invoked. If set to zero, this entity is invoked in background.
Multiplicity	0..1
Minimum Value	0
Default Value	-
Type	ECUC-FLOAT-PARAM-DEF

11.3.1.137 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_ExecEntityTrigger

Short Name	rba_ArxmlGen_ExecEntityTrigger
Long Name	External trigger
Description	An external trigger which is provided (i.e. released) or required (i.e. used to activate something) in the given context.
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.138 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ExecEntity/rba_ArxmlGen_OptionalSuffix

Short Name	rba_ArxmlGen_OptionalSuffix

Long Name	Optional Suffix
Description	Optional suffix is provided for the Multiple Timing Event example:TE_MainFunctionBg_core0 , here “core” is the suffix which is configured .
Multiplicity	0..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.139 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType

Short Name	rba_ArxmlGen_ImplDataType
Long Name	Impl. data type
Description	Defines a data type used on implementation level. The RTE generator automatically defines the corresponding C typedef of this data type. The short name of this implementation data type shall start with the component’ s short name.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.140 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeBaseRef

Short Name	rba_ArxmlGen_ImplDataTypeBaseRef
Long Name	Base impl. data type
Description	Short name path to the implementation data type which is used as a basis for this implementation data type. Only applicable to simple implementation data types.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.141 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeCategory

Short Name	rba_ArxmlGen_ImplDataTypeCategory
Long Name	Category

Description	Categorizes this implementation data type. Currently, simple typedefs, arrays and structures are supported.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Simple, Array, Struct, Enum
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.142 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeCompuMethodOwnRef

Short Name	rba_ArxmlGen_ImplDataTypeCompuMethodOwnRef
Long Name	Computation method (own)
Description	Reference to the computation method which describes the translation between the internal (often integer) and physical (often floating point) representation of elements using this implementation data type.This parameter shall only be used if the referenced computation method is also defined using rba_ArxmlGen and if it is part of the same component as this implementation data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.143 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeCompuMethodRef

Short Name	rba_ArxmlGen_ImplDataTypeCompuMethodRef
Long Name	Computation method (other)
Description	Reference to the computation method which describes the translation between the internal (often integer) and physical (often floating point) representation of elements using this implementation data type.This parameter shall only be used if the referenced computation method is not defined using rba_ArxmlGen or if it is part of a different component than this implementation data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.144 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeLongName

Short Name	rba_ArxmlGen_ImplDataTypeLongName
Long Name	Long name
Description	Long name of this implementation data type. The long name shall be the human readable representation of the short name of this implementation data type.
Multiplicity	1..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.145 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeNumElements

Short Name	rba_ArxmlGen_ImplDataTypeNumElements
Long Name	Number of array elements
Description	Array size in case of array implementation data types. Not applicable to simple or structure implementation data types.
Multiplicity	0..1
Minimum Value	1
Default Value	-
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.146 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeSub

Short Name	rba_ArxmlGen_ImplDataTypeSub
Long Name	Sub impl. data type
Description	Specifies a subordinate implementation data type in case of array or structure implementation data types. Not applicable to simple implementation data types. In case of arrays, only one such subordinate implementation data type is allowed to be specified here.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.147 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeSub/rba_ArxmlGen_Impl-

DataTypeSubOwnRefrba_ArxmlGen_ImplDataTypeSubOwnRef

Short Name	rba_ArxmlGen_ImplDataTypeSubOwnRef
Long Name	Sub impl. data type (own)
Description	Reference to the subordinate implementation data type(s) in case of array or structure implementation data types. Not applicable to simple implementation data types. This parameter shall only be used if the referenced implementation data type is also defined using rba_ArxmlGen and if it is part of the same component as this implementation data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.148 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ImplDataType/rba_ArxmlGen_ImplDataTypeSub/rba_ArxmlGen_ImplDataTypeSubRef

Short Name	rba_ArxmlGen_ImplDataTypeSubRef
Long Name	Sub impl. data type (other)
Description	Short name path to the subordinate implementation data type(s) in case of array or structure implementation data types. Not applicable to simple implementation data types. This parameter shall only be used if the referenced implementation data type is not defined using rba_ArxmlGen or if it is part of a different component than this implementation data type.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.149 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement

Short Name	rba_ArxmlGen_Measurement
Long Name	Measurement

Description	Defines a measurement variable which is visible to measurement and calibration equipment. Note that also a variable of the same name and type has to be created in the C code; the RTE generator does not do this. The short name of this measurement variable shall start with the component' s short name and its suffix shall be " _MP" , r.f. Rule BSWMD_MCSupport_004 of the BSW_Coding-Guidelines.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.150 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasAddrMethodRef

Short Name	rba_ArxmlGen_MeasAddrMethodRef
Long Name	Addressing method
Description	1.Short name path to the (typically centrally defined) addressing method used for this measurement variable. The addressing method describes memory allocation aspects of this measurement variable. The list of centrally available addressing methods is provided in the Central Elements Guideline (Rule CEL_114). If a particular addressing method is not centrally defined the local expert for central elements has to be consulted. 2. Addressing method ref is not needed for aRTypedPerInstanceMemorys block,explicit SwAddrMethod ref only needed for static memorys
Multiplicity	1..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.151 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasApplDataTypeOwnRef

Short Name	rba_ArxmlGen_MeasApplDataTypeOwnRef
Long Name	Appl. data type (own)
Description	Reference to the application data type used for this measurement variable. This parameter shall only be used if the referenced application data type is also defined using rba_ArxmlGen and if it is part of the same component as this measurement.
Multiplicity	0..1
Default Value	-

Type	ECUC-REFERENCE-DEF

11.3.1.152 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasApplDataTypeXArrayRef

Short Name	rba_ArxmlGen_MeasApplDataTypeXArrayRef
Long Name	Appl. data type (other, array)
Description	Short name path to the array application data type which is used for this measurement variable. Only applicable to array type measurements. This parameter shall only be used if the referenced application data type is not defined using rba_ArxmlGen or if it is part of a different component than this measurement.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.153 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasApplDataTypeXPrimitiveRef

Short Name	rba_ArxmlGen_MeasApplDataTypeXPrimitiveRef
Long Name	Appl. data type (other, simple)
Description	Short name path to the simple application data type which is used for this measurement variable. Only applicable to simple type measurements. This parameter shall only be used if the referenced application data type is not defined using rba_ArxmlGen or if it is part of a different component than this measurement.
Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.154 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasApplDataTypeXRecordRef

Short Name	rba_ArxmlGen_MeasApplDataTypeXRecordRef
Long Name	Appl. data type (other, structure)
Description	Short name path to the structure application data type which is used for this measurement variable. Only applicable to structure type measurements. This parameter shall only be used if the referenced application data type is not defined using rba_ArxmlGen or if it is part of a different component than this measurement.

Multiplicity	0..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.155 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasCalibrationAccess

Short Name	rba_ArxmlGen_MeasCalibrationAccess
Long Name	Calibration Access
Description	swCalibrationAccess determines the access rights to a data object w.r.t. measurement and calibration.If the parameter is not configured, thee the default value “Read-only” will be generated.
Multiplicity	0..1
Default Value	readOnly
Enumeration Literals	readWrite, readOnly, notAccessible
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.156 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasCategory

Short Name	rba_ArxmlGen_MeasCategory
Long Name	Category
Description	Categorizes this measurement variable. Currently, simple values, arrays and structures are supported.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Simple, Array, Struct, Boolean
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.157 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasDispFormat

Short Name	rba_ArxmlGen_MeasDispFormat
Long Name	Display format
Description	Display format of the (physical) value of the measurement variable. A printf-like format string shall be given here, e.g. %5.0f.
Multiplicity	0..1
Minimum String Length	1
Default Value	-

Type	ECUC-STRING-PARAM-DEF

11.3.1.158 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Measurement/rba_ArxmlGen_MeasLongName

Short Name	rba_ArxmlGen_MeasLongName
Long Name	Long name
Description	Long name of this measurement variable. The long name shall be the human readable representation of the short name of this measurement variable.
Multiplicity	1..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.159 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection

Short Name	rba_ArxmlGen_Memsection
Long Name	Memory Section
Description	Specifies the details of memory for the referred SWAddrMethod
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.160 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/rba_ArxmlGen_MemsectionAddrMethodRef

Short Name	rba_ArxmlGen_MemsectionAddrMethodRef
Long Name	Addressing method
Description	Short name path to the (typically centrally defined) addressing method used for this memory parameter. The addressing method describes memory allocation aspects of this memory parameter. The list of centrally available addressing methods is provided in the Central Elements Guideline (Rule CEL_114). If a particular addressing method is not centrally defined the local expert for central elements has to be consulted.
Multiplicity	1..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.161 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/rba_ArxmlGen_MemsectionDatatype_08

Short Name	rba_ArxmlGen_MemsectionDatatype_08
Long Name	Data Type_8
Description	Choose the data type
Multiplicity	0..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.162 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/rba_ArxmlGen_MemsectionDatatype_16

Short Name	rba_ArxmlGen_MemsectionDatatype_16
Long Name	Data Type_16
Description	Choose the data type
Multiplicity	0..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.163 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/rba_ArxmlGen_MemsectionDatatype_32

Short Name	rba_ArxmlGen_MemsectionDatatype_32
Long Name	Data Type_32
Description	Choose the data type
Multiplicity	0..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.164 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/rba_ArxmlGen_MemsectionDatatype_64

Short Name	rba_ArxmlGen_MemsectionDatatype_64
Long Name	Data Type_64
Description	Choose the data type
Multiplicity	0..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.165 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/

rba_ArxmlGen_MemsectionDatatype_UNSPECIFIED

Short Name	rba_ArxmlGen_MemsectionDatatype_UNSPECIFIED
Long Name	Data Type_UNSPECIFIED
Description	Choose the data type
Multiplicity	0..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.166 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/ rba_ArxmlGen_MemsectionEcuCPartitionRef

Short Name	rba_ArxmlGen_MemsectionEcuCPartitionRef
Long Name	EcuC Partition Ref
Description	EcuC partition reference - To generate the partition specific memory section generation for the configured SwAddrMethod
Multiplicity	0..*
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.167 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/ rba_ArxmlGen_Memsectioncalloutspecificname

Short Name	rba_ArxmlGen_Memsectioncalloutspecificname
Long Name	Callout function name
Description	specify the function name
Multiplicity	0..1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.168 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/ rba_ArxmlGen_Memsectioncorespecific

Short Name	rba_ArxmlGen_Memsectioncorespecific
Long Name	Core Specific
Description	defines number of core
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.169 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/

rba_ArxmlGen_Memsectionnumberofcores

Short Name	rba_ArxmlGen_Memsectionnumberofcores
Long Name	Number of cores
Description	defines number of core
Multiplicity	0..1
Value Range	1..6
Default Value	-
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.170 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Memsection/rba_ArxmlGen_RteSpecificSectionNamePrefix

Short Name	rba_ArxmlGen_RteSpecificSectionNamePrefix
Long Name	RTE Specific Section Name
Description	Defines the generation of RTE specific Memory section.By default RTE Memory section for CODE will generated, this has to be enabled only if required for other Memory sections like CODE_FAST, CODE_SLOW. It will the generate the memory sections with module-case e.g WdgM_{Patition}_CODE_FAST, WdgM_CODE_FAST Note: This is not supported for Core Specific memory sections generation, since there is no verified usecase to support
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.171 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeDeclGroup

Short Name	rba_ArxmlGen_ModeDeclGroup
Long Name	Mode declaration group
Description	A collection of mode declarations.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.172 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeDeclGroup/rba_ArxmlGen_ModeDeclGroupImplDataType

Short Name	rba_ArxmlGen_ModeDeclGroupImplDataType

Long Name	Data type
Description	A reference to an implementation data type in order to explicitly specify by which data type a mode declaration group is implemented. It shall be modelled along the idea of an " unsigned integer-like" data type.
Multiplicity	1..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.1.173 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeDeclGroup/rba_ArxmlGen_ModeDeclGroupInitialModeRef

Short Name	rba_ArxmlGen_ModeDeclGroupInitialModeRef
Long Name	Initial mode
Description	The initial mode of the mode declaration group. This mode is active before any mode switches occurred.
Multiplicity	1..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.174 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeDeclGroup/rba_ArxmlGen_ModeDeclGroupModeDecls

Short Name	rba_ArxmlGen_ModeDeclGroupModeDecls
Long Name	Mode declaration
Description	The single mode declarations collected in this mode declaration group.
Multiplicity	1..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.175 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeDeclGroup/rba_ArxmlGen_ModeDeclGroupModeDecls/rba_ArxmlGen_ModeDeclGroupModeDeclsLongName

Short Name	rba_ArxmlGen_ModeDeclGroupModeDeclsLongName
Long Name	Long name
Description	Long name of this mode declaration group. The long name shall be the human readable representation of the short name of this mode declaration group.
Multiplicity	0..1
Minimum String Length	1

Default Value	-
Type	ECUC-STRING-PARAM-DEF

11.3.1.176 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeDeclGroupPrototype

Short Name	rba_ArxmlGen_ModeDeclGroupPrototype
Long Name	Mode declaration group prototype
Description	A reference to a mode declaration group which is either owned and provided by this module or the module depends on.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.177 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeDeclGroupPrototype/rba_ArxmlGen_ModeDeclGroupPrototypeCategory

Short Name	rba_ArxmlGen_ModeDeclGroupPrototypeCategory
Long Name	Category
Description	Categorizes this mode declaration group prototype.
Multiplicity	1..1
Default Value	-
Enumeration Literals	Required, Provided
Type	ECUC-ENUMERATION-PARAM-DEF

11.3.1.178 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeDeclGroupPrototype/rba_ArxmlGen_ModeDeclGroupPrototypeOwnRef

Short Name	rba_ArxmlGen_ModeDeclGroupPrototypeOwnRef
Long Name	Mode group
Description	Reference to a mode declaration group.
Multiplicity	1..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.179 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeReceiverPolicy

Short Name	rba_ArxmlGen_ModeReceiverPolicy
Long Name	Mode receiver policy

Description	Specifies the details for receiving of a mode switch for the referred required mode declaration group prototype.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.180 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeReceiverPolicy/rba_ArxmlGen_ModeReceiverPolicyAsyncModeSwitch

Short Name	rba_ArxmlGen_ModeReceiverPolicyAsyncModeSwitch
Long Name	Asynchronous mode switch
Description	Specifies whether the module can handle the reception of an asynchronous mode switch (true) or not (false).
Multiplicity	1..1
Default Value	-
Type	ECUC-BOOLEAN-PARAM-DEF

11.3.1.181 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeReceiverPolicy/rba_ArxmlGen_ModeReceiverPolicyRMGOwnRef

Short Name	rba_ArxmlGen_ModeReceiverPolicyRMGOwnRef
Long Name	Required mode group
Description	A reference to a required mode group.
Multiplicity	1..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.182 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeSenderPolicy

Short Name	rba_ArxmlGen_ModeSenderPolicy
Long Name	Mode sender policy
Description	Specifies the details for sending of a mode switch for the referred provided mode declaration group prototype.
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.183 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeSenderPolicy/rba_ArxmlGen_ModeSenderPolicyPMGOwnRef

Short Name	rba_ArxmlGen_ModeSenderPolicyPMGOwnRef
Long Name	Provided mode group
Description	A reference to a provided mode group.
Multiplicity	1..1
Default Value	-
Type	ECUC-REFERENCE-DEF

11.3.1.184 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_ModeSenderPolicy/rba_ArxmlGen_ModeSenderPolicyQueue

Short Name	rba_ArxmlGen_ModeSenderPolicyQueue
Long Name	Queue length
Description	Length of the call queue (which is implemented by the RTE) on the sender side. The value must be greater or equal to 0. Value 0 represents non-queued communication.
Multiplicity	1..1
Minimum Value	0
Default Value	-
Type	ECUC-INTEGER-PARAM-DEF

11.3.1.185 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Swspecific

Short Name	rba_ArxmlGen_Swspecific
Long Name	SWC specific
Description	Container that allows SW-C specific addressing methods
Multiplicity	0..*
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

11.3.1.186 rba_ArxmlGen/rba_ArxmlGen_Comp/rba_ArxmlGen_Swspecific/rba_ArxmlGen_SWspecificAddrMethodRef

Short Name	rba_ArxmlGen_SWspecificAddrMethodRef
Long Name	Addressing method

Description	Short name path to the (typically centrally defined) addressing method used for this memory parameter. The addressing method describes memory allocation aspects of this memory parameter. The list of centrally available addressing methods is provided in the Central Elements Guideline (Rule CEL_114). If a particular addressing method is not centrally defined the local expert for central elements has to be consulted.
Multiplicity	1..1
Default Value	-
Type	ECUC-FOREIGN-REFERENCE-DEF

11.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

11.4 Limitations

Currently, rba_ArxmlGen only supports the creation of BSWMD files according to AUTOSAR Release 4.0 revision 3.

11.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

11.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

11.7 API Definition

There are no APIs supported by rba_ArxmlGen module.

11.8 Configuration Advice

> **NOTE**
>
> Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

11.8.1 Automatic Configuration

CodeGen will generate BSWMD EcucValues internally as necessary to configure rba_ArxmlGen.

During the CodeGen process, several BSWMD EcucValues files are generated, some of which may not be required. So, after the first CodeGen -

- The BSWMD EcucValues files that are required will be consumed by CodeGen in order to create the corresponding BSWMD files output.
- The BSWMD EcucValues files that are NOT required will be ignored by CodeGen, and these ignored BSWMD EcucValues will no longer be presented in the rba_ArxmlGen BSW module configuration.

11.8.2 Manual Configuration

The sub-sections below describe the use cases for a manual configuration.

11.8.2.1 Adding a BSWMD description to a previously BSWMD-less BSW module

Without a BSWMD description, RTE will treat a BSW module as non-existent. This sub-section, which is a pre-requisite to some of the other manual steps below, describes how to add a BSWMD description to a BSW module that currently doesn't have one.

- Add an overall description of the BSW module by filling the required settings in the rba_ArxmlGen_Comp configuration container. This tells rba_ArxmlGen to create a corresponding BSWMD file containing the ARXML equivalents of these configuration settings.
- The rba_ArxmlGen_CompIsStandalone attribute flags whether the BSWMD file generated by rba_ArxmlGen is the only BSWMD file for the component, or whether an additional (static) BSWMD file also exists. If rba_ArxmlGen_-CompIsStandalone is set to TRUE, both the ShortName and LongName, as well as the Category and ModuleID of the BSW Module Description will be generated, otherwise only the ShortName of the Bsw Module Description is generated.
- Add to RTE configuration a reference to the ARXML element created in the

BSWMD generated above. This is done by providing a configuration container RteBswModuleInstance named identically to the BSW module containing such a reference in parameter RteBswImplementationRef. This makes the BSW module known to the RTE generator.

The above steps have the following effect on the RTE generator output:

- The SchM_<BswModule>.h and SchM_<BswModule>_Type.h files will be created by the RTE generator.
- Both of the above files, at this stage, only contain some comments and preprocessor statements, but this will change with the additional steps described below.

11.8.2.2 Enabling native AUTOSAR scheduling for a BSW module

Follow these steps to allow the scheduling of a BSW module's cyclically called functions (generally referred to as "main functions" in AUTOSAR specifications).

- Create an executable entity (e.g. rba_ArxmlGen_ExecEntity with the category of "schedulable entity") for each BSW module's main function. The short name for each schedulable entity should be prefixed with "SE_" and the AUTOSAR short name path to the corresponding BSW module entry must be specified.
- In a manually maintained BSWMD file belonging to each BSW module, describe the BSW Module Entry corresponding to each BSW schedulable entity you've created in the previous step. Note that you also have to add a reference to this entry (within this manually maintained BSWMD file) in a manually created fragment of the <BSW-MODULE-DESCRIPTION> of this BSW module (inside the <PROVIDED-ENTRYS> section).
- For each schedulable entity, rba_ArxmlGen automatically creates a BSW event, which is named in line with the corresponding schedulable entity, and prefixed with "EV_" (e.g. the short name of the event corresponding to entity MainFunction is EV_MainFunction). For a successful RTE run, it is necessary to assign the event to the appropriate task, which is done in a procedure known as "runnable to task mapping". This is done in the same RteBswModuleInstance configuration container instance that holds the reference to the implementation description of the corresponding BSW module.

The three steps above have the following effects on the RTE generator output:

- <Task>.c will contain a call to the <BswModule>_<Entry> corresponding to the <BswModule>_<Entity>. The prototype for this C function will be generated in the same file.
- SchM_<BswModule>.h and Rte.c will also contain a prototype for this C function.

11.8.2.3 Called Entities

The purpose of a Called Entity is to be called from another BSW module or cluster.

Create a called entity (i.e. rba_ArxmlGen_ExecEntity with the category of "called entity") per function call. The short names of these called entities should be prefixed with "CE_".

As with executable entities described above, a BSW module entry corresponding to the BSW called entity has to be provided. This is done in a manually maintained BSWMD file belonging to the BSW module.

Note that you also have to add a reference (within this manually maintained BSWMD file) to this entry in a manually created fragment of the ‹BSW-MODULE-DESCRIPTION› of this BSW module (inside the ‹PROVIDED-ENTRYS› section).

11.8.2.4 Preparing the RTE generator for measurement support

By default, the RTE generator only adds calibration parameters to its MC support file, which is the input for the A2L file generator. To instruct the RTE generator to also add measurement variables to its MC support file output, the following option has to be present in the RTE invocation command line:

```
--mcsd-policy=emit-memorys
```

11.8.2.5 Adding measurement variables or calibration parameters

Before measurement variables or calibration parameters can be defined, the corresponding application data types must first be defined. This is because measurement variables and calibration parameters must always refer to an application data type.

Application data types are the "physical" counterpart of the Implementation data types (which correspond to C typedefs) and are eventually used for defining the A2L-relevant type aspects of measurement variables and calibration parameters.

- Application and Implementation Data Types. Application data types are typically created via rba_ArxmlGen itself, by defining instances of the rba_ArxmlGen_ApplDataType container in ECUC.
- Computation Methods. For primitive Application data types or Implementation data types, a reference to a computation method may be provided, which describes the translation between the internal (often integer) and physical (often floating point) representation of elements using this Application data type.

Measurement variables (rba_ArxmlGen_Measurement) and/or calibration parameters (rba_ArxmlGen_CalParam) may then be specified in the related ECUC containers.

- The initialization of structured calibration parameters is achieved by a reference to the rba_ArxmlGen_DataInit container, which allows for the initialization of arbitrarily nested data structures.

The above steps have the following effects on the RTE generator output:

- Rte.c will contain a prototype and implementation of "<Implementation-DataType> SchM_CData_<BswModule>_<CalParam>(void)" per calibration parameter.
- Rte.c will also contain the definition of the calibration parameter itself, together with the parameter's initialization.
- Rte_McSupportData.arxml will contain everything necessary to provide self-contained information on measurement variables and calibration parameters to A2L generators.
- Rte_Type.h will contain all typedefs corresponding to implementation data types and might define some additional internal types necessary for the implementation of calibratability.
- The files Rte_BSWMD.arxml and (partially) rte_rteobjects.xml will also reflect most properties of measurement variables and calibration parameters (for information purposes only).

11.8.3 rba_ArxmlGen_CompVersionAr

Multiplicity of the rba_ArxmlGen_CompVersionAr parameter has been changed from 1 to 0 (made optional). This parameter is now deprecated and is being maintained only for backward compatibility. Even if you configure this parameter, the configured values are not used in any code generation.

11.9 Integration Advice

- The integration of rba_ArxmlGen is trivial, just add it to the project following the standard procedures for adding BSW components.
- There are no variants to be chosen, no cyclic functions to be called, and no project-specific configuration settings to be adapted.
- No activities which are specific to this component are necessary for integration into build processes. The standard BSW build process integration procedures are applied.

11.9.1 Init Functions

No specific handling necessary.

11.9.2 DeInit Functions

No specific handling necessary.

11.9.3 Scheduled Functions

There are no scheduled functions.

11.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user

configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Rba_ArxmlGen module does not use any exclusive OS resources.

11.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

12 rba_DiagLib

Module name	rba_DiagLib
Package	RTA-DIAG
AUTOSAR Module ID	N/A
AUTOSAR Version	23-11

12.1 Introduction

The rba_DiagLib module is not defined by the AUTOSAR standard. It is a module that is specific to RTA-BSW, and it consolidates into a central place the common functionality and utilities used by other diagnostic components.

The benefit of this centralization of common functions in the generated C code is that it improves the quality of code structure by avoiding duplication.

The rba_DiagLib module does not require any configuration (because its configuration is forwarded), but it must be selected in CodeGen whenever any other diagnostic modules have been selected.

12.2 Supported Features

rba_DiagLib works as a library to store common functions for diagnostic modules. The following features are provided by this module:

- Diagnostic library for 8 bits
- Diagnostic library for 16 bits
- Diagnostic library for 32 bits
- Diagnostic library for byte order
- Diagnostic library for memory utilities.

12.3 Extensions

12.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

- No known extension parameters are defined in this version.

12.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

12.4 Limitations

There are no known limitations in the rba_DiagLib module.

12.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

12.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

12.7 API Definition

The rba_DiagLib module does not expose a public API.

12.8 Configuration Advice

The rba_DiagLib module does not require configuration.

However, modules in the Diagnostic stack use functions in rba_DiagLib, so rba_-DiagLib must be selected when generating other modules in the Diagnostic stack.

12.9 Integration Advice

12.9.1 Init Functions

rba_DiagLib does not have Init function.

12.9.2 DeInit Functions

rba_DiagLib does not have DeInit function.

12.9.3 Scheduled Functions

rba_DiagLib does not have scheduled function.

12.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Rba_DiagLib module does not use any exclusive OS resources.

12.9.5 Code Generation dependency

When integrating the Diagnostic stack, the rba_DiagLib module must be selected during CodeGen.

12.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

13 Standard Module

Module name	Standard
Package	COMMON
AUTOSAR Module ID	197
AUTOSAR Version	22-11

13.1 Introduction

The Standard module provides centrally defined header files (Std_Types.h) and ARXML files (Standard_Types.arxml), and symbols, that are used throughout BSW and ASW.

The Standard module does not interact with any other module, but the generated output files are used from several other modules and components.

Module Configuration

This module does not have configuration parameters.

13.2 Supported Features

The Standard module supports types and symbols from the AUTOSAR42 Rev2 (AR 4.2.2) specification.

Based on the configuration of the EcuC module, the following files are generated by the RTA-BSW Code Generator:

- Std_Types.h
- Standard_Types.arxml

Notes:

- Standard_Types.arxml contains the same types and symbols as provided in the header file. As per the latest AUTOSAR naming convention, in order to refer to these types and symbols, the AR package paths /AUTOSAR_Standard/ImplementationDataTypes/<Type> and /AUTOSAR_Standard/CompuMethods/<CompuMethod> have to be used respectively.

13.3 Extensions

13.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

- No known extension parameters are defined in this version.

13.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

- There are no additional API defined in this version.

13.4 Limitations

There are no known limitations in this version of the Standard module.

13.5 Exclusions

The following configuration parameters from AR v22-11 are not supported in version v12.7.0.

- There are no known exclusions in this version.

13.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

13.7 API Definition

This section is not complete in version v12.7.0 of the Reference Guide and will be available in a later version.

13.8 Configuration Advice

NOTE

Before configuring this module, please note that some of the default values used by ConfGen to produce the default ECU Configuration can be changed, and this is done by either adding a Conf-Gen Enhancer Mapping (CEM) or by adding a rule to an *algo.properties* file. For more information, see the "Configuration Generation" section of the RTA-CAR User Guide.

13.9 Integration Advice

13.9.1 Init Functions

No specific handling necessary.

13.9.2 DeInit Functions

No specific handling necessary.

13.9.3 Scheduled Functions

There are no scheduled functions.

13.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Standard module does not use any exclusive OS resources.

13.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

14 rba_BswSrv Module

Module name	rba_BswSrv
Package	COMMON
AUTOSAR Module ID	N/A
AUTOSAR Version	22-11

14.1 Introduction

The rba_BswSrv module is not defined by the AUTOSAR standard. It is a module that is specific to RTA-BSW, and it consolidates into a central place the common functionality and utilities used by other components.

The benefit of this centralization of common functions in the generated C code is that it improves the quality of code structure by avoiding duplication.

14.2 Supported Features

The rba_BswSrv module provides the following features:

- Semaphore, Spinlocks and Interrupt-Locking functions
- Functions for atomic bit manipulation
- Synchronous write functions
- Assembly abstraction functions (Intrinsics)
- Provides interfaces to optimized Memory Access functions.
- 64 bit memory operation.
- Option of using internal compiler memory functions.

14.3 Extensions

14.3.1 Configuration Extensions

The following configuration parameters are available in version v12.7.0 in addition to those defined in AR v22-11

14.3.1.1 rba_BswSrv

Short Name	rba_BswSrv
Long Name	BswLib BswSrv
Description	BswSrv config package
Multiplicity	0..1
Default Value	-
Type	ECUC-MODULE-DEF

14.3.1.2 rba_BswSrv/rba_BswSrv_Config

Short Name	rba_BswSrv_Config
Long Name	Configuration data set
Description	Configuration data of BswSrv
Multiplicity	0..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

14.3.1.3 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Compatibility

Short Name	rba_BswSrv_Config_Compatibility
Long Name	Compatibility Configuration
Description	User can configure this parameter by entering the multiline string manually, if needed. This configuration is added for compatibility.
Multiplicity	0..1
Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.4 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Compiler_Lib_Support

Short Name	rba_BswSrv_Config_Compiler_Lib_Support
Long Name	rba_BswSrv_Config_Compiler_Library_Support
Description	Defines if Compiler Library Optimisation is enabled or not.
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

14.3.1.5 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Disable_Interrupt

Short Name	rba_BswSrv_Config_Disable_Interrupt
Long Name	Disable Interrupt
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	-

Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.6 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Disable_Lock_support

Short Name	rba_BswSrv_Config_Disable_Lock_support
Long Name	Disable Lock support
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	true
Type	ECUC-BOOLEAN-PARAM-DEF

14.3.1.7 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Enable_Interrupt

Short Name	rba_BswSrv_Config_Enable_Interrupt
Long Name	Enable Interrupt
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.8 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_GetReturnAddress

Short Name	rba_BswSrv_Config_GetReturnAddress
Long Name	Get return address function
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.9 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Get_Core_Id

Short Name	rba_BswSrv_Config_Get_Core_Id
Long Name	Core Id

Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.10 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Get_Sys_Tick

Short Name	rba_BswSrv_Config_Get_Sys_Tick
Long Name	System Tick
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.11 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Include_Header

Short Name	rba_BswSrv_Config_Include_Header
Long Name	Header File Inclusion
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..*
Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.12 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Log_Level

Short Name	rba_BswSrv_Config_Log_Level
Long Name	Log Level
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	0
Type	ECUC-INTEGER-PARAM-DEF

14.3.1.13 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Machine_-

Support_64bitrba_BswSrv_Config_Machine_Support_64bit

Short Name	rba_BswSrv_Config_Machine_Support_64bit
Long Name	rba_BswSrv_Config_Machine_64bit_Support
Description	Defines if the Machine support 64BIT Operations like memset_64, memcpy_64 and memcompare_64 is enabled or not.
Multiplicity	0..1
Default Value	false
Type	ECUC-BOOLEAN-PARAM-DEF

14.3.1.14 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_Mcu_Perform_Reset

Short Name	rba_BswSrv_Config_Mcu_Perform_Reset
Long Name	MCU Perform Reset
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.15 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_PrvTryToGetLock

Short Name	rba_BswSrv_Config_PrvTryToGetLock
Long Name	Atomic test and set
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1
Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.16 rba_BswSrv/rba_BswSrv_Config/rba_BswSrv_Config_PrvWriteLock

Short Name	rba_BswSrv_Config_PrvWriteLock
Long Name	Store to allow atomic test and Set
Description	DO NOT configure this paramter, The parameter is added only to maintain backward compatibility. The feature support is removed from platform
Multiplicity	0..1

Default Value	-
Type	ECUC-MULTILINE-STRING-PARAM-DEF

14.3.1.17 rba_BswSrv/rba_BswSrv_FifoConfig

Short Name	rba_BswSrv_FifoConfig
Long Name	Settings related to “Lock-free” fifo’s
Description	Configuration settings of all “lock-free” fifo’s
Multiplicity	0..1
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

14.3.1.18 rba_BswSrv/rba_BswSrv_FifoConfig/rba_BswSrv_Fifo

Short Name	rba_BswSrv_Fifo
Long Name	Configuration of specific “lock-free” fifo
Description	Configuration of a specific lock-free fifo.
Multiplicity	0..4096
Default Value	-
Type	ECUC-PARAM-CONF-CONTAINER-DEF

14.3.1.19 rba_BswSrv/rba_BswSrv_FifoConfig/rba_BswSrv_Fifo/rba_BswSrv_FifoId

Short Name	rba_BswSrv_FifoId
Long Name	Fifo identifier
Description	Identifier is used to select specific FIFO. This identifer must be unique (case insensitive). Identifiers are used as: - suffix in FIFO functions and variables - upper-case’d-infix in macro names For the 2 FIFO IDs ‘foo’ and ‘Foo’ there would be for example a macro name conflict because of the same ‘FOO’ suffix.
Multiplicity	1..1
Minimum String Length	1
Default Value	-
Type	ECUC-STRING-PARAM-DEF

14.3.1.20 rba_BswSrv/rba_BswSrv_FifoConfig/rba_BswSrv_Fifo/rba_BswS-

rv_FifoSizerba_BswSrv_FifoSize

Short Name	rba_BswSrv_FifoSize
Long Name	Fifo Size
Description	Set a minimum size for the FIFO in Bytes. Please configure only 1 size per FIFO. The multiplicity '*' is used here to be able to detect FIFO duplicates.
Multiplicity	1..*
Minimum Value	1
Default Value	-
Type	ECUC-INTEGER-PARAM-DEF

14.3.2 Additional Services

The following API are available in version v12.7.0 in addition to those defined in AR v22-11

14.4 Limitations

Because of several HW restrictions (and errata) the state of support for HW-based locks (ARM-based ST devices) is PROTOYPE.

There are currently no reliable impementations of locks for any ARM-based devices from ST:

14.4.1 SR6X7

- HW errata related to M4 cores: HW locks are not usable.
- HW errata related to ClusterRAMs: Only SystemRAM is usable for variables to be used for HW locks. Accesses to SystemRAM are slow.

14.4.2 SR6P6 and SR6X7

- M4: There is no support for atomic 64 byte load/store on M4 which makes the SW-locks unreliable.

14.4.3 NoNest locks

- Usage of second-level NoNest Locks is restricted to C2C in HCP1 context.

14.4.4 Error Handling M4-Locks

- Error handling in case of M4-locks is not possible. As an error reaction a endless loop is implemented.

14.4.5 Compiler Warning

Compiler warning 1053-D will be seen for controllers which have a 32-bit address range only, (e.g RH850 variants).

14.5 Exclusions

The following configuration parameters are not supported in version v12.7.0.

- There are no known exclusions in this version.

14.6 Deviations

Configuration parameters which differ from the AR v22-11 specification are listed below.

- There are no known deviations in this version.

14.7 API Definition

The rba_BswSrv module does not expose a public API.

14.8 Configuration Advice

14.8.1 General

The rba_BswSrv module is a common stack module and is uses the basic features for most modules. A sample configuration has been provided along with a new RTA-CAR project creation, this supports a minimum configuration which will assist to a working module with CodeGen.

For advanced features which are required specifically by other modules, users need to update these manually following suggestions from Extensions chapter.

14.9 Integration Advice

14.9.1 Init Functions

rba_BswSrv does not have Init function.

14.9.2 DeInit Functions

rba_BswSrv does not have DeInit function.

14.9.3 Scheduled Functions

rba_BswSrv does not have scheduled function.

14.9.3.1 Reset module

If the reset module is not configured, a reset function must be added to the rba_BswSrv_SchM.h File. Otherwise, no error will be returned on lock failures.

14.9.4 OS Resources

The number of the active OS resources, and their usage, depends on the user configuration of the AUTOSAR System and Basic Software. It is the user's responsibility to ensure that the `ENTER` and `EXIT` resource API are implemented to disable/enable interrupts as required. Alternatively they must be configured in the OS with the correct task/ISR allocation.

The Rba_BswSrv module does not use any exclusive OS resources.

14.10 Hardware Requirements

Information relating to the hardware resources required by this module is not currently available.

15 Glossary

Arcsin
Inverse Sine

Arccos
Inverse Cosine

ARXML
AUTOSAR eXtensible Markup Language

BFX
RTA-BSW module, provides Bitfield Functions for Fixed Point

BSW
Basic Software

BSWMD
Basic Software Module Description

CodeGen
RTA-BSW Code Generation

Compiler
RTA-BSW module, provides macros for the AUTOSAR Compiler Abstraction

ComStack
The Communication Stack

ConfGen
RTA-BSW Configuration Generation

Cos
Cosine

CRC
Cyclic Redundancy Checks

Crc
The Crc module, part of the RTA-SAFE stack

Cur
Curve for Interpolation

DPSearch
Data point search

DPResult
Data point result

E2E
End-to-End Protection

E2EXf
End-to-End Protection Transformer

ECUC
Electronic Control Unit Configuration

EFX
RTA-BSW module, provides Extended Mathematical library (Fixed Point)

f32 Mnemonic for the float32, specified in AUTOSAR_SWS_PlatformTypes

GNU
The GNU Project

GNUC
The GNU Compiler

Hypot
Hypotenuse

HpFilter
High pass filter

IFL RTA-BSW module, Interpolation Floating point Library

Ifx RTA-BSW module, Interpolation Fixed point

IntIpoCur
Integrated interpolation of curve

IntLkUpCur
Integrated curve look-up

IntIpoFixCur
Integrated interpolation of fixed curve

IntLkUpFixCur
Integrated fixed curve look-up

IntIpoFixICur
Integrated interpolation of fixed interval curve

IntLkUpFixICur
Integrated fixed interval curve look-up

IntIpoMap
Integrated interpolation of map

IntLkUpMap
Integrated map look-up

IntIpoFixMap
Integrated interpolation of fixed map

IntLkUpFixMap
Integrated fixed map look-up

IntIpoFixIMap
Integrated interpolation of fixed interval map

IntLkUpFixIMap
Integrated fixed interval map look-up

IpoCur
Interpolation of curve used for distributed search and interpolation

IpoMap
Interpolation of map used for distributed search and interpolation

LkUpCur
Curve look-up used for distributed search and interpolation

LkUpMap
Map look-up used for distributed search and interpolation

LpFilterFac1
Low pass filter with a factor of 1 (included in [0, 1])

LpFilter
Low pass filter

Mcu
AUTOSAR Microcontroller Unit driver, provides services for basic microcontroller initialization, power down functionality, reset, etc

MFL
RTA-BSW module, Mathematical Floating Point Library

MFX
RTA-BSW module, Mathematical Fixed Point Library

Mn Mnemonic

Platform
RTA-BSW module, provides centrally defined header files (Platform_Types.h) and ARXML files (Platform_Types.arxml) and symbols, that are used throughout BSW and ASW

rba_ArxmlGen
RTA-BSW module, provides an ARXML generator, which abstracts elements commonly defined in BSWMD (basic software module description) or SWCD (software component description) files

rba_DiagLib
RTA-BSW module, consolidates into a central place the common functionality and utilities used by other diagnostic components

RTE
Run-Time Environment

SchM
BSW Scheduler Module

Sqrt
Square root

Sin Sine

s8 Mnemonic for the sint8, specified in AUTOSAR_SWS_PlatformTypes

s16 Mnemonic for the sint16, specified in AUTOSAR_SWS_PlatformTypes

s32
Mnemonic for the sint32, specified in AUTOSAR_SWS_PlatformTypes

s64
Mnemonic for the sint64, specified in AUTOSAR_SWS_PlatformTypes

Standard
RTA-BSW module, provides centrally defined header files (Std_Types.h) and ARXML files (Std_Types.arxml), and symbols, that are used throughout BSW and ASW

SWCD
Software Component Description

u8 Mnemonic for the uint8, specified in AUTOSAR_SWS_PlatformTypes

u16 Mnemonic for the uint16, specified in AUTOSAR_SWS_PlatformTypes

u32
Mnemonic for the uint32, specified in AUTOSAR_SWS_PlatformTypes

u64
Mnemonic for the uint64, specified in AUTOSAR_SWS_PlatformTypes