


PRINT AT 100 % - DO NOT FIT TO PAGE

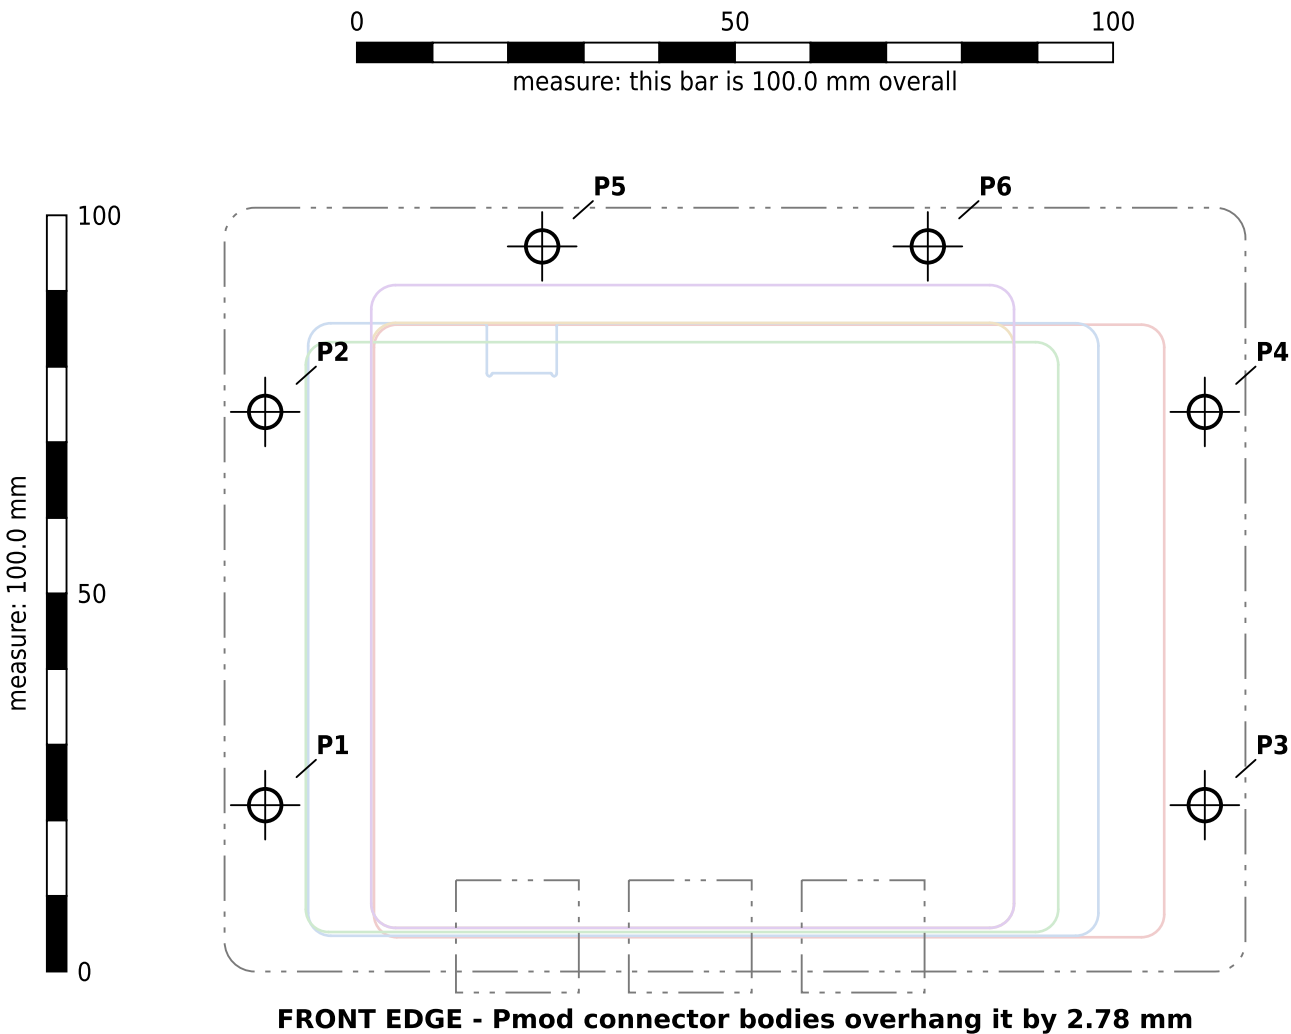

BOARD OUTLINES, drawn for clearance and not drilled. The letter is its hole ID prefix:

A DB mpw

B DB 4+

C DB 06+

D DB ETR v3.2

E DB ETR v3.3

SCHEDULE

ID	DRILL	X	Y
P1	4.30	5.373	22.000
P2	4.30	5.373	74.000
P3	4.30	129.630	22.000
P4	4.30	129.630	74.000
P5	4.30	42.000	95.885
P6	4.30	93.000	95.885

BEFORE YOU DRILL

1. Print at 100 % on A4 with scaling off. Never Fit to page: lp -d <queue> -o media=A4 -o print-scaling=none <file>.pdf
2. Measure both scale bars; if either is not 100.0 mm, reprint.
3. Black is drilled: a circle is the hole at true size, its cross the punch centre, a heavy line an edge.
4. Grey dashed boxes are Pmod connector bodies: clearance only, not drilled.
5. Only P1 to P6 are drilled; the plate edge and board outlines only place the pattern.
6. Tape it down printed side up, FRONT EDGE along the edge the Pmod bodies will overhang, and punch every cross.
7. With a mill or a DRO, work from the coordinates on TT-MP-PLATE instead.