


PRINT AT 100 % - DO NOT FIT TO PAGE

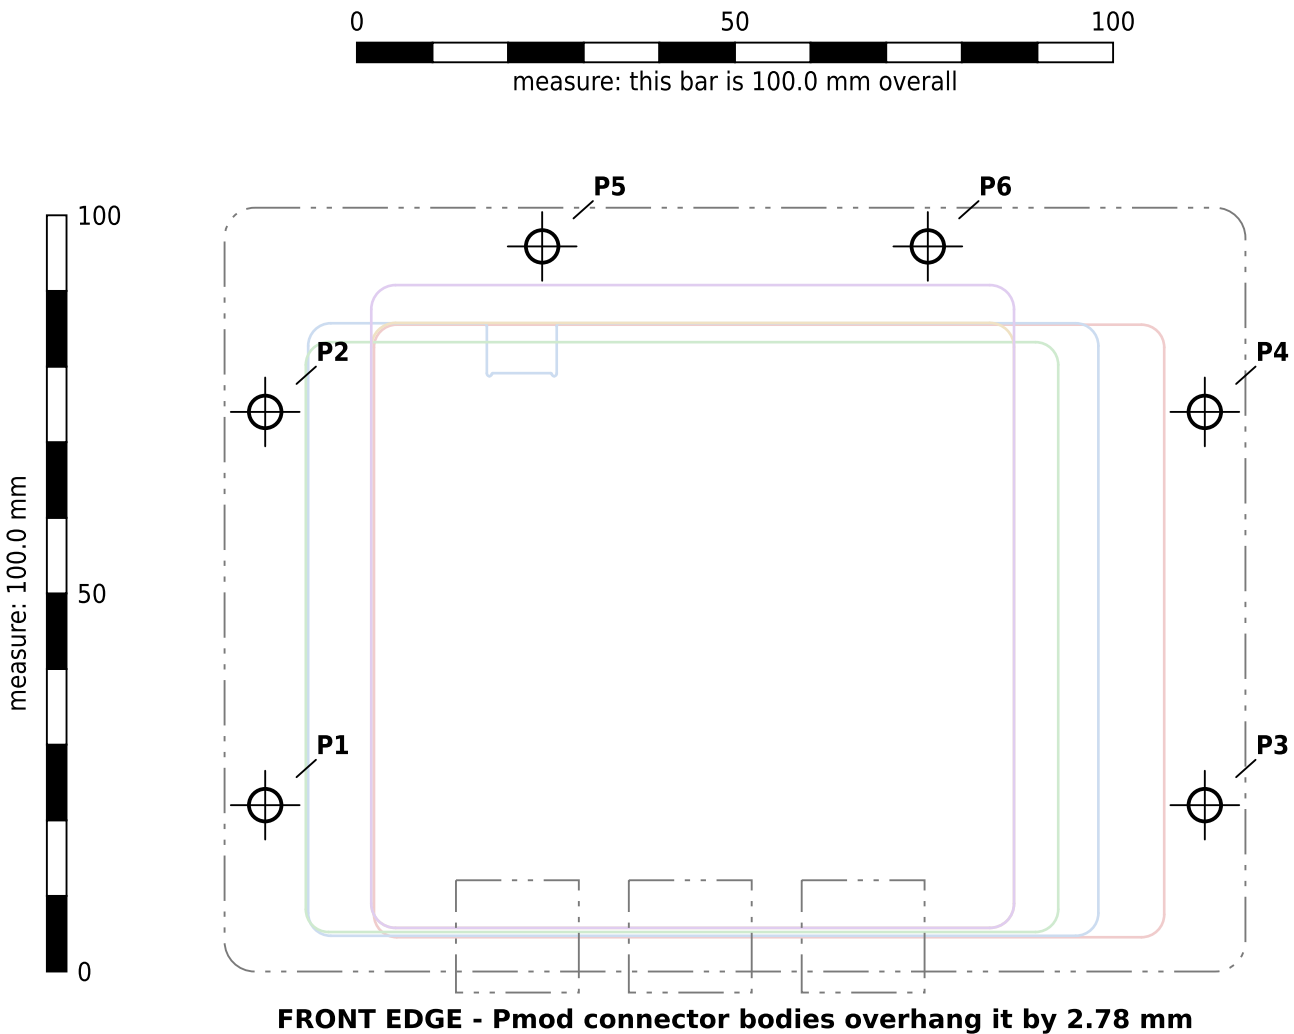

BOARD OUTLINES, drawn for clearance and not drilled. The letter is its hole ID prefix:

A DB mpw

B DB 4+

C DB 06+

D DB ETR v3.2

E DB ETR v3.3

SCHEDULE

ID	DRILL	X	Y
P1	4.30	5.373	22.000
P2	4.30	5.373	74.000
P3	4.30	129.630	22.000
P4	4.30	129.630	74.000
P5	4.30	42.000	95.885
P6	4.30	93.000	95.885

BEFORE YOU DRILL

1. Print at 100 % on A4 with scaling off. Never Fit to page: lp -d <queue> -o media=A4 -o print-scaling=none <file>.pdf
2. Measure both scale bars first. Each is exactly 100.0 mm overall; if either is short, reprint.
3. Black is drilled: a circle is the hole at true size, its cross the punch centre, a heavy line an edge.
4. A pale wash is a board outline and a grey dashed box a Pmod body. Both are clearance only; drill neither.
5. Drill 4.30 mm at P1 to P6. Nothing else here is a hole: the plate edge and boards only place the pattern.
6. Tape it down printed side up, FRONT EDGE to the edge the Pmod bodies overhang, then punch every cross.
7. TT-MP-01 tabulates every coordinate. Work from that instead if you have a mill, a DRO, or any doubt.