


PRINT AT 100 % - DO NOT FIT TO PAGE

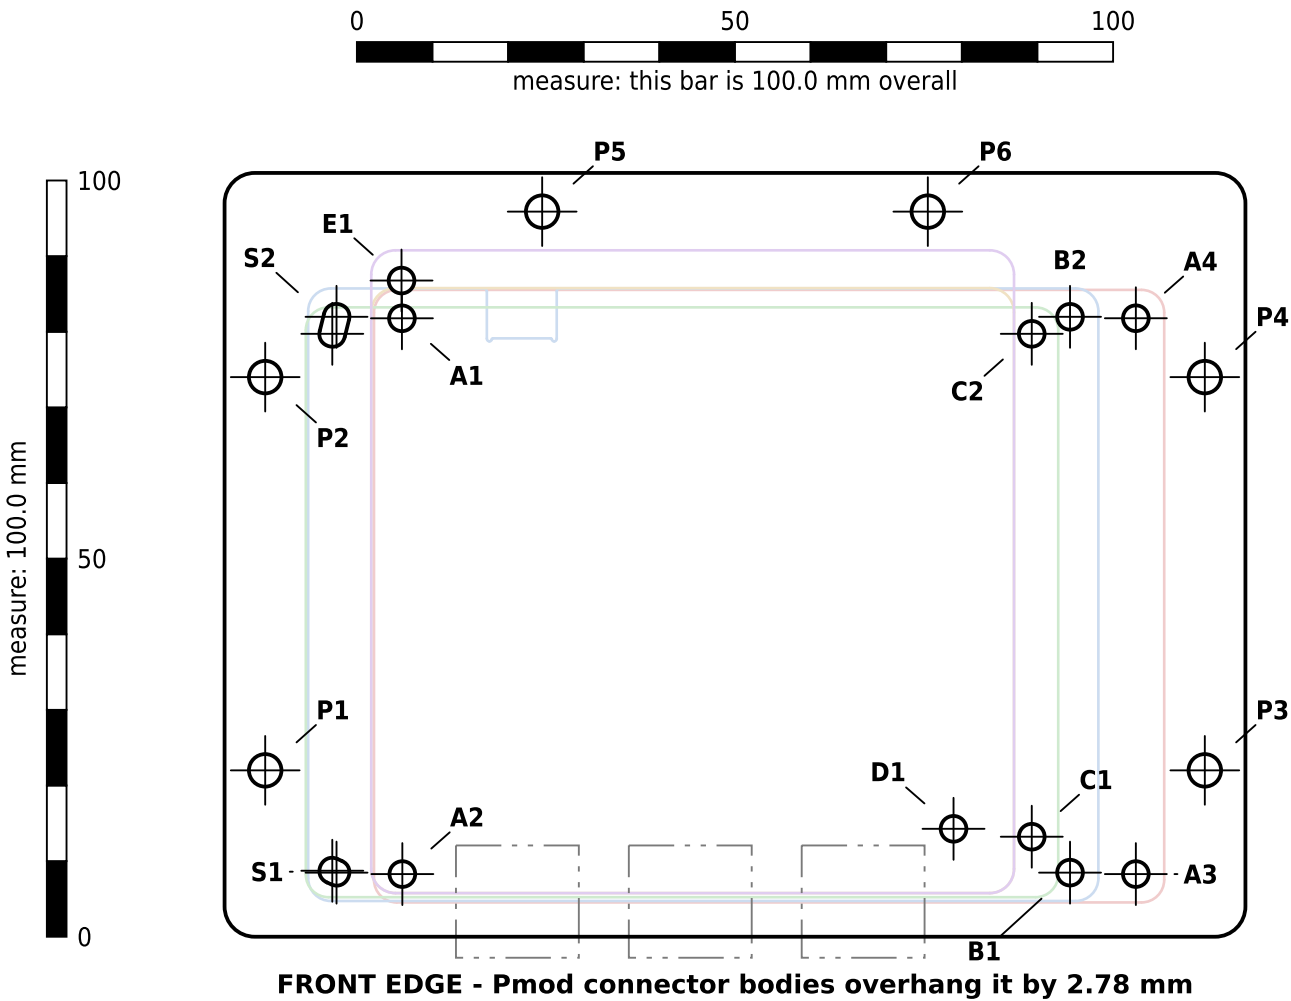

FRONT EDGE - Pmod connector bodies overhang it by 2.78 mm

BOARD OUTLINES, drawn for clearance and not drilled. The letter is its hole ID prefix:

A DB mpw B DB 4+ C DB 06+ D DB ETR v3.2 E DB ETR v3.3

SCHEDULE - what each revision needs (* shared: drill once)

DB mpw	DRILL	DB 4+	DRILL	DB 06+	DRILL	DB ETR v3.2	DRILL	CHASSIS	DRILL
A1*	3.40	B1	3.40	C1	3.40	A1*	3.40	P1	4.30
A2	3.40	B2	3.40	C2	3.40	D1*	3.40	P2	4.30
A3	3.40	S1*	3.40	S1*	3.40			P3	4.30
A4	3.40	S2*	3.40	S2*	3.40			P4	4.30
						DB ETR v3.3	DRILL	P5	4.30
						D1*	3.40	P6	4.30
						E1	3.40		

BEFORE YOU DRILL

1. Print at 100 % on A4 with scaling off. Never Fit to page: lp -d <queue> -o media=A4 -o print-scaling=none <file>.pdf
2. Measure both scale bars first. Each is exactly 100.0 mm overall; if either is short, reprint.
3. Black is drilled: a circle is the hole at true size, its cross the punch centre, a heavy line an edge.
4. A pale wash is a board outline and a grey dashed box a Pmod body. Both are clearance only; drill neither.
5. A hole's letter is its board revision, A to E. Drill only your revision's block; * marks one shared, drill it once.
6. Drill 3.40 mm at every lettered hole and at both ends of every slot, 4.30 mm at P1 to P6. Cut out each slot web.
7. Tape it down printed side up, FRONT EDGE to the edge the Pmod bodies overhang, then punch every cross.
8. TT-MP-01 tabulates every coordinate. Work from that instead if you have a mill, a DRO, or any doubt.