


DRILL TEMPLATE - BASE PLATE, ARTY A7 AND RASPBERRY PI

An Arty A7 in corner cups, a Pi, and the direct Raspmod between them

PRINT AT 100 % - DO NOT FIT TO PAGE

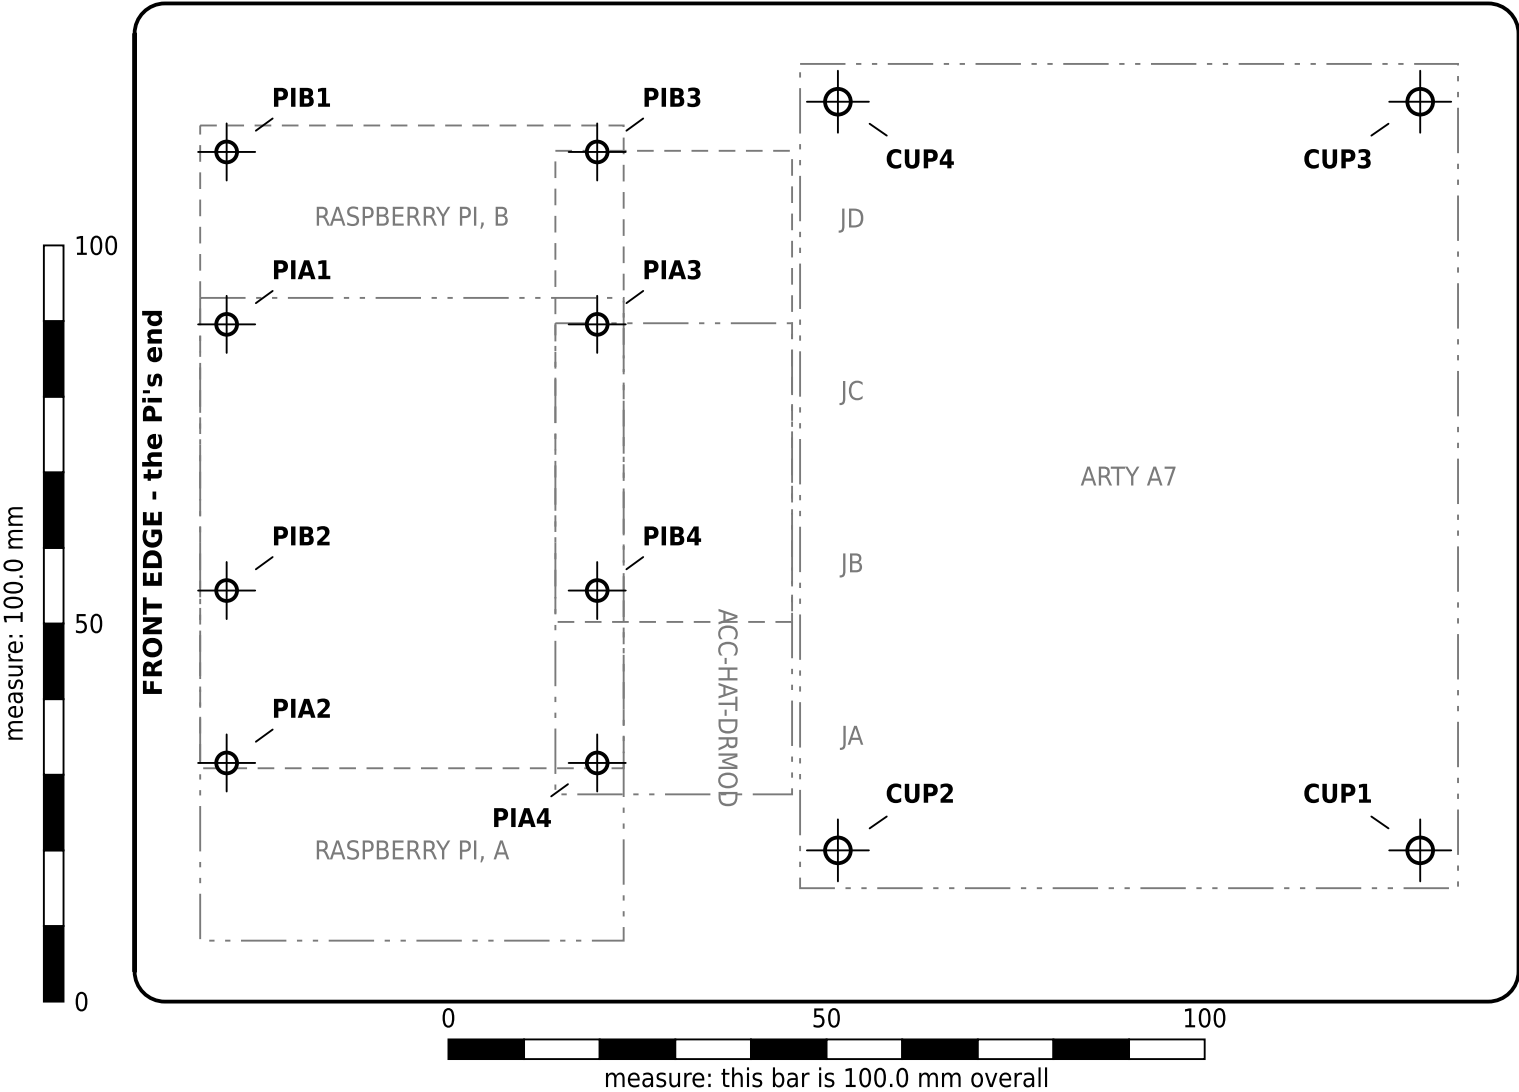

DRILL

HOLES	DRILL	FOR
CUP1-CUP4	3.40	M3 clearance
PIA1-PIA4	2.75	M2.5 clearance
PIB1-PIB4	2.75	M2.5 clearance

BEFORE YOU DRILL

1. Print at 100 % on A4 with scaling off.
Never Fit to page: lp -d <queue> -o media=A4 -o print-scaling=none <file>.pdf
2. Measure both scale bars; if either is not 100.0 mm, reprint.
3. Black is drilled: a circle is the hole at true size, its cross the punch centre, the heavy line the plate's edge. Grey dashed boxes are the boards, to hold the sheet the right way round; nothing is drilled to them.
4. Tape it down printed side up, FRONT EDGE at the Pi's end, and punch every cross.
5. CUP, PIA, PIB: drill through, then countersink from the other face; the screws come up from below.
6. PIA and PIB are the two positions for the Pi, see BP-ARTY: drill one set, not both.
7. With a mill or a DRO, work from the coordinates on BP-ARTY instead.