


PRINT AT 100 % - DO NOT FIT TO PAGE

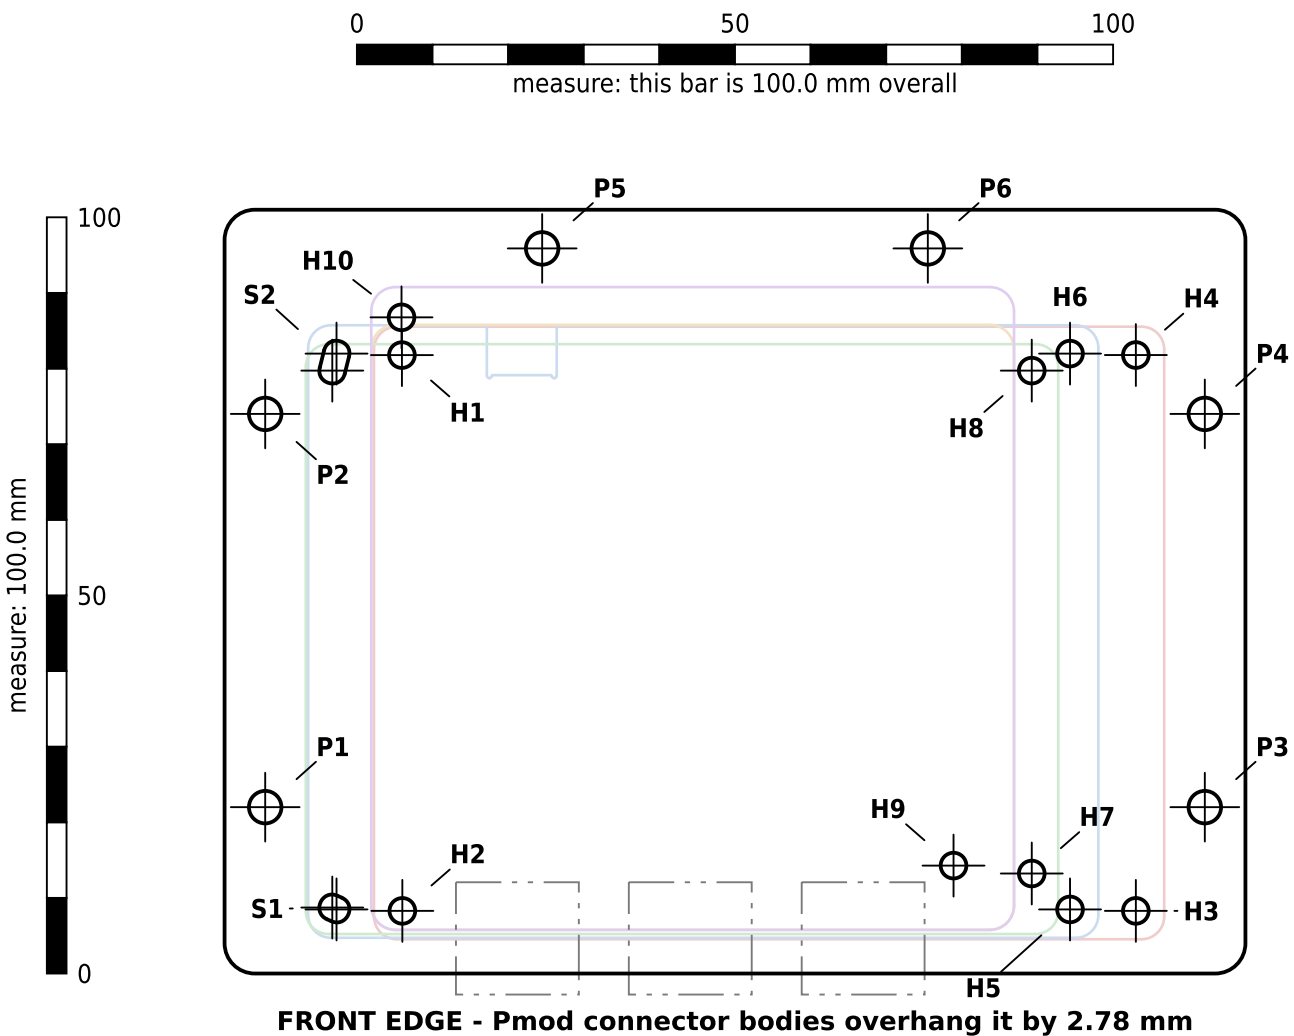

BOARD OUTLINES, drawn for clearance and not drilled:

TT01-03    TT04-05    TT06-08    v3.2    v3.3

SCHEDULE - USED BY names the board revisions a feature serves

| ID | DRILL | USED BY       | ID  | DRILL | USED BY        | ID | DRILL | USED BY          |
|----|-------|---------------|-----|-------|----------------|----|-------|------------------|
| H1 | 3.40  | TT01-03, v3.2 | H7  | 3.40  | TT06-08        | P3 | 4.30  | chassis fixing   |
| H2 | 3.40  | TT01-03       | H8  | 3.40  | TT06-08        | P4 | 4.30  | chassis fixing   |
| H3 | 3.40  | TT01-03       | H9  | 3.40  | v3.2, v3.3     | P5 | 4.30  | chassis fixing   |
| H4 | 3.40  | TT01-03       | H10 | 3.40  | v3.3           | P6 | 4.30  | chassis fixing   |
| H5 | 3.40  | TT04-05       | P1  | 4.30  | chassis fixing | S1 | 3.40  | TT04-05, TT06-08 |
| H6 | 3.40  | TT04-05       | P2  | 4.30  | chassis fixing | S2 | 3.40  | TT04-05, TT06-08 |

BEFORE YOU DRILL

1. Print at 100 % on A4 with scaling off. Never Fit to page: lp -d <queue> -o media=A4 -o print-scaling=none <file>.pdf
2. Measure both scale bars first. Each is exactly 100.0 mm overall; if either is short, reprint.
3. Black is drilled: a circle is the hole at true size, its cross the punch centre, a heavy line an edge.
4. A pale wash is a board outline and a grey dashed box a Pmod body. Both are clearance only; drill neither.
5. Drill 3.40 mm at H1 to H10 and at both ends of every slot, 4.30 mm at P1 to P6. Cut out each slot web.
6. Tape it down printed side up, FRONT EDGE to the edge the Pmod bodies overhang, then punch every cross.
7. TT-MP-01 tabulates every coordinate. Work from that instead if you have a mill, a DRO, or any doubt.