


PRINT AT 100 % - DO NOT FIT TO PAGE

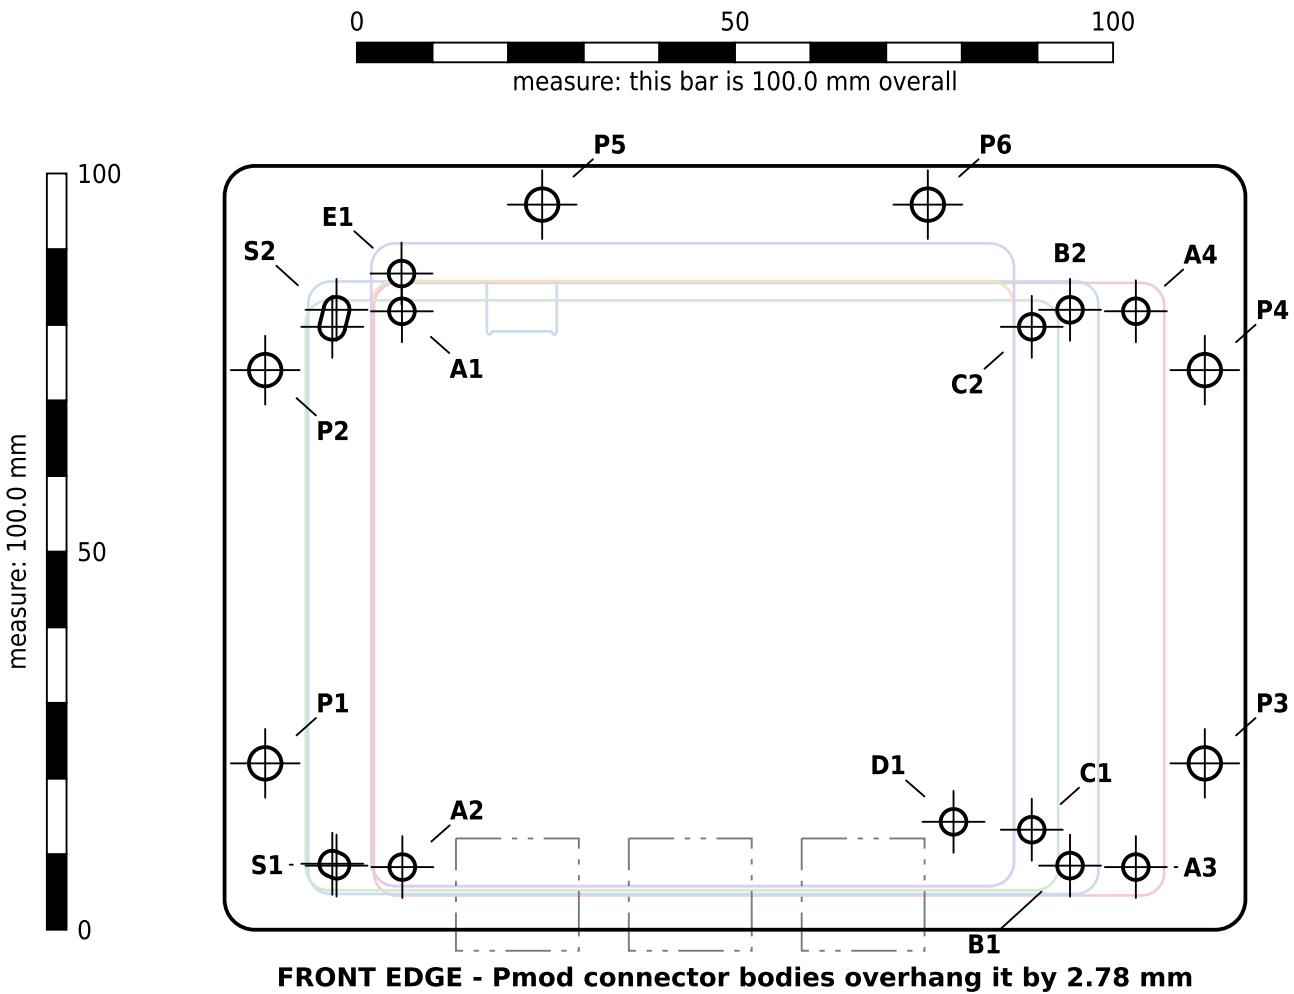

BOARD OUTLINES, drawn for clearance and not drilled. The letter is its hole ID prefix:

A DB mpw    B DB 4+    C DB 06+    D DB ETR v3.2    E DB ETR v3.3

SCHEDULE - what each revision needs (\* shared: drill once)

| DB mpw | DRILL | DB 4+ | DRILL | DB 06+ | DRILL | DB ETR v3.2 | DRILL | CHASSIS | DRILL |
|--------|-------|-------|-------|--------|-------|-------------|-------|---------|-------|
| A1*    | 3.40  | B1    | 3.40  | C1     | 3.40  | A1*         | 3.40  | P1      | 4.30  |
| A2     | 3.40  | B2    | 3.40  | C2     | 3.40  | D1*         | 3.40  | P2      | 4.30  |
| A3     | 3.40  | S1*   | 3.40  | S1*    | 3.40  |             |       | P3      | 4.30  |
| A4     | 3.40  | S2*   | 3.40  | S2*    | 3.40  | DB ETR v3.3 | DRILL | P4      | 4.30  |
|        |       |       |       |        |       | D1*         | 3.40  | P5      | 4.30  |
|        |       |       |       |        |       | E1          | 3.40  | P6      | 4.30  |

BEFORE YOU DRILL

1. Print at 100 % on A4 with scaling off. Never Fit to page: lp -d <queue> -o media=A4 -o print-scaling=none <file>.pdf
2. Measure both scale bars; if either is not 100.0 mm, reprint.
3. Black is drilled: a circle is the hole at true size, its cross the punch centre, a heavy line an edge.
4. Grey dashed boxes are Pmod connector bodies: clearance only, not drilled.
5. Drill every block for a plate that takes any board, or only the blocks for the boards you need.
6. Drill both ends of each slot, then cut out the web between them.
7. Tape it down printed side up, FRONT EDGE along the edge the Pmod bodies will overhang, and punch every cross.
8. With a mill or a DRO, work from the coordinates on TT-MP instead.