


SOLVENT-FREE EPOXY SELF-LEVELING SYSTEM

PREPARATION

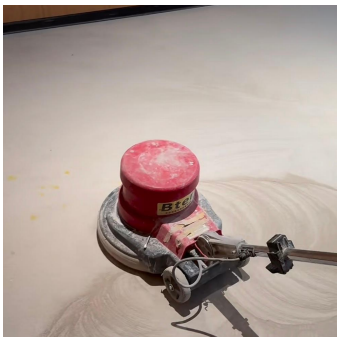

- Mechanically grind or acid-etch.
- Ensure level, clean & 100% dust-free.
- Require sufficient structural strength.

STEP 1
PRIMER



- Apply evenly with a roller.
- Deep penetration to seal pores.
- Maximizes adhesion to substrate.
- Coverage rate:0.2KG/m²

⌚ Recoat Time: 4 - 8 Hours.

STEP 2
MID COAT



- Apply to level & repair.
- Enhances overall compressive strength.
- Skip if the surface is already perfect.
- Coverage rate:0.4KG/m²

⌚ Recoat Time: 12 - 24 Hours .

STEP 3
TOPCOAT



- Spread using a notched trowel.
- Use a spiked roller to release bubbles.
- Creates a seamless, mirror-like finish.
- Coverage rate:1KG/m² (DP07 mirror effect version)
1.8KG/m² (DP08 Colored sand version)

⌚ Recoat Time: 24 - 48 Hours.

STEP 4
CLEAR SEALER



- Apply PU or Polyaspartic clear sealer.
- Provides ultimate UV & scratch resistance.
- Extends the floor's lifespan.
- Skip if it is indoors.
- Coverage rate:0.2KG/m²

⌚ Recoat Time: 12 - 24 Hours.

CURING TIME



- 👉 Touch Dry: 8 Hours
- 🚶 Light Traffic: 24 Hours
- 🚚 Full Cure: 7 Days