

Poutník — user guide: Hobby Optima OnTour Edition motorhome

Informative translation — the Czech version prevails.

Citroën Jumper 2.2 BlueHDi 103 kW (140 hp) · 6-speed manual · front-wheel drive


2021 model · 4 seats · 3–4 sleeping berths

Diesel + AdBlue · gross weight 3,500 kg (licence category B)

6.78 × 2.16 × 2.70 m



Controls at a glance

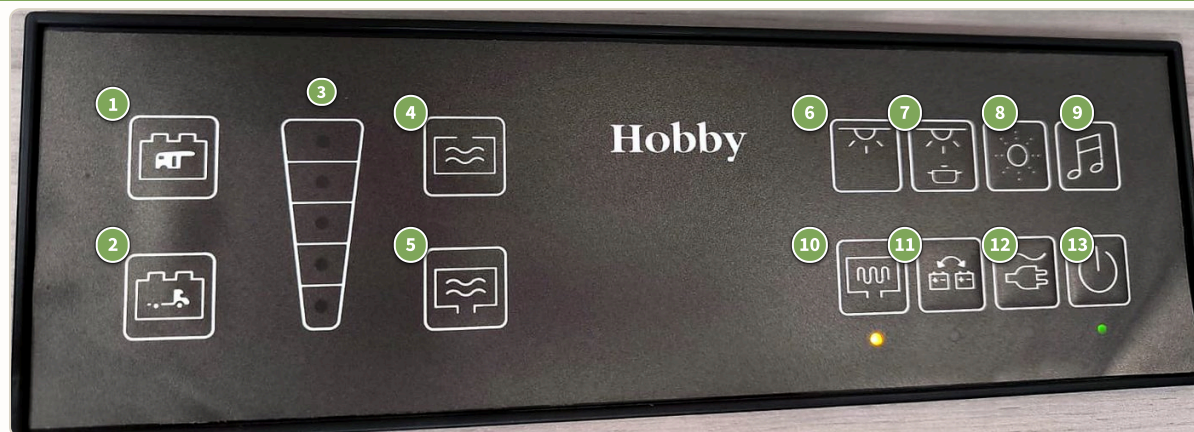

A · PANEL ABOVE THE ENTRANCE DOOR

- 1 Leisure battery (habitation area).
- 2 Vehicle (starter) battery.
- 3 LED column — status of the selected item.
- 4 Fresh water.
- 5 Waste water.
- 6 Ceiling light.
- 7 Kitchen light.
- 8 Awning (outdoor) light.
- 9 Radio.
- 10 Electric heating booster.
- 11 Charging / power source.
- 12 230 V mains (campsite hookup).
- 13 Main switch — green LED = on; short press = lights, 4 s = everything.



B · TRUMA CP PLUS

- 1 Display — temperature, water, error “E”.
- 2 Dial: turn = select, press = confirm, 4 s = switch off.
- 3 Back.



C · ENTRANCE AND STEP

- 1 Entrance lights — two circuits.
- 2 Light above the step.
- 3 Step — arrows out / in.



D · DRIVER'S CAB

- 1 Car radio.
- 2 Cab air conditioning.
- 3 Hazard warning lights.
- 4 Gear lever, 6 speeds. Reverse (R): lift the collar under the knob and move the lever left and forward.
- 5 12 V socket.

• Checklist before every departure — walk around the vehicle “like a flight attendant”

1. **Gas:** both cylinder valves closed, cylinders strapped down; appliance taps closed.
2. **Fridge** on 12 V or auto mode, door latched shut; liquids secured.
3. **Awning** fully retracted and latched, crank handle stowed inside.
4. **Step** retracted (check visually); windows and roof lights closed, windscreen blind fully open.
5. **Cupboards, drawers, table, shower door** secured; heavy items stowed low.
6. **230 V cable** disconnected (mains post first) and stowed, CEE flap closed.
7. **Toilet:** cassette emptied and inserted (max. ¾ full while driving); service hatch and garage locked.
8. **Tanks:** waste water drained, gate valve closed; fresh water at about 1/3 only.
9. **Chocks** collected, aerial/satellite dish lowered; nothing left under or behind the vehicle.
10. **Cab:** mirrors, seats locked, seatbelts on; cooker, heating and lights off, doors locked.

STOP

Gas always shut off while driving · front-wheel drive — the Hobby is not a 4x4, no off-road · vehicle height 2.70 m, watch for low clearances.

● Before driving & weight

- Category B **licence** is enough (gross weight 3,500 kg). Rear garage max. 150 kg, roof 80 kg, load low and secured.
- **Payload only about 575 kg** (10 l water + 1 full cylinder) — four people plus a full tank easily overload the vehicle. Fill water to about 1/3 only.
- Dimensions **6.78 × 2.16 × 2.70 m** — watch for low clearances and petrol-station canopies. **Automatic car washes are forbidden.**
- Diesel fuel only (filler on the left behind the driver's door) — never petrol, do not confuse with the blue water filler. Tyre pressure **4.5–5 bar** per the sticker.
- Only **4 belted seats** may travel, never on a berth while driving; lock swivel seats facing forward.
- **Always reverse with a spotter outside** (the camera misses height and branches); tall and long — crosswind on bridges, longer braking, enter sharp driveways slowly at an angle (rear overhang). Parked: **handbrake + gear engaged**, chocks on a slope.

● Water

- **Fresh water 100 l** under the bench seat; filler on the left below the first window (blue cap), unlock with the key, fill with drinking water only.
- Before the first fill, close **FrostControl** (see Heating), otherwise the water drains out under the vehicle.
- **Pump** starts when you open a tap; run the hot side until it flows bubble-free, then the cold side. Tank levels: panel above the door.
- **Before driving, reduce the tank** with the wheel valve on the tank under the bench seat — we'll show you at handover: 3/4 turn left = travel level 10 l, all the way = empties completely.
- **Waste water 96 l**, drain under the vehicle on the left behind the driver; the gate valve must always be closed while driving. Drain only at campsite disposal points.

● Electrics

- **Panel above the entrance door:** lights, batteries, tank levels, 230 V hookup status. Main switch: short press = lights off, hold 4 s = switches everything off (pump, toilet, 12 V).
- **Leisure battery** AGM 95 Ah under the right-hand seat, the disconnect switch must be on. The **roof solar panel** charges the leisure battery while parked — don't cover it; it isn't enough in shade or winter, so plug in to 230 V.
- **230 V hookup:** blue CEE socket behind the flap. Switch off the breaker → unwind the cable → plug into the vehicle, then into the campsite post → switch the breaker back on.
- **13 A breaker** with RCD (by the entrance door — shown at handover); trips again at once? Don't reset it, call us. Mains max. ~3,000 W, campsite posts often only 6–10 A (6 A = EL 1 only) — never kettle + heating + air-con together.

▲ Gas — safety

- **Gas locker** on the side: 2 × 11 kg propane-butane on a pull-out tray; appliance taps are in the top kitchen drawer.
- **Gas always shut off** (valves and taps) **while driving**, when **refuelling**, in **tunnels**, on the **ferry**, in **garages**.
- **Never heat with the cooker or oven** — it produces carbon monoxide (CO), which has no smell; it can cause unconsciousness and death. Only the Truma Combi is for heating.
- Smell gas or the **gas/CO detector** sounds (by the entrance door)? Close the valves, no flames, no switches, ventilate, leave the vehicle, call us.
- The **fire extinguisher** is by the entrance door; don't go back in after an alarm. Never leave the **cooker unattended**, even asleep; keep vents and flue clear, never heat in a garage.
- **Changing the cylinder:** valve off → unscrew the hose (left-hand thread, by hand) → replace → screw back on → open → check the joint with leak-detection spray, never a flame.

● Heating and hot water — Truma Combi 6

- Controlled via the **CP Plus** panel: short press = switch on, turn to select and press to confirm, hold 4 s = switch off.
- **Room temperature** 5–30 °C (OFF = water heating only). **Hot water** OFF / 40 °C / 60 °C / BOOST (10 l boiler, heats in about 25 min).
- **FrostControl** (valve in the garage by the left-hand door) automatically drains the boiler below 3 °C; can be closed again above 7 °C. If frost threatens and you're not heating, drain the boiler manually.
- **Combi 6 E power source:** GAS / EL 1 (900 W) / EL 2 (1,800 W) / MIX. Error "E"+number: restart with the dial; if it recurs, call us.

● Fridge — Dometic, approx. 130 l, AES automatic

- **Dometic fridge** (absorption type). On: hold On/Off 2 s, off: hold 4 s.
- The **Mode** button selects the power source: 12 V (while driving only), 230 V (at a campsite), gas (when parked), or **A** = automatic — we recommend leaving it on A.
- Must **stand level** (max. 3°) or it won't cool — use chocks. Don't cover the side vents; keep shaded.
- Close the **door** until it clicks — locked while driving. Pre-cool 4–6 h before loading.

● Thetford toilet — cassette approx. 17.5 l

- **Chemical fluid** (Aqua Kem Blue) and **fast-dissolving paper** (Aqua Soft) are provided — never use any other paper or wipes.
- Open the **gate valve** with the lever, always close it again after use; flushing only works with the main switch on. **Red indicator** = cassette full, empty it straight away.
- **Removal** through the outside service hatch (only with the gate valve closed); empty only at a chemical-toilet disposal point, rinse with about 5 l of water.
- **New charge** through the cassette's own filler, never into the bowl: 1 tablet or 60 ml + 2–3 l water. Never dispose of the contents or chemicals into nature.

▲ Awning — Thule Omnistor

- Turn the crank **clockwise** to extend about 1 m, fold the legs down to the ground, only then extend it further.
- **You must anchor it** with the straps and ground pegs — never extend the awning in wind without them.
- **Close it in wind above 25 km/h**, before a storm or rain, and always overnight and before driving — never leave it unattended.
- Close it **with two people**; damage from weather or from not closing it properly is charged to the renter.

● Return

- **Toilet cassette emptied and rinsed, waste water tank drained** — otherwise a fee applies per the price list.
- **Full diesel tank**, gas shut off, both cylinders in the locker.
- Interior cleaned, fridge empty and left ajar; awning dry and retracted.
- Chocks, cable, hoses, keys, documents present; **photos** at handover and return.
- Campsites: **quiet hours 22:00–7:00**, park only where allowed. Service point: waste water first, then the toilet, fresh water last — never mix up the hoses.

Contact: office Mon–Sat 9:00–21:00 · 24/7 assistance
+420 723 707 958 · honza@frantisekdron.cz · ČSOB assistance
+420 466 100 777 · emergency 112.