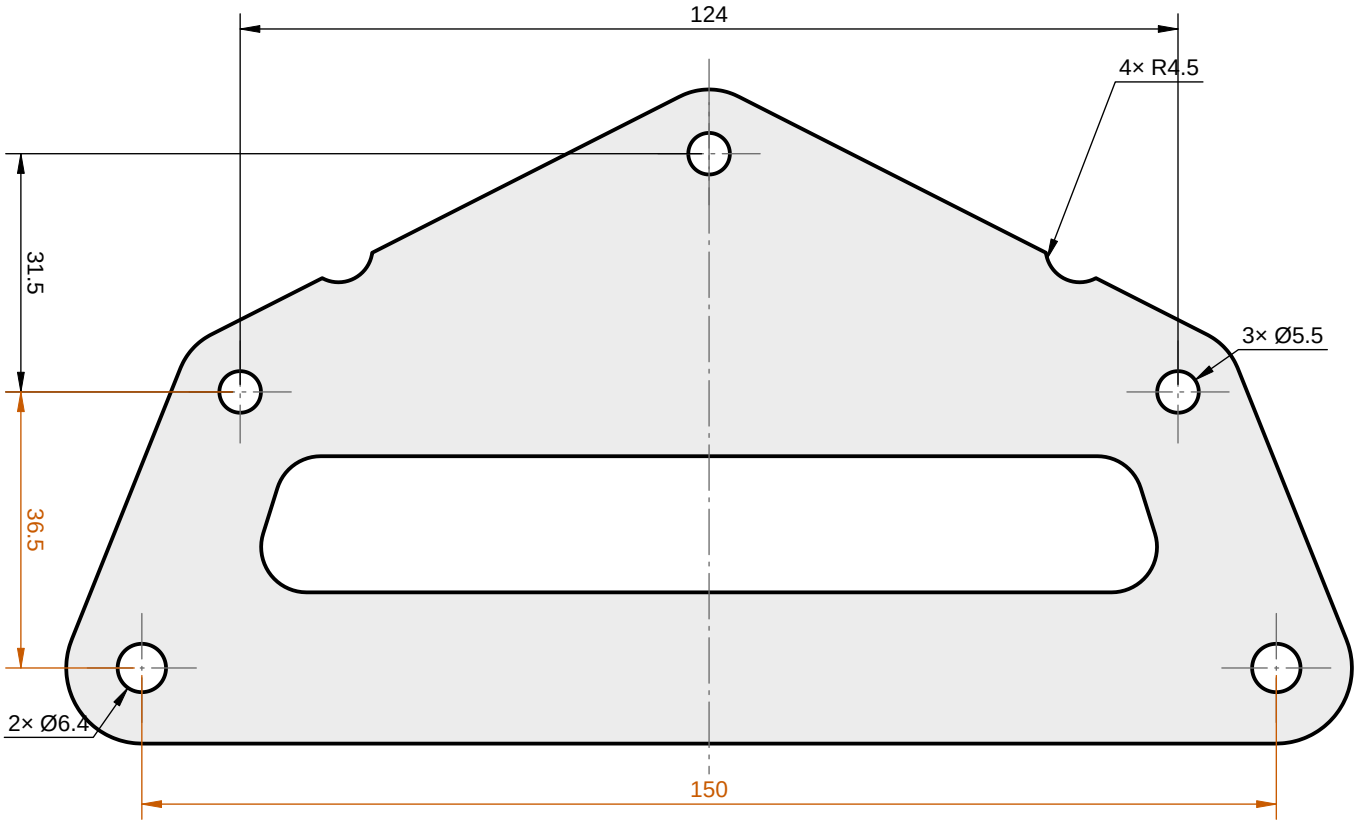

NOTES

1. Print the PDF at 100 % on A4 landscape and check the 50 mm bar. Glue the print on a 3 mm aluminum plate (5754 or 6082, blank 180 × 97 mm), center-punch the hole centers, drill, then cut and file the outline.
2. Seen from the front of the bike, as it goes on. Three M5 × 10 button head screws hold it in the inserts of the pod lugs; the two M6 screws take the place of the studs of the original cluster.
3. Put the M6 screws in before screwing the plate to the pod: their heads stay between the plate and the display unit. The notches keep the four pod screws reachable.
4. On the bike every M6 screw goes through an original grommet of the fairing stay, with the collar inside, then the washer and the nut: tighten until the collar is clamped, about 7 Nm [HYPOTHESIS].
5. Orange values are [TO VERIFY] on the bike (docs/research/bike-measurements.md): the stud pitch and position, the grommet. Set them in enclosure.scad, run cad-export.sh and generate.py, and try the fit template before cutting.

SECTION THROUGH A STUD, 1:1

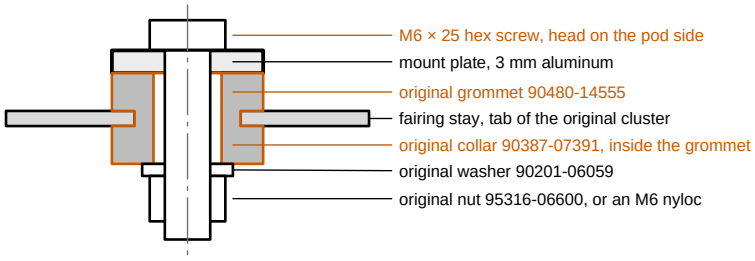

Print at 100 % (actual size): this bar measures 50 mm

0 10 20 30 40 50 mm

github.com/frascella-dev/tdm-dash · generated by hardware/drawings/generate.py from hardware/enclosure/enclosure.scad, do not edit by hand

tdm-dash mechanical parts · Yamaha TDM 850 (3VD) CERN-OHL-P-2.0

Dashboard mount plate

SCALE	REV	DATE	SIZE
1:1	0.2	2026-10-21	A4