


ESP-CellCore complete wiring: LilyGO T-A7670G-S3 + Ag1171 + Model 500

Includes audio transformers, level controls, SLIC power, ringing GPIO, pulse-dial sensing, and Silvertel's minimum line protection.

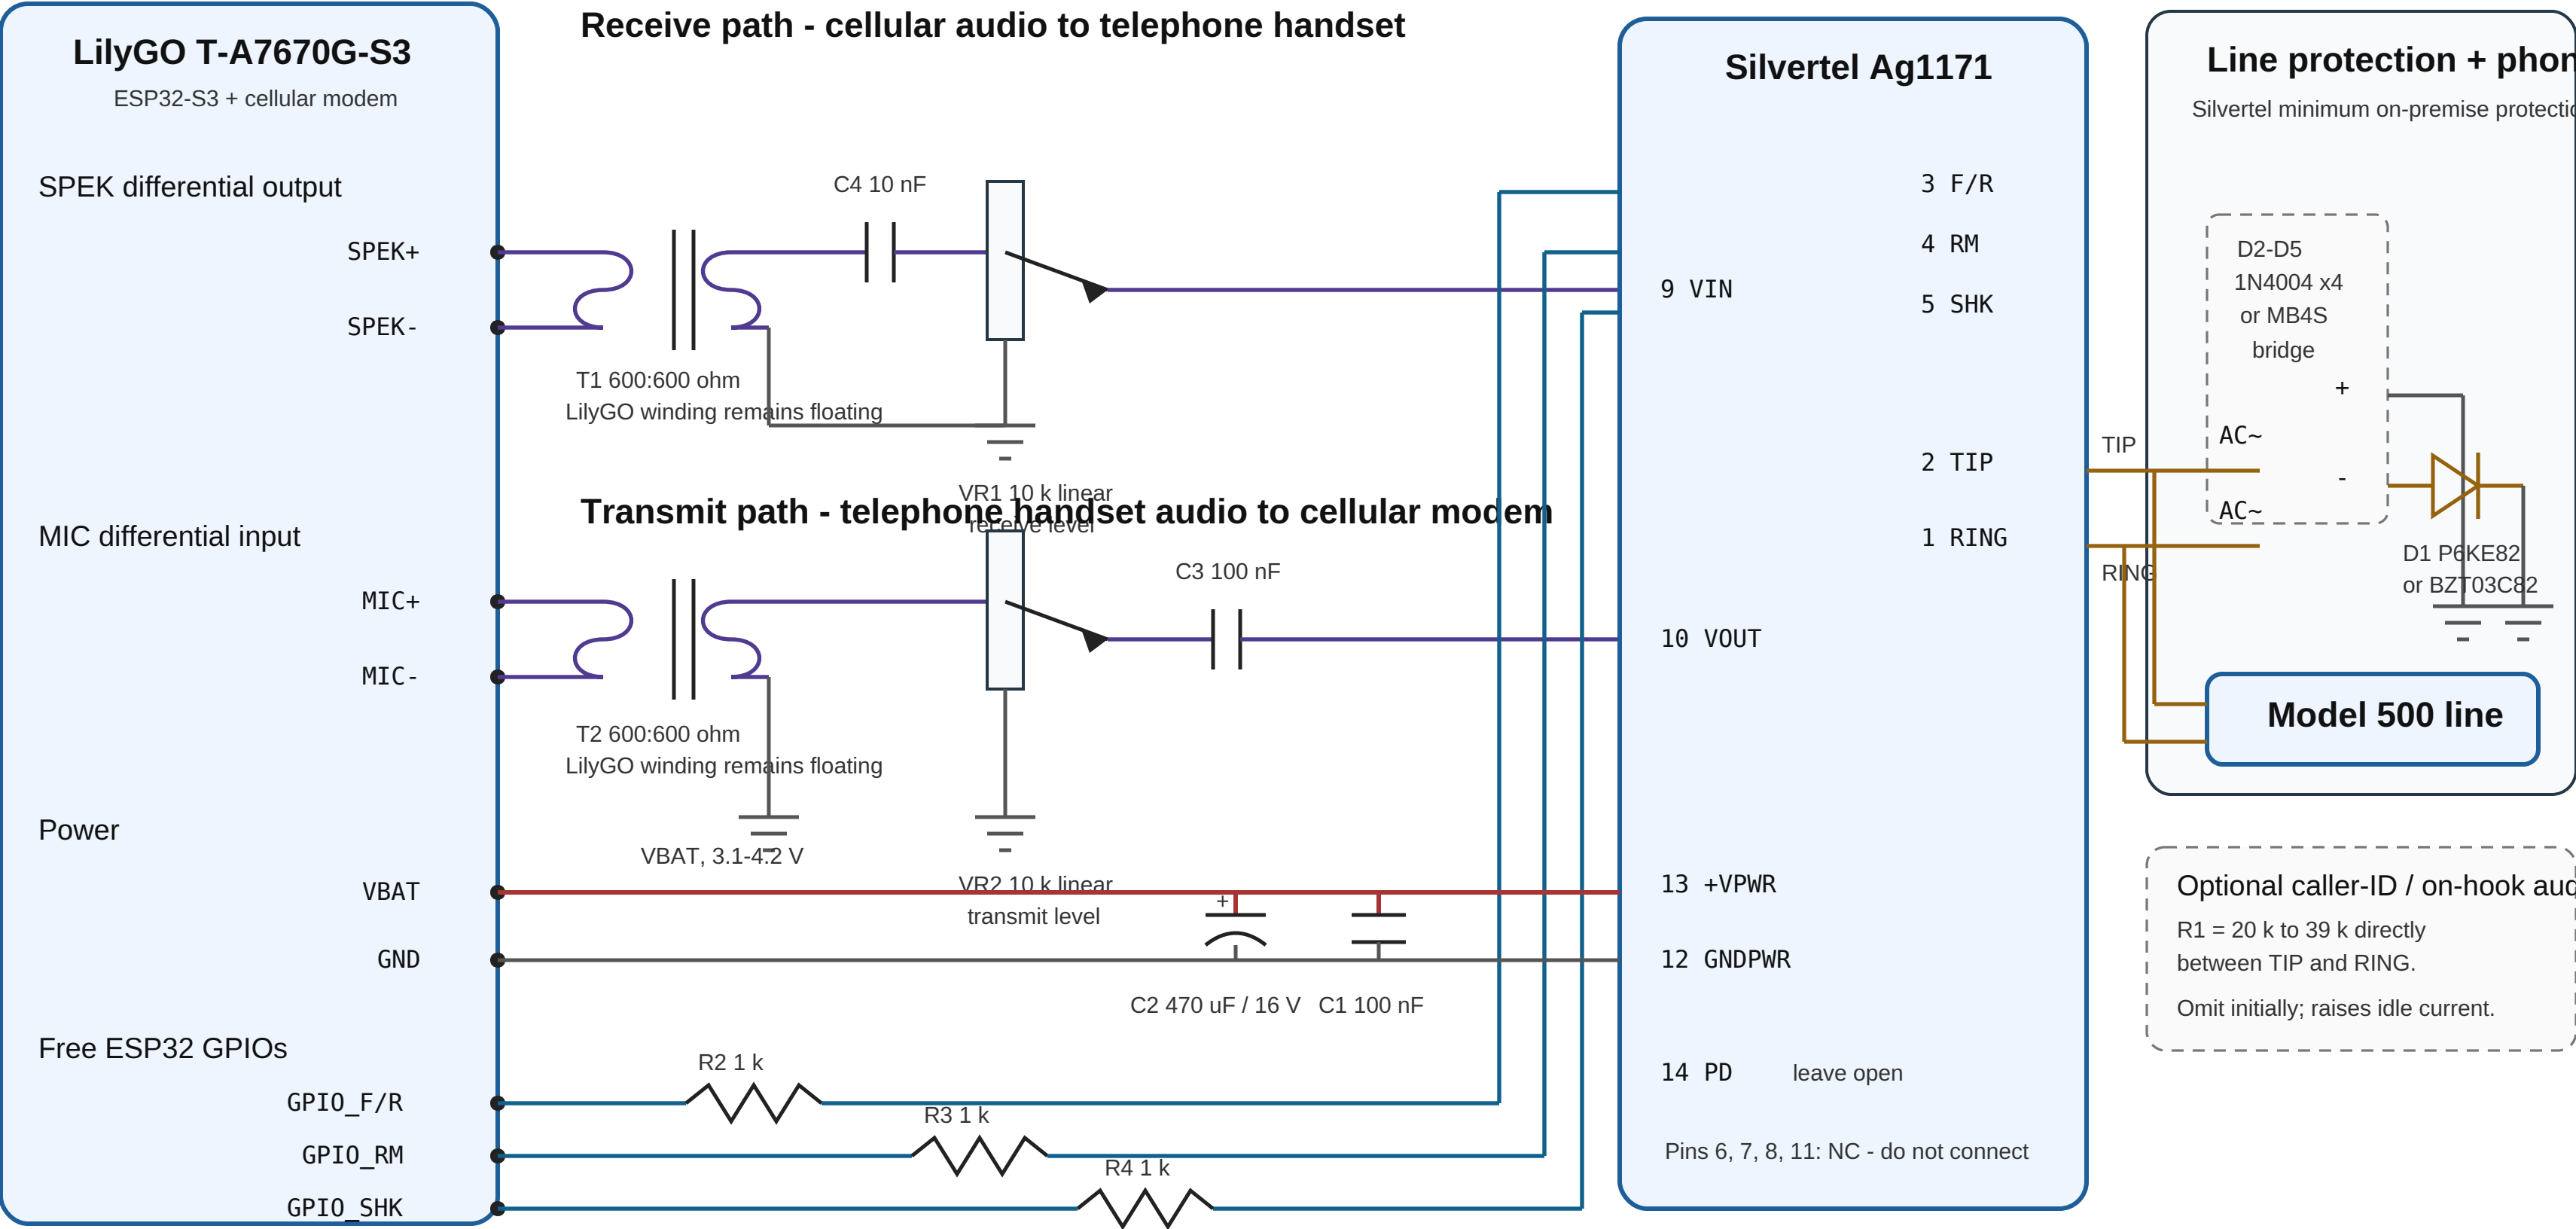

Build notes

- Do not ground SPEK+/- or MIC+/- on the LilyGO side. Ground only the Ag1171-side transformer winding as shown.
- Set both trimmers to minimum signal before the first call. C1 and C2 should be physically close to Ag1171 pins 13 and 12.
- GPIO labels are placeholders: choose three exposed ESP32 pins not used by boot strapping, USB, modem UART, or other onboard hardware.